

Bosch Ventilation Quick Tips and Tricks



- If there is a build-up of steam or fumes, set your fan to a higher setting. Always adjust the fan strength to meet current conditions.
- To clean your stainless steel, wipe down using a soft cloth and mild, soapy water and wipe dry. Always wipe in the direction of the grain.



- a. For extra shine, follow cleaning with the Bosch Stainless Steel Conditioner. Apply with a soft cloth and wipe away any excess. Always ensure this conditioner is compatible with your appliance. DO NOT use on non-steel surfaces, logos, control markings, labels, black, smudge-proof or easy-clean steel, and appliance interiors.
- b. Bosch Stainless Steel Conditioner (Spray Bottle # 00576696, Wipes # 17002199) sold separately. Visit bosch-home.com/us/shop to purchase.



• A saturation notification will appear on your display to alert you when it is time to clean your metal grease filter or replace your activated charcoal filter. Follow the instructions as indicated to ensure great performance.



- a. Metal grease filters collect grease while you cook, helping to keep your ventilation system clean. Clean grease deposits from your grease filter at least every two months for best performance.
 !CAUTION: Never operate your appliance without the grease filter. Refer to the Important Safety Instructions in your Use and Care manual.
- b. If your ventilation system expels air outside of the home, it is in Ducted Mode. If your ventilation system does not expel air outside, it is in Recirculation Mode and uses an activated charcoal filter(s). Air passes through both the grease filter and the activated charcoal filter to assist in removing odors. We recommend replacing your charcoal filter every 4-6 months for optimal performance.
- c. Activated Charcoal Filters are sold separately and vary by model. Visit bosch-home.com/us/shop to purchase. Don't know which filter to purchase? Use our filter finder to help determine which Activated Charcoal Filter is right for your appliance: ventilationfilters.boschappliances.com



Need Assistance?

For additional assistance or questions, check out our Owner Support Resources at: bosch-home.com/us/owner-support

For complete product information, refer to the Owner Manual available online at: bosch-home.com/us/owner-support/get-support/owner-manuals

Can't find what you're looking for?

Reach the Bosch Customer Support Team at 1-800-944-2904