

249421, 249422, 243234, 241089, 244479, 244316, 241090, 244542, 246040, 247446, 241765, 244545, 245905, 241766, 247118, 247121, 246294, 248034, 245001, 243786, 246086, 245850, 243788, 241092, 241093, 241767, 241768, 245180, 243462, 244361, 244360, 246041, 247454, 244517, 245906, 247136, 247137, 246298, 248076, 244865, 243806, 246083, 246088, 243808, 249080, 249083, 249084, 249087, 249095, 249096, 249097, 249101, 249099, 249100, 249122, 249102, 249105, 249108, 249109, 249112, 249114, 249115, 249116, 249121, 249119, 249120, 249123, 249421, 249422, 249432, 249433, 249434, 249435


EN Replacing Nexxt door assemblies with door fronts, door bodies & glass bowls

Complete door assemblies are no longer available for Nexxt washers and dryers, replaced by separate door fronts, door bodies and glass bowls. New door fronts, door bodies and glass bowls can be assembled together in the field or used to replace old parts in existing door assemblies.

Whenever disassembling or assembling doors, place door fronts on a cloth or piece of cardboard to protect the clear plastic door covers from being scratched.




To disassemble existing door assemblies, use small (calibrating) and medium / large blade screwdrivers. Starting just below the hinge or latch, use the small screwdriver to gently pry the door front and body apart. Gently insert the larger screwdriver into the gap and pry to separate the door front and body. Gradually work your way around the round (bottom) edge of the door, using the small screwdriver to keep the gap open while you use the larger screwdriver to gently pry the door apart.

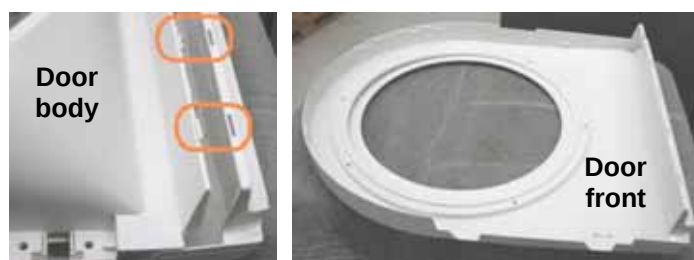

Tabs along the top of the door body hold it to the door front. Once the door front and body are separated below the hinge and latch, pull the bottom of the door body up from the door front.

To remove the glass bowl from the door body, unscrew ring screws and lift up the ring. Holes in the top of the door body allow screwdriver access to the screws.

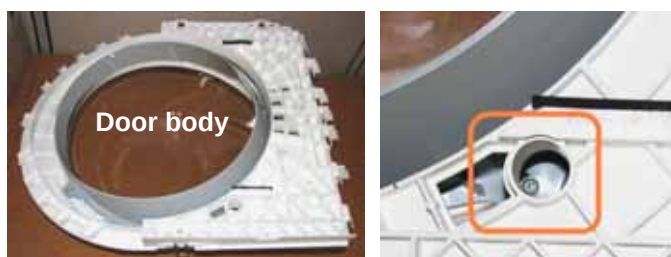


249421, 249422, 243234, 241089, 244479, 244316, 241090, 244542, 246040, 247446, 241765, 244545, 245905, 241766, 247118, 247121, 246294, 248034, 245001, 243786, 246086, 245850, 243788, 241092, 241093, 241767, 241768, 245180, 243462, 244361, 244360, 246041, 247454, 244517, 245906, 247136, 247137, 246298, 248076, 244865, 243806, 246083, 246088, 243808, 249080, 249083, 249084, 249087, 249095, 249096, 249097, 249101, 249099, 249100, 249122, 249102, 249105, 249108, 249109, 249112, 249114, 249115, 249116, 249121, 249119, 249120, 249123, 249421, 249422, 249432, 249433, 249434, 249435

The following charts identify needed parts:

Old door assy #	Old front cover part #	Type	Replacement door front					Door body w/o glass bowl color	Door body w/o glass bowl part #	Glass bowl part #	Front cover part #
			Door front #	Door front color	Ring / trim color	Handle color	Brand (logo)				
243234	N/A	Washer	249080	White	Silver	Silver	Bosch	White	249432	249421	680865
241089	N/A						Bosch				
244479	N/A						Bosch				
244316	680865						Bosch				
241090	N/A						Bosch				
244542	680865	Washer	249083	White	Chrome	Chrome	Bosch				
246040	680865						Bosch				
247446	680865	Washer	249084	White	Chrome	Chrome	Kleenmaid				
241765	N/A	Washer	249087	White	Chrome	Chrome	Siemens				
244545	N/A						Siemens				
245905	680865						Siemens				
241766	N/A						Siemens				
247118	680865	Washer	249095	Blue	Chrome	Chrome	Bosch				
247121	680865		249096	Red	Chrome	Chrome	Bosch				
246294	680865		249097	Champagne	Chrome	Chrome	Bosch				
248034	680865		249101	Yellow	Chrome	Chrome	Bosch				
245001	N/A	Washer	249099	Silver	Silver	Silver	Bosch	Silver (gray)	249433		N/A
243786	N/A	Washer	249100	Silver	Chrome	Chrome	Bosch				680865
246086	680865						Bosch				
245850	680865						Bosch				
243788	N/A	Washer	249122	Anthracite	Silver	Silver	Siemens				N/A

Note: To replace a complete door assembly, order the door front, door body (w/o glass bowl) and glass bowl. All door fronts have front covers, but not all are replaceable with large cover 680865.

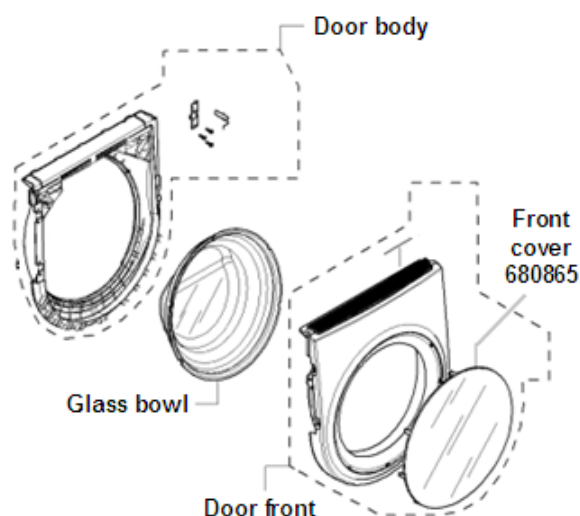


- **Units with small glass windows (e.g. WFC1001 / 2201 / 3200 / 3301)** -- Front door covers can't be replaced. If a front door cover is needed, order a door front. Most door fronts have large glass windows with large front door cover 680865.
- **Units with large glass windows (e.g. WFC4301 / 5301 / 8400 / 8401)** -- Front door covers can be replaced. Order 680865.
- **Door bodies ("inner or rear doors")** don't include front door covers or glass bowls. Order door bodies when customers need to assemble complete doors or when inner doors are damaged.
- **To assemble complete doors** -- Order 3 parts, consisting of the door front, door body and glass bowl.

See page 3 for dryer chart.

249421, 249422, 243234, 241089, 244479, 244316, 241090, 244542, 246040, 247446, 241765, 244545, 245905, 241766, 247118, 247121, 246294, 248034, 245001, 243786, 246086, 245850, 243788, 241092, 241093, 241767, 241768, 245180, 243462, 244361, 244360, 246041, 247454, 244517, 245906, 247136, 247137, 246298, 248076, 244865, 243806, 246083, 246088, 243808, 249080, 249083, 249084, 249087, 249095, 249096, 249097, 249101, 249099, 249100, 249122, 249102, 249105, 249108, 249109, 249112, 249114, 249115, 249116, 249121, 249119, 249120, 249123, 249421, 249422, 249432, 249433, 249434, 249435

Old door assy #	Old front cover part #	Type	Replacement door front					Door body w/o glass bowl color	Door body w/o glass bowl part #	Glass bowl part #	Front cover part #
			Door front #	Door front color	Ring / trim color	Handle color	Brand (logo)				
245180	N/A	Dryer	249102	White	Gray	Silver	Bosch	White	249434	249422	N/A
241092	None	Dryer	249105	White	Silver	Silver	Bosch				680865
241093	None	Dryer		White			Bosch				
243462	N/A	Dryer		White			Bosch				
244361	680865	Dryer		White			Bosch				
244360	680865	Dryer	249108	White	Chrome	Chrome	Bosch				
246041	680865	Dryer		White			Bosch				
247454	680865	Dryer	249109	White	Chrome	Chrome	Kleenmaid				
241767	None	Dryer	249112	White	Chrome	Chrome	Siemens				
241768	None	Dryer		White			Siemens				
244517	N/A	Dryer		White			Siemens				
245906	680865	Dryer		White			Siemens				
247136	680865	Dryer	249114	Blue	Chrome	Chrome	Bosch				
247137	680865	Dryer	249115	Red	Chrome	Chrome	Bosch				
246298	680865	Dryer	249116	Champagne	Chrome	Chrome	Bosch				
248076	680865	Dryer	249121	Yellow	Chrome	Chrome	Bosch				
244865	N/A	Dryer	249119	Silver	Silver	Silver	Bosch	Silver (gray)	249435		N/A
243806	N/A	Dryer	249120	Silver	Chrome	Chrome	Bosch				680865
246083	680865	Dryer		Silver			Bosch				
246088	680865	Dryer		Silver			Bosch				
243808	N/A	Dryer		Anthracite			Siemens				

Note: To replace a complete door assembly, order the door front, door body (w/o glass bowl) and glass bowl. All door fronts have front covers, but not all are replaceable with large cover 680865.

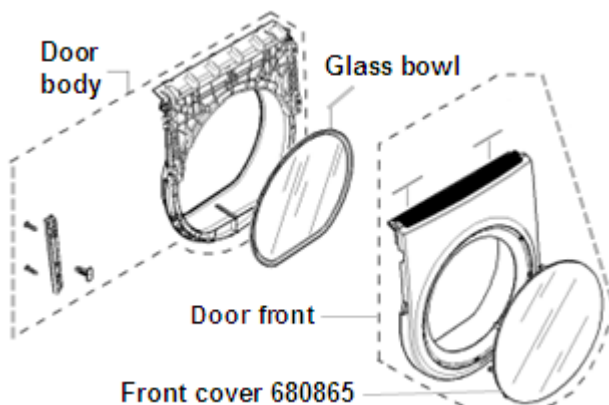

- **Units with small glass windows (e.g. WTM3321 / 332S)** -- Front door covers can't be replaced. If a front door cover is needed, order a door front. Most door fronts have large glass windows with large front door cover 680865.
- **Units with large glass windows (e.g. WTM4321 / 5321 / 8320 / 8321)** -- Front door covers can be replaced. Order 680865.
- **Door bodies ("inner or rear doors") don't** include front door covers or glass bowls. Order door bodies when customers need to assemble complete doors or when inner doors are damaged.
- **To assemble complete doors** -- Order 3 parts, consisting of the door front, door body and glass bowl.

See page 2 for washer chart.