

**EN KNOBS AND KNOB KITS**

Improved knobs and knob kits are available for the Bosch 700 series free-standing and slide-in ranges listed in the table below...

Electric Ranges		Dual-fuel Ranges		Gas Ranges	
HEI7132C, U	HES7132U	HDI7132C, U	HDS7132U	HGS7132UC	HGS7282UC
HEI7152C, U	HES7152U	HDI7152C, U	HDS7152U	HGS7152MX	
HEI7282C, U	HES7282U	HDI7282C, U	HDS7282U	HGS7152UC	

There is a visible difference between the appearance of the discontinued knobs and the current service replacement knobs. To insure that all knobs on the range will match, the appropriate Knob Kit (**656870 - Electric** or **656871 - Gas/DF**) should be ordered for ranges built prior to 10/24/2011 (FD prior to 9111). Each kit includes (4) burner control knobs, (1) oven control knob, (1) bezel for the oven control knob, and installation instructions.

**Customers requiring Knob Kit 656870 or 656871 should contact the Bosch Customer Support Team at 800 944-2904 for assistance. Please note that replacement knobs can be installed by the customer; a service call is not required.**

Individual knobs may be ordered through *QuickFinder* for the ranges described below...

- Ranges built after the improved knobs were implemented in production on 10/24/2011 (FD 9111 and later)
- Ranges built prior to 10/24/2011 if Knob Kit 656870 or 656871 was previously installed

Knob and Knob Kit service part numbers appear in the table below. Order using only the *current* part numbers...

	Current Knob / Knob Kit Part Nos.	Discontinued Knob / Knob Kit Part Nos.
Electric Ranges	Burner Knob – 624433 Oven Knob – 624432 Bezel – 624431 Knob Kit (5 knobs, bezel) – 656870 *	Burner Knob – 603902, 622226 Oven Knob – 603881, 622227 Bezel – 603863, 622255 Knob Kit (5 knobs, bezel) – 653117 Knob Kit (4 knobs) – 652575
Gas/DF Ranges	Burner Knob – 624434 Oven Knob – 624432 Bezel – 624431 Knob Kit (5 knobs, bezel) – 656871 *	Burner Knob – 603758, 622225 Oven Knob – 603881, 622227 Bezel – 603863, 622255 Knob Kit (5 knobs, bezel) – 653118 Knob Kit (4 knobs) – 652574
* Customers should contact the Bosch Customer Support Team at 800 944-2904 to order Knob Kit 656870 or 656871		

Visit *QuickFinder* at <http://portal.mch.bshg.com/portal>