

# Your washing machine

**Congratulations** – You have opted for a modern, high-quality domestic appliance manufactured by Bosch. The washing machine is distinguished by its economical energy consumption.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

## Environmental disposal

Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European Directive 2002/96/EG on Waste Electrical and Electronic Equipment (WEEE).

The Directive specifies the framework for an EU-wide valid return and recycling of waste appliances.

## Contents

Page

■ Intended use	1
■ Setting programmes	2
■ After washing	4
■ Individual settings	5
■ Important information	6
■ Overview of programmes	7
■ Care	8
■ Information to indicator lights	8
■ Maintenance	9
■ What to do if ...	10
■ Safety instructions	11
■ Consumption values	11

## Intended use

- for use in the household only,
- for the washing of machine-washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in frontloading-washing machines.

- ⚠ Do not leave children unattended near the washing machine!
- The appliance is not intended for use by young children or infirm persons without supervision.
- Keep pets away from the washing machine!

## Preparation

⚠ *Correct installation according to separate installation instructions.*

### Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!

### Turn on water

### Insert mains plug

- ⚠ *With dry hands only!*
- Take hold of the plug only!*

## Washing

### Sorting and inserting the washing

Follow manufacturer's care information! According to the information on the care labels. According to type; colour; soiling and temperature.

⚠ *Follow important instructions! See page 6!*  
Insert large and small items of washing! Do not jam items of washing between the washing-machine door and rubber seal.

### Add detergent and care product

Meter accordingly: Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Pour liquid detergent into the appropriate dispenser and place in the drum.

- I Prewash: Detergent, starch
- ☞ Care product: Fabric softener
- II Main wash: Detergent, water softener, bleach, stain remover

**i** *Dilute viscous fabric softener and fabric conditioner with water. Prevents blockage of the overflow.*


## Set and adjust programme

*For additional functions see individual settings, page 5.*

**i** *Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.*

**Select Start/Pause** ◊

## Washing

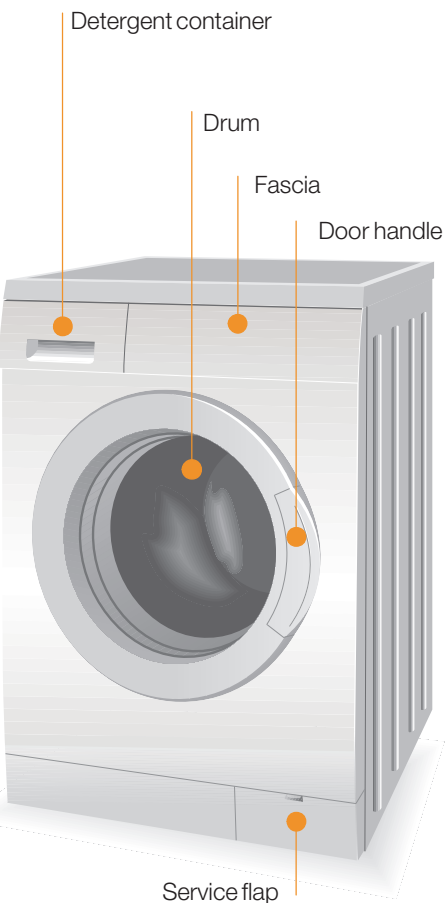

## Removing washing

Open washing machine door and remove washing. Remove any foreign objects – risk of rusting.

## Turn off tap

## Switch off

Set programme selector to **Off**.

## End of programme when ...

... indicator light **Spin** flashes.

## Change programme ...

If you have mistakenly selected a wrong programme:  
– Reselect programme.  
– Select **Start/Pause** ◊.

## ...or terminate

Programmes with high temperature, first:  
– Cool washing: Select **Rinse** ☞.  
– Washing machine door remains locked.  
– Select **Off**.  
– Select **Spin** ☞ or **Drain** ☞.  
– Select **Start/Pause** ◊.

## Individual settings

### Additional functions

*see also programme overview*

Rinse Plus ☞☞	Additional rinse cycle. For areas with very soft water or for further improvement of the rinsing result.
Quick wash ☞☞	Reduced wash time – only 2 rinse cycles. Suited for slightly soiled laundry. Recommended load: up to a maximum of 3 kg.

**Start/Pause** ◊  
For starting or interrupting the programme.

## Important information

### Protecting the washing and the machine

- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the net/bag (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.

### Before washing for the first time

Do not put any washing in the washing machine! Turn on the tap, fill the appliance with approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set programme selector to **Easy-care** ☞, **60 °C** and select **Start/Pause** ◊. At the end of the programme set the programme selector to **Off**.

### Washing with different degrees of soiling

Light	Wash new items separately.
Do not prewash.	
Heavy	If required, pretreat stains. Select Programme <b>Cotton</b> ☞☞ <b>Stains</b> ☞ 60 °C.
	Load less washing.
	Prewash.

### Filling weight

Do not exceed maximum load:  
– Cottons and coloureds 7 kg.  
– Easy-care 3 kg.  
– Delicates, silk and woollens 2 kg.

### Soaking

*Load washing of the same colour*  
Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set programme selector to **Cottons** ☞☞ **cold** and select **Start/Pause** ◊. After approx. 10 minutes select **Start/Pause** ◊. After the required soaking time reselect **Start/Pause** ◊ if the programme is to be continued or change the programme.

### Starching

*Washing should not be treated with fabric softener*  
Dissolve an amount of starch for approx. 15 litres of water according to the manufacturer's instructions. Set programme selector to **Rinse** ☞, set spin speed and select **Start/Pause** ◊. As soon as water runs in: Pour the starch solution into dispenser I.

### Dyeing/bleaching

Do not dye/bleach washing in the washing machine.

### Protection of the environment/conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Cottons** ☞☞ 90 °C select **Cottons** ☞☞ **Stains** ☞ 60 °C programme. Comparable cleaning result with significantly lower energy consumption.
- Meter detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.



Programmes	°C	Max.	Type of washing	Additional functions; information
Cottons	cold, 40, 60, 90 °C	7 kg	Hard-wearing textiles, heat-resistant textiles made of cotton or linen	Rinse Plus , Quick wash
Cottons  Stains	60 °C			
Cottons	cold, 40, 60 °C	3 kg	Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	Rinse Plus , Quick wash
Easy-care		2 kg	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	Rinse Plus , Quick wash ; no spin cycle between the rinse cycles
Delicate	30 °C	2 kg	Hand or machine-washable wool or rich-wool textiles	Quick wash ; also suitable for hand-washable silk; reduced rinse and final spin cycle
Wool	cold, 30 °C			
<b>Additional programmes</b>			<b>Rinse , Spin , Drain </b>	

For further information and a selection of our products go to our web site: [www.bosch-home.com](http://www.bosch-home.com)

Robert Bosch Hausgeräte GmbH  
Carl-Wery Str. 34  
81739 München / Germany

WAE1 6060SG  
WAE1 6060SG  
WAE1 2060SG  
1009  
9000 211 093

## Care

### Machine housing, control panel

- Wipe with a soft, damp cloth.
- Do not use abrasive detergents.
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.

### Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

1. Pull out, depress insert, completely remove.
2. Open the cover.
3. Clean with water and dry.
4. Close and lock the cover (place cylinder on guide pin).
5. Insert detergent drawer.

### Drum

Leave detergent drawer open so that residual water can evaporate.

### Descaling

Descal according to the instructions of the descaling agent manufacturer, not required for correct detergent dosage

### Information to indicator lights

Indicator lights for status displays and/or buttons flash:

Indicator lights <b>Rinse</b> and <b>Wash</b> flash	Close the washing machine door properly; washing may be caught.
Indicator lights <b>Spin</b> and <b>Rinse</b> flash	Clean detergent-solution pump (page 9), outlet pipe/drainage hose blocked.
Indicator lights <b>Spin</b> and <b>Wash</b> flash	Turn on the tap, supply hose kinked/jammed; clean filter (page 9), water pressure too low.
Indicator light <b>Rinse</b> flashes	Motor fault. Call customer service!
All indicator lights flash	Turn off the tap and call customer service.

## Maintenance

### Detergent-solution pump

Set programme selector to **Off**, pull out the mains plug.

1. Open and remove service flap.
2. For models with drainage hose: Take drainage hose out of the holder and pull out of the housing. Remove sealing cap, allow detergent solution to flow out. Press on sealing cap and insert drainage hose into the holder.
- 2\* For models without drainage hose: Carefully unscrew pump cover until the detergent solution begins to run out. When the service flap is half full, screw back the pump cover and empty the service flap. Repeat steps until all the detergent solution has run out.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent-solution pump must rotate).
5. Reinsert and screw on pump cover.
6. Insert and close service flap.

### Filters in the water supply

Release water pressure in the supply hose:

1. Turn off the tap!
2. Select any programme (except **Spin** /**Drain** ).
3. Press **Start/Pause** . Leave programme for approx. 40 seconds.
4. Set programme selector to **Off**.
5. Remove hose from tap.
6. Clean filter with small brush.
7. Depending on the model, remove hose from the rear of the appliance and clean the filter.
8. Connect the hose and check for leaks.

## What to do if ...

- Water is running out.
  - Correctly attach/replace drainage hose.
  - Tighten screw-fitting on the supply hose.
- Water not flowing in. Detergent not washed in.
  - **Start/Pause** not selected?
  - Tap not open?
  - Filter blocked? Clean filter (page 9).
  - Supply hose kinked or jammed?
  - Safety function active. Wait approx. 2 minutes.
- Washing machine door cannot be opened.
  - **Start/Pause** selected?
  - Door closed?
  - Clean detergent-solution pump (page 9).
  - Clean outlet pipe and/or drainage hose.
- Programme does not start.
  - Distribute small and large items of washing in the drum.
- Detergent solution is not drained.
  - Not a fault – unbalanced load detection system adjusts imbalance.
- Washing not spun correctly.
  - Not a fault – water below the visible area
- Spin cycle actuated several times.
  - Not a fault – effect of the care product not impaired.
- Water not visible in the drum.
  - Run **Cottons** 90 °C programme without washing. Use standard detergent.
- Residual water in the dispenser for care product.
  - Too much detergent used? Mix 1 tablespoon of fabric conditioner with ½ litre of water and pour into dispenser II in the detergent drawer.
  - Reduce detergent dosage for the next wash cycle.
- Odour formation in the washing machine.
  - Appliance feet fixed? Secure appliance feet (Installation instructions).
  - Transportation safety devices removed? Remove transportation safety devices (Installation instructions).
- Foam is coming out of the detergent drawer.
  - Power failure?
  - Fuse tripped? Switch on/replace fuse.
  - If the fault occurs repeatedly, call customer service.
- Vibrations during spin cycle.
  - Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing.
  - Not a fault – foam detection system active - a rinse cycle is started.
  - Occasionally phosphate-free detergents contain water-insoluble residue.
  - Select **Rinse** or brush the laundry after washing.
- Display panel/indicator lights do not function while the appliance is running.
  - Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing.
- Programme progress longer than usual.
  - Select **Rinse** or brush the laundry after washing.
- Detergent residue on the washing.
  - If a fault cannot be rectified or a repair is required:
    - Set programme selector to **Off** and pull out the mains plug.
    - Turn off the tap and call customer service (Installation instructions).

## Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.
- Risk of electric shock**
  - Never pull out the mains plug by tugging the power cord!
  - Never insert/pull out the mains plug with damp hands.
- Risk of injury**
  - Washing machine door may become very hot.
  - Caution when draining hot detergent solution.
  - Do not climb on the washing machine.
  - Do not lean on the open washing machine door.
  - Do not touch the drum in case it is still spinning.
  - Keep detergents and care products out of the reach of children.
- Risk of poisoning**
- Risk of suffocation**
  - Keep packaging, plastic film and packaging parts out of the reach of children.
- Danger to life**
  - On redundant appliances:
    - Pull out the mains plug.
    - Sever the power cord and discard together with the plug.
  - Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.
- Risk of explosion**
  - Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Beforehand thoroughly rinse items of washing by hand.

## Consumption values

Programme	Load	Current*	Water*	Programme duration*
Cottons   40 °C	7 kg	1,00 kWh	62 l	1:50 h
Cottons    60 °C	7 kg	1.19 kWh	55 l	2:15 h
Cottons   90 °C	7 kg	2.30 kWh	70 l	2:05 h
Easy-care   40 °C	3 kg	0.55 kWh	48 l	1:15 h
Delicate   30 °C	2 kg	0.05 kWh	44 l	0:35 h
Wool   30 °C	2 kg	0.20 kWh	32 l	0:53 h

\* The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.



## Washing machine

en

Operating instructions



**Read these instructions before switching on the washing machine!**

Also follow the separate installation instructions.

Follow the safety instructions on page 11!



# Your washing machine

**Congratulations** – You have opted for a modern, high-quality domestic appliance manufactured by Bosch. The washing machine is distinguished by its economical energy consumption.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

## Environmental disposal

Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European Directive 2002/96/EG on Waste Electrical and Electronic Equipment (WEEE).

The Directive specifies the framework for an EU-wide valid return and recycling of waste appliances.



## Contents

Page

Intended use	1
Setting programmes	2
After washing	4
Individual settings	5
Important information	6
Overview of programmes	7
Care	8
Information to indicator lights	8
Maintenance	9
What to do if ...	10
Safety instructions	11
Consumption values	11

## Intended use

- for use in the household only,
  - for the washing of machine-washable textiles in a detergent solution,
  - to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in frontloading-washing machines.
- !** – Do not leave children unattended near the washing machine!
- The appliance is not intended for use by young children or infirm persons without supervision.
- Keep pets away from the washing machine!

## Preparation

**!** Correct installation according to separate installation instructions.

### Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!

### Turn on water

### Insert mains plug


**!** With dry hands only!  
Take hold of the plug only!



## Programmes

For detailed overview of programmes see page 7.

Cottons	hard-wearing textiles
Cottons Stains	hard-wearing textiles
Cottons Prewash	
Easy-care	easy-care textiles
Delicate	delicate washable textiles
Wool	hand/machine-washable textiles
Drain	the rinsing water if rinse stop occurs
Spin	washing washed by hand
Rinse	with subsequent spin cycle

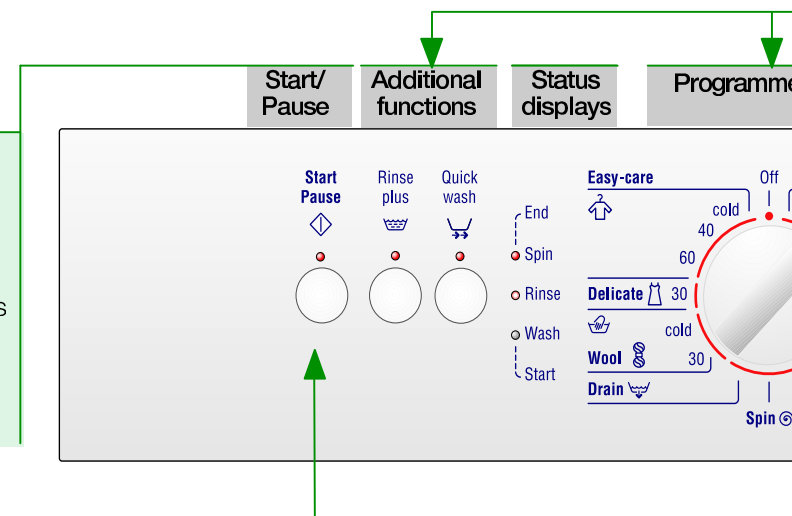

Before washing for the first time,  
wash once without any washing. See page 6

### Sorting and inserting the washing

Follow manufacturer's care information!  
According to the information on the care labels.  
According to type; colour; soiling and temperature.

Follow important instructions! See page 6!

Insert large and small items of washing! Do not jam items of washing  
between the washing-machine door and rubber seal.

### Add detergent and care product

Meter accordingly:  
Washing amount, soiling, water hardness (ask your water supply  
company) and manufacturer's instructions. Pour liquid detergent  
into the appropriate dispenser and place in the drum.

Prewash: Detergent, starch


Care product: Fabric softener

Main wash: Detergent, water softener, bleach, stain remover

Dilute viscous fabric softener and fabric conditioner with water.  
Prevents blockage of the overflow.

### Set and adjust programme

Programme selector

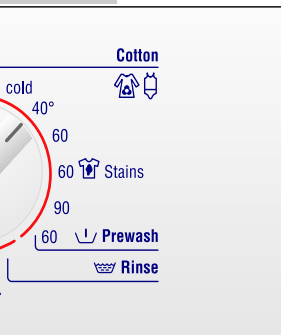


For additional functions see individual  
settings, page 5.



Programme selector for  
switching the machine on  
and off and for selecting the  
programme. Can be rotated  
in either direction.

Select Start/Pause ◊

# Washing

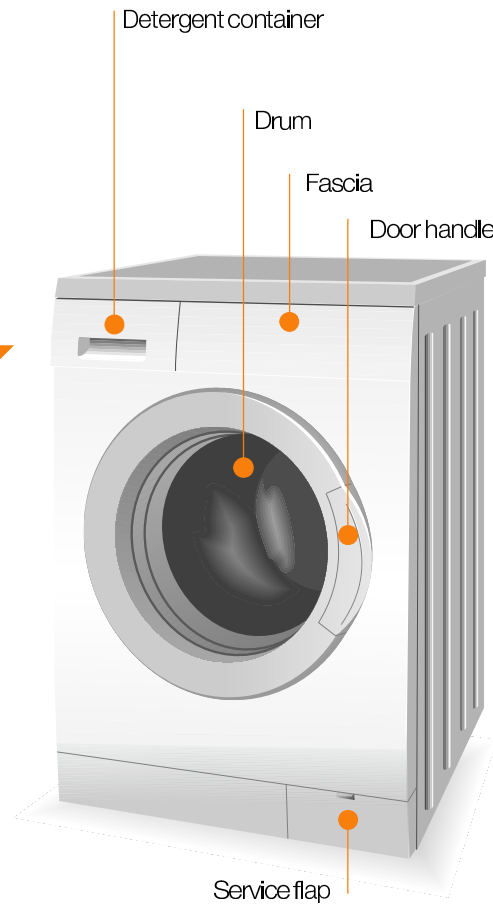

1

2



3

### Removing washing

Open washing machine door and remove washing.  
Remove any foreign objects – risk of rusting.

### Turn off tap

### Switch off

Set programme selector to **Off**.

### End of programme when ...

... indicator light **Spin** flashes.

### Change programme ...

If you have mistakenly selected a wrong programme:

- Reselect programme.
- Select **Start/Pause** ◊.

### ...or terminate

Programmes with high temperature, first:


- Cool washing: Select **Rinse** 🚰.  
Washing machine door remains locked.
- Select **Off**.
- Select **Spin** ⦿ or **Drain** 🚰.
- Select **Start/Pause** ◊.

# Washing

# Individual settings

**Additional functions** see also programme overview

Rinse Plus  Additional rinse cycle. For areas with very soft water or for further improvement of the rinsing result.

Quick wash  Reduced wash time – only 2 rinse cycles. Suited for slightly soiled laundry. Recommended load: up to a maximum of 3 kg.

**Start/Pause** 

For starting or interrupting the programme.



## Important information





### Protecting the washing and the machine

- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the net/bag (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.









### Before washing for the first time

Do not put any washing in the washing machine! Turn on the tap, fill the appliance with approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set programme selector to **Easy-care**  **60 °C** and select **Start/Pause** . At the end of the programme set the programme selector to **Off**.



### Washing with different degrees of soiling

		Wash new items separately.
Light		Do not prewash.
		If required, pretreat stains. Select Programme <b>Cotton</b>  <b>Stains</b>  <b>60 °C</b> .
Heavy		Load less washing. Prewash.




 


### Filling weight

Do not exceed maximum load:

- Cottons and coloureds 7 kg.
- Easy-care 3 kg.
- Delicates, silk and woollens 2 kg.



### Soaking *Load washing of the same colour*

Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set programme selector to **Cottons**  **cold** and select **Start/Pause** . After approx. 10 minutes select **Start/Pause** . After the required soaking time reselect **Start/Pause**  if the programme is to be continued or change the programme.



### Starching *Washing should not be treated with fabric softener*

Dissolve an amount of starch for approx. 15 litres of water according to the manufacturer's instructions.

Set programme selector to **Rinse** , set spin speed and select **Start/Pause** . As soon as water runs in: Pour the starch solution into dispenser I.






### Dyeing/bleaching

Do not dye/bleach washing in the washing machine.



### Protection of the environment/conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Cottons**  **90 °C** select **Cottons**  **Stains**  **60 °C** programme. Comparable cleaning result with significantly lower energy consumption.
- Meter detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.



Programmes	°C	Max.	Type of washing	Additional functions; information
<b>Cottons</b>	cold, 40, 60, 90 °C	7 kg	Hard-wearing textiles, heat-resistant textiles made of cotton or linen	Rinse Plus , Quick wash
<b>Cottons</b> <b>Stains</b>	60 °C			
<b>Cottons</b> <b>Prewash</b>				
<b>Easy-care</b>	cold, 40, 60 °C	3 kg	Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	Rinse Plus , Quick wash
<b>Delicate</b>	30 °C	2 kg	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	Rinse Plus , Quick wash ; no spin cycle between the rinse cycles
<b>Wool</b>	cold, 30 °C	2 kg	Hand or machine-washable wool or rich-wool textiles	Quick wash ; also suitable for hand-washable silk; reduced rinse and final spin cycle

### Additional programmes

Rinse , Spin , Drain

**i** Programmes without prewash – pour detergent into dispenser **II**, programmes with prewash – divide detergent between dispensers **I** and **II**.

For further information and a selection of our products go to our web site: [www.bosch-home.com](http://www.bosch-home.com)

Robert Bosch Hausgeräte GmbH  
Carl-Wery Str. 34  
81739 München / Germany

WAE18060SG  
WAE16060SG  
WAE12060SG  
1009  
9000 211 093

## Care



- Risk of electric shock!  
Pull out the mains plug!
- Risk of explosion! No solvents!

### **i** Machine housing, control panel




- Wipe with a soft, damp cloth.
- Do not use abrasive detergents.
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.



### Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

1. Pull out, depress insert, completely remove.
2. Open the cover.
3. Clean with water and dry.
4. Close and lock the cover (place cylinder on guide pin).
5. Insert detergent drawer.

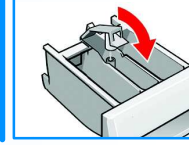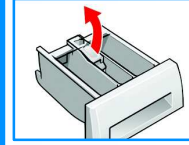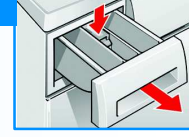

Leave detergent drawer open so that residual water can evaporate.

### **i** Drum

Leave washing machine door open so that the drum can dry out.  
Rust stains – use chlorine-free cleaning agent, not steel wool.



### Descaling *No washing in the machine!*

Descale according to the instructions of the descaling agent manufacturer, not required for correct detergent dosage

## Information to indicator lights

Indicator lights for status displays and/or buttons flash:

Indicator lights <b>Rinse</b> and <b>Wash</b> flash	Close the washing machine door properly; washing may be caught.
Indicator lights <b>Spin</b> and <b>Rinse</b> flash	Clean detergent-solution pump (page 9), outlet pipe/drainage hose blocked.
Indicator lights <b>Spin</b> and <b>Wash</b> flash	Turn on the tap, supply hose kinked/jammed; clean filter (page 9), water pressure too low.
Indicator light <b>Rinse</b> flashes	Motor fault. Call customer service!
All indicator lights flash	Turn off the tap and call customer service.




- Risk of scalding!
- Allow detergent solution to cool down!
- Turn off the tap!

## Detergent-solution pump

Set programme selector to **Off**, pull out the mains plug.


1. Open and remove service flap.

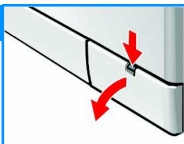


2. For models with drainage hose:  
Take drainage hose out of the holder and pull out of the housing.  
Remove sealing cap, allow detergent solution to flow out.  
Press on sealing cap and insert drainage hose into the holder.



- 2\* For models without drainage hose:  
Carefully unscrew pump cover until the detergent solution begins to run out.  
When the service flap is half full, screw back the pump cover and empty the service flap.  
Repeat steps until all the detergent solution has run out.

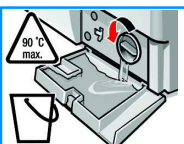

3. Carefully unscrew the pump cover (residual water).

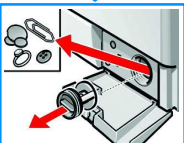

4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent-solution pump must rotate).

5. Reinsert and screw on pump cover.


6. Insert and close service flap.

**i** To prevent unused detergent from flowing into the outlet during the next wash:  
Pour 1 litre of water into dispenser II and select the **Drain** programme.

## Filters in the water supply

Release water pressure in the supply hose:

1. Turn off the tap!
2. Select any programme (except **Spin** or **Drain**).
3. Press **Start/Pause**. Leave programme for approx. 40 seconds.
4. Set programme selector to **Off**.
5. Remove hose from tap.
6. Clean filter with small brush.
7. Depending on the model, remove hose from the rear of the appliance and clean the filter.

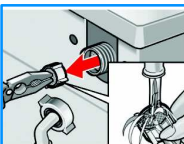

8. Connect the hose and check for leaks.

- Water is running out.
  - Correctly attach/replace drainage hose.
  - Tighten screw-fitting on the supply hose.
- Water not flowing in. Detergent not washed in.
  - **Start/Pause** not selected?
  - Tap not open?
  - Filter blocked? Clean filter (page 9).
  - Supply hose kinked or jammed?
- Washing machine door cannot be opened.
  - Safety function active. Wait approx. 2 minutes.
- Programme does not start.
  - **Start/Pause** selected?
  - Door closed?
- Detergent solution is not drained.
  - Clean detergent-solution pump (page 9).
  - Clean outlet pipe and/or drainage hose.
- Washing not spun correctly.
  - Distribute small and large items of washing in the drum.
- Spin cycle actuated several times.
  - Not a fault – unbalanced load detection system adjusts imbalance.
- Water not visible in the drum.
  - Not a fault – water below the visible area
- Residual water in the dispenser for care product.
  - Not a fault – effect of the care product not impaired.
- Odour formation in the washing machine.
  - Run **Cottons 90 °C** programme without washing. Use standard detergent.
- Foam is coming out of the detergent drawer.
  - Too much detergent used?  
Mix 1 tablespoon of fabric conditioner with ½ litre of water and pour into dispenser II in the detergent drawer.
  - Reduce detergent dosage for the next wash cycle.
- Vibrations during spin cycle.
  - Appliance feet fixed?  
Secure appliance feet (Installation instructions).
  - Transportation safety devices removed?  
Remove transportation safety devices (Installation instructions).
- Display panel/indicator lights do not function while the appliance is running.
  - Power failure?
  - Fuse tripped? Switch on/replace fuse.
  - If the fault occurs repeatedly, call customer service.
- Programme progress longer than usual.
  - Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing.
  - Not a fault – foam detection system active - a rinse cycle is started.
- Detergent residue on the washing.
  - Occasionally phosphate-free detergents contain water-insoluble residue.
  - Select **Rinse** or brush the laundry after washing.
- If a fault cannot be rectified or a repair is required:
  - Set programme selector to **Off** and pull out the mains plug.
  - Turn off the tap and call customer service (Installation instructions).





# Safety instructions

– Read and follow the operating and installation instructions and all other information enclosed with the washing machine.

– Retain documents for subsequent use.

### Risk of electric shock

- Never pull out the mains plug by tugging the power cord!
- Never insert/pull out the mains plug with damp hands.

### Risk of injury

- Washing machine door may become very hot.
- Caution when draining hot detergent solution.
- Do not climb on the washing machine.
- Do not lean on the open washing machine door.
- Do not touch the drum in case it is still spinning.

### Risk of poisoning

### Risk of suffocation

- Keep detergents and care products out of the reach of children.
- Keep packaging, plastic film and packaging parts out of the reach of children.


### Danger to life

On redundant appliances:

- Pull out the mains plug.
- Sever the power cord and discard together with the plug.
- Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.

### Risk of explosion

- Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Beforehand thoroughly rinse items of washing by hand.

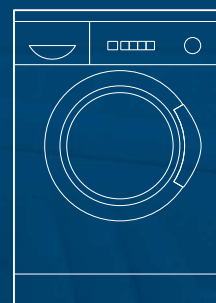

Washing machine

en

Operating instructions



**BOSCH**

## Consumption values

Programme	Load	Current*	Water*	Programme duration*
Cottons  40 °C	7 kg	1,00 kWh	62 l	1:50 h
Cottons  Stains  60 °C	7 kg	1.19 kWh	55 l	2:15 h
Cottons  90 °C	7 kg	2.30 kWh	70 l	2:05 h
Easy-care  40 °C	3 kg	0.55 kWh	48 l	1:15 h
Delicate  30 °C	2 kg	0.05 kWh	44 l	0:35 h
Wool  30 °C	2 kg	0.20 kWh	32 l	0:53 h

\* The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.



Read these instructions before switching on the washing machine!  
Also follow the separate installation instructions.  
Follow the safety instructions on page 11!