

1

Parts list:

- 1: Level
- 2: Locking pin
- 3: Cable, 1,75 m
- 4a: Screws
- 4b: Screws, Ø4x36
- 5: Level
- 6: Screws, Ø4x13 T
- 7: Screws
- 8: Screws
- 9: Washer
- 10: Washer

Assembly steps:

- Step 1: Attach locking pin (2) to the bottom of the dishwasher. Dimensions: 815 - 850 mm and 845 - 880 mm.
- Step 2: Connect the cable (3) to the back of the dishwasher. Dimensions: 598, 570, 815 mm.
- Step 3: Attach the top panel (1) to the dishwasher. Dimensions: 815 - 875, 570, 600 mm. A note says "klick" (click).
- Step 4: Attach the top panel (1) to the cabinet. Dimensions: 100x50mm. A note says "klick" (click).

2a

Diagram 2a shows the dishwasher being inserted into the cabinet. A note says "klick" (click). A note says "*) Mat-Nr. 622456".

2b

Diagram 2b shows the dishwasher being secured to the cabinet. A note says "klick" (click). A note says "*) Mat-Nr. 622456".

3

nicht einklemmen
do not pinch
ne pas coincer
No doblar

Diagram 3 shows the dishwasher being pushed into the cabinet. A note says "nicht einklemmen do not pinch ne pas coincer No doblar".

4

verspannen
brace
calar verticalment
Enrasar

Diagram 4 shows the dishwasher being braced. A note says "verspannen brace calar verticalment Enrasar". Dimensions: 0-60 mm. Tools: SW 17, SW 10.

5

Diagram 5 shows the dishwasher being leveled. A note says "x = x".

