


Brief and handy:
everything your dishwasher needs ...

 Before using for the first time,
read the Installation instructions
and Operating instructions!

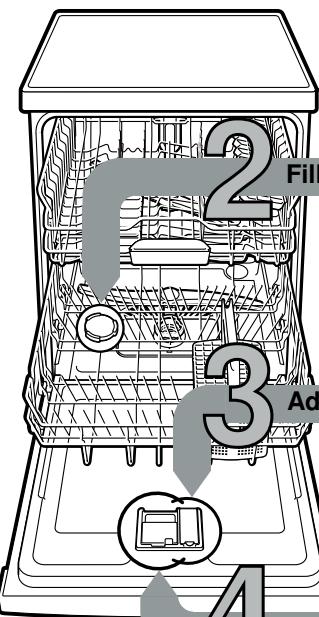

1

Adjusting the water softening system *

Ask your water supply company what the water hardness is and enter ...


* only before the first wash or if the water hardness has been changed

| Water hardness value °Clarke | Hardness range | mmol/l | Factory setting |
|---------------------------------|----------------|---------|-----------------|
| 0-8 | soft | 0-1.1 | H:00 |
| 9-10 | soft | 1.2-1.4 | H:01 |
| 11-12 | medium | 1.5-1.8 | H:02 |
| 13-15 | medium | 1.9-2.1 | H:03 |
| 16-20 | medium | 2.2-2.9 | H:04 |
| 21-26 | hard | 3.0-3.7 | H:05 |
| 27-38 | hard | 3.8-5.4 | H:06 |
| 39-62 | hard | 5.5-8.9 | H:07 |

Quickly sorted ...


How to adjust

- Switch on ON/OFF switch.
- Hold down programme button A and press START button until H:0 ... is indicated on the digital display.
- Release both buttons. The LED for button A flashes and the factory set value of H:04 is indicated on the digital display.
- Press programme button C. Each time the button is pressed the set value increases by one setting; when the value reaches H:07, the display jumps back to H:00 (off).
- Press START button. The chosen setting has now been stored.

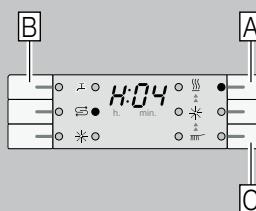


2


Filling the salt dispenser Dissolves limescale (not necessary for set value 0!) ...

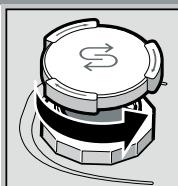


Unscrew cover.

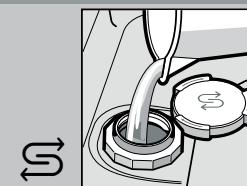

Fill the salt dispenser with water before the first wash only.

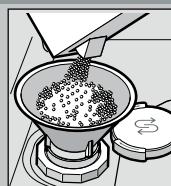


Add special salt (never add detergent!).

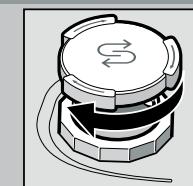

Screw on the cover. Wash immediately.

3

Adding rinse aid

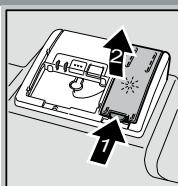


Press mark 1,


lift up cover 2.



Spick and span ...

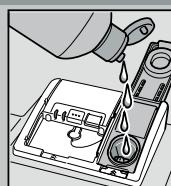


Fill in rinse aid.

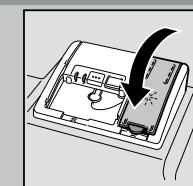


Screw on the cover. CLICK!

4


Adding detergent

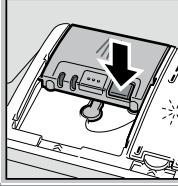


If required, open the cover (press button).

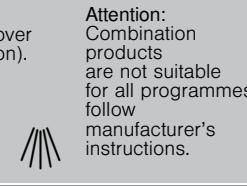

Attention: Combination products are not suitable for all programmes, follow manufacturer's instructions.

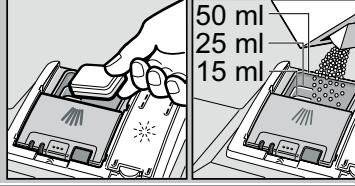

Pour detergent into the dry detergent dispenser only.

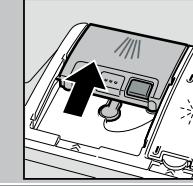

Slide cover shut, press. PLOP!

5

Switching on the appliance

6

 
 
 
 
Select programme

Quick, economical or intensive ...

Overview of programmes

The max. possible number of programmes is illustrated in this overview. The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 50242. Deviations are possible in practice.
* half normal load



| | | | |
|-----------------------------|-------------|--------|------|
| Duration: hs : mins | 3:15 - 1:10 | 0:29 * | 0:15 |
| Energy consumption in kWh | 1,30 - 0,70 | 0,80 | 0,05 |
| Water consumption in litres | 18 - 7 | 10 | 4 |



7 8

Start programme Here we go ...

9 Switch off the appliance Everything o.k. ...

Additional options **

 Express Wash+ / Speed Perfect+ / VarioSpeed+ ... is obtained by increased energy consumption at a constant cleaning performance.

 Half load ... for a few items, saves water, energy and time.

 Intensive zone ... perfect for a mixed load. Washing pressure and washing temperature are increased slightly.


 HygienePlus ... the temperature is increased during the final rinse process. This increases the hygiene status.

 High gloss drying ... prevents stains and improves the drying result. The addition of rinse aid is recommended.


** depending on model

Maintenance and care


Filters
... check,
if required,
clean.

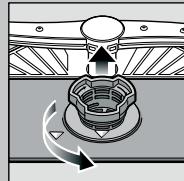


Rotate
filter cylinder,
remove filter
system ...

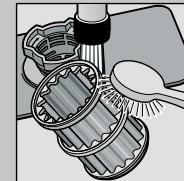

rinse
under
running
water ...

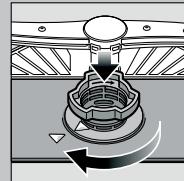


insert ...

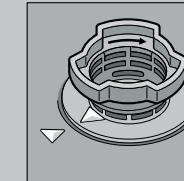


Screw on
filter system
NOTE
MARK!

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms
... Remove
blockages/
deposits.

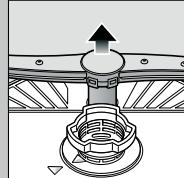


pull lower arm
upwards ...

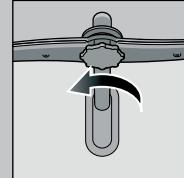


unscrew
upper arm ...

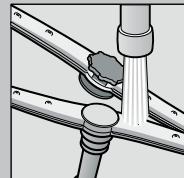


clean spray nozzles
under running water
(if required
use toothpicks) ...

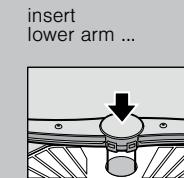

insert
lower arm ...

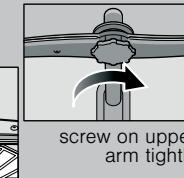

screw on upper
arm tightly

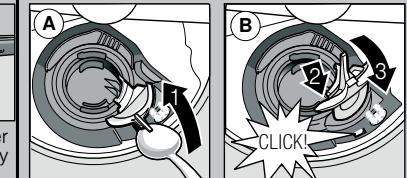

CLICK!

Rectifying minor faults yourself ...

... as it is worth doing it yourself!

More information can be found in the operating instructions

 
Fault

Possible causes

Remedial action

Display "■" is lit

Supply fitting jammed
or calcified



- Open supply fitting.
- 1. Unscrew water connection.
2. Clean filter in the water connection.
3. Flow rate must be min. 10 l/min.,
when water supply is open.
If the flow rate is less,
replace the supply fitting.
- Install supply hose without kinks.

Display "E:22"

Filters are soiled or blocked

- Clean the filters (see above).

Display "E:24"
and "■" are lit

Waste water hose is blocked
or kinked
Cover not attached to waste
water pump

- Install waste water hose without kinks.
- Attach cover (see above).

Display "E:25"
and "■" are lit

Waste water pump blocked

- Clean waste-water pump (see above).

Other fault display
"E:XX" is lit

Appliance has technical defect

- Call factory customer service (state fault display).
- Unplug appliance.

Residual water
in the appliance

The programme has not yet ended

- Close the appliance and switch it on
or terminate the programme
(see Terminating the programme).

Rust on the cutlery

Cutlery not rust-resistant
Hard knife blades are more susceptible
Extraneous rust

- Use dishwasher-proof cutlery.
- Never wash rusting parts in the appliance.

Fault

Possible causes

Remedial action

Utensils are not clean

Sand or gritty residue
on the utensils



Stains and streaks

Utensils not dry

Milky deposits
on the utensils
(can be removed)

Milky deposits, glasses
cloudy/tarnished
(cannot be removed)

Plastic/utensils
discoloured

Terminating the programme ...

While the programme is running,
press the START button
for approx. 3 sec. (Reset).



The numerical display
indicates "0:01";
approx. 1 minute after
the programme ends,
"0:00" is indicated.



Switch off the appliance.

Loading the dishwasher correctly ...

Dishwasher-proof utensils (not soiled with ash, wax, lubricating grease, ink
or adhesive labels; remove large remnants of jam, milk products and food
according to the operating instructions and check that the spray arms can rotate freely).