

A sample energy label with explanations is provided here.

The energy label for your appliance can be found on the side or front of the appliance. Remove the label and stick it here.

The energy label includes an overview of the specific values of your appliance.






Much more important information can be found in your operating and installation instructions.

This additional sheet is a part of your operating instructions. Retain all documentation for subsequent use.

i Correct detergent selection

The care label is crucial for selecting the correct detergent, temperature and treatment of the laundry. See also www.sartex.ch


On the website www.cleanright.eu, you can find much more useful information about detergents, care products and cleaning agents for private use.

| Laundry and type of textile | Washing programme | Washing temperature | Detergent |
|---|-------------------|---------------------|---|
| Boil-washable white laundry made of linen or cotton  | Cottons | 20 °C - 90 °C | Standard detergent that contains bleach and optical brighteners |
| Coloured washing made of linen or cotton  | Cottons | 20 °C - 60 °C | Detergent for colours without bleach or optical brighteners |
| Coloured laundry made of easy-care fibres, synthetic materials  | Easy-Care | 20 °C - 60 °C | Detergent for colours/delicates without optical brighteners |
| Delicate fine textiles, silk or viscose  | Delicate/Silk | 20 °C - 40 °C | Delicates |
| Wool  | Wool | 20 °C - 40 °C | Detergent for woollens |

i Information on protection of the envi-

In addition to the information in the instructions for use, you can reduce costs further and protect the environment by observing the following information.

Energy (reduction in the washing temperature) and detergent can be reduced for lightly and normally soiled laundry.

| | | |
|---|--------|---|
| Reduced temperature and amount of detergent according to dosing recommendation low  | Light | No visible dirt or stains. Items of clothing have a bodily odour, e.g. lightweight summer clothing/sportswear (worn for a few hours), T-shirts, shirts, blouses (worn for up to 1 day), guest bed linen and towels (used for 1 day) |
| | Normal | Soiling visible/or a few light stains noticeable, e.g. T-shirts, shirts, blouses (soaked with sweat, worn several times), towels, bed linen (used for up to 1 week) |
| | Heavy | Dirt and/or stains clearly visible, e.g. tea towels, baby items, work clothing |

Temperature according to care label and amount of detergent according to dosing recommendation high

 
9403/ 9000941766




en Information on the EU regulation

In accordance with the European Ecodesign Directive (EU) 1015/2010, you will find additional product information below. You can use this product information to operate your appliance in a way that is efficient and environmentally friendly.

i Product information

● Most efficient programmes for cotton textiles

The following programmes (standard programmes, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

| Standard programmes for Cottons in accordance with European Ecodesign Directive (EU) no. 1015/2010 | Load | Approximate programme duration |
|---|---------|--------------------------------|
| Cottons programme  60°C | 5,5 kg | 3 h |
| Cottons programme  60°C | 2,75 kg | 3 h |
| Cottons programme  40°C | 2,75 kg | 3 h |

Programme setting for testing and energy labelling according to directive 2010/30/EU with cold water (15 °C). The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated programme temperature for energy-saving reasons.

● Energy consumption when appliance switched off and not switched off

| | | | |
|-------------------------|--------|-------------------------------------|--------|
| Appliance switched off: | 0.12 W | Appliance not switched off (ready): | 1.35 W |
|-------------------------|--------|-------------------------------------|--------|

● Programme duration, residual moisture, energy and water consumption for the main washing programmes (approximate information)

| Programme | Approximate information on the residual moisture | | | | |
|---------------|--|---------------|---------------|--------------|--------------|
| | WAB28 ... | WAB24 ... | WAB20 ... | WAB16 ... | WAB12 ... |
| | WM14B ... | WM12B ... | WM10B ... | WM08B ... | WM06B ... |
| | Max. 1400 rpm | Max. 1200 rpm | Max. 1000 rpm | Max. 800 rpm | Max. 600 rpm |
| Cottons | 53 % | 58 % | 68 % | 80 % | 89 % |
| Easy-Care | 40 % | 40 % | 40 % | 40 % | 40 % |
| Delicate/Silk | 30 % | 30 % | 30 % | 30 % | 30 % |
| Wool | 45 % | 45 % | 45 % | 45 % | 45 % |

Information on residual moisture based on programme-dependent spin speed limits and maximum loads.

The instructions for use contain approximate information on the programme duration, energy consumption and water consumption in the main washing programmes.

The values may deviate from the specified values depending on the following factors: water pressure and hardness; water inlet temperature; type, amount and soiling of laundry; detergent used; fluctuations in the power supply; and additional functions selected.