


BSH Household Appliances Manufacturing Pvt. Ltd.

Arena house, 2nd floor,
Main building, Plot no 103,
Road no 12, MIDC, Andheri,
Mumbai - 400 093

www.bosch-home.in

Bosch Household Appliances reserves the right to change specifications without notice in the interest of technological progress. While every effort has been made to ensure that all specifications and descriptions are correct at the time of going to press, this brochure should not be regarded as an infallible guide for a particular product. Due to variation in the reproduction process, colours of products may vary slightly from those depicted. We recommend a visit to a Bosch dealer to confirm that specifications and colours are to your own satisfaction. All rights reserved. No part of this publication may be reproduced in any form by any means without the permission of BSH Household Appliances Manufacturing Pvt. Ltd. (E.O.E)

 **1-800-266-1880** (toll-free)
Mon - Sat: 8:00am to 8:00pm

    **BoschHomeIn**



Nothing can get you worried.
Not even a greasy, oily kadhai.

#NoMoreDishStress

With a Bosch Dishwasher, a gentle push of the button is all it takes to wash, clean and dry Indian utensils.



Source: Euromonitor, volume sales, 2017.

Dishwashers | Introduction

Bosch Dishwashers: the right solution to your kitchen

Enjoy a little more, with Bosch dishwashers in your life. Whether it is pursuing a hobby, or spending some extra time with your loved ones, Bosch dishwasher gives you the freedom to not miss the jovial moments at home. While you enjoy, Bosch dishwasher delivers sparkling clean and hygienic dishes, each time!

Image used is for representational purpose only.



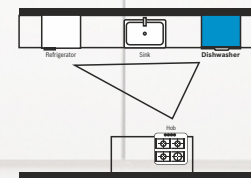
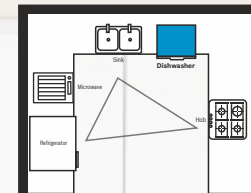
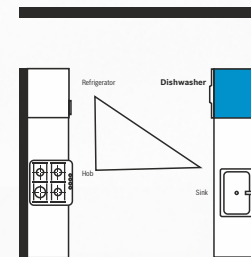
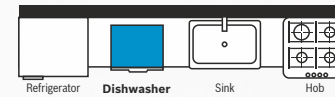
Dishwashers | Pre requisite

Pre-requisites to have a dishwasher.

1. Water Inlet Connection: Make sure the water inlet connection is of $\frac{3}{4}$ inch. The water pressure should be between 1 to 10 bar (means, that when the tap is turned on, at least 9 to 10 liters of water is discharged per minute).
2. Water Drainage Connection: Be cautious about the drainage hose, as it should not be bent or pulled. Height difference between the placement area (ground level) & drainage point should be maximum 1.1m
3. Electrical Connection: Your dishwasher needs the right amount of power. Connect the appliance only to an alternating current via correctly installed 15 ampere earthed socket.

Ensure the following (contact an electrician for advice if required):

- The mains plug and socket are compatible.
- The earthing system is correctly installed.
- Do not use multi plugs/sockets or extension boards.

**#Layout 1: Linear Kitchen**

This one-wall wonder contains a counter on a single wall unit with all the vessels, ingredients, stove, sink and the refrigerator. This style of kitchen spells convenience and ease in every aspect. In a liner kitchen, the sink is usually in the centre. It feels like that other kitchen format are not suitable. They are compact design gives a your kitchen a sleek and spacious outlook.

#Layout 2: Parallel Kitchen

If someone is all about efficiency, then their truth lies in a parallel kitchen. The kitchen galley in an airplane or ship inspires this layout. This kitchen style requires a small, compact place to prep and make food no just for one person, but also for over 10 people. Here, one can use one wall for the cabinets in an island format for all you appliances.

#Layout 3: U Shaped Kitchen

If someone is all about efficiency, then their truth lies in a parallel kitchen. The kitchen galley in an airplane or ship inspires this layout. This kitchen style requires a small, compact place to prep and make food no just for one person, but also for over 10 people. Here, one can use one wall for the cabinets in an island format for all you appliances.

#Layout 4: Island Kitchen

When an island is added to the 'U-shape' layout, it gives enough space in the kitchen to interact and mingle for people to interact with each other. And, not just that, with an island one can keep a bird's eye view on the rest of the house! This layout is brilliant, but will only work if the house has the luxury of space.

Dishwashers | Structure

What's Inside Your Dishwasher?



What's Inside Your Dishwasher?



Cutlery Drawer
A cutlery tray for cutlery and small dishes.

Spray Arms
While the lower spray arm is fixed, the upper spray arm rotates when the dishwasher is in operation. The curved shape of the spray arms ensures that the jets of hot water are spread evenly across a wide surface, reducing water consumption.

Filter System
3-stage drainage and filtration system with a high filtration rate, for the best dishwashing results.

Dishwasher Salt Dispenser
Dishwasher salt neutralises the effects of hard water, minimising the buildup of limescale deposits on your appliance and dishes.

Detergent Dispenser
Dosage compartment for dishwasher detergent tablets, liquid or powder.

Top Basket
Ideal for placing a variety of light crockery, delicate dishes and wine glasses.

DossageAssist detergent dispenser
Detergent tablets are dissolved efficiently in a special tray preventing these tablets sticking in between dishes, pots and pans for an enhanced cleaning performance.

Bottom Basket
Exposed to the highest spray pressure and water temperature from the lower spray arm, this compartment is perfect for cleaning large crockery like pots and pans. Accessories such as cutlery baskets, silver polishing cassettes, GlassSecure trays, bottle holders and baby bottle clips should be placed in the bottom basket.

Rinse Aid Dispenser
Rinse aid solution disperses water from the surface of your dishes, reducing water spots and giving your dishes a brilliant shine.

Dishwashers | Working

What happens inside the wonder machine.

To quick-start the dishwasher, all you have to do is remove the bigger left-over remains and load the utensils upside down. No pre-rinsing required! During the process, the remaining food particles get collected in the filter at the bottom of the dishwasher. After loading, just select the program and let the dishwasher take over.

1. Pre-rinse cycle

The food particles stuck on the utensils are taken care of by the pre-rinse cycle which uses room temperature water to remove the stains. Once the process is complete, the machine drains out the water.

3. Rinsing

For every rinse cycle, Bosch dishwasher takes in fresh water. For very greasy & oily utensils, one rinse cycle is in room temperature and the remaining uses hot water. For less greasy & oily utensils, the machine runs two rinse cycles in cold water and remaining in hot water. To reduce the surface tension of the water, rinse aid is added in the last rinse cycle by forming a thin layer over the clean dishes. The rinse aid helps make the water runoff quickly so that the dishes come out dry & sparkling clean.

2. Washing cycle

Just select the temperature, and the heater heats the water accordingly. The main wash cycle happens in hot water. After the process is complete the machine drains out the water.

4. Drying

How is 100% drying ensured? This is because of the hot water used during the wash cycle that heats the inner walls of the dishwasher. The process takes just 60-120 minutes, depending on the program selected. What's better? The whole process is also energy efficient as it consumes only 0.8-2 kWh of the energy per wash cycle.





Image used is for representational purpose only.

Dishwashers | Loading

Loading guide

6 steps for sparkling dishwashing results.



1. Scrape leftovers - no need to rinse utensils.



2. Load the upper basket by placing the dishes upside down.

1. Please avoid overlapping of crockery when loading into the dishwasher
2. Place dishes upside down to avoid water puddles



3. Load the lower basket by placing the dishes upside down.

1. Please avoid overlapping of crockery when loading into the dishwasher.
2. Place bigger utensils in the lower basket.



4. Ensure that the spray arms are not blocked



5. Pour detergent - close door.

1. Use detergent approved for automatic dishwashers only.



6. Choose a program and press start button.

Dishwashers | Detergent

Achieve the perfect results with dishwasher detergent kit

Dishwasher needs special detergents that help to deliver sparkling clean dishes. This dishwasher detergent kit is easily available on the leading online portals, Bosch brand stores and Bosch Home Customer Service. The products include Automatic Dishwasher Detergent, Rinse Aid and Dishwasher Salt.

Why are these products so special?

- The Automatic Dishwasher Detergent is specially formulated for best washing results.
- Water drops often leave spots on the utensils. Rinse Aid helps in avoiding this. It also reduces the surface tension of the water, allowing water to run off quickly and results in those squeaky-clean and dry utensils!
- The Dishwashing Salt softens the water. Avoid the usage of local rock salt, iodised salt or table salt in the dishwasher. It's not just the salt that reduces water hardness, it is done with the help of ionizer contained at the base and beside the salt container. The capacity of the salt tank is approx. 1 Kg.
- The Tablet contains a mixture of Detergent, Dishwashing Salt and Rinse Aid. One tablet is ideal for one wash cycle.

Dishwashers | Automatic v/s manual

A dishwasher is better than manual dishwashing. Here's why

Gone are the days of manually washing and cleaning dishes and utensils. Dishwashers are here to clean the toughest of oily and masala stains off the utensils in the most convenient and hassle-free way.



Hygienic wash: Killing 99.9% germs:

Not just clean but hygienic too. Bosch dishwasher rinses utensils through water jets of temperature up to 70°C, leading to 99.9% germ free dishes.



Saves time: Just 10 mins of your time:

You just need 10 mins to load the utensils and then the dishwasher takes over to provide washed, dried and sparkling clean utensils.



Easy to operate and handle:

Wash, clean and dry utensils at the push of a button. It's so easy that anyone can operate it. The best part is that you can use it at any time of the day - as per your convenience.



More time for life:

Half of your time while washing dishes can often go in pre-rinsing. With dishwasher, you can easily avoid this stage. All you have to do is scrape off the leftovers and stack the dishes in the dishwasher.



Saves water:

Here's an important fact; the amount of water used in the dishwasher is 10 times less than a manual dishwashing session.



A dishwasher can clean it all:

Our Indian food can leave all kinds of masala stains and tadka residue on the dishes. However this is not a challenge for Bosch dishwashers, it can clean all kinds of stains efficiently.



Prevents frequent breakage:

It's not uncommon for delicate crockery and glassware to skip and break while manual washing. Using dishwashers avoids this hassle and helps in arranging the utensils in a very simple, organized manner.

Dishwashers | Do's and Don'ts

Do's and Don'ts

We have taken utmost care to build our dishwashers, however it does require a little care and precaution for it to function in the most efficient manner.

Most of every day utensils can be washed in a dishwasher. But just to be more cautious, let us help you out with the do's and don'ts list:

You can use the following utensils in the dishwasher:

- Ceramic
- Glass
- Porcelain
- Stainless Steel like Kadhai, Pressure cooker, Pots, Pans etc.
- Microwave safe plastics, Glass, Melamine etc
- Other items like Spoons, Baby bottles, Cookware, Tableware

Avoid the usage of the following utensils in the dishwasher

- Gold
- Silver
- Aluminum
- Brass
- Copper
- Copper Based
- Bronze
- Acrylic

There are chances of discoloration or damage, if the above utensils are washed in a dishwasher.

For utensils with burnt or sticky food residues, it is advised to scrub away the residue manually before placing it in a dishwasher for best results. Microwave safe plastics are absolutely safe to be washed in a dishwasher too.

With a dishwasher, washing, cleaning and drying of utensils is no longer a chore.

What to put in the dishwasher - and what not?



Dishwashers | Types of Dishwashers

Free-standing

Standalone units like 60 cm, dishwashers can be placed freely on the kitchen floor. Dishwashers can also be installed under the kitchen counter but they will not have a continuous plinth panel or be flushed with kitchen cabinetry.

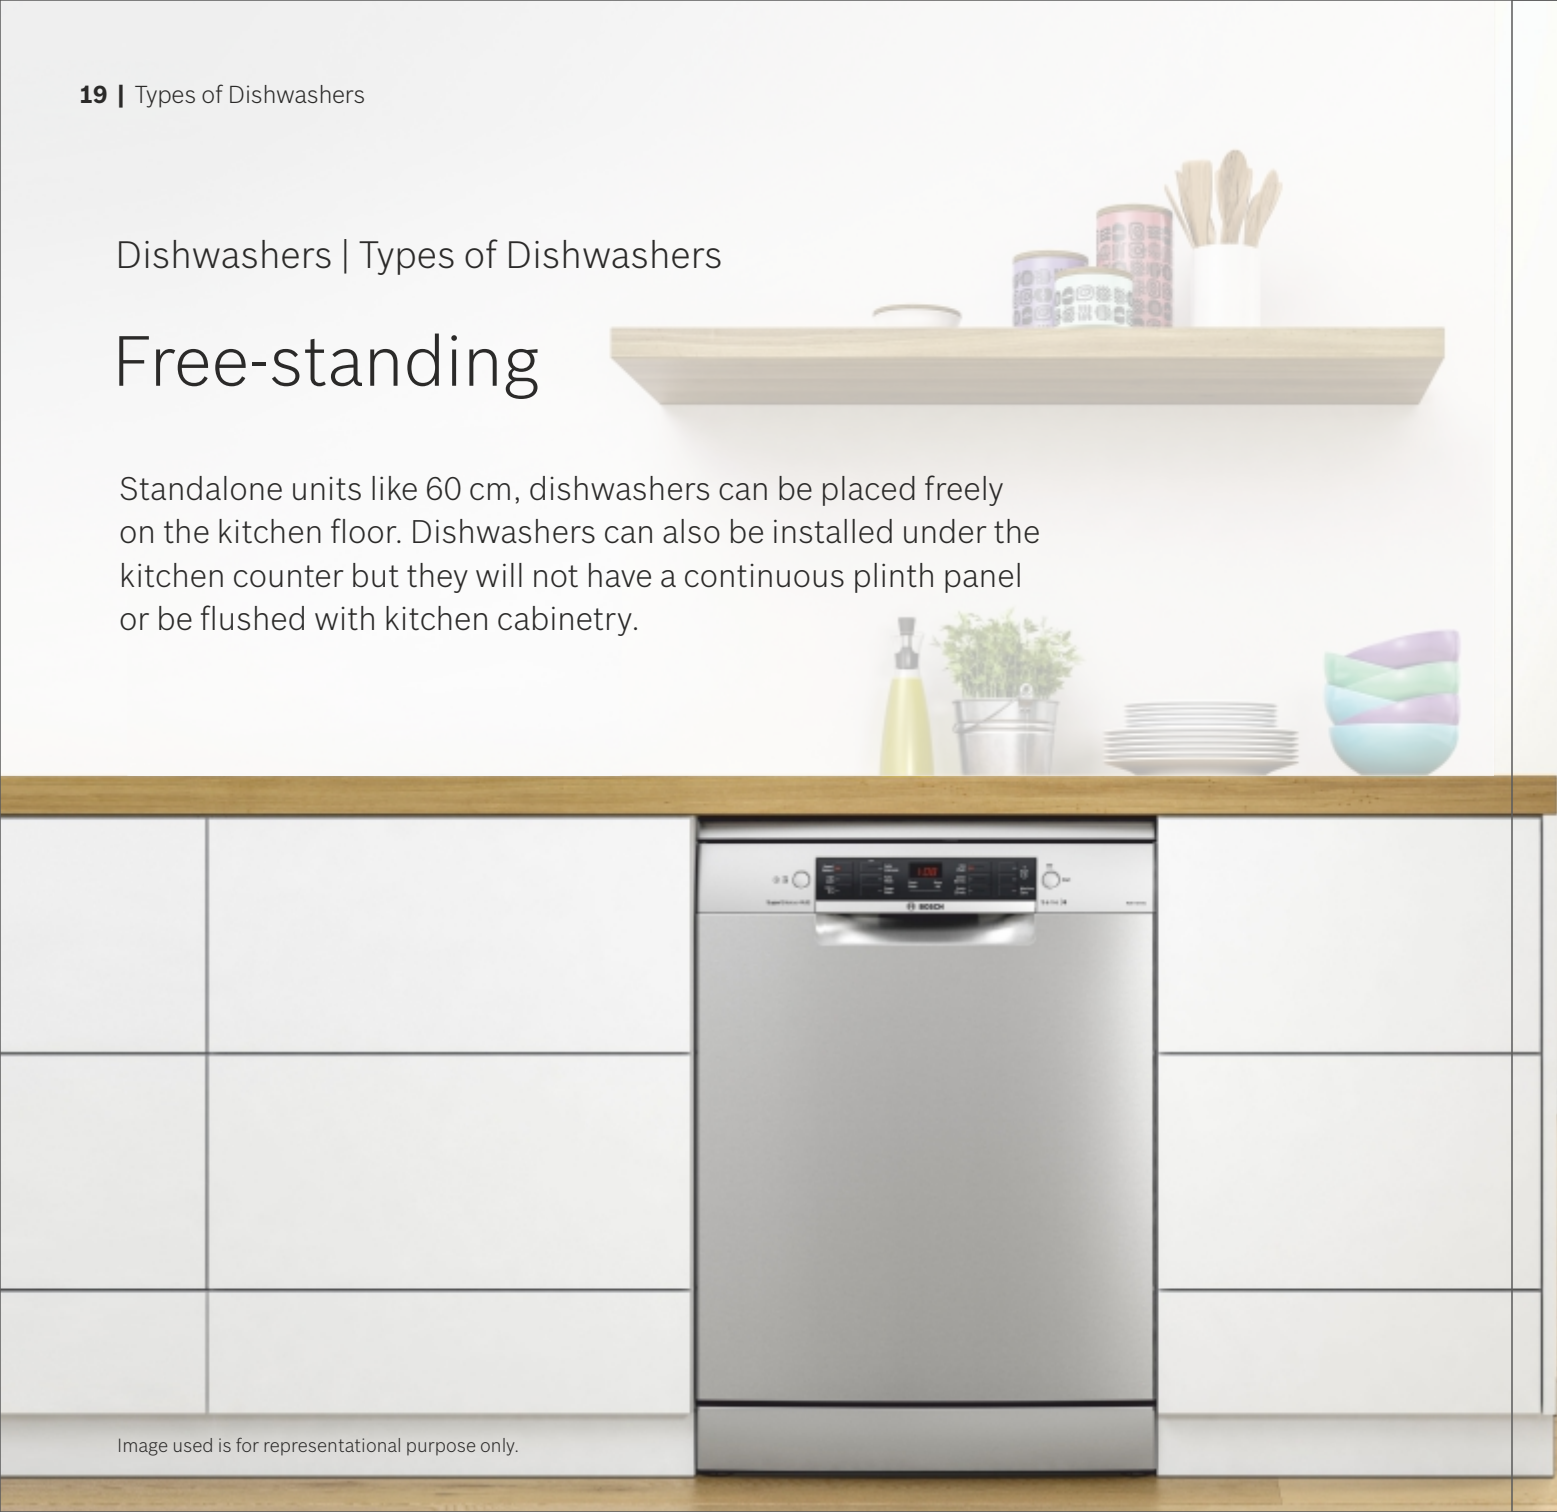


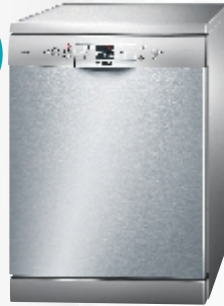
Image used is for representational purpose only.



Brandstore Exclusive Model

Model Number	SMS46KI03E 60 cm Freestanding Dishwasher Colour - Silver Inox	SMS46KI01E 60 cm Freestanding Dishwasher Colour - Silver Inox
Features	<ul style="list-style-type: none"> • 13 place settings • Silence Plus • VarioSpeed Plus • VarioDrawer • Anti finger print surface coating 	<ul style="list-style-type: none"> • 13 place settings • Silence Plus • VarioSpeed Plus • VarioDrawer • Anti finger print surface coating
Programmes & Options	<ul style="list-style-type: none"> • 6 programmes: Intensive 70°C, Auto 45-65°C, Eco 50°C, Glass 40°C, Quick wash 65°C, Pre Rinse • 4 wash options: VarioSpeed Plus, IntensiveZone, Extra Dry, Machine Care 	<ul style="list-style-type: none"> • 6 programmes: Intensive 70°C, Auto 45-65°C, Eco 50°C, Glass 40°C, Quick wash 65°C, Pre Rinse • 4 wash options: VarioSpeed Plus, HygienePlus, Extra Dry, Machine Care
Convenience & Safety	<ul style="list-style-type: none"> • VarioDrawer • DosageAssist • Time delay : 1-24 hrs • Childproof door lock 	<ul style="list-style-type: none"> • VarioDrawer • DosageAssist • Time delay : 1-24 hrs • Childproof door lock
Dimensions	<ul style="list-style-type: none"> • Dimensions (H x W x D): 84.5 cm x 60 cm x 60 cm • Noise level - 46dB • Water consumption in Eco 50°C Programme: 9.5 Ltrs • Energy consumption in Eco 50°C Programme: 0.9 kWh 	<ul style="list-style-type: none"> • Dimensions (H x W x D): 84.5 cm x 60 cm x 60 cm • Noise level - 46dB • Water consumption in Eco 50°C Programme: 9.5 Ltrs • Energy consumption in Eco 50°C Programme: 0.9 kWh

NEW



NEW



Model Number	SMS66GI01I 60 cm Freestanding Dishwasher Colour - Silver Inox	SMS66GW01I 60 cm Freestanding Dishwasher Colour - White
Features	<ul style="list-style-type: none"> • 12 place settings • Speedier dishwashers that reduce up to 60% of wash cycle time • Additional Top shower • New wash option - HalfLoad • New wash option - VarioEco • AquaSensor & LoadSensor • New wash programme Express Sparkle 65° - Wash clean & dry in 60 mins. 	<ul style="list-style-type: none"> • 12 place settings • Speedier dishwashers that reduce up to 60% of wash cycle time • Additional Top shower • New wash option - HalfLoad • New wash option - VarioEco • AquaSensor & LoadSensor • New wash programme Express Sparkle 65° - Wash clean & dry in 60 mins.
Programmes & Options	<ul style="list-style-type: none"> • 6 programmes: Intensive Kadhai 70°C, Auto - 45-65°C, Express sparkle 65°C, Economy 50°C, Quick wash 45°C and Pre Rinse • 3 wash options: HalfLoad, ExtraDry, VarioEco 	<ul style="list-style-type: none"> • 6 programmes: Intensive Kadhai 70°C, Auto - 45-65°C, Express sparkle 65°C, Economy 50°C, Quick wash 45°C and Pre Rinse • 3 wash options: HalfLoad, ExtraDry, VarioEco
Convenience & Safety	<ul style="list-style-type: none"> • VarioBasket system • Programme descriptive printing on the top of Dishwasher door • Time delay: 1-24 hrs • Childproof door lock • Single water protection 24 hrs 	<ul style="list-style-type: none"> • VarioBasket system • Programme descriptive printing on the top of Dishwasher door • Time delay: 1-24 hrs • Childproof door lock • Single water protection 24 hrs
Dimensions	<ul style="list-style-type: none"> • Dimensions (H x W x D): 84.5 cm x 60 cm x 60 cm • Noise level - 52dB • Water consumption in Eco 50°C Programme: 13 Ltrs • Energy consumption in Eco 50°C Programme: 1.45 kWh 	<ul style="list-style-type: none"> • Dimensions (H x W x D): 84.5 cm x 60 cm x 60 cm • Noise level - 52dB • Water consumption in Eco 50°C Programme: 13 Ltrs • Energy consumption in Eco 50°C Programme: 1.45 kWh



Model Number	SMS40E32EU 60 cm Freestanding Dishwasher Colour - White
Features	<ul style="list-style-type: none"> • 12 place settings • Glass protection technology • EcoSilence Drive • Dosage Assist • A+ Energy efficiency • Load sensor & Detergent Automation
Programmes & Options	<ul style="list-style-type: none"> • 4 programmes: Normal 65°C, Eco 50°C, Quick wash 45°C, Pre Rinse • Special function: Half Load
Convenience & Safety	<ul style="list-style-type: none"> • Self-cleaning filter system • Cutlery rack in top basket • 2 foldable plate racks in bottom basket • Aqua stop with guarantee
Dimensions	<ul style="list-style-type: none"> • Dimensions (H x W x D): 84.5 cm x 60 cm x 60 cm • Noise level - 52 dB • Water consumption in Eco 50°C Programme: 14 Ltrs • Energy consumption in Eco 50°C Programme: 1.02 kWh



Image used is for representational purpose only.

Dishwashers | Types of Dishwashers

Built-in Dishwashers

Installed under the kitchen counter, built-under or integrated dishwashers have a visible fascia panel on the front of the dishwasher. As they have a continuous plinth panel and no worktop, built-under and integrated dishwashers have a flush fit with your kitchen cabinetry. What makes an integrated dishwasher different from a built-under unit is that it allows you to install a furniture front on the dishwasher door to match your kitchen cabinetry.





Model Number	SMV46KX01E 60 cm Built-in Fully Integrated Dishwasher	SMI25AS00E 60 cm Semi Integrated Dishwasher
Features	<ul style="list-style-type: none"> • 13 place settings • Glass Protection Technology • Dosage Assist • Machine Care Program • Info Light 	<ul style="list-style-type: none"> • 12 place settings • Glass protection technology • EcoSilence Drive • Dosage Assist • A+ Energy efficiency • Load sensor & Detergent Automation
Programmes & Options	<ul style="list-style-type: none"> • 6 programmes: Intensive, Eco, Auto, Glass, Quick wash, Pre Rinse • 3 Special options: ExtraDry, HygienePlus, VarioSpeedPlus 	<ul style="list-style-type: none"> • 5 programmes: Intensive 70°C, Auto 45 - 65°C, Eco 50°C, Quick wash 45°C, Pre Rinse • Special function: VarioSpeed
Convenience & Safety	<ul style="list-style-type: none"> • End of program audible, InfoLight Red • Additional third rack for cutlery • Aqua Sensor, Load sensor 	<ul style="list-style-type: none"> • Vario basket system • Height adjustable top basket • 2 foldable plate racks in bottom basket • Aqua stop with guarantee • Time delay : 1-24 hrs
Dimensions	<ul style="list-style-type: none"> • Dimensions (H x W x D): 81.5 cm x 59.8 cm x 55 cm • Noise level - 46 db • Water consumption in Eco 50°C Programme: 9.5 Ltrs • Energy consumption in Eco 50°C Programme: 0.92 kWh 	<ul style="list-style-type: none"> • Dimensions (H x W x D): 81.5 cm x 59.8 cm x 57.3 cm • Noise level - 48dB • Water consumption in Eco 50°C Programme: 11.7 Ltrs • Energy consumption in Eco 50°C Programme: 1.02 kWh



Dishwashers | Customer service

Perfect after service for perfect Dishwashers.

Our appliances are built to stand the test of time and provide unbeatable performance continually. While our customer care services design to deliver a service promise that's fast, competent and reliable.

Our service engineers in more than 300 cities, are here to help diagnose and trouble shoot your Bosch kitchen appliances. So that you can use your favourite Bosch kitchen appliances again quickly, whether it is a Refrigerator or an Oven.

Get in touch with our call centre advisor and they are happy to assist you.

Customer Care Helpline 1800 266 1880
Mon to Sat: 8 am to 8 pm

To watch
Dishwasher Video
Scan:

