

# Bosch Washer & Dryer Quick Tips and Tricks



1

**Clean the dryer's moisture sensor** (found behind the lint filter) once per month.\* Simply wipe with a soft cloth and a little white vinegar.

2

**Clean the dryer's condenser** once a month.\* Refer to your owner's manual for instructions.

3

**After each wash cycle**, remove clothes and wipe rubber gasket dry. Leave washer and detergent door slightly open to let any remaining moisture evaporate.



## Other useful tips to get the most from your Bosch washer & dryer:

- **Clean lint filter after each drying cycle** by pulling out filter and removing lint using hands. For severely dirty filter, rinse gently under running water and allow to completely dry before reinserting.
- **Pair your Bosch washer and dryer with the Home Connect™ app\*\*** on your phone or tablet to receive cycle status notifications or remote start your appliances.
- **Use a high-efficiency detergent**, which creates less suds and cleans clothes with less detergent.
- **If washer oversuds**, add fabric softener and a half-gallon of water into the detergent tray. Run one wash cycle.

For complete product information, refer to the Use and Care Manual available online at: [www.bosch-home.com/us/owner-support](http://www.bosch-home.com/us/owner-support)

\*Depending on usage. Not applicable for Bosch 500 Series Dryer (WTW87NH1UC) with Self-Cleaning Condenser™.

\*\*Home Connect™ for laundry is available in: WAW285H1UC, WAW285H2UC, WTW87NH1UC, and WTG865H4UC. Download the app on Apple App Store or Google Play.

Laundry Stacking Kit sold separately. Visit [www.bosch-home.com/us/shop](http://www.bosch-home.com/us/shop) to purchase.