Outstanding Quality, Perfect Results.

Enjoy fabulous deals on our range of Bosch ovens that will bring your culinary masterpieces to life.



60cm Built-in Oven



60cm Built-in Combination Microwave Oven with Added Steam HNG6764S6 *

(U.P. \$6,299)

- Now
- \$6,099
- 4D Hot Air
- Assist Function(Perfect Bake and Roast).





60cm Built-in Combination Steam Oven HSG636ES1

(U.P. \$5,299)



4D Hot Air Assist Function (Perfect Bake and Roast).



Oven



60cm Built-in Series 8 Oven

HBG6764B6B *

(U.P. \$4,899)

Now \$4,699

- Home Connect
 withSmart Connectivity.
- Remove Stubborn Stains with Pyrolytic Self Cleaning Function.





60cm Built-in Series 8 Oven

HBG6764S6B *

(U.P. \$4,899)

^{Now} \$4,699

- Home Connect with Smart Connectivity.
- Assist Function (Perfect Bake and Roast).

Home Connect



60cm Built-in

Series 8 Oven

HBG633BS1B

(U.P. \$3,299)

\$3,099

• 4D Hot Air

• 3 Layered Glass Door

Now



60cm Built-in Oven

HIJ557YS0M

(U.P. \$3,199)

^{Now} \$2,999

• 3D Hot Air • Full Eco Clean



60cm Built-in Series 6 Oven

HBA5780S6B *

(U.P. \$2,999)

^{Now} \$2,799

- Home Connect with Smart Connectivity.
- Pyrolytic Self Cleaning Function.



*Home Connect is only available at selected retail stores.



60cm Built-in Oven HBS573BS0B

(U.P. \$2,799)

Now \$2,599

- 3D HotAir
- Pyrolytic Self Cleaning Function.
- 5 Heating Modes



60cm Built-in Stainless Steel Oven HBA5570S0B

(U.P. \$2,699)

^{Now} \$2,499

- 3D Hot Air
- Full Eco Clean



60cm Built-in Stainless Steel Oven HBF134BS0K

(U.P. \$1,699)

^{Now} \$1,099

- 3D Hot Air
- EcoClean Direct Back Panel



60cm Built-in Stainless Steel Oven HHF133BS0B

(U.P. \$1,299)

^{Now} \$1,099

• 3D Hot Air

3 Layered Glass Door 4 Heating Modes





60cm Built-in Stainless Steel Oven HBF114BR0K

(U.P. \$1,499)

Now \$999

- 3D Hot Air
- 3 Layered Glass Door
- 7 Heating Modes

Compact Ovens



45cm Built-in Combination Steam Oven CSG656RS7 *

(U.P. \$4,399)

^{Now} \$4,199

- Home Connect with Smart Connectivity.
- Assist Function (Perfect Bake and Roast) and added steam fuction.





45cm Built-in Combination Steam Oven CSG656RB7 *

(U.P. \$4,399)



- Home Connect with Smart Connectivity.
- Assist Function (Perfect Bake and Roast) and added steam fuction.



*Home Connect is only available at selected retail stores.



45cm Built-in Combination Microwave Oven CMG633BS1B

(U.P. \$3,799)



4D Hot Air 6 Heating Modes



38cm Built-in Stainless Steel Microwave Oven BEL554MS0K

(U.P. \$1,999)

Now \$1,099

25L 8 Auto Programmes



Heating modes featured in Bosch ovens.



3D HotAir

The 3D element around the fan aids in evenly distributing the hot air throughout the oven to maintain the right temperature across all three shelf levels so that even cooking results are consistently achieved.

VS 4D HotAir

The specially designed fan wheel changes its spinning direction at regular intervals. This distributes hot air more evenly around the oven to consistently bake food equally across multiple levels.

Model Number	Oven Size	Featured Heating Modes
HNG6764S6	60cm	•
HBG6764B6B		•
HBG6764S6B		• • •
HSG636ES1		• • •
HBG633BS1B		• • •
HBS573BS0B		• • •
HBA5780S6B		• • •
HIJ557YS0M		• • •
HBA5570S0B		• • •
HBF134BS0K		• • •
HBF114BR0K		• • •
HHF133BS0B		• •
CSG656RS7	45cm	• • •
CSG656RB7		• • •
CMG633BS1B		• •
3D HotAir 4	D HotAir 🔳 To	p Heating 📃 Bottom Heating

Caring for your Oven.

Minimise fire risk by **removing any food remnants and grease** in the oven before each use.

Secure any **grease-proof paper away from the oven's** heating elements, as it may come in contact and catch fire.

The oven door may not close properly if the door seal is damaged or dirty. Be sure to **keep the door seal clean** and if it is damaged or missing, do not operate the oven.

A **build up of moisture** within the oven **may cause a power trip.** To prevent moisture from accumulating, it is recommended to heat up the oven at least once every 2 weeks.

If unused for a prolonged period, heat up the oven at 100°C for 5 minutes before gradually increasing to 150°C and 200°C.

Pro tip: remove excess moisture from all heating elements by operating different heating types (e.g. top/bottom, hot air, and grill).





Scan for installation tips



The oven will ventilate and cool itself down after each use. **Do not switch off the main power supply.**



Moisture within the oven may lead to corrosion over time. Avoid leaving moist or warm food in the oven for an extended period of time.



Knocks and impacts to the glass door may leave unnoticeable cracks and cause it to shatter when in use. **Avoid placing any items** and using abrasive cleaning tools on the glass door.



Ensure baking trays and other accessories are properly inserted and clear of the oven door, before closing it.