

## Bosch Wall Oven Quick Tips and Tricks



- Bosch All-In-One Wall Ovens offer a range of features to maximize performance from Broil and Roast to Pizza, Proof Dough, and Air Fry. **Some features may only apply to select models:**
  - Avoid undercooking or overcooking meats with the Auto/Meat Probe. The probe allows you to monitor the internal temperature of your food without opening the oven door for consistent cooking results.
  - The EcoChef™ function works with your meat probe to reduce energy consumption by using leftover heat when cooking, while still ensuring your food is cooked through.
  - For even baking, use Convection Multi-Rack mode and stagger your bakeware between racks. Rotate your baking sheets halfway through the cooking time for best results.
  - In a hurry? Choose the Fast Preheat function to shorten the time it takes your oven to reach a set temperature when using select cooking modes—Bake, Convection Multi Rack, Convection Bake, Convection Roast, or Pizza.
  - Use the Warm setting to keep food hot until you are ready to eat. This function is best suited for baked goods, such as cakes, cornbread, pies, tarts, etc.
  - The Frozen Foods function evenly distributes heat when heating frozen convenience foods without the need to preheat.

- The type of pan you use will affect how your food browns:



- For tender, golden brown crusts, we recommend using a light-colored, non-stick or shiny metal pan.
  - For brown, crisp crusts, we recommend using a dark-colored, non-stick or dull pan or glass bakeware. These may require lowering the baking temperature 25°F (-3.89°C).
  - **Looking for new bakeware? Find cooking and baking accessories at [bosch-home.com/us/shop](https://bosch-home.com/us/shop).**
- Always allow at least 1" (2.5 cm) of space between pans and the oven walls for best heat circulation.
  - Warm air or steam escaping from the oven vents? It is normal to see or feel occasional steam or warm air. To avoid overheating your oven, DO NOT block oven vents.
  - **Looking for more tips and tricks? Check out our answers to your frequently asked wall ovens questions at [bosch-home.com/us/owner-support/get-support/support-ovens-ranges](https://bosch-home.com/us/owner-support/get-support/support-ovens-ranges).**

## Cleaning and Care



- Unsure how to clean your Bosch Wall Oven? Follow these steps:
  - Clean racks with soapy water. Rinse thoroughly and dry. Wash your glass door with soap and water. Then, wipe clean. DO NOT clean the door gasket.



- Always wipe up spills from painted and porcelain surfaces. Wash with hot soapy water, wipe clean, and dry.
- Use the Self Clean function to clean the inside of your oven. Self Clean uses high heat to burn off any stubborn mess. Once Self Clean is complete, simply wipe away any leftover debris from the inside of your oven.
  - We recommend opening a window or using a ventilation fan or hood when your oven is in Self Clean mode.
  - Always remove racks and accessories **before** starting the Self Clean cycle to prevent damage and achieve optimal cleaning results. **DO NOT** use Self Clean to clean your racks.
- To clean your stainless steel appliance, wipe down using a soft cloth and mild, soapy water and wipe dry. Always wipe in the direction of the grain.



- After washing your stainless steel, condition with the Bosch Stainless Steel Conditioner for extra shine. Apply with a soft cloth in the direction of the grain, then wipe away any excess. **DO NOT** use conditioner on non-steel surfaces, logos, control markings, and appliance interiors.
  - **DO NOT** condition black, smudge-proof or easy-clean steel. Simply wash these types of steel with mild, soapy water and a soft cloth.
  - **Bosch Stainless Steel Conditioner (Spray Bottle # 00576696, Wipes # 17002199) sold separately. Visit [bosch-home.com/us/shop](https://www.bosch-home.com/us/shop) to purchase.**
- **Leftover grease and grime after cleaning? Follow with the Bosch Degreaser (00312207) and Bosch Microfiber Cleaning Cloth (00312289). Sold separately. Visit [bosch-home.com/us/shop](https://www.bosch-home.com/us/shop) to purchase.**



## Need Assistance?

For additional assistance or questions, check out our Owner Support Resources at: [bosch-home.com/us/owner-support](https://www.bosch-home.com/us/owner-support)

For complete product information, refer to the Owner Manual available online at: [bosch-home.com/us/owner-support/get-support/owner-manuals](https://www.bosch-home.com/us/owner-support/get-support/owner-manuals)

Can't find what you're looking for?

Reach the Bosch Customer Support Team at **1-800-944-2904**