

# Bosch Refrigerator Quick Tips and Tricks

**1**

Your refrigerator has different chill zones:

- The warmest zone is at the very top of the door. Store items that are less likely to go bad here, like hard cheese and butter.
- The colder zones are near the back panel. Store items that are more likely to go bad here, like meats.

**2**

Refrigerated items directly in front of the air vents may affect air circulation and cause items to freeze. Remove any obstacles from your refrigerator's ventilation to maximize energy saving.

**3**

Adjust the humidity of your vegetable container for optimal preservation.

- Set a lower humidity for fruits or large loads.
- Set a higher humidity for vegetables or smaller loads.

**4**

Accidentally leave the refrigerator door open? A warning tone will sound to alert you.



## Other useful tips:

- We recommend keeping your Bosch refrigerator between 2.78°C (37°F) and 3.89°C (39°F) and your freezer at -17.78°C (0°F).
- Storing large amounts of food or need to chill drinks quickly? The SuperCool setting temporarily sets your refrigerator to its lowest temperature, returning to its original temperature about two hours later.
- Control certain functions of your Bosch refrigerator via the HomeConnect™ app. Download on the Apple App Store or Google Play.



## Water Filters

If your refrigerator or freezer uses a water filter, learn which filter to purchase at: [bosch-home.ca/en/service/water-filter-finder](https://bosch-home.ca/en/service/water-filter-finder)

Already know which filter you need? Visit [bosch-home.ca/en/service/cleaners-and-accessories](https://bosch-home.ca/en/service/cleaners-and-accessories) to purchase from our authorized parts distributor.

From cleaning and care advice to appliance usage tips, we've got you covered with our How-To Videos. Watch our video on how to change your water filter at: [bosch-home.ca/en/experience-bosch/how-to-videos](https://bosch-home.ca/en/experience-bosch/how-to-videos)

## Cleaning and Care

Remove all food before cleaning your refrigerator. Wipe down the door seals with a soft cloth. Wipe down all walls, shelves, and drawers with a soft cloth and mild, soapy water. DO NOT wash any removable items, like drawers, in the dishwasher.

Clean your stainless steel with a soft cloth and mild, soapy water, then wipe dry. Always wipe in the direction of the grain.

For extra shine, follow cleaning with the Bosch Stainless Steel Conditioner. Apply with a soft cloth and wipe away any excess. Always ensure this conditioner is compatible with your appliance. DO NOT use on non-steel surfaces, logos, control markings, labels, black, smudge-proof or easy-clean steel, and appliance interiors.

Bosch Stainless Steel Conditioner (Spray Bottle # 00576696, Wipes # 17002199) sold separately. Visit [bosch-home.ca/en/service/cleaners-and-accessories](https://bosch-home.ca/en/service/cleaners-and-accessories) to purchase from our authorized parts distributor.



## Need Assistance?

For additional assistance or questions, check out our Owner Support Resources at: [bosch-home.ca/en/service](https://bosch-home.ca/en/service)

For complete product information, refer to the Owner Manual available online at: [bosch-home.ca/en/service/owner-manuals](https://bosch-home.ca/en/service/owner-manuals)

Can't find what you're looking for?

Reach the Bosch Customer Support Team at **1-800-944-2904**

