

# Bosch Built-In Espresso Machine Quick Tips and Tricks



- Prevent unwanted deposits by cleaning your drip tray and coffee grounds container daily.
- Your appliance's display will alert you if an action is needed, like replacing your water filter or cleaning and descaling your appliance. Follow the instructions shown for best results. Alerts disappear once the required action is completed.
  - **Bosch Espresso Machine water filters, cleaning tablets, and descaling tablets are sold separately. Visit [bosch-home.ca/en/service/cleaners-and-accessories](https://bosch-home.ca/en/service/cleaners-and-accessories) to purchase from our store or authorized parts distributor.**
- Your appliance accurately indicates how often it should be descaled based on your water hardness. Set your water hardness using the provided water test strip and the guide found in your Owner Manual at [bosch-home.ca/en/service/owner-manuals](https://bosch-home.ca/en/service/owner-manuals).
- Your built-in espresso machine allows you to adjust the type, strength, temperature, and fill level of your drink.
- Save up to 8 of your favorite drink selections using the Star button on your appliance.



- Pair your appliance with the Home Connect® app on your phone or tablet to control certain functions, adjust basic settings, and monitor operating status.
  - First, download the Home Connect® app from the Apple App Store or Google Play. Then, head to the settings on your built-in espresso machine and select Home Connect. Follow the directions on your appliance's display to access a QR code for easy pairing and registration.

## Water Filters



- Water filters help to minimize limescale deposits and reduce impurities in your water for great tasting, more flavorful drinks.
- Don't forget to set the aroma ring (at the bottom of the filter) based on your water hardness. Set the ring to A, B, or C where C stands for hard water and A for soft water.
- Shop water filters in our Bosch Accessories Store: [bosch-home.ca/en/service/cleaners-and-accessories](https://www.bosch-home.ca/en/service/cleaners-and-accessories)

## Cleaning and Care

- If your appliance has not been used for a lengthy period, we recommend cleaning the entire espresso machine thoroughly.
- To clean your exterior, wipe down all surfaces, including the control panel, with a microfiber cloth and mild soap.
  - DO NOT use strong or abrasive cleaners, cleaners containing alcohol, scouring pads or cleaning sponges, pure citric acid, vinegar-based cleaners, or phosphoric acid as these may damage the surface of your espresso machine.
- Your milk system is automatically cleaned with a jet of steam after preparing every milk-based drink. However, we also recommend cleaning the milk system manually once a week for optimal results.
  - To clean manually, open your appliance, remove the suction pipe from the milk tube, and insert into the hole in your coffee grounds container. Close the espresso machine door, being careful to not jam the milk tube. Place an empty glass underneath the outlet and press the Play button to begin rinsing the milk system.
  - Always remove any milk residues to prevent unwanted deposits that may damage your appliance.





- To clean your stainless steel appliance, wipe down using a soft cloth and mild, soapy water and wipe dry. Always wipe in the direction of the grain.
  - After washing your stainless steel, condition with the Bosch Stainless Steel Conditioner for extra shine. Apply with a soft cloth in the direction of the grain, then wipe away any excess. DO NOT use conditioner on non-steel surfaces, logos, control markings, labels, black, smudge-proof or easy-clean steel, and appliance interiors.
  - **Bosch Stainless Steel Conditioner (Spray Bottle # 00576696, Wipes # 17002199) sold separately. Visit [bosch-home.ca/en/service/cleaners-and-accessories](https://bosch-home.ca/en/service/cleaners-and-accessories) to purchase from our authorized parts distributor.**



## Need Assistance?

For additional assistance or questions, check out our Owner Support Resources at: [bosch-home.ca/en/service](https://bosch-home.ca/en/service)

For complete product information, refer to the Owner Manual available online at: [bosch-home.ca/en/service/owner-manuals](https://bosch-home.ca/en/service/owner-manuals)

Can't find what you're looking for?

Reach the Bosch Customer Support Team at **1-800-944-2904**

