

Bosch Radiant Electric Cooktops Quick Tips and Tricks



- For optimal results, always match the size of your pan with the size of your ceramic glass cooktop outline or cooking zone.
 - **Looking for new cookware? Visit bosch-home.ca/en/service/cleaners-and-accessories to purchase from our store or authorized parts distributor.**
- Always avoid heating stews, soups, sauces, or drinks too quickly. We also recommend stirring continuously to avoid overflow or spatter.
- Your radiant cooktop is equipped with a residual heat indicator that lights up when a cooking zone is turned off, but the area is still hot. DO NOT touch the cooktop when the residual heat indicator is lit.
- The Panel Lock prevents your cooktop from being turned on accidentally. Press the Clean Lock / Child Lock button for four seconds to turn on and off.
- Using a griddle or large pan? Use the Bridge Zone to connect two separate cooking zones into one long griddle zone for the best results. **Select models only.**
- Select the SpeedBoost® function when heating large amounts of water for faster boiling. **Select models only.**

Cleaning and Care

- **Always wait until your cooktop has fully cooled to begin cleaning.**
- Before cleaning, wipe away any spatter with a clean, damp cloth and remove any remaining food residue with a glass cooktop scraper. Always scrape at a low angle (20-30 degrees) as using the scraper at a higher angle may scratch your appliance. Then, apply glass cooktop cleaner with a soft cloth and wipe away any excess.
- DO NOT use abrasive cleaners or scouring pads, harsh cleaners, dirty sponges or dirty cloths to clean your electric cooktop.
- Plastic or foods with high sugar content should be removed immediately if spilled or melted to avoid damage to your appliance. After turning your cooktop off and letting cool, use a glass cooktop scraper at a low angle (20-30 degrees) to remove and buff the surface clean with a soft cloth.
- **For more in-depth cleaning instructions, check out our How-To Clean Electric & Induction Cooktops video [here](#).**
- **Bosch Induction & Electric Cooktop Cleaner (# 12010030) and Bosch Glass Scraper for Induction & Electric Cooktops (# 17000334) sold separately. Visit [bosch-home.ca/en/service/cleaners-and-accessories](https://www.bosch-home.ca/en/service/cleaners-and-accessories) to purchase from our authorized parts distributor.**



- Leftover grease and grime after cleaning? Apply the Bosch Degreaser to your appliance, waiting 3 to 5 minutes. For stubborn stains, rub in with a soft cloth, like the Bosch Microfiber Cleaning Cloth, after waiting the allotted time. Wipe away any excess degreaser with water and a soft cloth.
- **Bosch Degreaser (00312207) and Bosch Microfiber Cleaning Cloth (00312289) sold separately. Visit [bosch-home.ca/en/service/cleaners-and-accessories](https://www.bosch-home.ca/en/service/cleaners-and-accessories) to purchase from our authorized parts distributor.**



Need Assistance?

For additional assistance or questions, check out our Owner Support Resources at: [bosch-home.ca/en/service](https://www.bosch-home.ca/en/service)

For complete product information, refer to the Owner Manual available online at: [bosch-home.ca/en/service/owner-manuals](https://www.bosch-home.ca/en/service/owner-manuals)

Can't find what you're looking for?

Reach the Bosch Customer Support Team at
1-800-944-2904