

Tablica kuhanja - Bosch Air Fryer Series 4

Program*	Vrsta namirnice	Temperatura	Vrijeme	Savjet
Prženi krumpirići 	Domaći krumpirići, 500 g	180° C	30 minuta	10 x 10 mm trakice, protresite 2x
	Smrznuti krumpirići, 500 g	180° C	22 minuta	10 x 10 mm sticks, protresite 1x
Perad 	Pileća prsa, 2 x 200 g komadi	200°C	25 minuta	Premažite s uljem
	Pileći bataci, 6 x 125 g komadi	200° C	25 minuta	Premažite s uljem
Svježa hrana 	Za hrskave rezultate, dodajte maksimalno 1 žlicu ulja svježoj hrani			
Meso 	Kobasice, 2-8 pieces	200° C	7 minuta	Ostavite dovoljno mjesta između kobasica
	Goveđi odresci, 2-3 x 3 cm debljine	200° C	18 minuta	Prethodno zagrijte 5 min., premažite s uljem, okrenite nakon 10 min.
Riba 	Fileti lososa, 4 x 125 g	160° C	12 minuta	Premažite s uljem
	Smrznute kozice, 500 g	200° C	10 minuta	Premažite s uljem
Povrće 	Grilano povrće, 600 g	180° C	20 minuta	Dodajte max 1 žličicu ulja, prostresite nakon 10 min.
Protresite 	Check the food and shake the basket or turn food occasionally for best results			
Kruh 	Predpečena peciva, 6 kom.	170° C	8 minuta	
	Smrznuta pred-pečena peciva, 6 kom.	160° C	12 minuta	
Slatka tjestenina 	Male torte ili mafini, 6 komada	160° C	18 minuta	
Održavanje topline 		80° C	30 minuta	
Odmrzavanje 		40° C	30 minuta	Mljeveno meso, voće I povrće, kruh, kolači
Automatsko pokretanje i zaustavljanje 	Uređaj se automatski zaustavlja i počinje kuhati kada se košara izvadi i vrati			

*Ove postavke su smjernice. Hranu je potrebno često provjeravati.

Tablica kuhanja - Bosch Air Fryer Series 6

Program*	Vrsta namirnice	Temperatura	Vrijeme	Savjet
Prženi krumpirići	 Domaći krumpirići, 700 g	180° C	30 minuta	10 x 10 mm trakice, protresite 2x
	Smrznuti krumpirići, 500 g	180° C	23 minuta	10 x 10 mm trakice, protresite 1x
Perad	 Pileća prsa, 4 x 200 g komadi	200° C	25 minuta	Premažite s uljem, okrenite 1x tokom pečenja
	Pileći bataci, 8-10 komada	200° C	25 minuta	Premažite s uljem, okrenite 1x tokom pečenja
Svježa hrana		Za hrskave rezultate, dodajte maksimalno 1 žlicu ulja svježoj hrani		
Meso	 Kobasice, 4-10 komada	200° C	7 minuta	Ostavite dovoljno mjesta između kobasica
	Goveđi odresci, 2-4 x 3 cm debljine	200° C	20 minuta	Prethodno zagrijte 5 min., premažite s uljem, okrenite nakon 10 min.
Riba	 Fileti lososa, 4 x 150 g komadi	160° C	12 minuta	Premažite s uljem
	Smrznute kozice, 800 g	200° C	10 minuta	Premažite s uljem
Povrće	 Grilano povrće, 600 g	180° C	20 minuta	Dodajte max 1 žličicu ulja, prostresite nakon 10 min.
Alarm za protresti	 SHAKE	Provjerite hranu i povremeno protresite košaru ili okrećite hranu za najbolje rezultate		
Kruh	 Predpečena peciva, 6 komada	170° C	8 minuta	
	Smrznuta pred-pečena peciva, 6 kom.	160° C	12 minuta	
Slatka tjestenina	 Male torte ili mafini, 6 komada	150° C	18 minuta	
Održavanje topline		80° C	30 minuta	
Automatsko pokretanje i zaustavljanje		Uređaj se automatski zaustavlja i počinje kuhati kada se košara izvadi i vrati		

*Ove postavke su smjernice. Hranu je potrebno često provjeravati.