





Quick-reference instructions

Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.


BOSCH

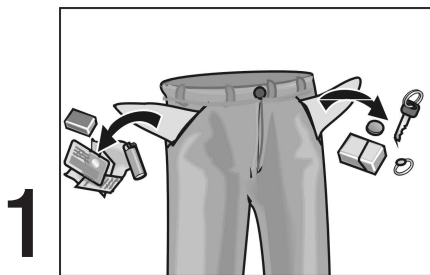


1

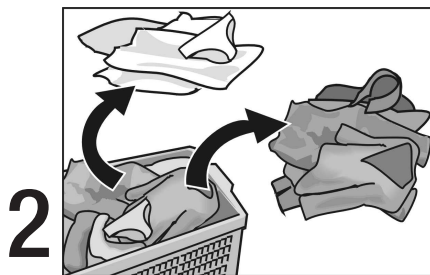


2

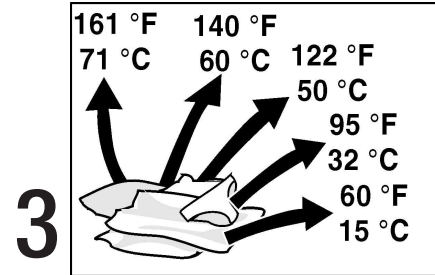


3

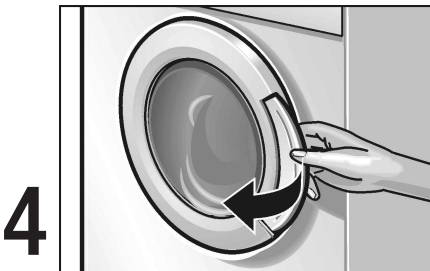


4

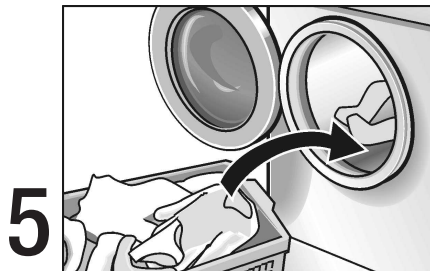

5

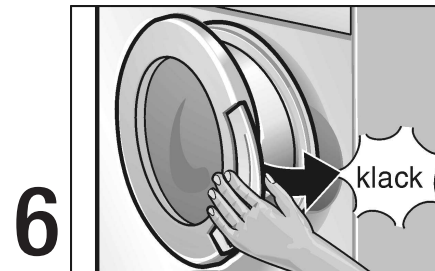

6

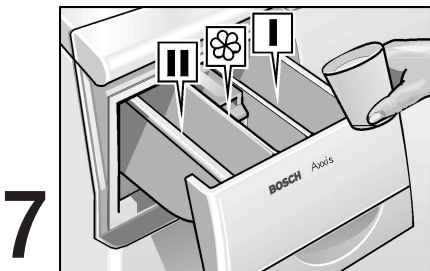


7

As required




8


As required

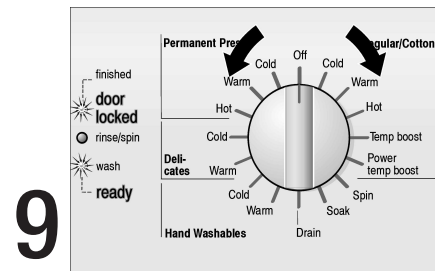


9

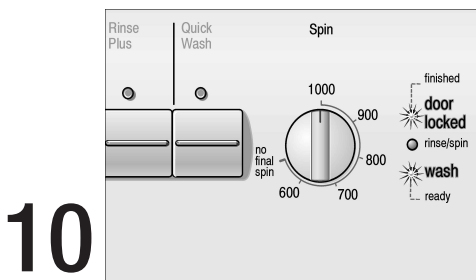

10

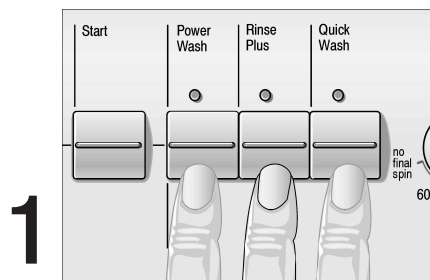


11

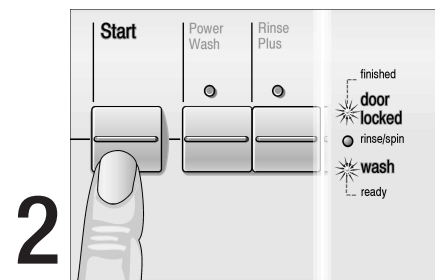

12


At the end of the program

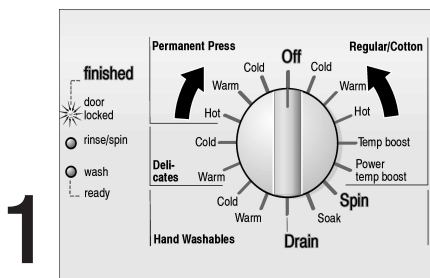

1





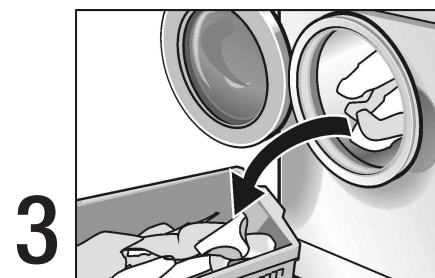











2



3

Overview of Programs

Type of laundry Note care labels!	max. Load up to:	Care Symbols	Program	Program duration in min. (approx.) **			
				Without additional functions	With Power Wash	With Rinse Plus	With Quick Wash ***
Regular/Cotton							
Colorfast and white cotton and linen (e. g. towels, sheets)	full load		5 Power temp boost	70	95	80	55
			4 Temp Boost	65	95	75	50
			3 Hot	50	95	60	45
Non-colorfast cotton and linen			2 Warm	50	95	60	45
			1 Cold	50	95	60	45
Permanent Press							
Colorfast permanent press (e. g. dress, shirt, pants, poly, cotton blend)	½ load		3 Hot	45	70	55	45
Non-colorfast permanent press (e. g. dress, shirt, pants, poly, cotton blend)			2 Warm	45	70	55	45
Delicates and knitted fabrics	⅓ load		1 Cold	45	70	55	45
			2 Warm	30	50	37	30
Hand washables and woolens (e. g. silk) 	⅓ load		1 Cold	30	50	37	30
			2 Warm	30	50	37	30
Hand Washables							
			2 Warm	30	50	37	30
			1 Cold	30	50	37	30

Program options

Program selector	Notes / Application	Program duration in min. (approx.) **
Spin	Spin cycle for spinning hand-washed laundry. Water is drained before the spin cycle. Maximum spin speed: 800 r.p.m.	9
Soak	The Soak setting is used to pre-treat heavily stained items:	120
Drain	Drains water after a wash program with the no final spin setting for gentle treatment of delicate laundry.	3

* Add detergent to dispenser II (on left) for all programs.

** The program duration deviates from the indicated values depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of washing and amount, detergent, fluctuations in the mains voltage and selected additional options.

*** Recommended for ½ load only.

Further information can be found in the operating and installation manual.
Please read the manual carefully and comply with the safety instructions.