





Quick-reference instructions

Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.


BOSCH

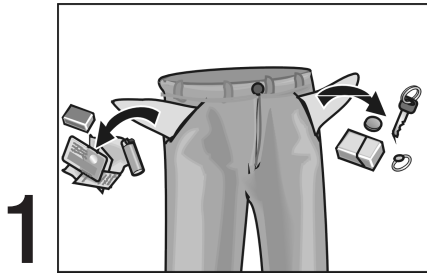


1

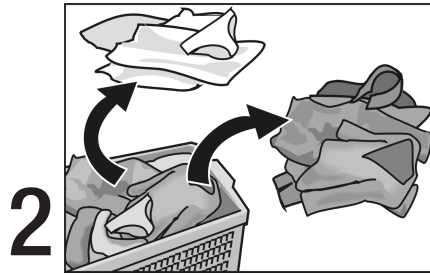


2

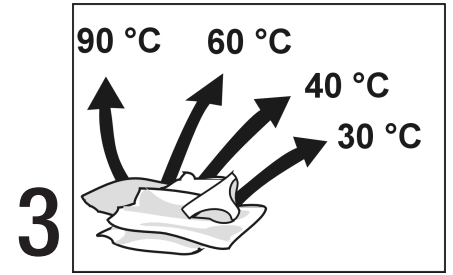


3

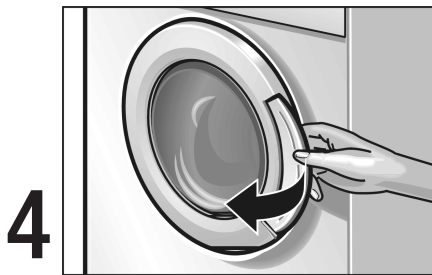


4

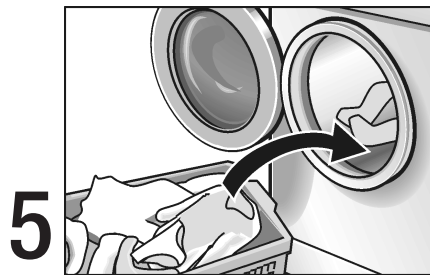

5

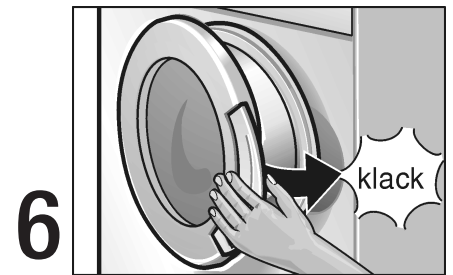


6

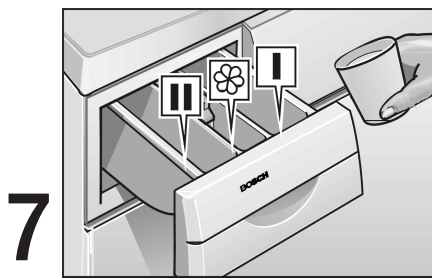


7

As required

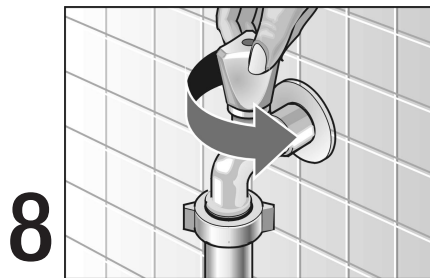


8


As required

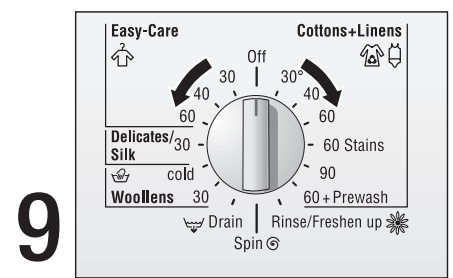


9

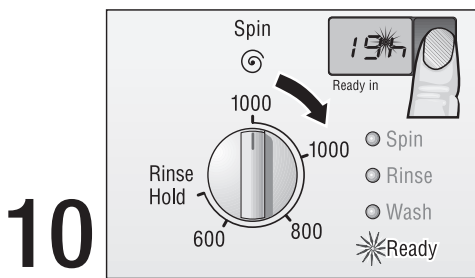

10

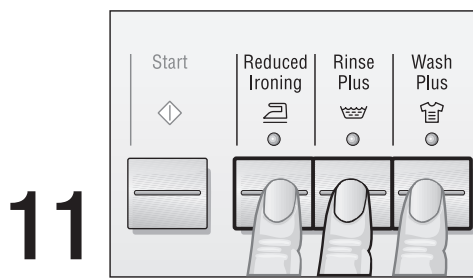


11

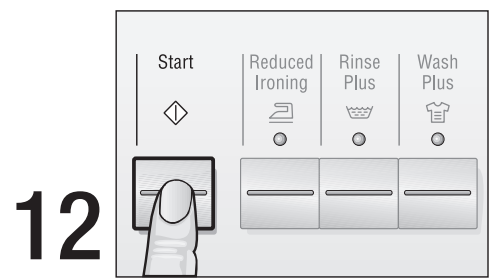

12


At the end of the programme

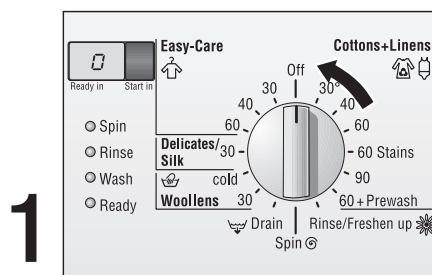

1



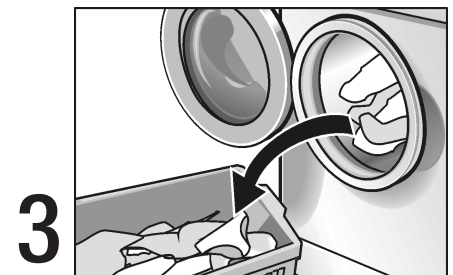


2









 



































3

Overview of programmes

The following **additional options** can be selected in addition to the programmes:

- Button „Reduced Ironing “: creases are reduced,
- Button „Rinse Plus “: extra rinse cycle,
- Button „Wash Plus “: extended intensive washing,
- „Rinse Hold“ (Spin speed selector): laundry is left in the final rinsing water.

Type of laundry Note care labels!	Laundry-amount	Programme*	Degree of dirt	Required additional option button
Hard-wearing textiles, heat-resistant textiles, e.g. cotton or linen     	4 kg / 8.8 lb	Cottons+Linens   30, 40 ^{***} , 60 °C	Light to normal	Wash Plus 
		Cottons+Linens   60 °C Stains ^{***}	Normal with stains	Wash Plus 
		Cottons+Linens   90 °C	Normal	Wash Plus 
		Cottons+Linens   60 °C + Prewash ^{**}	Heavy	Wash Plus 
	up to 3.5 kg / 7.7 lb	Cottons+Linens   30, 40, 60 °C	Light	–
	Cottons+Linens   30, 40, 60 °C	Normal to heavy	Wash Plus 	
	Cottons+Linens 60 °C Stains	Normal to heavy with stains	Wash Plus 	
For easy-care textiles, e.g. cotton, linen, synthetic materials or blended fabrics.   	up to 2 kg / 4.4 lb	Easy-Care  30, 40, 60 °C	Light	–
		Easy-Care  30, 40 ^{***} , 60 °C	Normal to heavy	Wash Plus 
For delicate, washable textiles, e.g. silk, satin, synthetic materials or blended fabrics (e.g. curtains).    	up to 2 kg / 4.4 lb	Delicates / Silk 30 °C	Light	–
		Delicates / Silk 30 °C	Normal to heavy	Wash Plus 
For hand and machine washable wool or wool-rich textiles, e.g. cashmere, mohair or angora. Also suited for hand washable silk.     	up to 2 kg / 4.4 lb	Woolens  cold, 30 °C	Light	–
		Woolens  cold, 30 ^{***} °C	Normal to heavy	Wash Plus 

Programme options

Programme selector	Notes / Application
Rinse	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Please comply with the maximum spin speeds as specified in the operating and installation manuals.
Spin	Spin cycle for spinning hand-washed laundry. Washing solution or rinsing water is drained prior to the spin cycle. Please comply with the maximum spin speeds as specified in the operating and installation manuals.
Drain	Water is drained after a washing programme with the „Rinse Hold“ setting. For gentle treatment of delicate laundry.

* For programmes without prewash pour detergent into dispenser **II** (on the left).

** Pour detergent into dispensers **I** and **II**.

*** Programme setting for test in accordance or in conformity with EN 60 456 and IEC 60 456.

Further information can be found in the operating and installation manual. Please read the manual carefully and comply with the safety instructions.