



Brief and handy:  
Everything your dishwasher  
requires

**Before using the appliance  
for the first time, still read  
the installation and operating  
instructions!**

1

## Adjusting the water softening \*

Ask your water utility  
company **about**  
the **hardness value**  
and enter ...

### Read off the set value

°dH	°fH	°Clarke	mmol/l
0-6	0-11	0-8	0-1,1
7-16	12-29	9-20	1,2-2,9
17-21	30-37	21-26	3,0-3,7
22-35	38-62	27-44	3,8-6,2

Set  
value

0  
1  
2  
3

Indicators  
on  
appliance

○ ○ ○  
● ○ ○  
● ● ○  
● ● ●



Quickly sorted out ...  
and proceed as follows ...

Hold down the  
Start/STOP button.



Simultaneously rotate the  
programme selector one position  
in an anti-clockwise direction.

Release the START/STOP button.


The salt refill indicator flashes,  
set value **2** is displayed.

Press the START/STOP button  
until the desired value is obtained.


Rotate the programme selector  
to the OFF position. Set value is  
stored.

\* only before using the ap-  
pliance for the first time  
or if the water hardness  
has been changed


Dissolves limescale (not required for set value 0!)

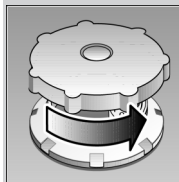


Unscrew  
the lid.

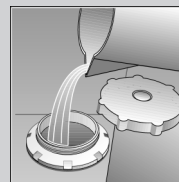

Only before using the  
dishwasher for the first time  
pour approx. 1 l /  
1 1/4 pt water into  
the salt opening.

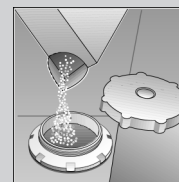

Pour in max.  
1.5 kg / 3 lb 5 oz  
salt (never deter-  
gent!)

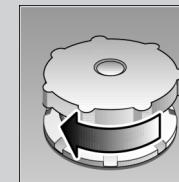

Screw on the  
lid. Switch on  
dishwasher  
immediately.

2

Add salt

3

Add rinse-aid

4

Add detergent




Press mark 1,  
lift up lid 2.




Everything is sparkling clean ...


Refill whenever level indicator is light!

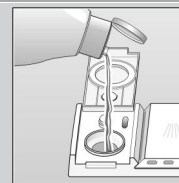

Pour in  
rinse aid.

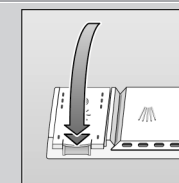

Close the  
lid. CLICK!

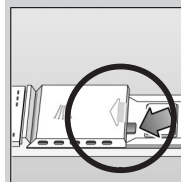


If required, open  
the lid (press the  
pin).




Very dirty dishes, a lot of detergent ...

**Warning,**  
combination  
products are not  
suitable for all  
programmes,  
follow manufac-  
turer's instructions.

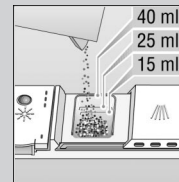

Pour in  
detergent.

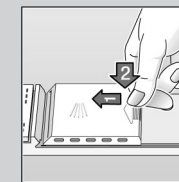

Push the lid  
shut, press.  
PLOP!

Quick, economical or intensive ...

### Overview of programmes

This overview indicates the max. possible number of  
programmes. The programmes which correspond to your  
appliance can be found on your appliance fascia.

The programme data are values measured in the  
laboratory in compliance with Standard EN 50242.  
Deviations in practice are possible.

	Intensive 70° 	Normal 65° 	Eco 50° 	Gentle 40° 	Quick 35° 	Prerinse 
Duration in minutes	115	106	140	75	30	19
Power consumption in kWh	1,70	1,46	1,05	0,85	0,70	0,10
Water consumption in litres	21	18	14	15	10	4

## Additional optionsktionen \*\*

Flexible ...



**Top basket washing**  
... dishes are washed  
in the top basket only.



h.

**Timer programming ...**  
Select programme,  
press timer  
programming button:  
Programme start is  
postponed by 3 or  
9 hours.

\*\* some models

Turn on the tap Water flows in ...

Select a programme = Switch on the appliance

Start the programme Washing starts ...

Press the Start/Stop button

Switch off the appliance Everything o.k. ...


If the programme end indicator illuminates,  
rotate the programme selector to the OFF  
position. Turn off the tap.

7


# Maintenance and care

## Filters


Check and, if required, clean:

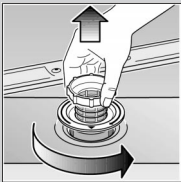


Rotate filter cylinder, remove filter system

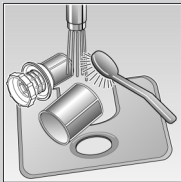

Rinse under running water

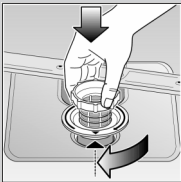


Insert

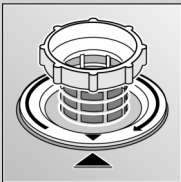


Screw on filter system. NOTE MARK!

## Spray arms


Remove blockages/deposits

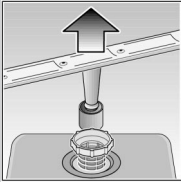


Pull up lower arm

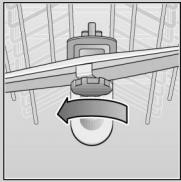


Unscrew upper arm

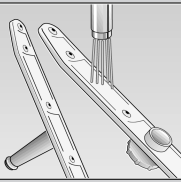

Clean under running water (if required, use a toothpick)

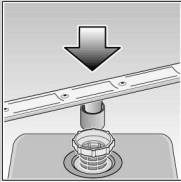


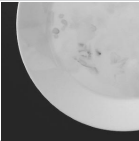

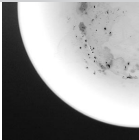
Insert lower arm

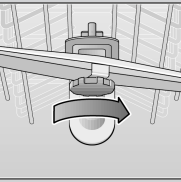

Screw on upper arm

# Troubleshooting

Correct procedure ...

Fault	Possible causes	Remedial action	Fault	Possible causes	Remedial action
Residual water in appliance ...	Programme has still not ended ...	Wait until programme ends (programme ends – indicator illuminates) or terminate programme (see below).	Plastic/utensil parts discoloured ...	Detergent with reduced bleaching effect ... Insufficient detergent ...	Use detergent with chlorine bleaching. Observe manufacturer's specifications.
Programme does not continue running ...	Programme interrupted ... Programme selector moved to ineffective position ... Door is open ...	Continue programme (see Interrupting programme). Reselect desired programme. Close door, programme is automatically continued.	Milky coating on dishes (removable) ...	 Rinse-aid dosing too high (visible streaking) ... Rinse-aid dosing too low ...	Reduce or increase dosing according to instructions.
Appliance does not run/stops ...	No / too little water check whether ...	Water supply open. Supply fittings free and not calcified. Supply hose without kinks.	Glasses clouded, dull ...	Water too hard ... Glasses not dishwasher-proof ... Detergent unsuitable ...	Refill with salt/adjust water softening system. Use dishwasher-proof glasses. Use detergents which are gentle on glasses.
Dishes are not clean ...	 Dishes close together/on top of each other ... Insufficient detergent ... Unsuitable programme ... Spray arm blocked ...	Arrange dishes according to instructions. Observe manufacturer's specifications. Select suitable programme. Re-arrange obstacles (e.g. large spoons).	Rust on the cutlery ...	 Cutlery not stainless ...	Use dishwasher-proof cutlery.
Sand or gritty residue on the dishes ...	 Filters not firmly ... Filters dirty ... Spray arm nozzles blocked ... Insufficient water ...	Clean filters (see above) attach correctly (MARK) Clean filters (see above). Clean spray arms (see above). See Appliance does not run.	More information can be found in the operating instructions ... Troubleshooting is worthwhile!		

## Interrupting the programme ...

- Press the START/STOP button.
- To continue, press the START/STOP button again.  
If the door was opened, just close the door again.

## Terminating the programme ...

- Press the START/STOP button (approx. 3 seconds) until the End-of-programme indicator flashes.
- Wait (approx. 1 minute) until the flashing stops and the Standby indicator illuminates.
- Restart programme or switch off appliance.

## Arranging dishes

Arrange dishwasher-proof dishes in accordance with the operating manual (without residual ash, wax, lubricating grease, ink, sticky labels; remove any large remnants of jam, milk products or food) and check that the spray arms can rotate freely.