

EN The notification before Power Unit exchange

The main failure mode of PU:

- E67 Error;
- Displayed with “0000”, “√√√√” or no reaction of the button ;
- **Solution for E67 Error:**
Remark: step 1 to step 3 need be finished in 15s;



Step	Operation	Sample
1	Turn off the washer; Rotate the knob into pos.12 And it shows E67.	
2	After E67 appears, press “Temp” key firstly, and rotate the knob to pos.11 counter clockwise.	
3	Release the button and you can see the washer show PU:0 in the panel.	
4	Rotate the knob to pos.1 and reset the code with a circle. That is to say change the number from 0→1→2→0	
5	Restart the washer and no error appears	

- **Solution for “0000”, “√√√√” or no reaction of the button**

