




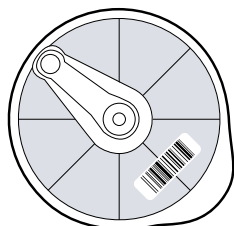

de Reinigen
en Cleaning
fr Nettoyage
it Pulizia
es Limpiar
el Καθαρισμός
pl Czyszczenie
cs Čištění
sk Čistenie
ro Curățare

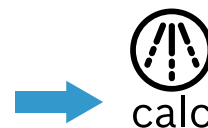



www.bosch-home.com
Nr 17001491

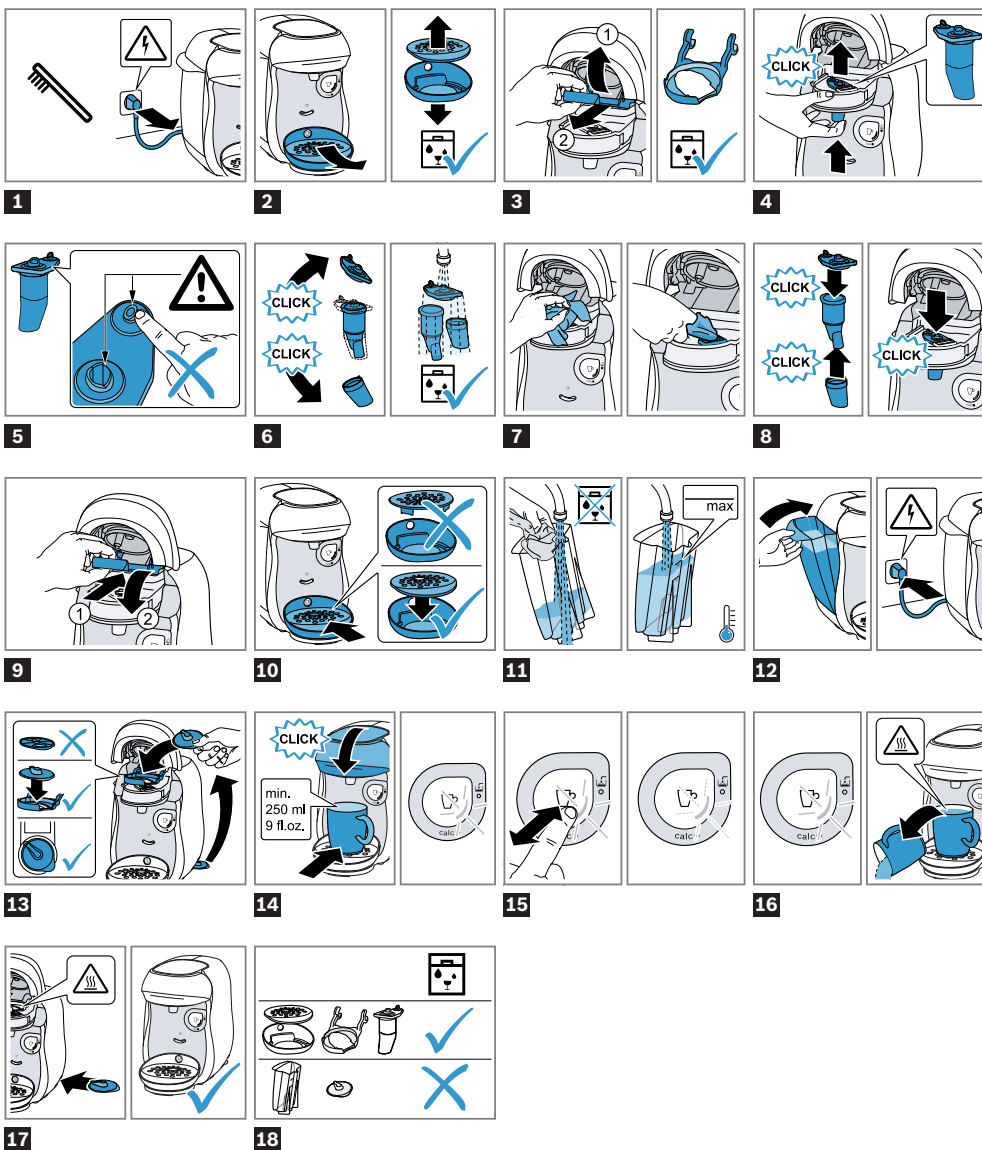





de Entkalken
en Descaling
fr D  tartrer
it Decalcificazione
es Descalcificar
el Αποσβε  ωση
pl Odkamienianie
cs Odst.vod.k.
sk Odstra ovanie vodn ho
kame a
ro Decalcifiere

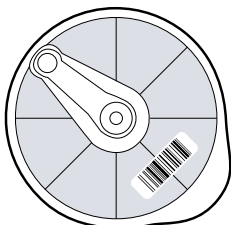


www.bosch-home.com
Nr 17001491

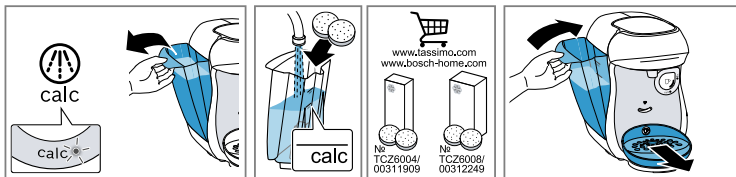


1

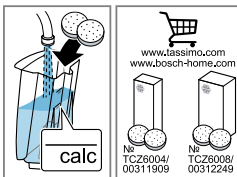


2

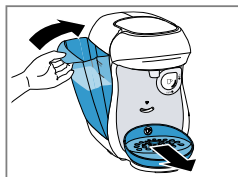


3

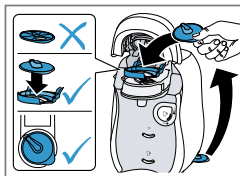

4

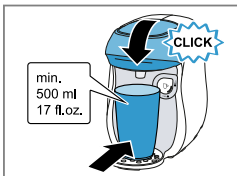


5

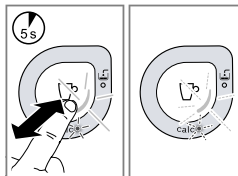

6



 7




8




9




10

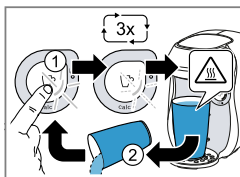


11

 


12

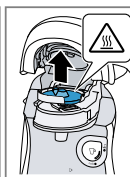


13

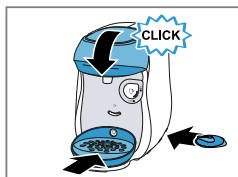

14

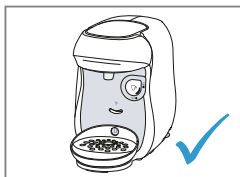

15

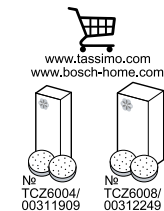

www.tassimo.com
www.bosch-home.com

Nr TCZ6004/
00311909
Nr TCZ6008/
00312249

www.tassimo.com
www.bosch-home.com

8001310615 - 01/24

