



Brief and handy:
everything your dishwasher
needs ...

**Before using for the first
time, read the operating
instructions!**

1

Adjusting the water softening system*

Ask **your water supply
company** what the **water
hardness** is and enter ...

* **only before the first wash
or if the water hardness
has been changed**

Read off the correct setting for your water hardness ...

°dH	°fH	°Clarke	mmol/l	
0-6	0-11	0-8	0-1,1	0
7-8	12-15	9-10	1,2-1,4	1
9-10	16-17	11-12	1,5-1,8	2
11-12	18-21	13-15	1,9-2,1	3
13-16	22-29	16-20	2,2-2,9	4
17-21	30-37	21-26	3,0-3,7	5
22-30	38-54	27-38	3,8-5,4	6
31-50	55-89	39-62	5,5-8,9	7



Quickly sorted ...


How to adjust the water softening system

- Rotate the programme button from the 12 o'clock position by one notch to the left.
- Switch on the main switch and hold down for at least 3 seconds. The digital display indicates the current set hardness value (factory setting 4).
- Change the set value by rotating the programme selector (0–7).
- Switch off the main switch. The set value is saved.


2

Filling the salt dispenser


Dissolves limescale (not required for set value 0!)

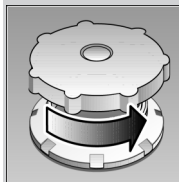


Unscrew
the lid.

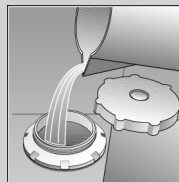

**Only before using
the dishwasher
for the first time
pour approx. 1 l /
2 pt water into the
salt opening.**

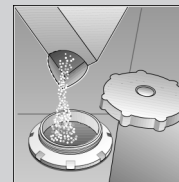

Pour in max.
1.5 kg / 3 lb 5 oz
salt (never deter-
gent!)

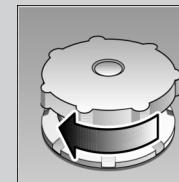


Screw on the
lid. Switch on
dishwasher
immediately.

3

Adding rinse aid


Everything is sparkling clean ...

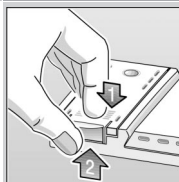


Press mark 1,
lift up lid 2.



Refill whenever level indicator is light!

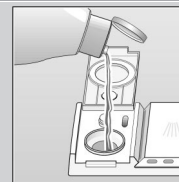

Pour in
rinse aid.

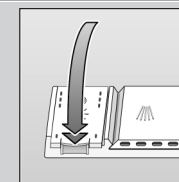


Close the
lid. **CLICK!**

4

Adding detergent


Very dirty dishes, a lot of detergent ...

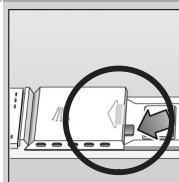


If required, open
the lid (press the
pin).



Warning,
combination
products are not
suitable for all
programmes,
follow manufac-
turer's instructions.

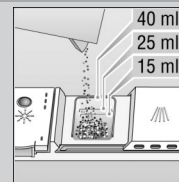

Pour in
detergent.

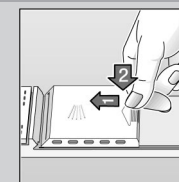

Push the lid
shut, press.
PLOP!

5

Turn on tap Water flows in ...

6

Select programme

Quick, economical or intensive ...

Overview of programmes

This overview indicates the max. possible number of programmes. The programmes which correspond to your appliance can be found on your appliance fascia.

The programme data are values measured in the laboratory in compliance with Standard EN 50242. Deviations in practice are possible.

	Intensive 70°	Normal 65°	Eco 50°	Gentle 40°	Quick 45°	Prerinse
Duration in minutes	115	140	140	75	30	19
Power consumption in kWh	1,70	1,45	1,05	0,90	0,80	0,10
Water consumption in litres	21	18	14	15	10	4
With Aqua sensor	18	15	–	12	–	–

Additional programmes **

Increased flexibility ...



Soak
...crockery in the lower
basket, programme
starts automatically,
remember to add an
extra 5g of cleaning
agent when the door
unlocks.



**Time reduction/
time saving**
...shortens the
cleaning time, reduces
the drying.



Upper basket cleaning
...Only the crockery in the
upper basket is cleaned



Lower basket cleaning
...Only the crockery in the
lower basket is cleaned



Time selection
...switches on as soon as
you press the time
selection button:
Alters the programme
start in hourly steps

** on some models



7

Switch on the appliance Here we go ...

Press main switch, running time of the selected programme is indicated.

9

Switch off the appliance Everything o.k. ...


When the display is on 0 (end of programme), press the main switch.

8


Maintenance and care

Strainers ...


Check, if required, clean

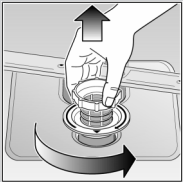


Rotate filter cylinder, remove filter system ...

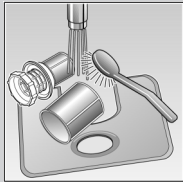

rinse under flowing water ...

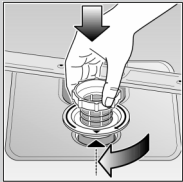

Insert ...

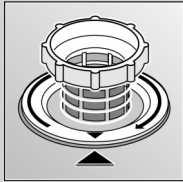


Screw in filter system NOTE MARK!

Cleaning the waste-water pump *


- * With some models
- Ladle out water and remove filters
- Unscrew cover (Torx T20)
- Check area of fan impeller for foreign objects
- Screw in cover and insert filters

Spray arms ...


Remove blockages/deposits

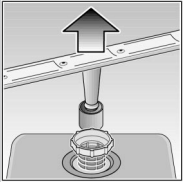




Pull lower arm upwards ...

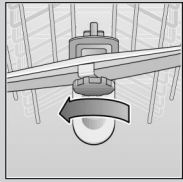

Unscrew upper arm ...


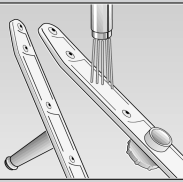


Clean spray nozzles under flowing water (perhaps with toothpick) ...

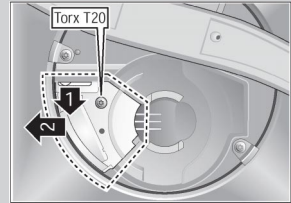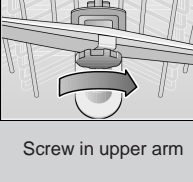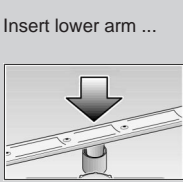

Rectifying minor faults yourself ...

 ... as it is worth doing it yourself!

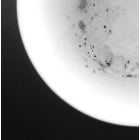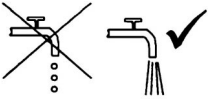Fault	Possible causes	Remedial action	Fault	Possible causes	Remedial action
Residual water in the appliance	Waste water pump blocked The programme has not yet ended	▶ Clean waste-water pump (see above). ▶ Close appliance and switch on, or terminate programme (see Terminating the programme).	Utensils are not clean Sand or gritty residue on the utensils	Utensils are situated close together or one above the other Too little detergent  Unsuitable programme selected Spray arm nozzles blocked Filters dirty, not seated firmly Spray arms blocked	▶ Separate the utensils, prevent contact points. ▶ Follow manufacturer's instructions (detergent). ▶ Select a more intensive programme. ▶ Clean the spray arms (see above). ▶ Clean the filters (see above). ▶ Arrange the utensils so that the spray arms can rotate freely.
Appliance is not running / stops Check water supply Display lights up	Supply fitting not open Supply hose kinked Supply fitting jammed or calcified 	▶ Open supply fitting. ▶ Install supply hose without kinks. ▶ 1. Unscrew water connection. 2. Clean filter in the water connection. 3. Flow rate must be min. 9 l/min. when water supply is open. If the flow rate is less, replace the supply fitting.	Stains and streaks	Rinse-aid dosage too high / too low	▶ Streaks: reduce dosage. ▶ Water or limescale stains: increase dosage.
Plastic / utensils discoloured	Too little detergent Discoloration caused by food colourings (tomato sauce)	▶ Follow manufacturer's instructions (detergent). ▶ Discoloration is harmless; subsequent rinse cycles will cause it to fade.	Milky film on the utensils (removable) Milky film, glasses cloudy / dull (not removable)	Water softening system incorrectly set; No salt Glasses not dishwasher-proof.	▶ Correctly set water softening system. ▶ Refill with salt. ▶ Use dishwasher-proof glasses. ▶ Use a detergent suitable for glasses.
Rust on the cutlery	Cutlery not rust-resistant Hard knife blades are more susceptible Extraneous rust	▶ Use dishwasher-proof cutlery. ▶ Never wash rusting parts in the appliance.			

More information can be found in the operating instructions

Interrupting the programme ...

Terminating the programme ...

- Switch off the main switch.
- To continue, close the door. Switch on the main switch again.

- While the programme is running, rotate the programme selector to the Reset pos. After approx. 3 seconds the digital display indicates 0.
- The programme sequence lasts approx. 1 min.
- When the programme has run, switch off the main switch.

Loading the dishwasher correctly ...

Dishwasher-proof utensils (not soiled with ash, wax, lubricating grease, ink or adhesive labels; remove large remnants of jam, milk products and food according to the operating instructions and check that the spray arms can rotate freely).