

Your new dryer

Congratulations – You have opted for a modern, high-quality domestic appliance of the Bosch brand. The condenser dryer is distinguished by its economical energy consumption.

Each dryer which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

If you have any questions, please do not hesitate to contact our customer service.

Environmental disposal

Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European directive 2002/96/EG on Waste Electrical and Electronic Equipment – WEEE.



The directive specifies the framework for an EU-wide valid return and recycling of old appliances.

Contents

■ Preparation	2
■ Setting programmes	2
■ After drying	4
■ About the washing	5
■ Servicing and cleaning	6
■ Overview of programmes	7
■ Installation	8
■ Technical specifications	9
■ Optional accessories	9
■ What to do if ...	10
■ Safety instructions	11

Intended Use

- only in the household;
- only for drying textiles which have been washed with water.

- ⚠ - Do not leave children unattended near the dryer!
- Keep pets away from the dryer!

Preparation

For installation see page 8

- ⚠ Never use a damaged dryer!
Notify customer service!

Check the dryer



- ⚠ With dry hands only!
Take hold of the plug with dry hands only!

Insert the mains plug



Sort and put in the washing



Take all objects out of the pockets.
Look out for cigarette lighters!
The drum must be empty before it is loaded!
See overview of programmes on page 7.

Selecting + setting programme

Select drying programme ...

... and adjust

All buttons are sensitive,
a gentle tap is adequate!

Select Start button

Select additional function	Status displays	Time remaining	Programme selector
Low Heat Buzzer	Drying Iron Dry Cupboard Dry Anti-Crease/End Container Filter	h:min	Easy-Care Very Dry Cupboard Dry Iron Dry Short Programme Freshen up Timed Programmes Warm 40 min. Finish Woolens Cottons Extra Dry Very Dry Cupboard Dry Iron Dry
Low heat ↓	Reduced temperature for sensitive textiles □, e.g. polyacrylic, polyamide, elastane, acetate, for longer drying time		
Buzzer 🔊	Select On/Off for acoustic signal at end of programme		


Drying



Drying


Draining the condensation

- Empty container **after** each drying operation, and not when drying is in progress!
1. Pull out the container and keep in a horizontal position.
 2. Pour out the condensation.
 3. Insert the container until it locks into position.

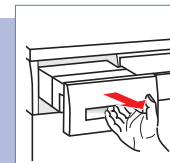


Cleaning the fluff filter

1. Open door, pull out filter and open.
 2. Remove fluff (run hand over filter).
 3. Close filter, re-insert and close door.
- Rinse extremely soiled or blocked filters with warm water and dry thoroughly.

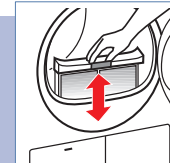

Switching off the dryer

- Set programme selector to **Off**.
Do not leave damp washing in the dryer!

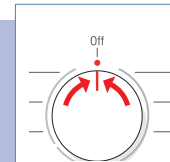

Removing washing

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the **Reduced Ironing** function is also selected – depending on model).

Programme end

as soon as the light comes on



Topping up or removing washing

1. Open door, the drying process is terminated.
2. Top up or remove washing and close door.
3. If required, reselect programme and additional functions.
4. Select **Start/Stop** button.

- ⚠ Drum and door may be hot.

About the washing ...

Identifying textiles

Follow care information of the manufacturer!

- ☐ Dry at normal temperature.
- ☐ Dry at low temperature → also select **Low Heat** ↓.
- ☒ Do not dry by machine.
- ⚠ Do not dry the following textiles in the dryer:
 - Airtight textiles (e.g. rubberised).
 - Delicate fabrics (silk, synthetic curtains) → anti-creasing!
 - Dripping wet washing → high energy consumption!
 - Oil-contaminated washing.

Drying tips

- For uniform drying result, sort the washing according to fabric type and drying programme.
- Close zips, hooks and eyelets, button up quilt covers, tie fabric belts, apron strings, etc.
- Do not overdry the washing → risk of creasing! Leave the washing to air.
- Do not iron the washing immediately after drying, fold up the washing for a while → residual moisture will then be distributed evenly.
- Knitted textiles (e.g. T shirts, knitted underwear) often shrink when dried for the first time → Do not use the **Extra Dry** programme.
- The drying of starched washing should be limited → Starch leaves a coating which impairs drying.
- Use the Timed Programme for a small load.

Protection of the environment / Conservation of energy

- Before drying, thoroughly spin the washing in the washing machine → Higher spin speeds reduce the drying time and lower the energy consumption; also spin easy-care washing.
- Use the maximum recommended load, but do not exceed → Page 7, "Overview of programmes".
- Ensure that the room is well ventilated during the drying process.
- Clean the fluff filter after each drying process → Page 4.
- Keep the air cooler clean → Page 6 "Servicing and cleaning".
- Ensure that the cooling air flow is not obstructed → Do not block or seal the cooling grille.

Servicing and cleaning

- ⚠ Appliance must be switched off!


Dryer housing, control panel, cooling grille

- Rub with a soft, damp cloth.
- Do not use any caustic cleaning agents/solvents.
- Immediately remove washing and cleaning agent residue.
- During drying, water may occasionally collect between the window and the seal. This does not adversely affect the function of your dryer in any way!
3 – 4 times a year or if **Filter** flashes continuously after the fluff filter has been cleaned.

Air cooler

- Leave the dryer to cool down.
- Residual water may escape, place an absorbent cloth under the maintenance flap.

1. Unlock the maintenance flap.
2. Completely open maintenance flap.

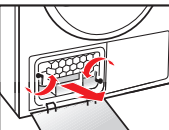

- ⚠ Do not damage the air cooler!
Clean with warm water only; do not use hard/sharp-edged objects!

5. Clean the air cooler completely, drain thoroughly.
6. Clean the seals.
7. Re-insert the air cooler, handle at the bottom!
8. Unscrew both locking levers.



Moisture sensor

The dryer is equipped with moisture sensors made of stainless steel. The moisture level of the washing is measured with the moisture sensors. After a longer operating time, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensor using a damp sponge with a rough surface (scouring pad).



- ⚠ Do not use steel wool or abrasive materials.

Your new dryer

Congratulations – You have opted for a modern, high-quality domestic appliance of the Bosch brand. The condenser dryer is distinguished by its economical energy consumption.

Each dryer which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

If you have any questions, please do not hesitate to contact our customer service.

Environmental disposal

Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European directive 2002/96/EG on Waste Electrical and Electronic Equipment – WEEE.



The directive specifies the framework for an EU-wide valid return and recycling of old appliances.

Contents

■ Preparation	2
■ Setting programmes	2
■ After drying	4
■ About the washing	5
■ Servicing and cleaning	6
■ Overview of programmes	7
■ Installation	8
■ Technical specifications	9
■ Optional accessories	9
■ What to do if ...	10
■ Safety instructions	11

Intended Use

- only in the household;
- only for drying textiles which have been washed with water.



- Do not leave children unattended near the dryer!
- Keep pets away from the dryer!

Preparation



Never use a damaged dryer!
Notify customer service!



With dry hands only!
Take hold of the plug
with dry hands only!



Sort and put in the

Take all objects
Look out for
The drum must be empty

See overview of programmes on page 7.

Selecting + setting pr

Select drying pr

Select additional function

Status displays

Time remaining

Programme selector

Low Heat

Buzzer

• Drying

• Iron Dry

• Cupboard Dry

• Anti-Crease/End

• Container

• Filter

h:min

Easy-Care

Very Dry

Cupboard Dry

Iron Dry

Short Programme

Freshen up

Timed Programmes

Warm 40 min.

Off

Cottons

Extra Dry

Very Dry

Cupboard Dry

Iron Dry

Finish

Woolens

Start Stop

Service displays

ContainerEmpty condensation container

FilterClean fluff filter and/or air cooler

Low heatReduced temperature for sensitive textiles, e.g. polyacrylic, polyamide, elastane, acetate, for longer drying time

BuzzerSelect On/Off for acoustic signal at end of programme

ation see page 8

Check the dryer



Insert the mains plug



Washing

out of the pockets, or cigarette lighters! before it is loaded!



Programme

programme ... 1

... and adjust 2

ons are sensitive, the tap is adequate!

Start button 3

Drying




Drying



Draining the condensation

Empty container **after** each drying operation, and not when drying is in progress!


1. Pull out the container and keep in a horizontal position.
2. Pour out the condensation.
3. Insert the container until it locks into position.

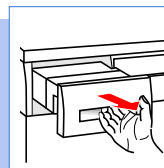

Cleaning the fluff filter

1. Open door, pull out filter and open.
2. Remove fluff (run hand over filter).
3. Close filter, re-insert and close door.


Rinse extremely soiled or blocked filters with warm water and dry thoroughly.

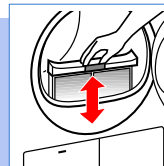

Switching off the dryer

Set programme selector to **Off**.

Do not leave damp washing in the dryer!

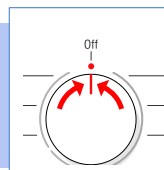

Removing washing

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the **Reduced Ironing** function is also selected – depending on model).

Programme end

as soon as the light comes on



Anti-Crease/End

Topping up or removing washing

1. Open door, the drying process is terminated.
2. Top up or remove washing and close door.
3. If required, reselect programme and additional functions.
4. Select **Start/Stop** button.



Drum and door may be hot.

About the washing ...



Identifying textiles

Follow care information of the manufacturer!



Dry at normal temperature.



Dry at low temperature → also select **Low Heat** ↓.



Do not dry by machine.



Do not dry the following textiles in the dryer:

- *Airtight textiles (e.g. rubberised).*
- *Delicate fabrics (silk, synthetic curtains) → anti-creasing!*
- *Dripping wet washing → high energy consumption!*
- *Oil-contaminated washing.*

Drying tips

- For uniform drying result, sort the washing according to fabric type and drying programme.
- Close zips, hooks and eyelets, button up quilt covers, tie fabric belts, apron strings, etc.
- Do not overdry the washing → risk of creasing! Leave the washing to air.
- Do not iron the washing immediately after drying, fold up the washing for a while → residual moisture will then be distributed evenly.
- Knitted textiles (e.g. T shirts, knitted underwear) often shrink when dried for the first time → Do not use the **Extra Dry** programme.
- The drying of starched washing should be limited → Starch leaves a coating which impairs drying.
- Use the Timed Programme for a small load.

Protection of the environment / Conservation of energy

- Before drying, thoroughly spin the washing in the washing machine → Higher spin speeds reduce the drying time and lower the energy consumption; also spin easy-care washing.
- Use the maximum recommended load, but do not exceed → Page 7, "Overview of programmes".
- Ensure that the room is well ventilated during the drying process.
- Clean the fluff filter after each drying process → Page 4.
- Keep the air cooler clean → Page 6 "Servicing and cleaning".
- Ensure that the cooling air flow is not obstructed → Do not block or seal the cooling grille.

Servicing and cleaning



Appliance must be switched off!



Dryer housing, control panel, cooling grille

- Rub with a soft, damp cloth.
 - Do not use any caustic cleaning agents/solvents.
 - Immediately remove washing and cleaning agent residue.
 - During drying, water may occasionally collect between the window and the seal. This does not adversely affect the function of your dryer in any way!
- 3 – 4 times a year or if **Filter** flashes continuously after the fluff filter has been cleaned.



Air cooler

- Leave the dryer to cool down.
- Residual water may escape, place an absorbent cloth under the maintenance flap.

1. Unlock the maintenance flap.
2. Completely open maintenance flap.




3. Screw both locking levers towards each other.
4. Pull out the air cooler



*Do not damage the air cooler!
Clean with warm water only; do not use hard/sharp-edged objects!*

5. Clean the air cooler completely, drain thoroughly.
6. Clean the seals.
7. Re-insert the air cooler, handle at the bottom!
8. Unscrew both locking levers.
9. Close the maintenance flap until it locks into position.

○ Container
☀ Filter

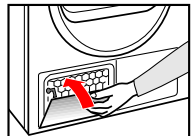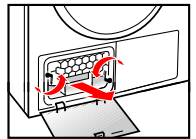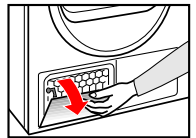

Moisture sensor

The dryer is equipped with moisture sensors made of stainless steel. The moisture level of the washing is measured with the moisture sensors. After a longer operating time, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensor using a damp sponge with a rough surface (scouring pad).



Do not use steel wool or abrasive materials.

See also page 5

See also page 5

 Cottons

max. 7 kg For cottons and coloureds made of cotton or linen.

	☐	☑	☒	☓
Iron Dry	☒	☒	☒	☒
Cupboard Dry	☒	☒	☒	☒
Very Dry	☒	☒	☒	☒
ExtraDry	☒	☒	☒	☒

Easy-Care

max. 3.5 kg For non-iron washing made of synthetic and blended fabrics, cotton.

[illegible]

Woollens Finish

For machine-washable woollen textiles. Textiles are fluffier, but not dried. Remove and hang up textiles when the programme ends.

Short Programme

For washing which is to be dried quickly, e.g. made of synthetic fabrics, cotton or blended fabrics.

Timed Programmes

max. 3 kg

For predried, multi-ply, delicate
Also for subsequent drying.


Warm 40 min. / Freshen up 🌸 (20 min.)

Further information and a selection of our products can be found on our Internet page: <http://www.bosch-hausgeraete.de>

Robert Bosch Hausgeräte GmbH
Carl-Wery Str. 34
81739 München / Deutschland

WTE86304GB
WTE8630SGB
1108 en
9000 148369

Preparation

1. Empty condensation container, see *page 4*.
2. Set programme selector to any programme.
3. Select **Start/Stop**  button → condensation is pumped into the container.
4. Wait 5 min., empty condensation container again.
5. Set programme selector to **Off**.

Frost protection/ transportation




Mains connection see Safety instructions, page 11.

- Connect correctly to an a.c. earthed socket. If in doubt, have the socket checked by an electrician!
- Mains voltage must correspond with the voltage specifications on the appliance rating plate (see page 9)!
- Wattage and required fuse are indicated on the appliance rating plate.

Installing the dryer  Take all accessories out of the drum.
Drum must be empty!

- Mains plug must be accessible at all times!
- Place the dryer on a clean, level and firm surface!
- Do not obstruct cooling grille at the front of the dryer.
- Keep the area around the dryer clean.
- Align the dry with the height-adjustable feet.
Use a spirit level.
- Never remove the height-adjustable feet!

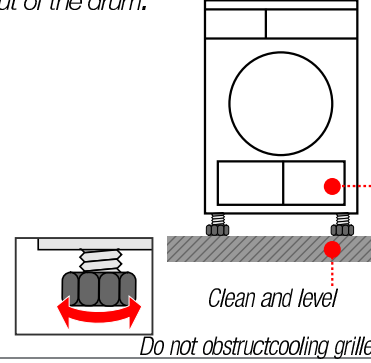

Technical specifications

● Dimensions (D x W x H)	60 x 60 x 85 cm (height-adjustable)
● Weight (net)	approx. 45 kg
● Max. capacity	7 kg
● Condensation container	4.2 l
● Supply voltage	See appliance rating plate
● Connected load	
● Fuse	
● Product number	
● Production number	

The appliance rating plate is situated on the rear of the dryer.

● **Consumption values** Specifications are approximate values determined under normal conditions. Fluctuations up to 10 % are possible.

Spin speed r.p.m. (residual humidity)			Drying time in min. with 8 min. cooling time	Energy consumption in kWh
Cottons 7 kg				
Cupboard Dry*	1400	(approx. 50%)	89	3.6
	1000	(approx. 60%)	104	4.2
	800	(approx. 70%)	120	4.9
Iron Dry*	1400	(approx. 50%)	69	2.8
	1000	(approx. 60%)	82	3.3
	800	(approx. 70%)	94	3.9
Easy-Care 3.5 kg				
Cupboard Dry*	800	(approx. 40%)	42	1.4
	600	(approx. 50%)	51	1.7

* Test programmes according to DIN EN 61 121 and IEC 61 121

● **Drum light** (depending on model)
(Bulb E14, 15 W)

The drum is lit when the door is opened and closed or when the programme starts; it goes out automatically.

Optional accessories

Order no.

WTZ 1110 **Connection fittings for condensation outlet**
The condensation is conveyed directly via a hose.

WTZ 11310 **Connection set for washing-drying column**
To save space, the dryer can be placed on a suitable washing machine which has the **same depth and width**.

WTZ 11300 Same as WTZ 11310 but with removable worktop.

WTZ 10290 **Cover for appliance underneath worktop**
The dryer can be built under the worktop in a line of kitchen units.

What to do if ...



Repairs may be carried out by customer service or authorised technicians only!
Before you call customer service, please check whether you can correct the fault yourself.
A technician will charge you for advice, even during the warranty period. Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance (see inside of door).


● Start/Stop ◇ indicator light does not come on.	Is the mains plug inserted? Programme selected? Check fuse in the house.
● Container and Start/Stop ◇ indicator lights are flashing.	Empty condensation container. If featured, check hose for condensation outlet.
● Filter and Start/Stop ◇ indicator lights are flashing.	Clean air cooler, <i>page 6 "Servicing and cleaning"</i> . Clean fluff filter, <i>page 4</i> .
● Dryer does not start.	Start/Stop ◇ button selected? Door closed? Programme set? Ambient temperature higher than 5 °C?
● Water is running out.	Align dryer horizontally. Clean air cooler seal.
● Door is opening by itself.	Press door until it "clicks" into position.
● Degree of dryness was not reached or drying time too long.	Clean fluff filter/air cooler, <i>page 4/6</i> . Empty condensation container. Check water outlet (if featured). Ambient temperature above 30 °C → adequate ventilation. Cooling grille may be blocked → unblock. Unsuitable programme set? <i>Page 7</i> . Dryer installation too restricted? Provide air circulation. Power failure → restart dryer. Fine layer of limescale on the moisture sensors → clean the moisture sensors, <i>page 6</i> .
● Washing damp.	Use next higher drying programme or also the Timed Programme, <i>page 7</i> . Warm washing feels damper than it actually is!
● Humidity in the room is increasing significantly.	Ventilate room adequately. Cooling grille blocked? → Unblock. Ensure that the air cooler has been inserted.
● One or more indicator lights for programme status are flashing.	Clean filter and air cooler, <i>page 4/6</i> . Check installation conditions, <i>page 8</i> . Switch off, leave to cool down, switch on again, restart programme.
● Does the interior light (depending on model) work?	Pull out the mains plug. Open cover inside the appliance above the door (with a Torx 20 screwdriver) and change the bulb. Close the cover flap.


If you cannot correct a fault yourself or if a repair is required:

- Set programme selector to **Off**.
- Pull out the mains plug.

Safety instructions

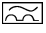

- | | |
|---------------------------|--|
| Emergency | - Immediately pull out mains plug or interrupt fuse. |
| Use dryer ONLY ... | - in the house.
- for drying textiles. |
| NEVER ... | - use dryer for other purposes than those described above.
- modify the technology or properties of the dryer. |
| Hazards | - Children and uninstructed persons must not use the dryer.
- Do not leave children unattended near the dryer.
- Keep pets away from the dryer.
- Take all objects out of the pockets. Look out for cigarette lighters → risk of explosion!
- Do not lean or sit on the door → risk of dryer tipping over!
- Open the door carefully. Hot steam may escape. |
| Installation | - Frost damage possible below 0 °C.
- Attach loose cables or hoses, otherwise risk of tripping. |
| Mains connection | - Connect the dryer correctly to an a.c. earthed socket, otherwise safety cannot be ensured.
- Cable cross-section must be adequate.
- Use residual-current-operated circuit-breaker with this symbol only: 
- Mains plug and socket must match.
- Do not use multiple plug/couplings and/or extension leads.
- Do not take hold of the mains plug with damp hands.
- Never pull the mains plug out of the socket by tugging the cable.
- Do not damage the power cord. |
| Operation | - Load the drum with <i>washing only</i> . Check the contents before switching on the dryer.
- Do not use the dryer if the washing has come into contact with solvent, oil, wax, grease or ink (e.g. setting lotion, nail varnish remover, stain remover, solvent naphtha, etc.) → risk of fire/explosion!
- Dust hazard (e.g. coal dust, flour): do not use the dryer → risk of explosion!
- Do not use the dryer if the washing contains foam/rubber → elastic material may be destroyed and the dryer may be damaged by possible deformation of the foam.
- Switch off the dryer when the programme ends.
- Do not drink the condensation! |
| Defect | - Do not use the dryer if it is defective or considered to be defective; repairs by customer service only.
- Do not use the dryer if the power cord is defective. To prevent hazards, have a defective power cord replaced by customer service only.
- Before changing the interior light bulb, always pull the mains plug out of the socket. |
| Spare parts | - For reasons of safety use original spare parts and accessories only. |
| Disposal | - Dryer: pull out the mains plug, then sever the power cord on the appliance. Dispose of at a public waste disposal centre.
- Packaging: do not allow children to play with packaging parts → risk of suffocation!
- All materials are environmentally friendly and recyclable. Dispose of in an environmentally friendly manner. |

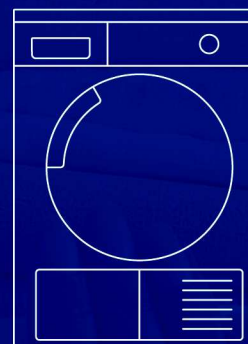

Dryer

en Operating and installation instructions



BOSCH



Read these instructions before switching on the dryer!



Follow instructions on page 11!