



HBN 43N5.1B



Operating Instructions



Household Appliances

Making cooking as much fun as eating

Please read this instruction manual. This will ensure that you make use of all the technical benefits the cooker has to offer.

It will provide you with important safety information. You will then be familiarised with the individual components of your new cooker. And we will show you how to make settings step by step. It is quite simple.

The tables list the settings and shelf positions for numerous well-known dishes. All these dishes are tested in our cooking studio.

In the unlikely event of a fault, look here for information on how to rectify minor faults yourself.

A detailed table of contents will help you to find your way around quickly.

Enjoy your meal!

Table of contents

Important information	6
Before installation	6
Safety information	6
Reasons for damage	7
Your new cooker	8
The control panel	8
Function selector – Main oven	9
Temperature selector – Main oven	9
Function selector – Mini oven	10
Temperature selector – Mini oven	10
Control buttons and display panel	11
Push-in control knobs	11
Types of heating – Main oven	12
Types of heating – Mini oven	14
Oven and shelving accessories	15
Cooling fan	18
Before using for the first time	18
Heating up the oven	18
Pre-cleaning the accessories	18
Setting the oven	19
Setting procedure	19
If the oven is to switch off automatically – Main oven	20
If the oven is to switch on and off automatically – Main oven	21
Rapid heating – Main oven	22
Setting procedure	22

Table of contents

Time	23
Setting procedure	23
Timer	24
Setting procedure	24
Basic settings – Main oven	25
Changing the basic settings	26
Childproof lock	27
Care and cleaning	27
Oven exterior	27
Oven	28
Clean function – Main and Mini oven	30
Cleaning the glass panels – Main and Mini oven ...	31
Cleaning the rails	33
Seal	34
Accessories	34
Troubleshooting	34
Replacing the oven light	35
After-sales service	36
Packaging and old appliances	37
Tables and tips	38
Cakes and pastries	38
Baking tips	41
Meat, poultry, fish	42
Tips for roasting and grilling	46
Defrosting – Main oven	47
Drying – Main oven	47

Table of contents

Preserving – Main oven	48
Energy saving tips	50
Acrylamide in food	50
What can you do?	51
Test dishes – Main oven	52

Important information

Read this instruction manual carefully.

Only then will you be able to operate your cooker safely and correctly.

Please keep the instruction and installation manual in a safe place. Please pass on the instruction manual to the new owner if you sell the appliance.

Before installation

Transport damage

Check the appliance after unpacking it. Do not connect the appliance if it has been damaged in transport.

Electrical connection

The cooker may only be connected by an approved specialist. Losses resulting from damage caused by incorrect connection will invalidate warranty claims.

Safety information

This appliance is intended for domestic use only. Only use the cooker for food preparation.

Hot oven



Open the oven door carefully. Hot steam may escape.

Never touch the internal surfaces of the oven or the heating elements. There is a risk of burning. Children must be kept at a safe distance from the appliance.

Never store combustible items in the oven.
Risk of fire.

Never clamp leads of electrical appliances in the hot oven door. The insulation on the leads could melt. There is a risk of short-circuiting.

Repairs



Incorrectly done repairs are dangerous.
There is a risk of electrocution.
Repairs may only be carried out by after-sales service technicians who have been fully trained by BSH.

If there is a fault, switch off the oven fuse at the fuse box. Call the after-sales service.

Reasons for damage


Baking tray, aluminium foil or dishes on the oven floor

Do not place the baking tray on the oven floor.
Do not cover it with aluminium foil.
Do not place dishes on the oven floor.
This will cause heat accumulation. The baking and roasting times will no longer be correct and the enamel will be damaged.

Slide-in accessories

To avoid damage, insert slide-in accessories carefully.

Baking paper

If using 3D-hot air , do not place greaseproof paper loosely in the oven (e.g. when heating the oven).
The hot-air fan could draw in the paper which may damage the heater and fan.

Water in the oven

Never pour water directly into a hot oven.
This could damage the enamel.

Fruit juice

When baking very moist fruit cakes, do not put too much on the baking sheet. Fruit juice dripping from the baking sheet leaves stains that cannot be removed.
It is recommended that you use the deeper universal pan.

Cooling with the oven door open

Only leave the oven to cool with the door closed. Do not allow anything to become trapped in the oven door. Even if you only leave the oven door open slightly, the fronts of adjacent units may become damaged over time.

Very dirty oven seal

If the oven seal is very dirty, the oven door will no longer close properly when the oven is in use. The fronts of adjacent units could be damaged. Keep the oven seal clean.

Using the oven door as a seat


Do not stand or sit on the oven door.

Your new cooker

Here you will learn more about your new oven. The control panel and its switches and indicators are explained here. The heating modes and the accessories included with your oven will be explained here.


The control panel

Details vary according to the appliance model.

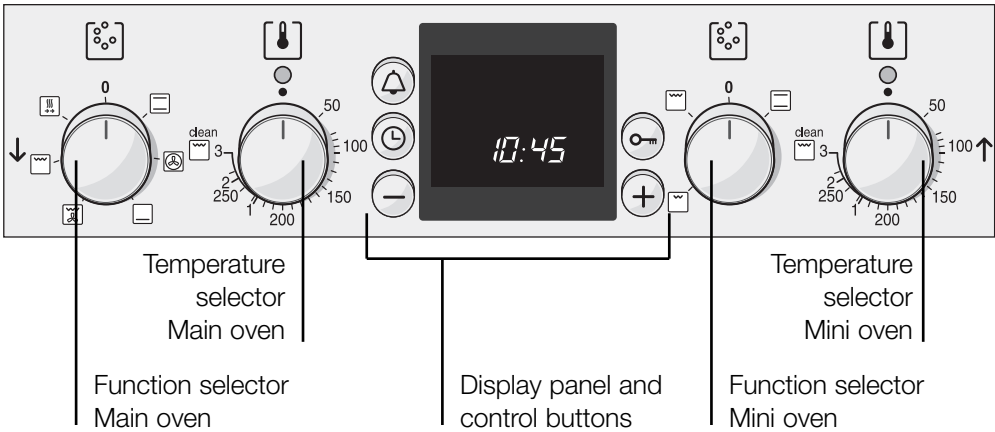





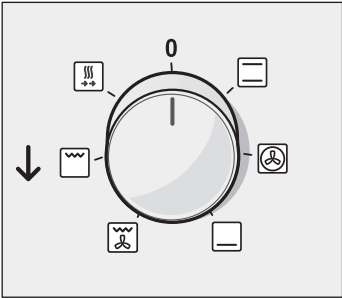

Function selector

Main oven



Use the function selector to select the type of heating for the oven.

Settings


	Top/bottom heating
	3D-hot air*
	Bottom heating
	Hot air grilling
	Radiant grill
	Rapid heating

* Type of heating with energy efficiency class determined in accordance with EN50304.

The oven light switches on when you select a function.

Temperature selector

Main oven

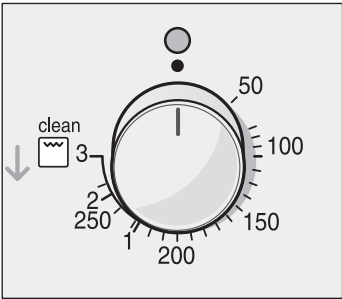

Use the temperature selector to set the temperature or grill setting.

Temperature

50–270	Temperature range in °C
--------	-------------------------

Grill

1	Low grill
2	Medium grill
3	High grill
clean	Cleaning function


The symbol above the temperature selector comes on while the oven is heating up. It goes out during pauses in heating. The symbol does not come on for grilling and defrosting.

Grill settings

You can select a grill setting on the radiant grill  using the temperature selector.




Function selector

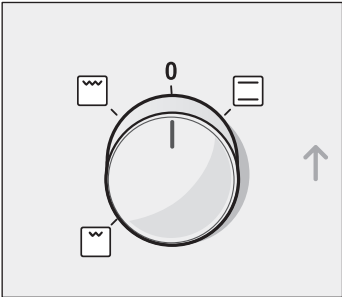Mini oven



Use the function selector to select the type of heating for the oven.


Settings

	Conventional heat
	Radiant grill – large area
	Radiant grill – small area

The oven light switches on when you select a function.

Temperature selector

Mini oven

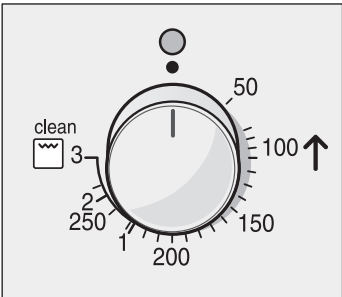

Use the temperature selector to set the temperature or grill setting.

Temperature



50 – 270	Temperature range in °C
----------	-------------------------

Grill

1	Low grill
2	Medium grill
3	High grill
clean	Cleaning function






The symbol above the temperature selector comes on while the oven is heating up. It goes out during pauses in heating. The symbol does not come on for grilling and defrosting.

Grill settings

You can adjust the grill setting on the radiant grill to small area  or large area  using the temperature selector.

Control buttons and display panel



Timer button 	Use this button to set the timer
Clock button 	Use this button to set the time of day, the cooking time  and the completion time 
Minus button -	Use this button to reduce the values set.
Plus button +	Use this button to increase the values set.
Key button 	Use this button to switch the childproof lock on and off.

The values set can be seen in the display panel.

Push-in control knobs


The control knobs can be pushed in. Simply press the control knob to release or lock it.

The function selector can be turned clockwise or anticlockwise, whereas the temperature selector can only be turned clockwise.

Types of heating


Main oven

Different types of oven heating are available. You can therefore select the best method for cooking any dish.

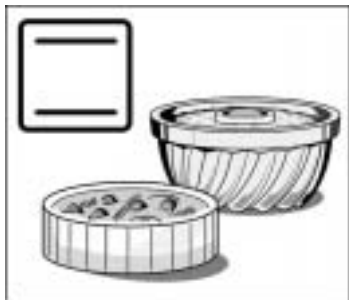


Top and bottom heating

This ensures the even distribution of heat onto the cake or roast from the top and bottom of the oven. This type of heating is best for cake mixtures in tins or for bakes. Top and bottom heating is also suitable for cooking lean roasts of beef, veal and game.

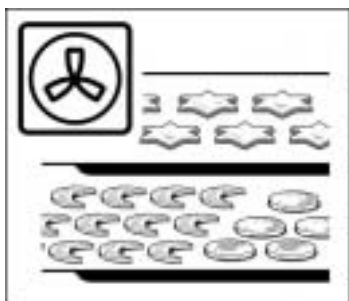

3D-hot air

A fan in the rear panel distributes the heat from the ring heating element evenly inside the oven. Using 3D-hot air, it is possible to bake cakes and pizza on two shelves. You can cook biscuits and puff pastry on two levels at the same time. The required oven temperatures are lower than those for top and bottom heating. Additional baking trays may be obtained from specialist shops. 3D-hot air is ideal for drying food.

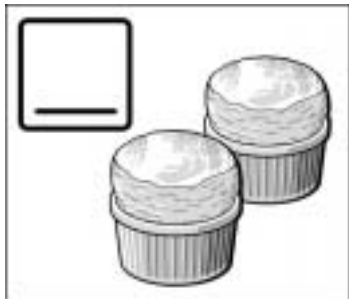

Bottom heat

You can reheat or brown meals using bottom heating.



Hot air grilling

This type of heating involves the grill element and the fan switching on and off alternately. During the pause in heating, the fan circulates the heat generated by the grill around the food. This ensures that pieces of meat are crisped and brown on all sides.



Radiant grill – large area

The entire area under the grill element becomes hot. This is ideal if you wish to cook several steaks, sausages, fish or slices of toast.

Types of heating

Mini oven

Different types of oven heating are available. You can therefore select the best method for cooking any dish.

Top and bottom heating

This ensures the even distribution of heat onto the cake or roast from the top and bottom of the oven. This type of heating is best for cake mixtures in tins or for bakes. Top and bottom heating is also suitable for cooking lean roasts of beef, veal and game.




Radiant grill – large area

The entire area under the grill element becomes hot. This is ideal if you wish to cook several steaks, sausages, fish or slices of toast.




Radiant grill – small area

Only the centre of the grill element becomes hot. This type of heating is ideal for cooking small quantities. This saves energy. Place the pieces to be grilled in the centre of the wire rack.

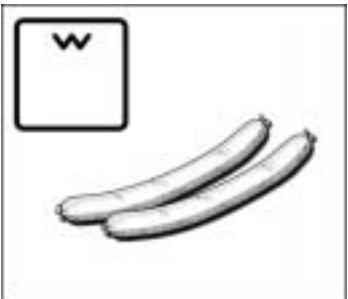

Oven and shelving accessories

Mini oven

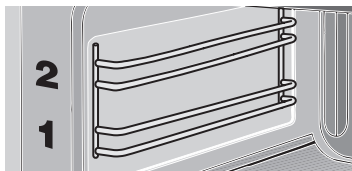

Your oven features 2 shelf positions.


The shelf positions are counted from bottom to top. The numbers are marked in the oven.

Main oven



The shelf can be inserted at 3 different heights in the oven.

You can remove the shelf two thirds of the way without it tipping. This makes it easier to take food out of the oven.

When using **3D-hot air** , **do not use shelf position »2«**, in order not to block air circulation.

Accessories


Accessories may be purchased at a later date from the after-sales service or from specialist shops. Please specify the HEZ number.



HEZ 334000 wire rack

For ovenware, cake tins, roasts, grilling and frozen meals.

Place the wire racks curved downwards .

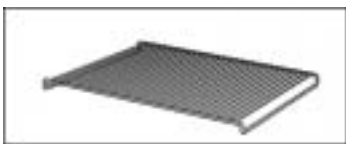

HEZ 324000 wire rack

for grilling. Always place the wire rack in the universal pan. Fat and meat juices are collected.



Universal pan HEZ 332000

for moist cakes, pastries, frozen food and large roasts. It can also be used to catch dripping fat when you are grilling directly on the wire rack.

Push the universal pan with the sloping edge facing towards the oven door.

Optional accessory


Optional accessories may be purchased from the after-sales service or from specialist shops.



Enamel baking tray HEZ 331000

for cakes and biscuits.

Push the baking tray with the sloping edge facing towards the oven door.

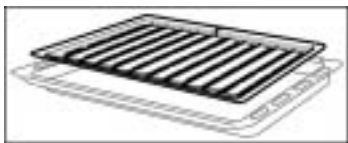

Grill pan HEZ 325000

Can be used for grilling instead of the wire rack or as a spray guard to protect the oven against dirt. Only use the grill pan in the universal pan.

To grill using the grill pan: use the same shelf height as for the wire rack.


Using the grill pan as a spray guard: insert the universal pan with the grill pan under the wire rack.



Enamel baking tray HEZ 331010 with non-stick coating

Cakes and biscuits can be removed from the baking tray more easily.


Push the baking tray with the sloping edge facing towards the oven door.

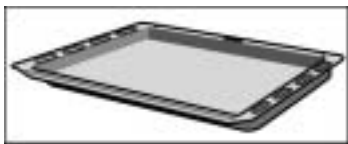

Universal pan HEZ 332010 with non-stick coating

Moist cakes, biscuits, frozen meals and large roast joints come away from the universal pan more easily.

Push the universal pan with the sloping edge facing towards the oven door.

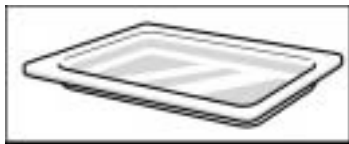


Glass pan HEZ 336000

A deep baking tray made from glass. Can also be used as a serving dish.



Pizza tray HEZ 317000


Ideal for pizza, frozen foods and large round cakes, for example. You can use the pizza tray instead of the universal pan. Place the tray on the wire rack. Observe the information provided in the tables.

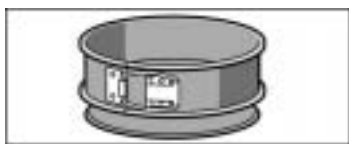

Baking tin HEZ 6001

You can bake especially moist cakes using the leak-proof baking tin. The extra wide rim prevents leakage and your cooker stays clean.

The baking tin has a non-stick coating on the inside.

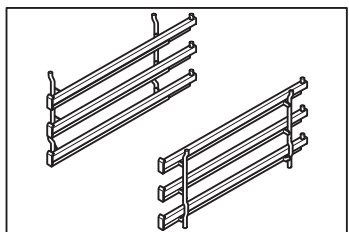

3 tier telescopic shelf HEZ 338307

The ledges at heights 1, 2 and 3 allow you to pull the shelf out further without it tipping.


Cooling fan

The oven is fitted with a cooling fan. It switches itself on and off as necessary. The warm air escapes above the door

Before using for the first time



This section will tell you everything you need to do before using the cooker for the first time.

Heat the oven and clean the accessories. Read the safety instructions in the „Important information“ section.

Firstly, check to see if the  symbol and three zeros are flashing in the display.

If the  symbol and three zeros are flashing

Set the time.


1. Press the  clock button.
12:00 appears and the  clock symbol flashes.
2. Set the time using the + or – button.

The time selected is adopted after a few seconds. The cooker is now ready for use.

Heating up the oven

Method

Heat the empty oven with the door closed to remove the new oven smell.

1. Set the function selector to .
2. Use the temperature selector to set the temperature to 240 °C.

Switch off the function selector after 60 minutes.

Pre-cleaning the accessories

Please wash the accessories thoroughly with soapy water and a cleaning cloth before using them.

Setting the oven

Switching off the oven manually

You have various options for setting the oven.

When your meal is ready, switch off the oven yourself.

The main oven switches off automatically

You can leave the kitchen for a long period.

The main oven switches on and off automatically


You can put your meal in the oven in the morning, for example, and set the oven so that your meal is ready at midday.


Tables and tips

The correct settings for many dishes can be found in the Tables and tips section.


Setting procedure

Example: Main oven

Top/bottom heating  190° C

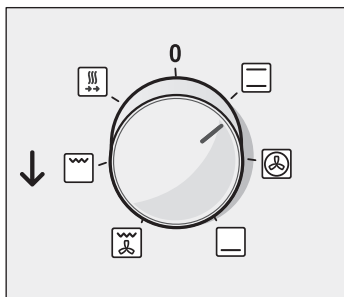

1. Select the desired type of heating using the function selector.

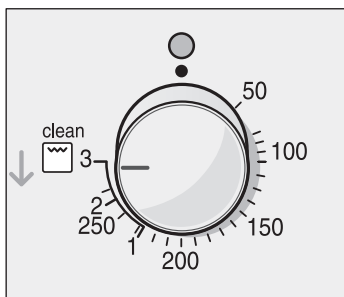

2. Use the temperature selector to set the temperature or grill setting.

Switching off

Switch off the function selector when the meal is ready.

Changing the setting

You may change the temperature or grill setting at any time.

If the oven is to switch off automatically – Main oven

Example: Cooking time of 45 minutes



- 3.** Press the ⌚ clock button.
The cooking time symbol I-I will flash.



- 4.** Set the cooking time using the + or – button.
+ button default value = 30 minutes.
– button default value = 10 minutes.

The oven switches on after a few seconds.
The I-I symbol lights up in the display.

The cooking time has elapsed

A signal sounds. The oven switches off. Press the ⌚ button twice and switch off the function selector.

Changing the setting

Press the ⌚ clock button. Change the cooking time using the + or – button

Cancelling the setting

Press the ⌚ clock button. Press the – button until the display is at zero. Switch off the function selector.

Setting the cooking time when the clock time is hidden

Press the ⌚ clock button twice and perform the setting as described in item 4.

If the oven is to switch on and off automatically – Main oven

Example: Imagine – it's 10:45 a.m. The meal will take 45 minutes to cook and must be ready at 12:45 pm.



5. Press the ⌚ clock button until the →| end symbol flashes.

In the display you will see the time when the meal will be ready.



6. Use the + button to set a later end time.

The setting is adopted after a few seconds. The display will show the end time until the oven switches on.

The cooking time has elapsed

A signal sounds. The oven switches off. Press the ⌚ button twice and switch off the function selector.

Note


You can change the setting while the symbol is flashing. The setting has been adopted if the symbol lights up permanently. You may change the waiting time that elapses before the setting is adopted. See the Basic settings section for more details.

Rapid heating

Main oven

This allows you to heat up the oven particularly quickly.

Setting procedure

1. Switch the function selector to rapid heating .
2. Use the temperature selector to set the required temperature.

The oven switches on after a few seconds.
The red signal lamp lights up in the display.

The rapid heating process is complete

The red signal lamp disappears.
Put your meal in the oven and set the oven.

Time

When the oven is first connected, or following a power cut, the ⌚ symbol and three zeros flash in the display. Set the time.

The function selector must be switched off.

Setting procedure

Example: 13:00



1. Press the ⌚ clock button.
12.00 appears in the display and the ⌚ symbol flashes.



2. Set the time using the + or – button.
The time selected is adopted after a few seconds.

Changing the time e.g. from summer to winter timer

Press the ⌚ clock button twice and change the time with the + or – button.

Hiding the time

You can hide the time. It will then only be visible when you are performing settings.
To do this, you must change the basic setting.
See the Basic settings section.

Timer

You can use the timer as a kitchen timer. It operates independently of the oven.



The timer has a special signal. This means that you can tell whether the set timer period has elapsed or the cooking time is complete.

You can also set the timer if the childproof lock is active.

Setting procedure


Example: 20 minutes



1. Press the  timer button.
The  symbol will flash.




2. Set the timer period using the + or – button.
+ button default value = 10 minutes.
– button default value = 5 minutes

The timer starts after a few seconds. The  symbol lights up in the display. The time counts down visibly.


The time has elapsed

A signal sounds. Press the  timer button. The timer display will go out.

Changing the timer period

Press the  timer button. Change the time using the + or – button.

Cancelling the setting

Press the  timer button. Press the – button until the display is at zero.

**The timer and cooking time
count down simultaneously**

The symbols light up. The timer period counts down visibly in the display.

To call up remaining cooking time **I→I**, end time **→I** or time **⌚**: Press the **⌚** clock button until the symbol in question flashes.

The value called up will then appear in the display for a few seconds.

Basic settings

Main oven

Your oven has several basic settings. You may change the basic settings for time, the signal duration and the reset time for a setting.

Basic setting	Function	Change to
Time ⌚ I = Time in the foreground	Time display	Time ⌚ = Time hidden
Signal duration 🔔 2 = approx. 2 minutes	Signal after cooking time or timer period has elapsed.	Signal duration I = approx. 10 seconds 3 = approx. 5 mins
Reset time I→I 2 = medium	Waiting time between the adjustment increments before the setting is adopted.	Reset time I = short 3 = long

Changing the basic settings – Main oven

Example: Hiding the time


There must be no program set.



1. Press the ⌚ clock button and the + button at the same time until a **!** appears in the display. This is the basic setting for the time in the foreground.



2. Change the basic setting using the + or – button.

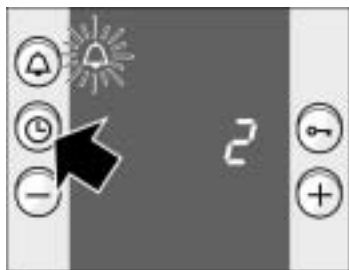

3. Conform with the ⌚ clock button.

A **2** will appear in the display for the basic setting for the signal duration.

**You do not wish to change
all the basic settings**

If you do not wish to change a basic setting, press the ⌚ clock button. The next basic setting will appear.



Correcting settings

You may change your settings again at any time.

Childproof lock for the main oven

Locking the oven

The oven has a childproof lock to prevent children switching it on accidentally.

Press the  key button until the  symbol appears in the display. This will take approximately 4 seconds.

Unlocking

Press the  key button until the  symbol goes out.

Notes

You can set the timer and the clock even when the oven is locked.

The childproof lock setting will be lost if there is a power cut

Care and cleaning

Do not use high-pressure cleaners or steam jets.

Oven exterior

Wipe the oven with water and a little washing-up liquid. Dry it with a soft cloth.

Caustic or abrasive substances are not suitable. If any such substances come into contact with the frontage, wipe it off immediately with water.

Notes

Slight differences in the colours on the appliance front are caused by the use of different materials, such as glass, plastic and metal.

Shadows on the door panel which resemble smears are reflections from the oven light.

Appliances with stainless steel fronts

Always remove any flecks of limescale, grease, cornflour and egg white immediately. Corrosion can form under such flecks.

Use stainless steel care products. Follow the manufacturer's instructions. Try out the product on a small area first, before using on the whole surface.

Appliances with aluminium fronts

Use a mild window-cleaning detergent. Wipe the area with a soft window cloth or a fluff-free micro-fibre cloth, using a horizontal action without applying pressure.

Aggressive cleaning products, scratchy sponges and rough cleaning cloths are not suitable.

Oven

Never use coarse scouring pads or cleaning sponges. Oven cleaner may only be used on enamelled oven surfaces

For ease of cleaning

you can switch on the oven light and detach the oven door.

Detaching the oven door



The oven door can be easily detached.

⚠ When pulling the door out, make sure that you do not reach into the hinge. There is a risk of injury.

1. Open the oven door fully.
2. Move the two locking levers on the left and right-hand sides.



3. Half-close the oven door.
With both hands, grip the door on the left and right-hand sides.
Close the door a little more and pull it out.

After cleaning, refit the oven door in the reverse order to removal.

Cleaning the catalytic surfaces of the oven

The rear wall, top and side walls of the oven are coated with self-cleaning enamel. The surfaces clean themselves while the oven is in operation. Large splashes may only disappear after the oven has been used several times.

Never use oven cleaner on self-cleaning surfaces.

If the self-cleaning surfaces of the oven are no longer cleaning themselves sufficiently, they can be regenerated using the cleaning function.

Should the enamel become slightly stained, this will not affect its self-cleaning properties.

Cleaning the oven floor

Use hot soapy water or a vinegar solution.

It is best to use oven cleaner if the oven is very dirty. Only use oven cleaner in a cold oven.

Never use oven cleaner on the self-cleaning surfaces of the oven.

Note:

Enamel is baked on at very high temperatures. This can cause some slight colour variation. This is normal and does not affect the function. Do not use coarse scouring pads or strong cleaning agents to remove such discolorations.

The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough. Anti-corrosion protection is guaranteed.

Cleaning the glass cover for the oven light

It is best to clean the glass cover with washing-up liquid.

Cleaning function

Main and Mini oven

The cleaning function is a regeneration program. If the self-cleaning components of the oven are no longer cleaning themselves sufficiently, they can be regenerated using this function. They are then fully operational again.




Remove accessories and ovenware from the oven.

Caution

Before you do this, you must clean the oven surfaces which are not self-cleaning. Otherwise stains may appear that cannot be removed.

Setting procedure


Main oven

1. Set the function selector to 3D hot air .
2. Set the temperature selector to clean.
3. Press the  button until the  symbol flashes.
4. Use the + button to set 1.00 hour.

The setting is adopted after a few seconds.

The oven will switch off automatically after one hour. Switch off the function selector.

Mini oven

1. Set the function selector to .
2. Set the temperature selector to clean.

Heat the clean function for 1.00 hour.

The mini oven has no automatic disconnection off the clean function.

Switch off the function selector and the temperature selector.

When the oven has cooled

Wipe away salt residues from the self-cleaning components using a moist cloth.


Cleaning the glass panels

Main and Mini oven

Removal


The glass panel on the oven door can be removed to assist in cleaning.

1. Remove the oven door and lay it down on a cloth with the handle underneath.
2. Unscrew the cover at the top of the oven door. To do this, undo the right and left-hand screws (Fig. A).

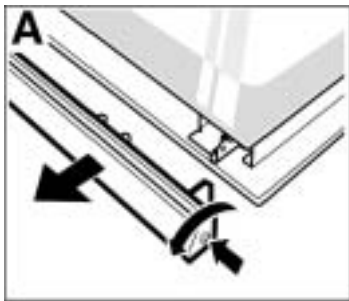


3. Slide out the top panel. (Fig. B).

Clean the glass panels with glass cleaner and a soft cloth.

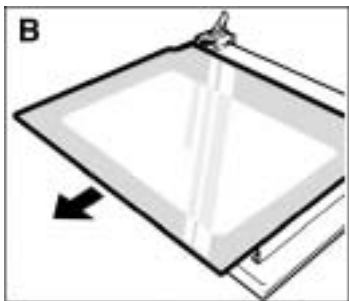


Removal

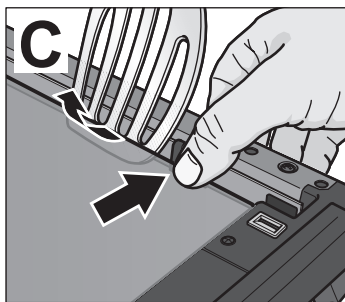

1. Press in the retaining clip with your thumb on one side and disengage the **inner door glass** e.g. with the spatula, then repeat on the other side. (Fig. C).

Installation




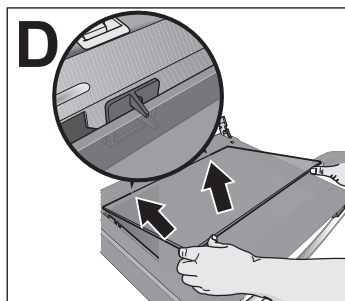


Installation after cleaning:

1. Insert **inner door glass** into the holder. First engage the right side and then the other side. (Fig. D)
2. Push the top panel back in. Make sure that the smooth surface is facing outwards.
3. Replace the cover and screw it back on.
4. Refit the oven door.

The oven must not be used again until the panels have been correctly installed.

Cleaning the rails

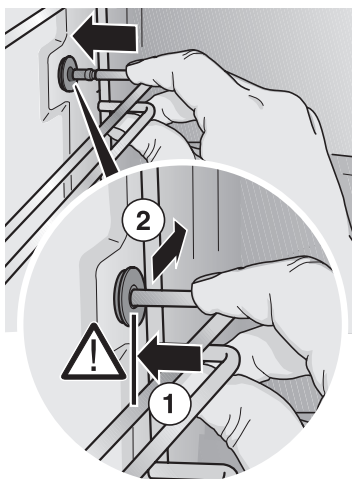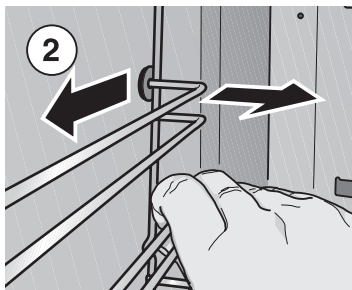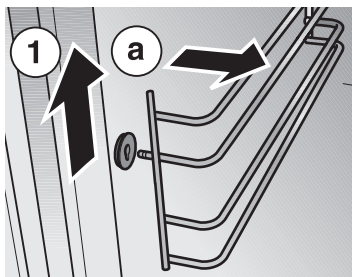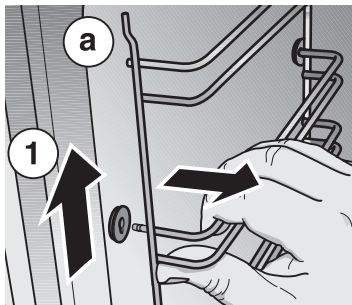

Removing

You can remove the rails for cleaning.

1. At the front, press the rails up and detach the front clip.

2. At the back, pull the rails forward and take it off.

Clean the rails using washing-up liquid and pan scrapers or brushes.

Replacing

The rails fit on the left and right side.

⚠ When installing the rails, do not twist them, otherwise the shelf positions for the accessories will not correspond.

For the main oven: The indentation (a) must always be at the bottom.

For the mini oven: The extension (a) must always be at the top.

1. At the back, put the rails in as far as it goes.

2. Press the rails backwards until it clicks into place in the front.

Seal

Clean the seal on the oven with washing-up liquid. Never use caustic or abrasive detergents.

Accessories

Immediately after use, soak the accessories in washing-up liquid. Food residues can then be easily removed with a brush or sponge.

Troubleshooting

Should a malfunction occur, it is often only due to a minor fault. Please read the following instructions before calling the after-sales service:

Problem	Possible cause	Comments/remedy
The oven does not work.	Blown fuse	Look in the fuse box and check that the fuse is in working order.
The clock display flashes.	Power cut	Reset the time.

Repairs may only be carried out by fully trained after-sales service technicians.

Improper repairs may constitute serious hazards to the user.

Replacing the oven light

Mini oven


If the oven light fails, it must be replaced. 40 watt heat-resistant spare bulbs can be obtained from the after-sales service or specialist shops. Only use these bulbs.

Method



1. Switch off the oven fuse in the fuse box.
2. Place a tea towel in the cold oven to prevent damage.
3. Unscrew the glass cover by turning it anti-clockwise.
4. Replace the oven light with one of the same type.
5. Screw the glass cover back on.
6. Remove the tea towel and switch the fuse back on.

Main oven

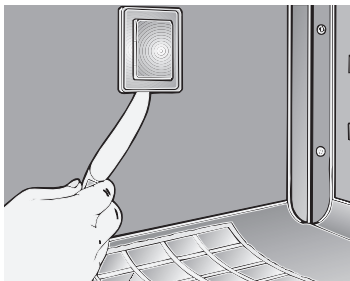

Caution: Unplug the appliance or remove the fuse! By actuating the miniature circuit-breaker or by unscrewing the fuses in the fuse box in your house.

1. To prevent damage, place a cloth into the cold oven.
2. Remove the glass cover by inserting a knife or similar object between the glass and the frame.
3. Replacing the lamp:
 - Type: Incandescent bulb E 14, 230–240 V, 25 W, heat resistant to 300° C.
 - You can obtain this lamp from our spares department.

Replacing the glass cover

The glass cover on the oven light must be replaced if it is damaged. Replacement glass covers may be obtained from the after-sales service. To this end, please specify the E number and FD number of your appliance.

After-sales service

E number and FD number

Our after-sales service is there for you if your oven needs repairing. You will find the address and telephone number of your nearest after-sales service centre in the phone book. The after-sales service centres listed will also be happy to advise you of a service point in your local area.

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate containing these numbers is found on the right, on the side of the oven door. You can make a note of these numbers in the space below to save time in the event of your appliance malfunctioning.


E no.	FD no.
After-sales service ☎	

Packaging and old appliances

Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environmentally friendly and can be recycled. Please make a contribution to protecting the environment by disposing of the packaging appropriately.

Old appliances are not worthless rubbish. Environmentally-conscious recycling can reclaim valuable raw materials.

Before disposing of your old appliance, please make sure that it is unusable, or label it with a sticker stating „Caution, scrap“.

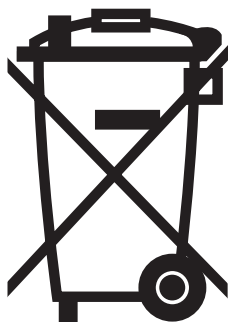

Up-to-date information on how to dispose of your old appliance and the packaging from the new one can be obtained from your retailer or local authority.

This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Tables and tips

This table contains a selection of dishes and the optimum settings at which to cook them. You can find out which type of heating and temperature is best for your dish, which accessories to use, and at which oven level the dish should be inserted. You will find a variety of tips about ovenware and preparation, and a small troubleshooting section in case anything should go wrong.

Cakes and pastries

Baking tins

It is best to use dark baking tins. You should use 3D-hot air when using thin baking tins, or glass containers. This means, however, that the baking time is increased and the cake does not brown so evenly.

Always place the cake tin on the wire rack.

Tables

The values in the table apply to dishes placed in a cold oven. This saves energy. Shorten the baking times indicated by 5 to 10 minutes if you have preheated the oven.













The tables show which type of heating is best for different cakes and bakes.

The temperature and cooking time you select depends on the quantity and type of pastry. This is why „ranges“ are given in the tables. You should try to use a lower temperature setting to start with, since this allows more even browning. If necessary, use a higher temperature setting the next time.

More information can be found in the „Baking tips“ section which follows the tables.





Main oven

Conventional heat

Food	Dish	Shelf position	Cooking method	Temp. °C	Time, minutes
Victoria sandwich	20 cm tin	1		170	20-30
Light fruit cake	20 cm tin	1		160	55-75
Fruit crumble	Glass dish	1		180	35-45
Jam tarts*	12 hole bun tin	2		200	15-20
Yeast cookery* (f. ex. Pizza)	Universal pan	2		180-190	30-45
Tarts*	20 cm plate or pie tin	1		200	40-50
Quiches*	Glass dish	1		200-220	40-50
Swiss Roll*	Swiss roll tin	2		190-200	10-12
Rich Biscuits	Baking tray	2		180	20-25
Bread	loaf tin (900 g or 2x450 g)	1		220	25-35
Scones*	baking tray	1		210	15-20
Yorkshire Pudding	12 hole bun tin	2		200	30-40







* Preheat oven

3D-hot air

Food	Dish	Shelf position	Cooking method	Temp. °C	Time, minutes
Rich fruit cake	23 cm round tin or 20 cm square cake tin	1		140	140-170
Meringues	Universal pan	1		80-90	130-160
Pavlova	Universal pan	1		150*+ 100	65-95
Jacket Potatoes	Universal pan	1		160	55-65

* Preheat oven

3D-hot air: Baking on 2 levels

Food	Dish	Shelf position	Cooking method	Temp. °C	Time, minutes
Victoria sandwich	23 cm tin	1+3		160	30-40
Scones*	baking trays	1+3		180	20-30
Jacket potatoes	wire racks	1+3		160	65-75
Biscuits	baking trays	1+3		150	20-30
Small Cakes*	baking trays	1+3		150	30-40
Meringues	baking trays	1+3		80	125-155
* Preheat oven					

Baking tips

You wish to cook to your own recipe.	Refer to the instructions in the tables for similar types of food.
How to check that a sponge cake is cooked properly.	Approximately 10 minutes before the end of the baking time given in the recipe, pierce the tallest point of the cake with a cocktail stick. The cake is done if the cocktail stick comes out clean.
The cake collapses.	Next time, use less liquid or decrease the oven temperature by 10 degrees. Observe the cooking times in the recipe.
The cake has risen in the centre but is lower at the edges.	Do not grease the sides of the springform cake tin. As soon as the cake is done, carefully loosen the cake around the edges using a knife.
The cake is too dark at the top.	Insert it at a lower level in the oven, select a lower temperature and cook the cake a little while longer.
The cake is too dry.	Use a toothpick to make small holes in the finished cake. Then drizzle fruit juice or alcohol over the top. Next time you should decrease the temperature by around 10 degrees and reduce the baking times.
The bread or cake (e.g. cheesecake) looks fine, but is soggy on the inside (soft, with watery areas).	Next time you should add a little less liquid and cook for a little longer at a lower temperature. Cakes with fruit topping: Precook the base first of all. Sprinkle with almonds or breadcrumbs and then place the topping over this. Please observe the recipe and the baking times.
The pastry is unevenly browned.	Select a slightly lower temperature to ensure that the pastry is baked more evenly. Check the shelf position and the rails (see section "Cleaning the rails"). Baking paper that protrudes over the food can affect the air circulation. For this reason, always cut the baking paper to fit the baking tray.
The fruit cake is too light at the bottom. The fruit juice flows over.	Use the deeper universal pan next time.
You were baking on several levels. The food on the top baking tray is darker than that on the bottom baking tray.	Always use 3D hot air  when baking on several levels. Baking trays that are placed in the oven at the same time will not necessarily be ready at the same time.
Condensation is formed when baking cakes containing fresh fruit.	Baking may result in the formation of water vapour. It escapes above the door handle. The steam may settle and form water droplets on the control panel or on the fronts of adjacent units. This is a normal physical process.

Meat, poultry, fish

Ovenware

You may use any heat-resistant dishes. The universal pan is also suitable for larger roasts.

Always place the dishes in the centre of the wire rack.

Hot glass dishes should be placed on a dry kitchen towel after being removed from the oven. The glass could crack if placed on a cold or wet surface.

Advice on roasting

The roasting result depends on the type and quality of meat.

Add 2 to 3 soup spoons of liquid to lean meat, and 8 to 10 soup spoons of liquid to pot roasts, depending on the size.

Baste the meat if desired.

Some meats should be prepared in liquid in a covered casserole. This type of cooking is suitable for less tender cuts of meat.

Place in a cold oven to save energy or pre-heat if desired.

Meat should be turned half way through the cooking time.

When the roast is ready, switch off the oven and leave the roast to stand for 10 minutes with the oven door closed. This allows the meat juices to distribute more favourably.

Advice on hot air grilling

Use the wire rack and the universal pan.

When grilling with hot air on the wire rack, the oven may become very dirty depending on the food which is being grilled. Therefore, always clean the oven after use to prevent dirt from burning in.

For particularly crispy poultry or joints (pork joint with skin).

Turn large joints after approx. half the grilling time.

Turn the whole bird after approx. two thirds of the grilling time. Prick the skin under the wings of duck and goose so that the fat can roast right through.

Advice on radiant grilling

Mini oven

Used for smaller dishes having little height/thickness.

If possible, use pieces of meat which are of the same thickness. They should be at least 2 to 3 cm thick. Such pieces will be browned evenly and stay juicy and soft in the middle. Only salt the steaks after they have been grilled.

Turn the pieces of meat after two thirds of the cooking time indicated.

At your discretion, lightly baste the grill and the food with oil.



**Exercise CAUTION when grilling.
Always keep children at a safe distance.**

Notes on grilling

Always close the oven door when grilling.

The grilling temperatures are variable.

Always use the wire rack and the universal pan insert the universal pan at level 1.


Always place food to be grilled in the centre of the wire rack.


If the grill element (heating element) switches OFF automatically, the overheating protection was activated.

The radiator will be reactivated after a short period of time.

Grilling




 
 
 
 


Use the wire rack and the universal pan.

 **Exercise Caution when grilling.**
Always keep children at a safe distance.

Hot air grilling 
– Main oven

Place the grill into the universal pan and slide them together into the same shelf position.

The values in the tables are approximate. The values may vary depending on the type and amount of food to be grilled and refer to insertion of food into a cold oven.





Food	Shelf position	Cooking method	Temperature °C	Cooking time mins per 1 lb
Beef rare	1		200-220	10+15
Beef medium	1		200-220	15+20
Beef well done	1		200-220	20+25
Beef filet	1		210-230	15+20
Lamb medium	1		160-180	20+20
Pork	1		170-190	30+30
Chicken, 1 kilo	1		190-210	20+20
Duck, Goose	1		150-170	15+15
Chops and chicken joints	1		210-230	20+10

Radiant grill





– Main oven

Insert the universal pan at level 1.

The values in the tables are approximate. The values may vary depending on the type and amount of food to be grilled and refer to insertion of food into a cold oven.

Food	Shelf position	Cooking method	Grill setting	Cooking time mins per 1 lb
Meat steaks, bacon	3		2 or 3	12-22
Sausages	3		2 or 3	15-20
Fish	3		2 or 3	12-18
Toast, with canapé	2		3	7-10

– Mini oven

Food	Shelf position	Cooking method	Grill setting	Cooking time mins per 1 lb
Meat steaks, bacon	2		2 or 3	12-22
Sausages and Fish fingers	1		3	15-20
Fish	1		2	10-20
Toast	1		2	5-10

Tips for roasting and grilling

The table does not contain information for the weight of the roast.

Select the next lowest weight from the instructions and extend the time.

How can you tell when the roast is ready?

Use a meat thermometer (available from specialist shops) or carry out a „spoon test“. Press down on the roast with a spoon. If it feels firm, it is ready. If the spoon can be pressed in, it needs to be cooked for a little longer.

The roast is too dark and the crackling is partly burnt.

Check the shelf position and temperature.

The roast looks good, but the juices are burnt.

Next time, use a smaller roasting dish or add more liquid.

The roast looks good, but the juices are too clear and watery.

Next time, use a larger roasting dish or add less liquid.

Steam rises from the roast when the juice is basted.

Use hot air grilling instead of top/bottom heating. This prevents the bottom of the roast from becoming too hot, thereby producing less steam.

Defrosting Main oven

Remove the food from its packaging and place it in a suitable dish on the wire rack.

Please observe the instructions on the packaging.

The defrosting times depend on the type and amount of food.

Meal	Accessories	Level	Type of heating	Temperature in °C
Frozen foods* e.g. cream gateaux, cream cakes, cakes with chocolate or icing, fruit, chicken, sausages and meat, bread, rolls, pastries and other baked goods.	Wire rack	1	☼	The temperature selector remains switched off
* Cover frozen food with microwave foil. Place poultry onto the plate with the breast side down.				

Drying Main oven

Only use perfectly fresh fruit and vegetables, and wash them thoroughly.

Allow the food to drain well and dry it yourself.

Line the universal pan and wire rack with baking paper or greaseproof paper.

Meal	Level	Type of heating	Temperature in °C	Cooking time in hours
600 g apple rings	1+3	☼	80	Approx. 5
800 g sliced pears	1+3	☼	80	Approx. 8
1.5 kg prunes or plums	1+3	☼	80	Approx. 8-10
200 g fresh herbs, washed	1+3	☼	80	Approx. 1½

Note

Very moist fruit or vegetables should be turned several times. Once dried, remove the food from the paper immediately.

Preserving Main oven

Preparation

The jars and rubber sealing rings must be clean and intact. Use jars of the same size if possible. The instructions in the table refer to round 1-litre jars. Caution Do not use larger or taller jars. The lid could crack.

Only use perfectly fresh fruit and vegetables. Wash them thoroughly.


Pour the fruit or vegetables into the jars. Wipe clean the tops of the jars again if necessary. They must be clean. Place a wet rubber sealing ring and lid on each jar and lock the jars using clamps.


 
Place the preserving jars in a triangle (see fig.), ensuring that they are approx. 5 cm from the rear of the oven.

The times specified in the tables are guidelines only. They can be influenced by the room temperature, the number of jars and the amount and temperature of the jar contents. Before you change settings or switch off the appliance, make sure that the contents of the jars are actually bubbling.



Setting procedure

1. Place the universal pan on level 1. Place the jars inside the pan so that they do not come into contact with each other.
2. Pour $\frac{1}{2}$ litre of hot water (approx. 80 °C) into the universal pan.
3. Close the oven door.
4. Switch the function selector to .
5. Set the rotary knob to approx. 160 °C.

Fruit, cucumbers and tomato purée		Vegetables (however not cucumbers)	
1	Insert jars.	1	Insert jars.
2	Select  function and set to approx. 160 °C.	2	Select  function and set to approx. 160 °C.
3	<p>The rear jar and the right jar in the second row bubble first.</p> <p>Jars with $\frac{1}{2} + 1$ l after approx. 50–60 minutes.</p> <p>As soon as the other jars begin to bubble, switch off the oven.</p>	3	<p>The rear jar and the right jar in the second row bubble first.</p> <p>Jars with $\frac{1}{2} + 1$ l after approx. 50–60 minutes.</p> <p>As soon as the other jars begin to bubble, reduce the oven temperature to 100° C.</p>
4	<p>Leave the jars for further minutes in a closed oven.</p> <ul style="list-style-type: none"> – Raspberries, strawberries, cherries, cucumbers: 5–10 min. – another fruit: 10–15 min. – Tomato purée, Apple purée: 15–20 min. 	4	Leave the jars to bubble in a closed oven for approx. 60 minutes.
			Switch off the oven.
			Leave the jars for approx. a further 15–30 minutes in a closed oven.

Energy saving tips

Only preheat the oven if it specifies in the recipe or in the table in the instruction manual that you should do so.

Use non-stick, black painted or enamelled tins. They absorb the heat especially well.

If you have several cakes to bake it is best to bake them one after the other. The oven is still warm. This shortens the baking time for the second cake. You can also put two baking tins in one after the other.

For long cooking times, the oven can be switched off 10 minutes before the end of the cooking time and the remaining heat can be used to finish the cooking.

Acrylamide in food

Where does acrylamide come from?

Experts are currently discussing how dangerous acrylamide in food can be. We have compiled this information sheet for you on the basis of current research.

Acrylamide in food does not come from external contamination. It is formed in the food itself during preparation – provided that the food contains carbohydrate and protein. Exactly how this happens has not yet been completely explained. However, it appears that the acrylamide content is strongly influenced by

high temperatures
a low water content in food
intensive browning of the food.

What sort of foods are affected?

Acrylamide forms mostly in grain and potato products that are prepared at high temperatures, e.g.:

crisps, chips,
toast, rolls, bread,
baked goods made from shortcrust pastry (speciality biscuits and cakes).

What can you do?

In general

You can avoid high levels of acrylamide when baking, frying and grilling.

The following recommendations were published by AID¹ and BMVEL² to help you minimise acrylamide levels:

Keep cooking times as short as possible.

„Brown rather than burn“ – cook food only until it is golden brown.

The larger and thicker the food is, the less acrylamide it contains.

Baking

Set the temperature to a maximum of 180 °C for the 3D-hot air setting.

Cookies: Set the temperature to a maximum of 170 °C for the 3D-hot air setting. The presence of egg or egg yolk in a recipe reduces the formation of acrylamide.

Spread oven chips evenly over the baking sheet in one layer where possible. To prevent the food from drying out quickly, place at least 400 g on each baking sheet.

¹ AID “Acrylamide” information leaflet, published by AID (German Evaluation and Information Service for Nutrition, Agriculture and Forestry) and BMVEL (German Federal Ministry for Consumer Protection, Food and Agriculture), as at 12/02, Internet: <http://www.aid.de>.

² BMVEL press release 365, as at 4.12.2002, Internet: <http://www.verbraucherministerium.de>












Test dishes for the main oven

Follow the preheating instruction.



Values in the table apply without rapid heating up.

According to standard 44547 and EN 60350

Baking

Food	Dish and notes	Shelf position	Cooking method	Temperature °C	Time in minutes
Shortbread (preheat)	Baking tray	2		150-170	15-25
	Baking tray	1		140-160	20-30
	2 baking trays	1+3		140-160	20-35
Small Cakes	Baking tray	2		160-170	25-35
	Baking tray	1		150-160	25-35
Fatless sponge cake	Spring form cake tin	1		160-170	30-40
	Spring form cake tin	1		160-170	30-40
Yeast pasty	Baking tray	2		170-180	45-55
	Baking tray	1		160-170	50-60
	2 baking trays	1+3		160-170	60-75
Apple pie	Wire racks	1		170-180	80-90
	Spring form cake tin ø 20 cm				

Grilling

Food	Dish and notes	Shelf position	Cooking method	Grill setting	Time in minutes
Toast (preheat for 10 min.)	Wire rack*	3		3	0,5-1,5
Beef steak, 12 pieces**	Wire rack* + universal pan	3		2	1 st side 10-15 2 nd side 7-12

* Wire grills may be obtained as optional accessories from specialist shops.

** Turn after $\frac{2}{3}$ of the time has elapsed. Always insert the universal pan at level 1.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

