



Brief and handy:
everything your dishwasher
needs ...

**Before using for the first
time, read the operating
instructions!**

1

Adjusting the water softening system*


Read off the correct setting for your water hardness ...

°dH	°fH	°Clarke	mmol/l	
0 - 6	0 - 11	0 - 8	0 - 1,1	0
7 - 8	12-15	9 - 10	1,2-1,4	1
9 - 10	16-17	11-12	1,5-1,8	2
11-12	18-21	13-15	1,9-2,1	3
13-16	22-29	16-20	2,2-2,9	4
17-21	30-37	21-26	3,0-3,7	5
22-30	38-54	27-38	3,8-5,4	6
31-50	55-89	39-62	5,5-8,9	7




* only before the first wash
or if the water hardness
has been changed


Dissolves limescale (not required for set value 0!)

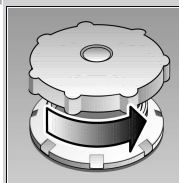


Unscrew
the lid.

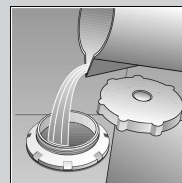

**Only before using the
dishwasher for the first time
pour approx. 1 l /
1 1/4 pt water into
the salt opening.**

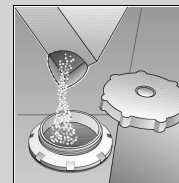

Pour in max.
1.5 kg / 3 lb 5 oz
salt (never deter-
gent!)

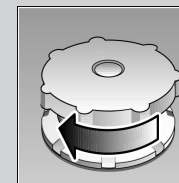

Screw on the
lid. Switch on
dishwasher
immediately.

2

Filling the salt dispenser

3

Adding rinse aid

4

Adding detergent

5

Turn on tap Water flows in ...

6

Select programme



7

Switch on the appliance Here we go ...

9


Press main switch, running time of the selected
programme is indicated.

Switch off the appliance Everything o.k. ...

When the display is on 0 (end of programme), press
the main switch.

8


Everything is sparkling clean ...

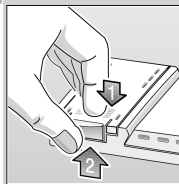

Press mark 1,
lift up lid 2.



Very dirty dishes, a lot of detergent ...

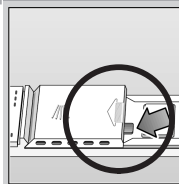


If required, open
the lid (press the
pin).




Warning,
combination
products are not
suitable for all
programmes,
follow manufac-
turer's instructions.


Refill whenever level indicator is light!

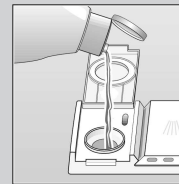


Pour in
rinse aid.

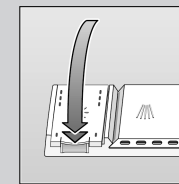

Close the
lid. CLICK!

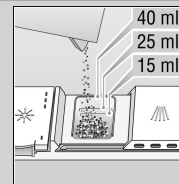

Pour in
detergent.

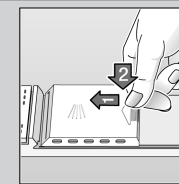

Push the lid
shut, press.
PLOP!

Quick, economical or intensive ...

Overview of programmes

This overview indicates the max. possible number of
programmes. The programmes which correspond to your
appliance can be found on your appliance fascia.

The programme data are values measured in the
laboratory in compliance with Standard EN 50242.
Deviations in practice are possible.

	Intensive 70° 	Normal 65° 	Eco 50° 	Gentle 40° 	Quick 45° 	Prerinse
Duration in minutes	120	110	140	70	30	15
Power consumption in kWh	2,00	1,75	1,05	1,00	0,90	0,10
Water consumption in litres	21	21	17	17	13	5

Additional programmes **

Flexibility ...



Soaking

... of utensils in the
bottom basket,
programme starts
automatically, 5 g of
extra detergent on
the open door!



Reduce/save time

... reduces washing time
reduces drying time



Half load

... for a few items, saves
water, energy and time



Extra dry

... improves the drying
result by increased
temperature in the final
rinse (Please take care
with delicate dishes)



Time selection


...switches on as soon as
you press the time
selection button:
Alters the programme
start in hourly steps

** some models


Maintenance and care

Filters


Check and, if required, clean:

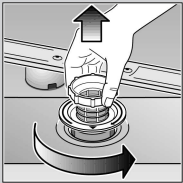


Rotate filter cylinder, remove filter system

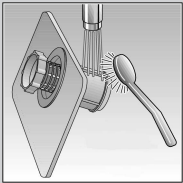

Rinse under running water

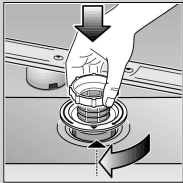

Insert


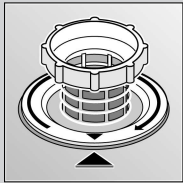


Screw on filter system. NOTE MARK!


Spray arms

Remove blockages/deposits

  
Pull up lower arm

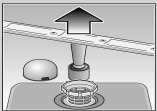


Unscrew upper arm

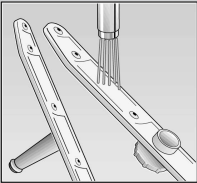

Clean under running water (if required, use a toothpick)

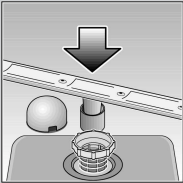

Insert lower arm

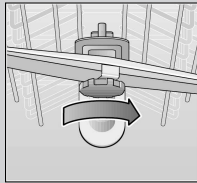

Screw on upper arm

Rectifying minor faults yourself ...



... as it is worth doing it yourself!

Fault	Possible causes	Remedial action
Residual water in the appliance	Waste water pump blocked The programme has not yet ended	▶ Clean waste-water pump (see above). ▶ Close appliance and switch on, or terminate programme (see Terminating the programme).
Appliance is not running / stops Check water supply Display lights up	Supply fitting not open Supply hose kinked Supply fitting jammed or calcified	▶ Open supply fitting. ▶ Install supply hose without kinks. ▶ 1. Unscrew water connection. 2. Clean filter in the water connection. 3. Flow rate must be min. 9 l/min. when water supply is open. If the flow rate is less, replace the supply fitting.
Plastic / utensils discoloured	Too little detergent Discoloration caused by food colourings (tomato sauce)	▶ Follow manufacturer's instructions (detergent). ▶ Discoloration is harmless; subsequent rinse cycles will cause it to fade.
Rust on the cutlery	Cutlery not rust-resistant Hard knife blades are more susceptible Extraneous rust	▶ Use dishwasher-proof cutlery. ▶ Never wash rusting parts in the appliance.

Waste water pump *

* some models

- Set main switch to OFF
- Scoop out any water
- Remove the filters
- Remove the cover (⇒A)
- Check the inner compartment for foreign objects and, if required, remove foreign objects
- Re-insert the cover (⇒B)
- Re-insert the filters and screw into position

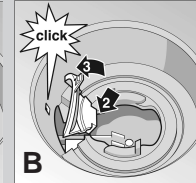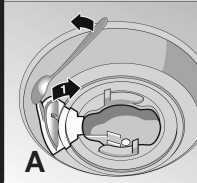

Fault	Possible causes	Remedial action
Utensils are not clean Sand or gritty residue on the utensils	Utensils are situated close together or one above the other Too little detergent Unsuitable programme selected Spray arm nozzles blocked Filters dirty, not seated firmly Spray arms blocked	▶ Separate the utensils, prevent contact points. ▶ Follow manufacturer's instructions (detergent). ▶ Select a more intensive programme. ▶ Clean the spray arms (see above). ▶ Clean the filters (see above). ▶ Arrange the utensils so that the spray arms can rotate freely.
Stains and streaks	Rinse-aid dosage too high / too low	▶ Streaks: reduce dosage. ▶ Water or limescale stains: increase dosage.
Milky film on the utensils (removable)	Water softening system incorrectly set; No salt	▶ Correctly set water softening system. ▶ Refill with salt.
Milky film, glasses cloudy / dull (not removable)	Glasses not dishwasher-proof.	▶ Use dishwasher-proof glasses. ▶ Use a detergent suitable for glasses.

More information can be found in the operating instructions

Interrupting the programme ...

Terminating the programme ...

- Switch off the main switch.
- To continue, close the door. Switch on the main switch again.

- While the programme is running, rotate the programme selector to the Reset pos. After approx. 3 seconds the digital display indicates 0.
- The programme sequence lasts approx. 1 min.
- When the programme has run, switch off the main switch.

Loading the dishwasher correctly ...

Dishwasher-proof utensils (not soiled with ash, wax, lubricating grease, ink or adhesive labels; remove large remnants of jam, milk products and food according to the operating instructions and check that the spray arms can rotate freely).