

## Safety instructions

- The washing machine is heavy - take care when lifting.
- **Caution:** Frozen hoses may rip/burst. Do not install the washing machine in areas exposed to frost or outdoors.
- The washing machine could be damaged. Do not lift the appliance by protruding components (e.g. the washing machine door).
- In addition to the instructions provided in this document, special regulations from the relevant water and electric utility companies may apply.
- If in doubt, have a technician connect the appliance.
- The worktop must have no openings in the area around the washing machine.
- Lay hoses and cables in such a way that there is no risk of tripping.

## Environmentally-friendly disposal


- Dispose of packaging in an environmentally friendly manner.
- This appliance has been identified in accordance with the European directive 2002/96/EC on Waste Electrical and Electronic Equipment - WEEE. The directive specifies the framework for an EU-wide return and recycling of old appliances.

## Installation surface

- Stability is important so that the machine does not wander.
- The installation surface must be firm and level.
- Soft floors/floor coverings are not suitable.

### Installation with slide sheets

- Slide sheets make it easier to slide the washing machine into the installation recess. Order using spare part no. 66 1827
- Before sliding in the machine, dampen the slide sheets with a mixture of water and detergent. Do not use any fat and/or oil

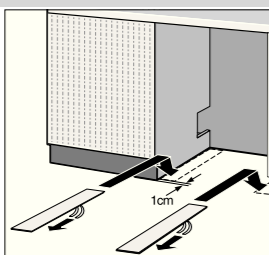

### Installation beneath a high-level worktop -> Appliance dimensions, page 3

- Adjustment strips: Ordering code WZ 20470, WMZ 20470, Z 7090X0
- Height adjustment kit: Ordering code WZ 20440, WMZ 20440, Z 7060X0

### Installation on a pedestal



- The front feet of the appliance **must** be secured with holding brackets. Order no. WMZ 2200, WX 975600, CZ110600, Z 7080X 0

### Installation on a wood joist floor


- If possible, place the washing machine in a corner.
- Screw a water-resistant wooden plate (min. 30 mm thick) to the floor. In doing so, take into account the height of the kitchen worktop!
- The feet of the washing machine **must** be secured with holding brackets. Order no. WMZ 2200, WX 975600, CZ110600, Z 7080X 0

## Scope of delivery depending on model


Moisture inside the drum is due to final testing.

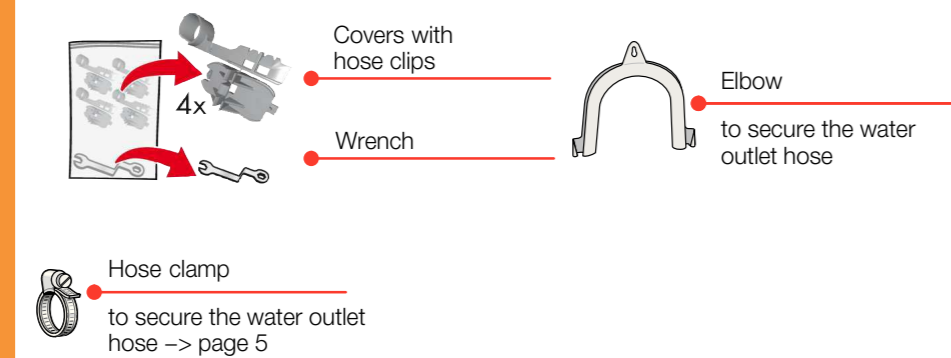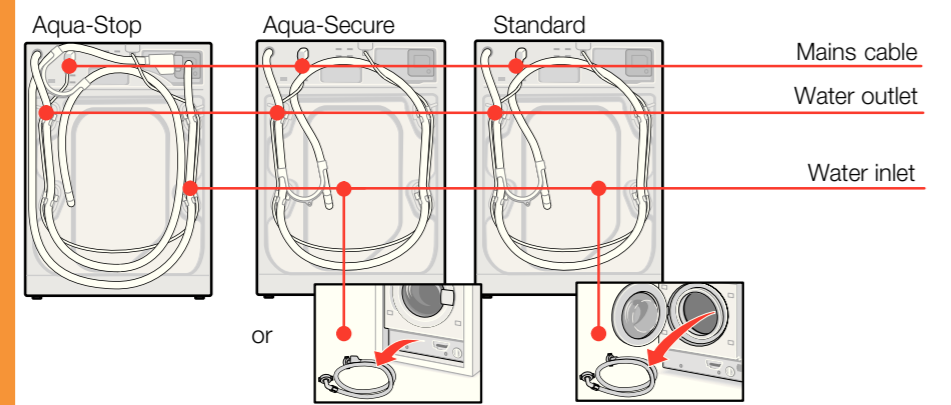

### Parts for assembly -> page 8 - 13

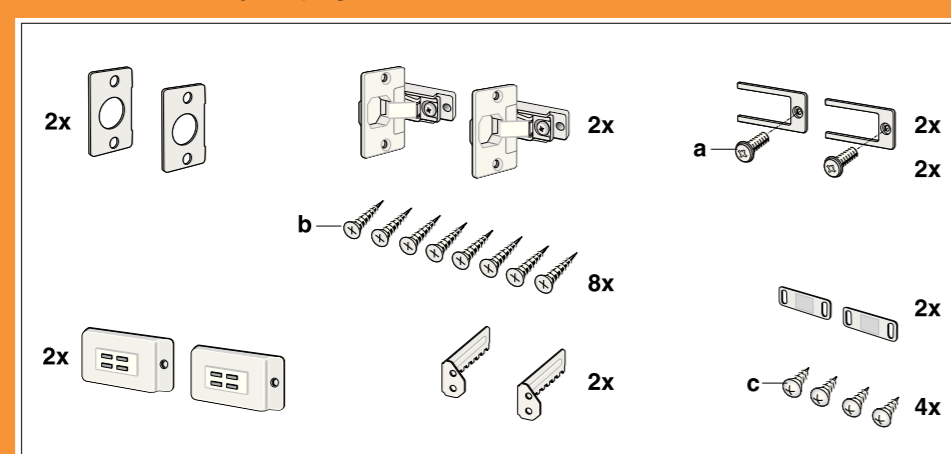


## Appliance dimensions depending on model

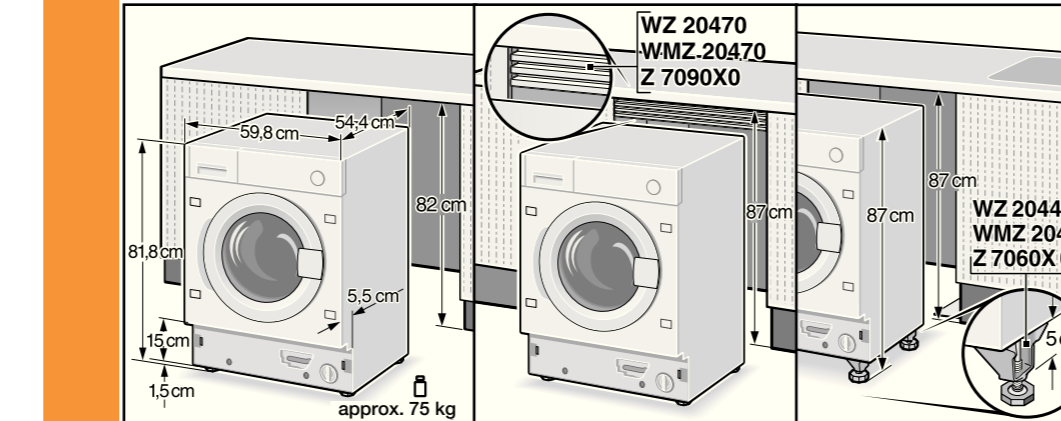

## Hose and cable lengths depending on model

### Left-hand connection or Right-hand connection

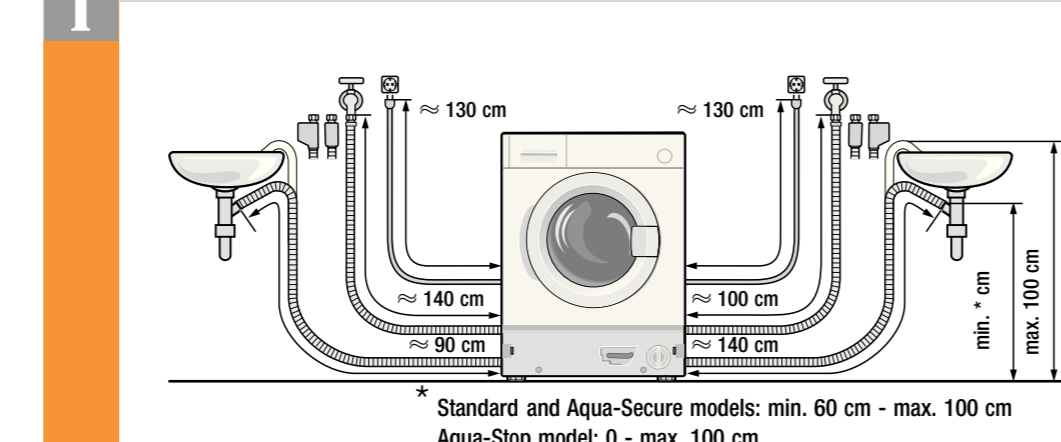

- Note: Using hose clips limits the possible hose lengths. Available from specialist dealers/customer services:
- Extension for Aqua-Stop and cold water inlet hose (approx. 2.50 m), Order no. WMZ 2380, WZ 10130, CZ11350, Z 7070X 0.

## Useful tools

- Spirit level for levelling
- Screw driver
- Drill


## Removing the transport braces

- Before using the appliance for the first time, the 4 transport braces must be completely removed and kept safe.
- For any future transport, the transport braces must be refitted - this prevents the machine from being damaged. -> page 6.
- Keep the screws and sleeves.


1. Take the hoses (depending on model) out of the holders and the elbow. Remove the elbow.




2. Unscrew and remove the bolts from all 4 transport braces.

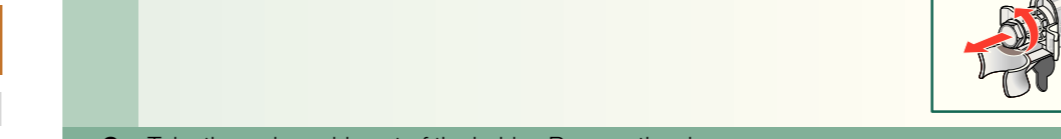



3. Take the mains cable out of the holder. Remove the sleeves.

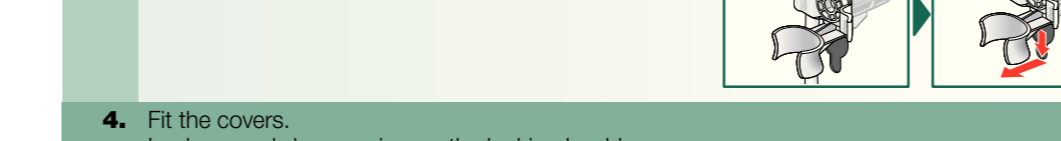

4. Fit the covers. Lock securely by pressing on the locking hook!

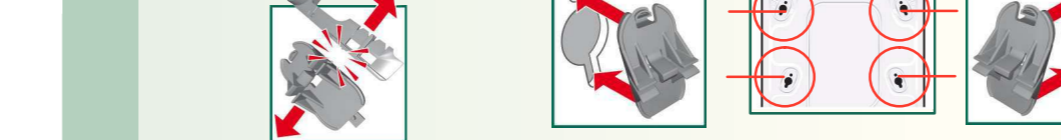

5. Fix hoses in the hose holders. Fit the hose clips.

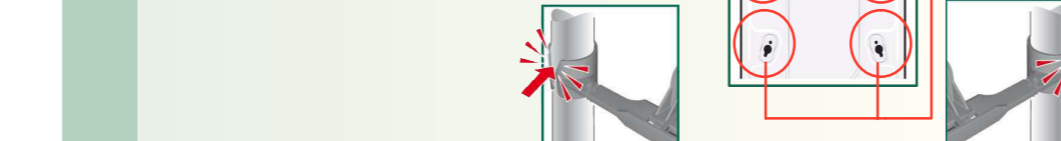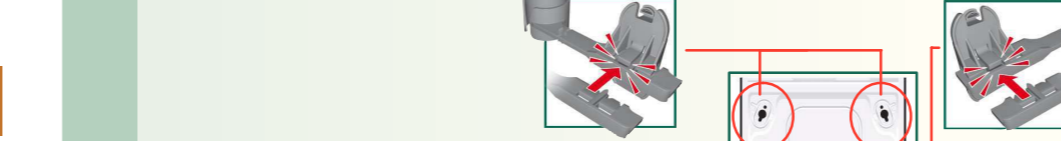

## Water connection depending on model


- Risk of electric shock. Do not immerse the Aqua-Stop safety device in water (contains an electric valve).
- To prevent leaks or water damage, observe the instructions in this section.
- **Caution:** operate the washing machine only with cold drinking water. Do not connect to the mixer tap of an unpressurised hot water boiler.
- Do not use a used inlet hose. Only use the inlet hose supplied or one which was purchased from an authorised specialist dealer.
- If in doubt, have a technician connect the appliance.

### Water inlet

- Water inlet hose:**  
**Caution:** do not bend, squash, modify or cut through (stability can no longer be guaranteed).

- Optimum water pressure in the supply network: 100-1000 kPa (1-10 bar)**  
 - Water flows at a rate of at least 8 l/min when the tap is turned on.  
 - For higher water pressure, a pressure reducing valve must be installed.

1. Connect the water inlet hose to the tap. Tighten the screw connections only by hand.
2. Open the water tap carefully, checking the leak tightness of the connection points. **Caution:** the screw connection is under mains water pressure.

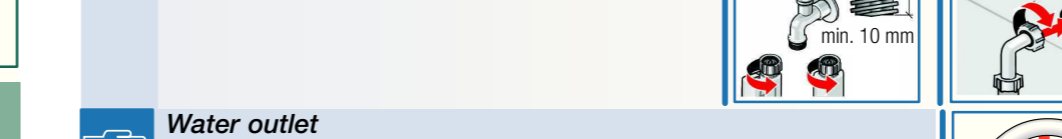


### Water outlet

- Water outlet hose:**  
**Caution:** do not bend or pull lengthways.

- Height difference between the installation surface and the drain:**  
 - for Aqua-Secure and Standard models: min. 60 cm - max. 100 cm  
 - for Aqua-Stop model: 0 - max. 100 cm

- Drainage into a siphon:**  
**Caution:** the connection point must be secured using the hose clamp provided, 24-40 mm diameter.

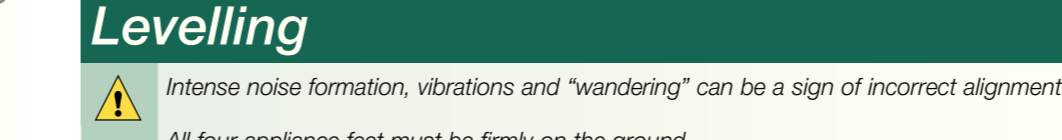

- Levelling**  
**Intense noise formation, vibrations and "wandering" can be a sign of incorrect alignment.**  
 All four appliance feet must be firmly on the ground. The washing machine must not wobble. Check the alignment of the washing machine with a spirit level and adjust if necessary. The washing machine must not rest against the side panels of the installation recess. The lock nuts of the front appliance feet must be screwed tightly against the housing.

## Electrical connection

- The washing machine must only be connected to an alternating current via a properly installed earthed socket.
- The mains voltage must correspond to the voltage specifications on the washing machine. -> page 7; Technical specifications.
- Connected load and required fuse -> page 7; Technical specifications.
- Make sure that:
  - the mains plug fits the socket,
  - the cable cross-section is adequate,
  - the earthing system is properly installed.
- The mains cable may be replaced (if necessary) only by a qualified electrician. Replacement mains cables are available from customer services.
- Do not use multiple plugs/couplings and/or extension leads.
- If an earth leakage circuit breaker is used, only use types marked with the following symbol: . Only this symbol guarantees compliance with current regulations.
- Mains plug:
  - do not plug in to/pull out of the socket with damp hands.
  - when removing the plug from the socket, pull the plug body only, not the cable.
  - never pull the plug out during operation.


## Transport, e.g. when moving home

### 1. Before transporting the washing machine:

1. Turn off the tap.
2. Reduce the water pressure in the inlet hose. -> Operating instructions; Filter in the water inlet hose.
3. Drain the residual detergent solution. -> Operating instructions; Detergent solution pump.
4. Disconnect the washing machine from the power supply.
5. Dismantle the hoses.

### 2. Install the transport braces:

1. Remove the covers.
2. Insert all 4 sleeves. Clamp the mains cable to the holders. Insert and tighten the screws.

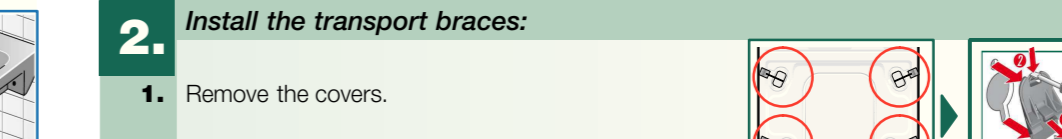

- After transportation, the transport braces **must** be removed. -> page 4.

- i** To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment II and start the **Empty** programme.

## Technical specifications

<b>Weight</b>	75 - 84 kg depending on model
<b>Mains connection</b>	Nominal voltage 220-240 V, 50 Hz Nominal current 10 A Nominal power 2300 W
<b>Water pressure</b>	100-1000 kPa (1-10 bar)
<b>Test programmes</b>	in accordance with the currently valid European Standard 60456

## Customer Services

- Before you call customer services, please check whether you can correct the fault yourself. -> Operating instructions; What do to if ...
- You will be charged if a technician is called out, even during the warranty period.

- You can find your nearest customer services in the enclosed list. Please give customer services the product number (E no.) and the production number (FD) of the appliance.

Product number  E no.  FD  Production number



- Please help us to avoid unnecessary call-outs by quoting the product and production numbers. This will also save you the related additional costs.

## Aqua-Stop warranty

*In addition to warranty claims made against the vendor based on the sales contract and in addition to our appliance warranty we shall provide compensation under the following conditions:*

1. If damage is caused by water due to a fault of our Aqua-Stop system, we shall compensate the private user for the damage.
2. This liability warranty is valid for the service life of the appliance.
3. A prerequisite for making a claim under the warranty is that the appliance has been correctly installed and connected in accordance with our instructions, including a correctly installed and connected Aqua-Stop extension (original accessory). Our warranty does not apply to defective supply lines or fittings up to the Aqua Stop connection on the tap.
4. If your washing machine features Aqua-Stop, you do not need to keep your eye on the washing machine during operation or turn the tap off afterwards. You should only turn the tap off if you intend being away from home for a prolonged period, e.g. on holiday.

Manufacturer (see Instruction manual) 1208 / 9000 224 628

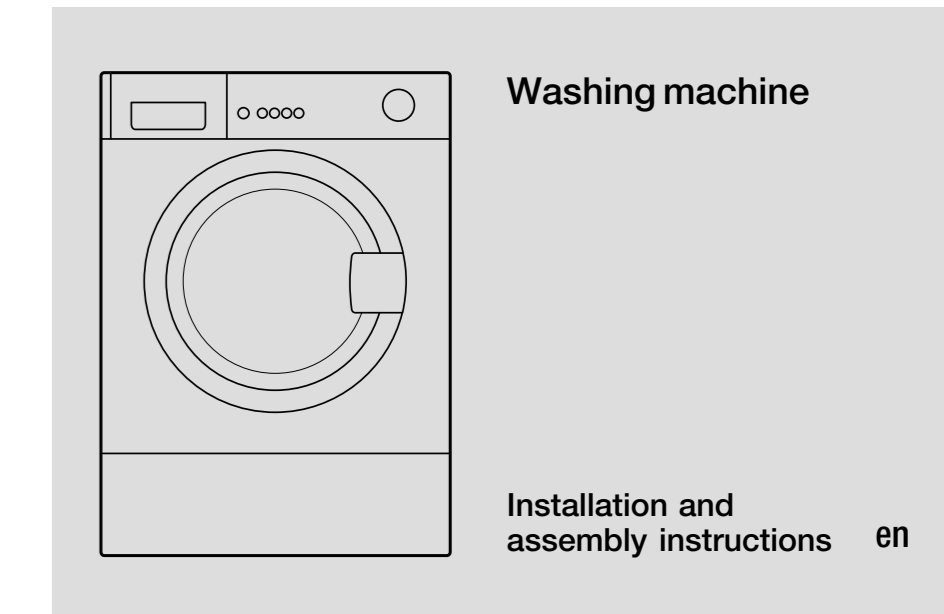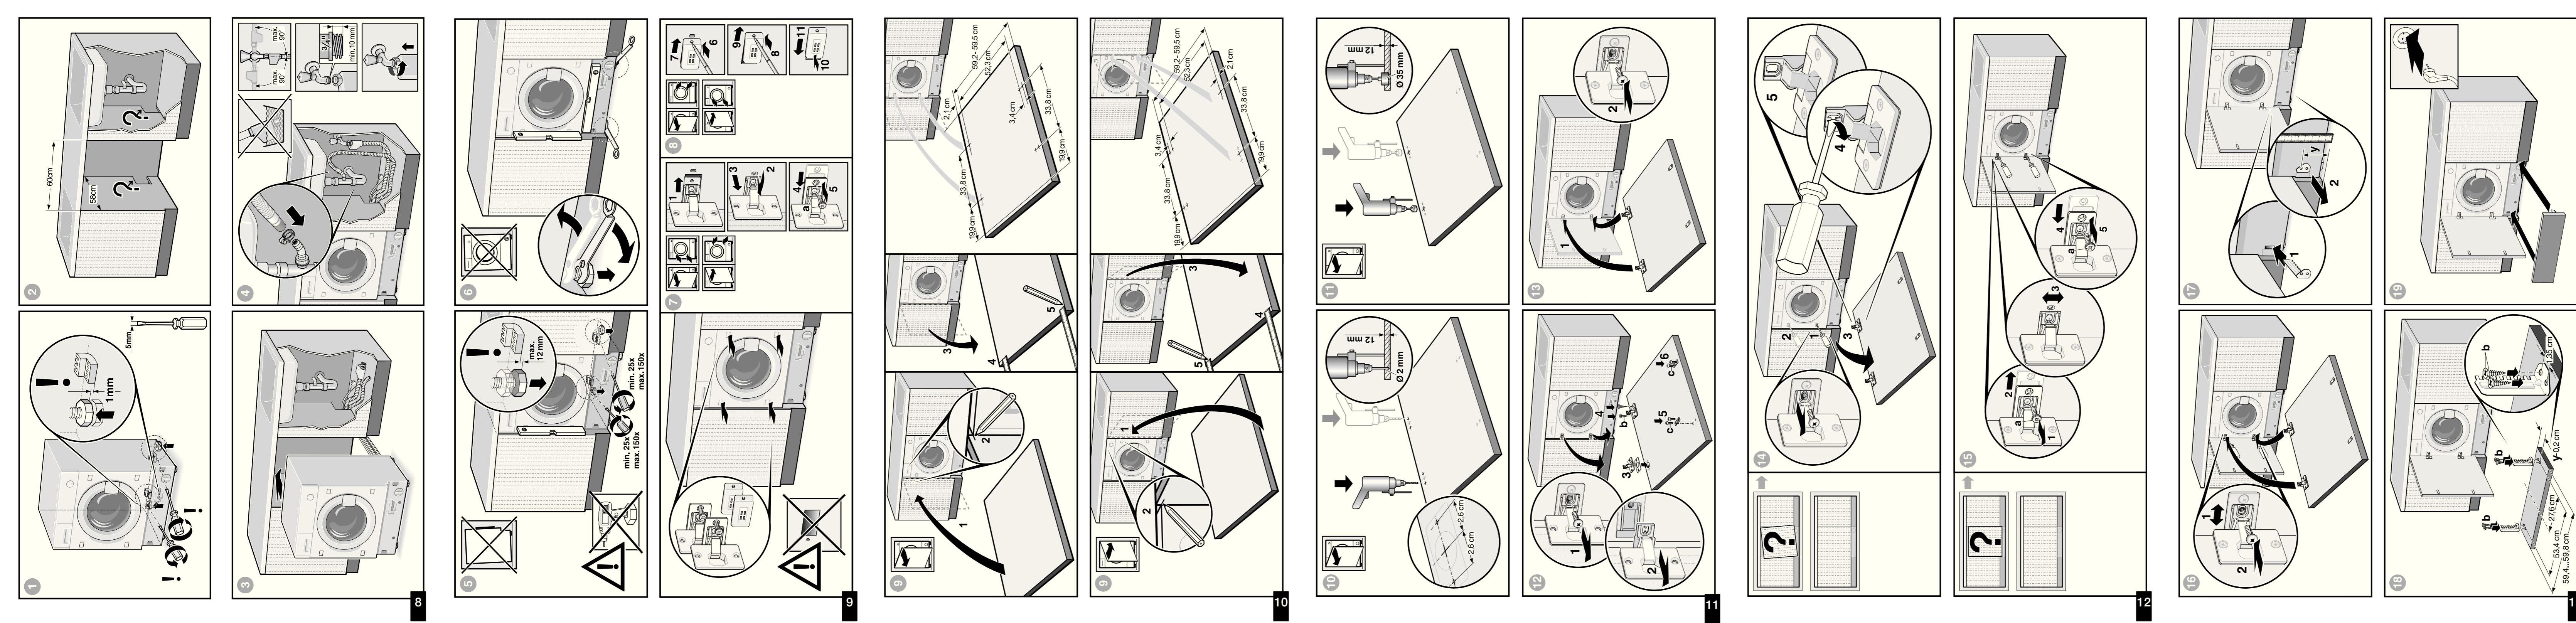

**Contents** Page

- Safety instructions ..... 1
- Environmentally-friendly disposal ..... 1
- Installation surface ..... 1
- Scope of delivery ..... 2
- Appliance dimensions ..... 3
- Hose and cable lengths ..... 3
- Useful tools ..... 3
- Removing the transport braces ..... 4
- Water connection ..... 5
- Levelling ..... 5
- Electrical connection ..... 6
- Transportation, e.g. when moving home ..... 6
- Technical specifications ..... 7
- Customer services ..... 7
- Aqua-Stop warranty ..... 7
- Assembly instructions ..... 8 – 13

Image sequence 1 – 19

**!** Read these instructions before switching on the washing machine. Also observe the separate operating instructions. Keep all documents for use in the future or for the subsequent owner.



# Safety instructions

- The washing machine is heavy - take care when lifting.
- Caution: Frozen hoses may rip/burst. Do not install the washing machine in areas exposed to frost or outdoors.
- The washing machine could be damaged. Do not lift the appliance by protruding components (e.g. the washing machine door).
- In addition to the instructions provided in this document, special regulations from the relevant water and electric utility companies may apply.
- If in doubt, have a technician connect the appliance.
- The worktop must have no openings in the area around the washing machine.
- Lay hoses and cables in such a way that there is no risk of tripping.

# Environmentally-friendly disposal



- Dispose of packaging in an environmentally friendly manner.
- This appliance has been identified in accordance with the European directive 2002/96/EC on Waste Electrical and Electronic Equipment - WEEE. The directive specifies the framework for an EU-wide return and recycling of old appliances.

# Installation surface




- Stability is important so that the machine does not wander.
- The installation surface must be firm and level.
- Soft floors/floor coverings are not suitable.

## Installation with slide sheets

Slide sheets make it easier to slide the washing machine into the installation recess. Order using spare part no. 66 1827

Before sliding in the machine, dampen the slide sheets with a mixture of water and detergent. Do not use any fat and/or oil

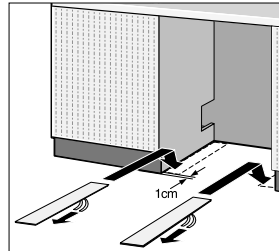

## Installation beneath a high-level worktop -> Appliance dimensions, page 3

- Adjustment strips: Ordering code WZ 20470, WMZ 20470, Z 7090X0
- Height adjustment kit: Ordering code WZ 20440, WMZ 20440, Z 7060X0

## Installation on a pedestal



The front feet of the appliance **must** be secured with holding brackets. Order no. WMZ 2200, WX 975600, CZ110600, Z 7080X 0

## Installation on a wood joist floor






- If possible, place the washing machine in a corner.
- Screw a water-resistant wooden plate (min. 30 mm thick) to the floor. In doing so, take into account the height of the kitchen worktop!
- The feet of the washing machine **must** be secured with holding brackets. Order no. WMZ 2200, WX 975600, CZ110600, Z 7080X 0


# Scope of delivery

depending on model


Moisture inside the drum is due to final testing.

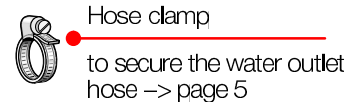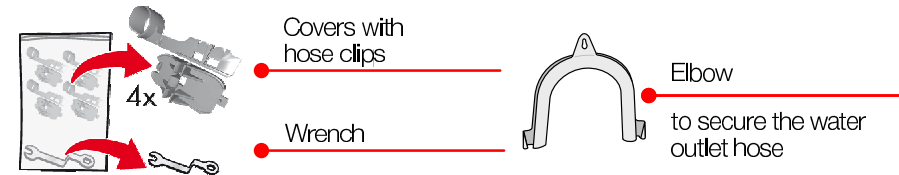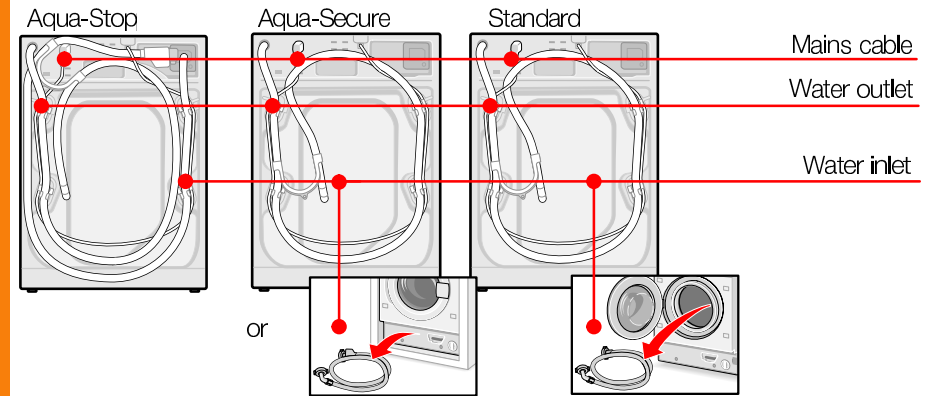

## Parts for assembly -> page 8 - 13

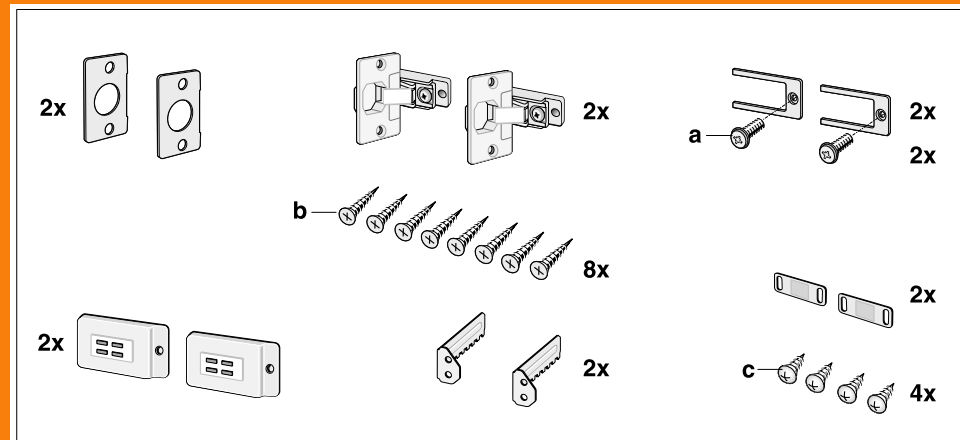


## Appliance dimensions depending on model

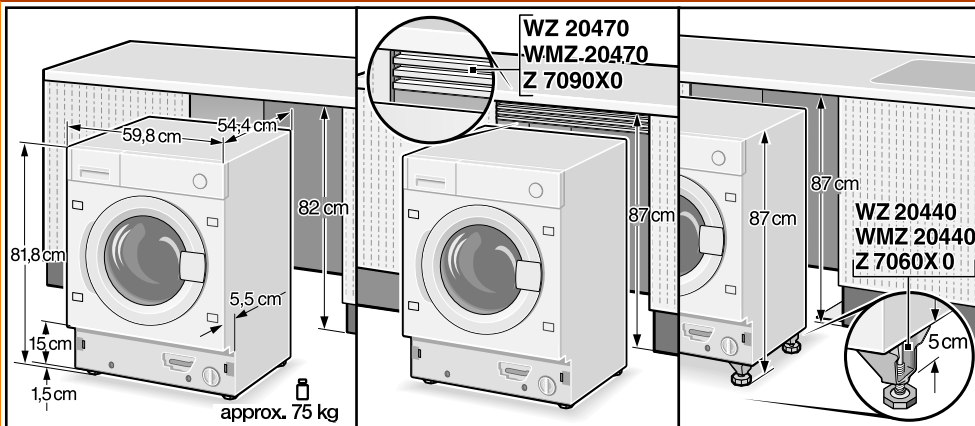

## Hose and cable lengths depending on model

**i** Left-hand connection or Right-hand connection

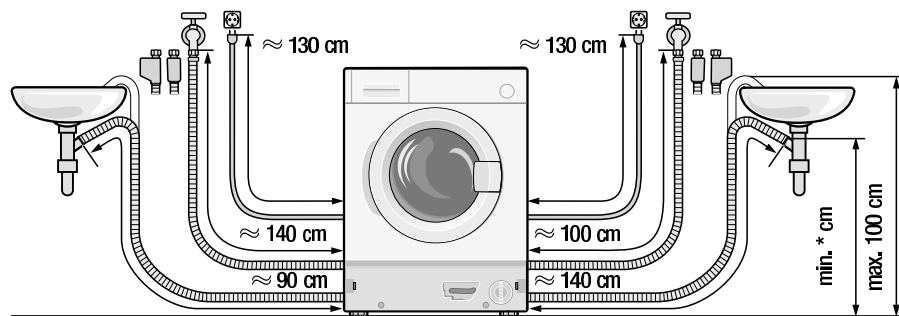

\* Standard and Aqua-Secure models: min. 60 cm - max. 100 cm  
Aqua-Stop model: 0 - max. 100 cm

Note: Using hose clips limits the possible hose lengths.

Available from specialist dealers/customer services:

- Extension for Aqua-Stop and cold water inlet hose (approx. 2.50 m),  
Order no. WMZ 2380, WZ 10130, CZ1 1350, Z 7070X 0.


## Useful tools

- Spirit level for levelling
- Screw driver
- Drill


## Removing the transport braces




- Before using the appliance for the first time, the 4 transport braces must be completely removed and kept safe.
- For any future transport, the transport braces must be refitted - this prevents the machine from being damaged. -> page 6.
- Keep the screws and sleeves.

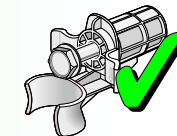


1. Take the hoses (depending on model) out of the holders and the elbow. Remove the elbow.

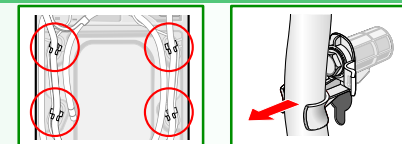




2. Unscrew and remove the bolts from all 4 transport braces.

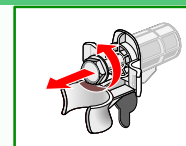






3. Take the mains cable out of the holder. Remove the sleeves.

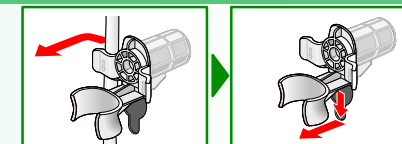

4. Fit the covers. Lock securely by pressing on the locking hook!

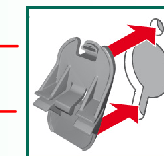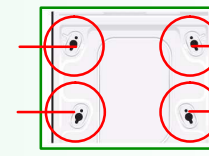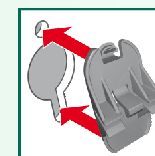

5. Fix hoses in the hose holders. Fit the hose clips.

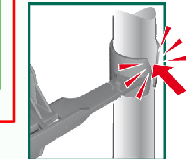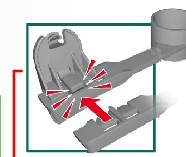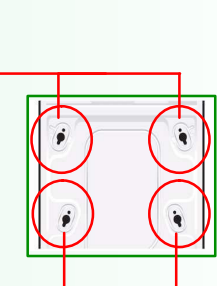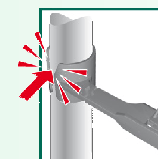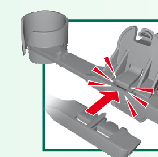

# Water connection depending on model

- ⚠ Risk of electric shock. Do not immerse the Aqua-Stop safety device in water (contains an electric valve).
- To prevent leaks or water damage, observe the instructions in this section.
- Caution:** operate the washing machine only with cold drinking water. Do not connect to the mixer tap of an unpressurised hot water boiler.
- Do not use a used inlet hose. Only use the inlet hose supplied or one which was purchased from an authorised specialist dealer.
- If in doubt, have a technician connect the appliance.



## Water inlet

### Water inlet hose:



**Caution:** do not bend, squash, modify or cut through (stability can no longer be guaranteed).

### Optimum water pressure in the supply network: 100-1000 kPa (1-10 bar)

- Water flows at a rate of at least 8 l/min when the tap is turned on.
- For higher water pressure, a pressure reducing valve must be installed.


Model: Aqua-Stop Aqua-Secure      Standard

1. Connect the water inlet hose to the tap. Tighten the screw connections only by hand.

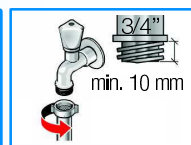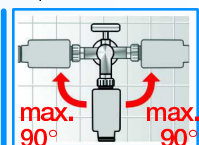

2. Open the water tap carefully, checking the leak tightness of the connection points.

**Caution:** the screw connection is under mains water pressure.

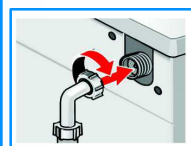

## Water outlet

### Water outlet hose:



**Caution:** do not bend or pull lengthways.

### Height difference between the installation surface and the drain:

- for Aqua-Secure and Standard models: min. 60 cm - max. 100 cm
- for Aqua-Stop model: 0 - max. 100 cm

### Drainage into a siphon:

**Caution:** the connection point must be secured using the hose clamp provided, 24-40 mm diameter.

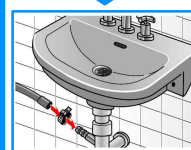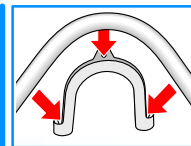

# Levelling

- ⚠ Intense noise formation, vibrations and "wandering" can be a sign of incorrect alignment.

All four appliance feet must be firmly on the ground.

The washing machine must not wobble.

Check the alignment of the washing machine with a spirit level and adjust if necessary.

The washing machine must not rest against the side panels of the installation recess.

The lock nuts of the front appliance feet must be screwed tightly against the housing.

# Electrical connection

- The washing machine must only be connected to an alternating current via a properly installed earthed socket.
- The mains voltage must correspond to the voltage specifications on the washing machine. → page 7; Technical specifications.
- Connected load and required fuse → page 7; Technical specifications.
- Make sure that:
  - the mains plug fits the socket,
  - the cable cross-section is adequate,
  - the earthing system is properly installed.
- The mains cable may be replaced (if necessary) only by a qualified electrician. Replacement mains cables are available from customer services.
- Do not use multiple plugs/couplings and/or extension leads.
- If an earth leakage circuit breaker is used, only use types marked with the following symbol: Only this symbol guarantees compliance with current regulations.
- Mains plug:
  - do not plug in to/pull out of the socket with damp hands.
  - when removing the plug from the socket, pull the plug body only, not the cable.
  - never pull the plug out during operation.


# Transport, e.g. when moving home

## 1. Before transporting the washing machine:


1. Turn off the tap.
2. Reduce the water pressure in the inlet hose. → Operating instructions; Filter in the water inlet hose.
3. Drain the residual detergent solution. → Operating instructions; Detergent solution pump.
4. Disconnect the washing machine from the power supply.
5. Dismantle the hoses.

## 2. Install the transport braces:

1. Remove the covers.

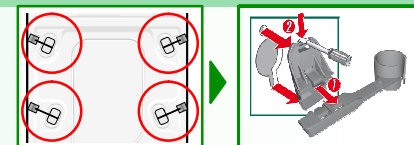

2. Insert all 4 sleeves. Clamp the mains cable to the holders. Insert and tighten the screws.

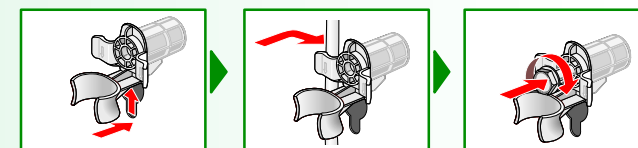

- ⚠ After transportation, the transport braces **must** be removed. → page 4.



To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment II and start the **Empty** programme.

# Technical specifications

<b>Weight</b>	75 - 84 kg <i>depending on model</i>
<b>Mains connection</b>	Nominal voltage 220-240 V, 50 Hz Nominal current 10 A Nominal power 2300 W
<b>Water pressure</b>	100-1000 kPa (1-10 bar)
<b>Test programmes</b>	in accordance with the currently valid European Standard 60456

## Customer Services

- Before you call customer services, please check whether you can correct the fault yourself. -> *Operating instructions*; What do to if ...
- You will be charged if a technician is called out, even during the warranty period.
- You can find your nearest customer services in the enclosed list. Please give customer services the product number (E no.) and the production number (FD) of the appliance.  

E no. _____	FD _____
-------------	----------

Product number      Production number

*This information can be found:  
on the inside\* of the washing machine door and  
on the back panel of the appliance.*
- Please help us to avoid unnecessary call-outs by quoting the product and production numbers. This will also save you the related additional costs.

## Aqua-Stop warranty









*only for appliances with Aqua-Stop*











*In addition to warranty claims made against the vendor based on the sales contract and in addition to our appliance warranty we shall provide compensation under the following conditions:*

- 1.** If damage is caused by water due to a fault of our Aqua-Stop system, we shall compensate the private user for the damage.
- 2.** This liability warranty is valid for the service life of the appliance.
- 3.** A prerequisite for making a claim under the warranty is that the appliance has been correctly installed and connected in accordance with our instructions, including a correctly installed and connected Aqua-Stop extension (original accessory). Our warranty does not apply to defective supply lines or fittings up to the Aqua Stop connection on the tap.
- 4.** If your washing machine features Aqua-Stop, you do not need to keep your eye on the washing machine during operation or turn the tap off afterwards. You should only turn the tap off if you intend being away from home for a prolonged period, e.g. on holiday.









Manufacturer (see Instruction manual)


1208 / 9000 224 628

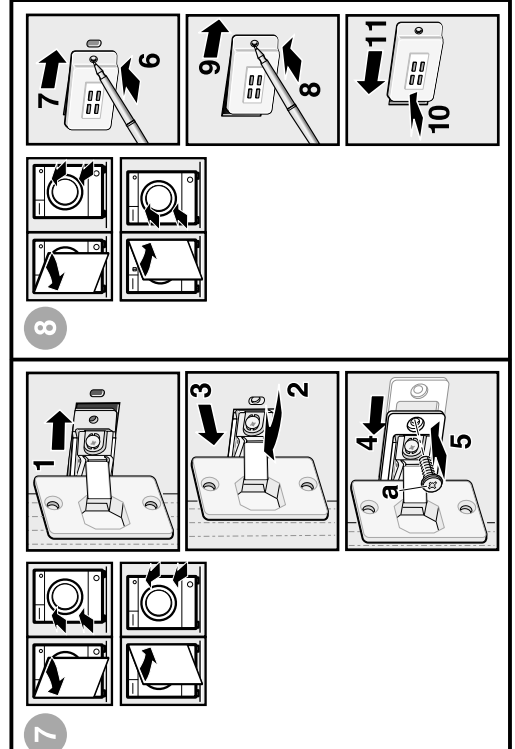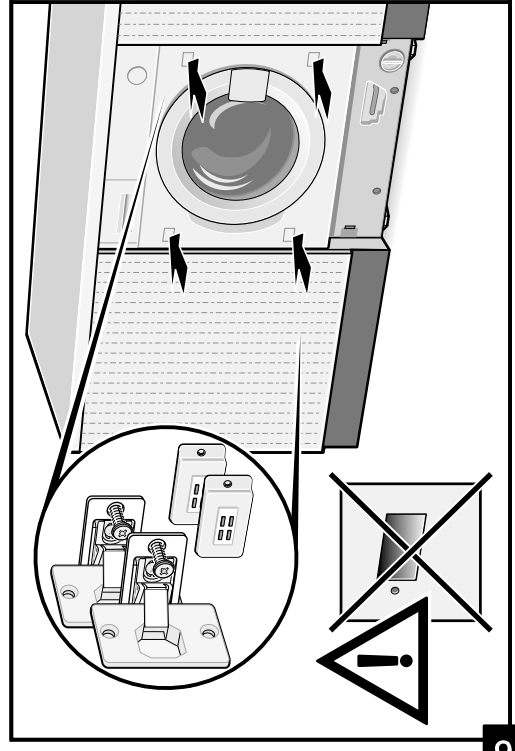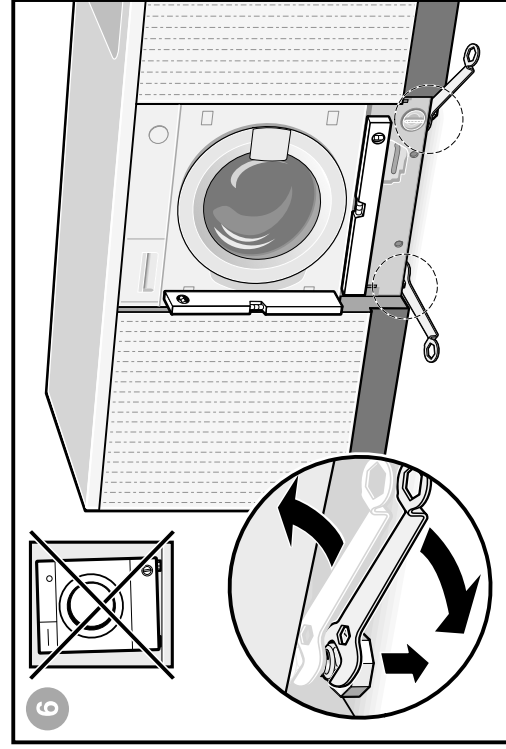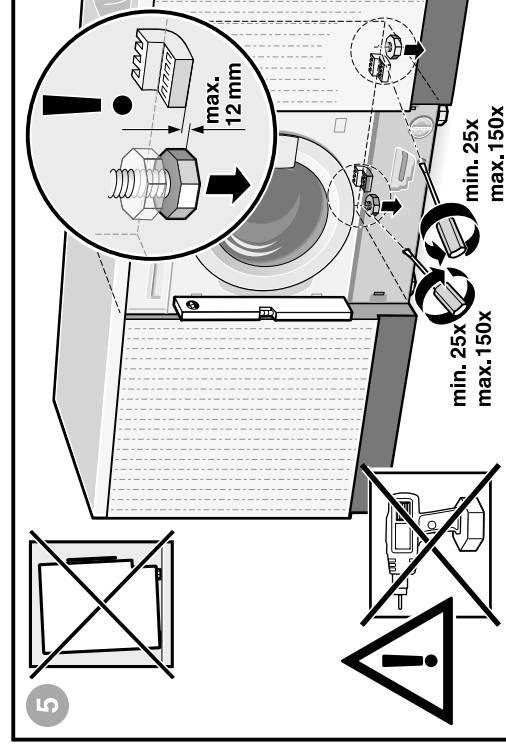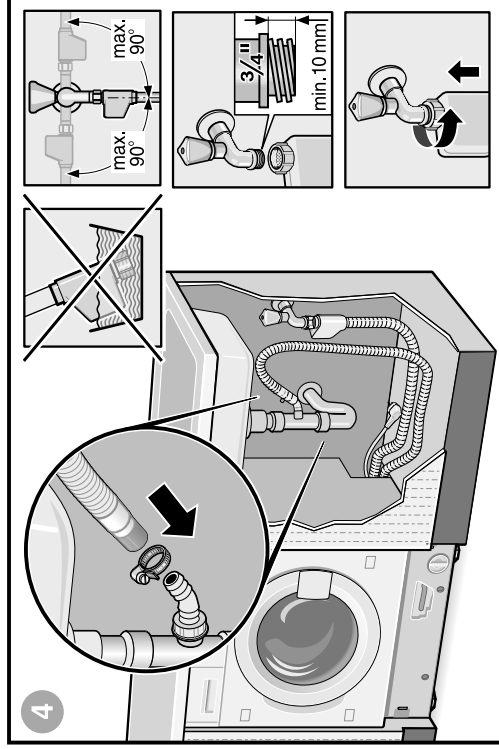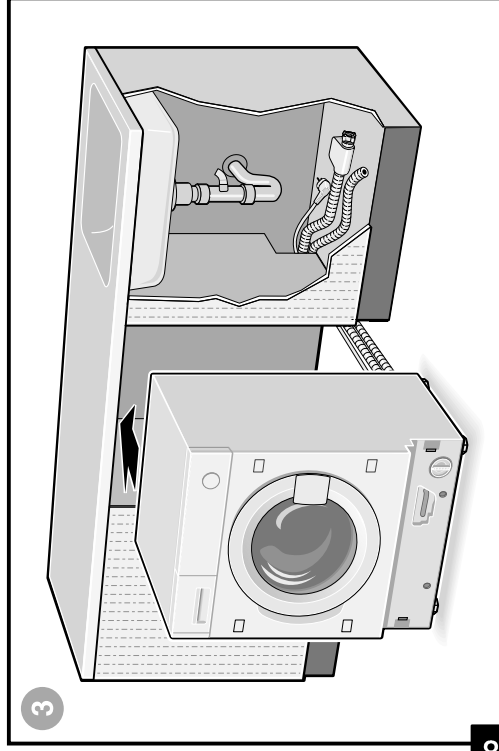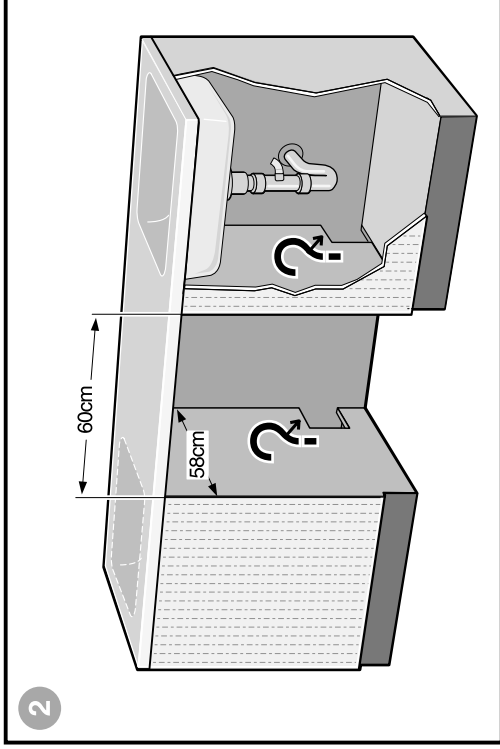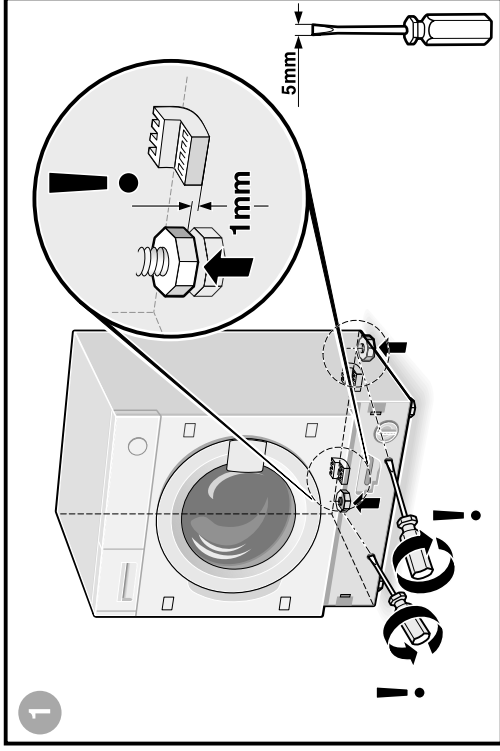

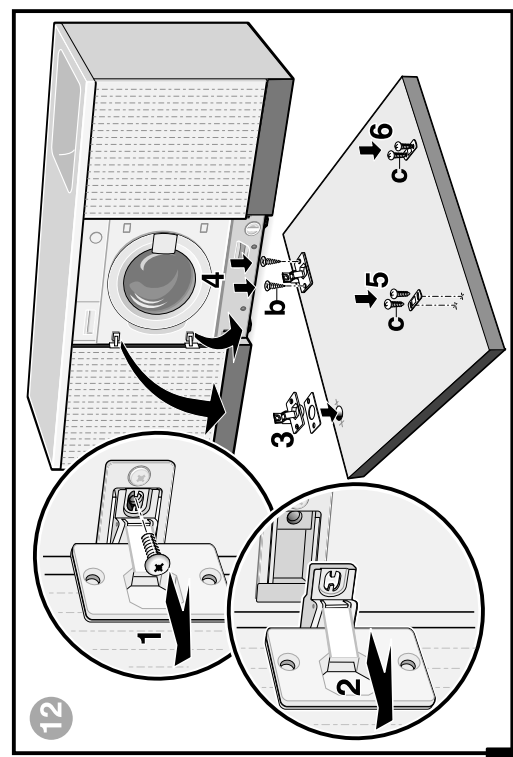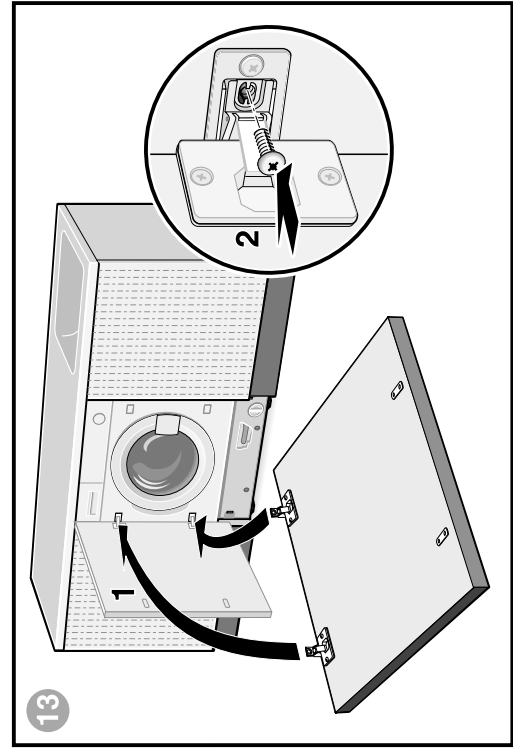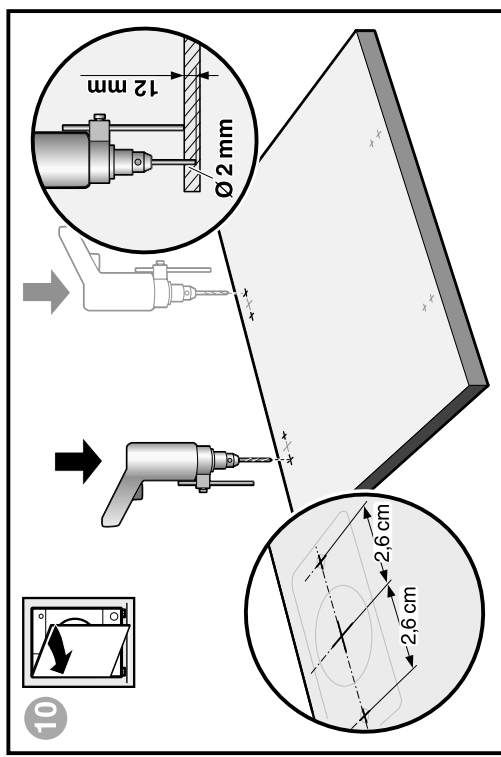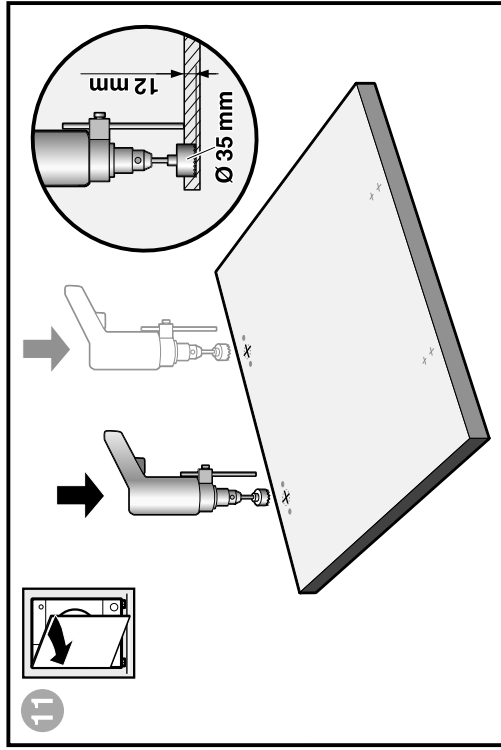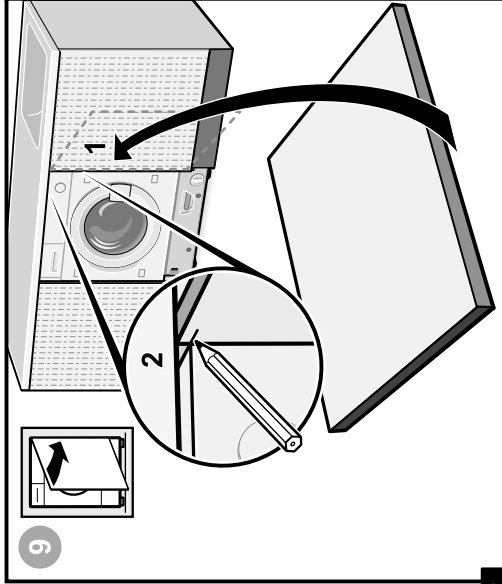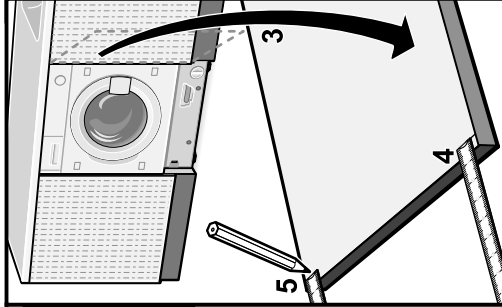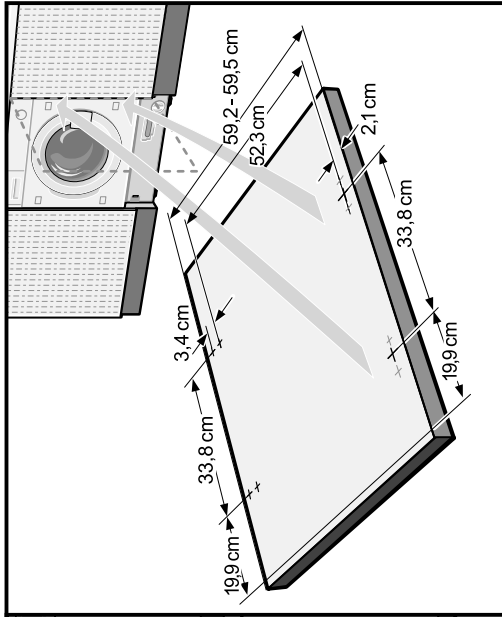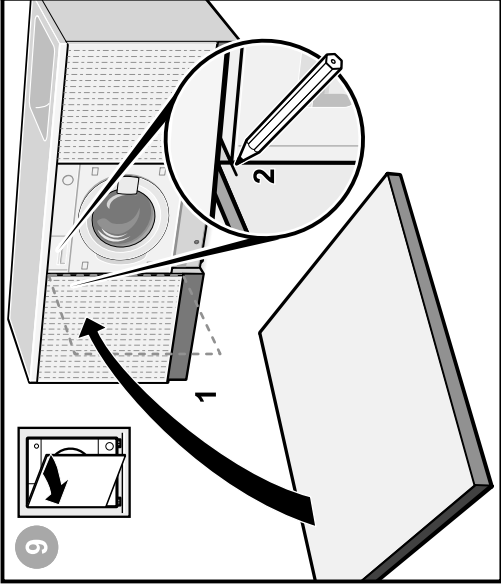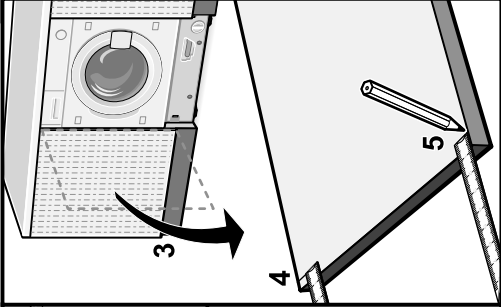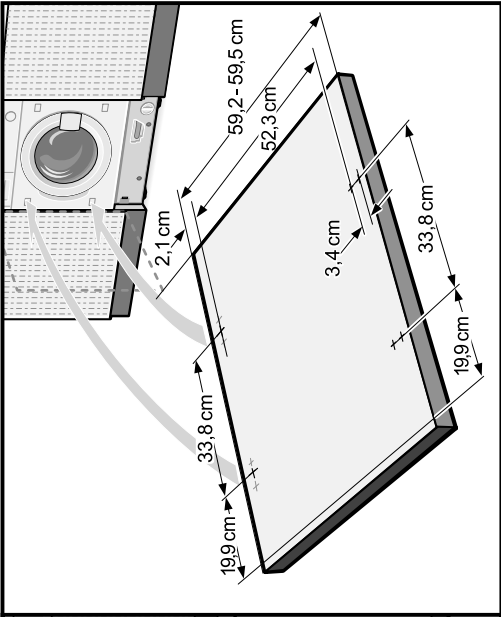



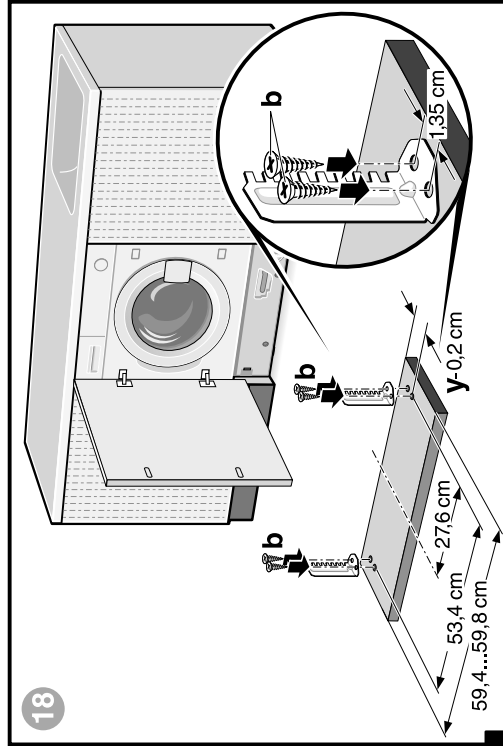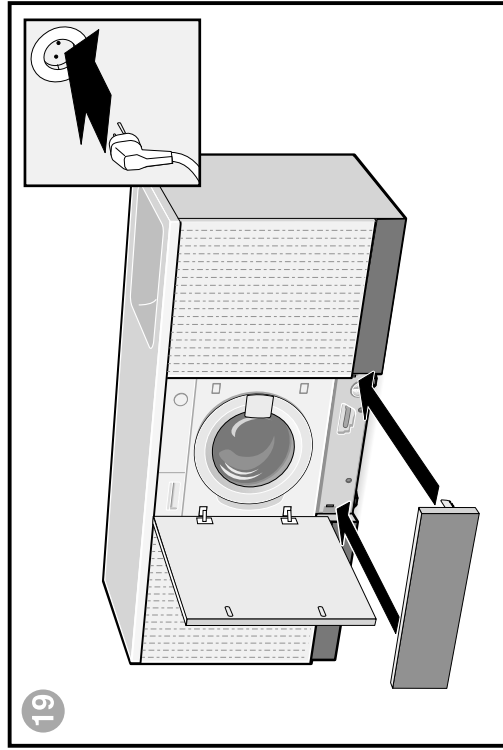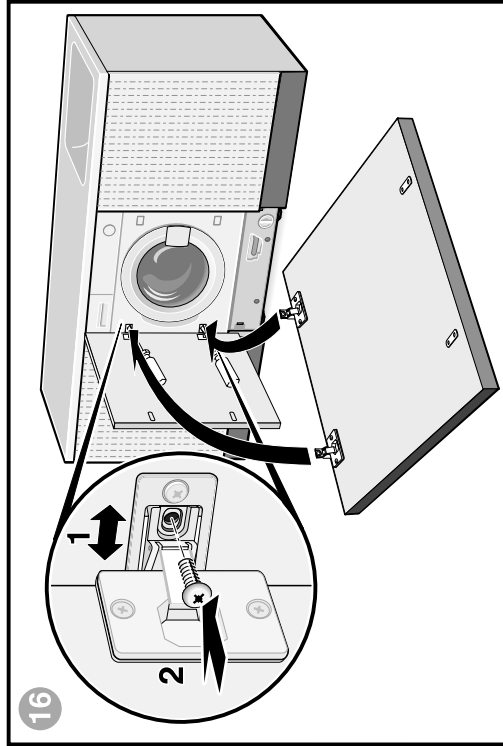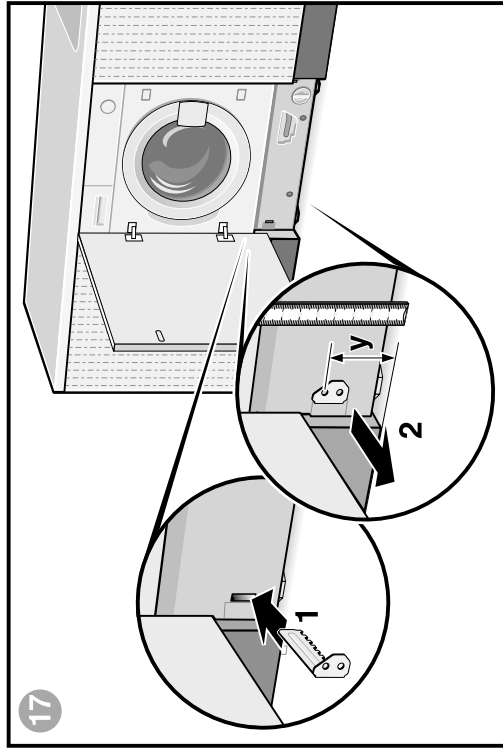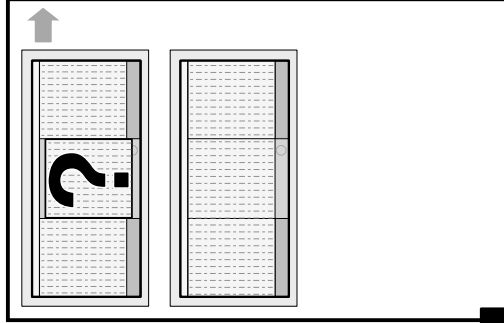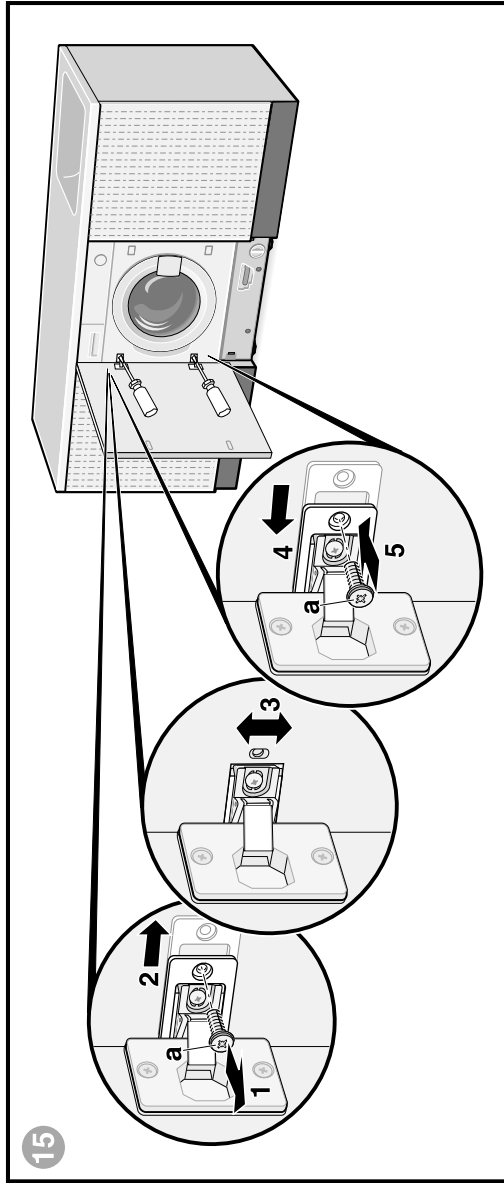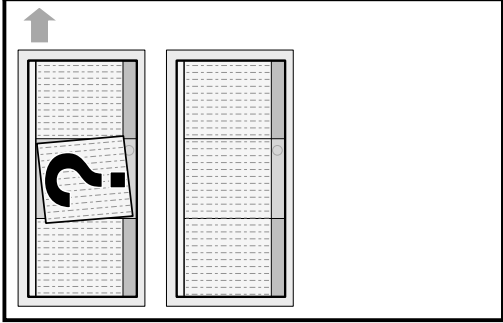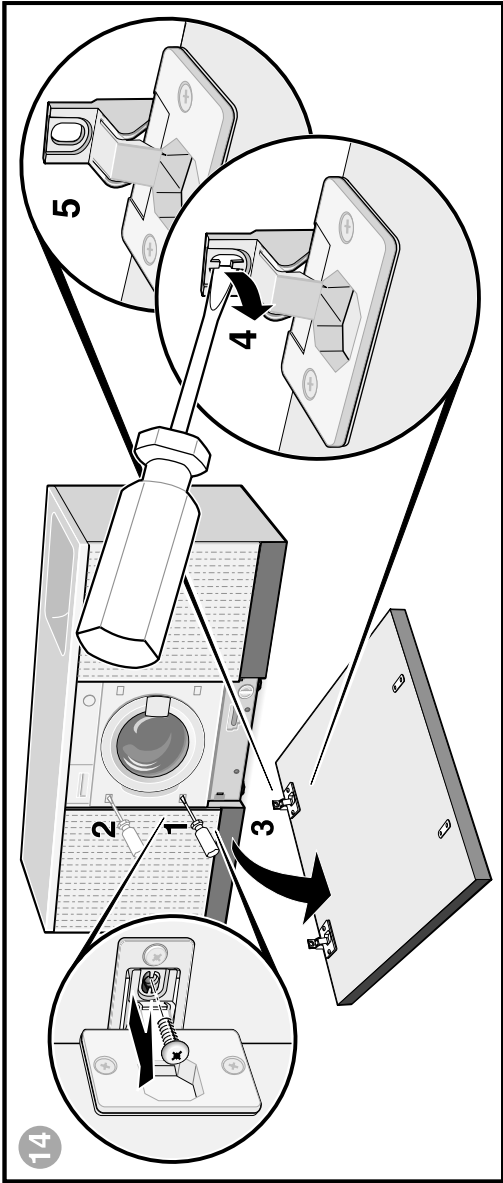

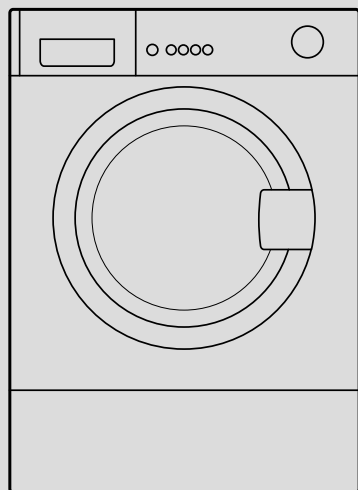

## Washing machine

Installation and  
assembly instructions en

## Contents

Page

■ Safety instructions	1
■ Environmentally-friendly disposal	1
■ Installation surface	1
■ Scope of delivery	2
■ Appliance dimensions	3
■ Hose and cable lengths	3
■ Useful tools	3
■ Removing the transport braces	4
■ Water connection	5
■ Levelling	5
■ Electrical connection	6
■ Transportation, e.g. when moving home	6
■ Technical specifications	7
■ Customer services	7
■ Aqua-Stop warranty	7
■ Assembly instructions	8 – 13

Image sequence 1 – 19



**Read these instructions before switching on the washing machine.  
Also observe the separate operating instructions.  
Keep all documents for use in the future or for the subsequent owner.**