

! Safety instructions

- The washing machine is heavy - caution when lifting it.
- Warning: Frozen hoses may tear/burst. Do not install washing machine in areas where there is a risk of frost and/or outdoors.
- Washing machine may be damaged. Do not lift by projecting components (e.g. washing machine door).
- In addition to the instructions mentioned here, special regulations of the relevant water and power supply companies may apply.
- If in doubt, have the appliance connected by a technician.
- Lay hoses and cables in such way that there is no risk of stumbling..

Environmental disposal

- Dispose of packaging in an environmentally friendly manner.
- Keep packaging and associated parts out of the reach of children.
- Environment-conscious recycling can reclaim valuable raw materials.
- All packaging materials used are environment friendly and re-usable.

Installation area

- Stability is important to prevent the machine from wandering!
- The installation area must be firm and level.
- Soft floor coverings/wooden floor/steps are not suitable.
- Keep the environment dry and vented.
- Never put small appliance, such as microwave oven, jar cooker on the machine.
- Keep the machine away from the flaming equipment, such as candle, cooking stove, liquefied gas container etc.
- Never put the pressure containers on the machine.
- Never put the machine over the opening of an uncovered drainage.

! If installing the appliance on a pedestal

- It is **essential** to secure the washing machine feet with holding brackets.

! If installing the appliance on a wooden joist floor

- if possible, install the washing machine in a corner.
- Screw a water-resistant wooden panel (min. 30 mm thick) to the floor.
- It is **essential** to secure the washing machine feet with holding brackets.

Built-under/Built-in appliance

 
! Build-under/build-in before connection to the power supply.

i Installed in between kitchen units (built-under or built-in)


- 60 cm cavity width required.
- Install washing machine only under a continuous worktop connected firmly to the adjacent cupboards.

1

Standard accessories at the back of machine

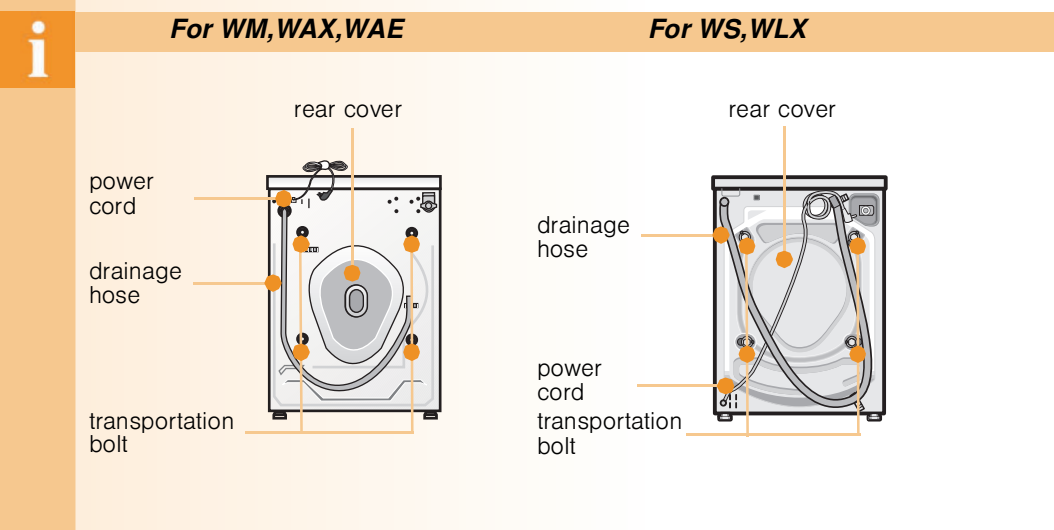

Hose and cable lengths

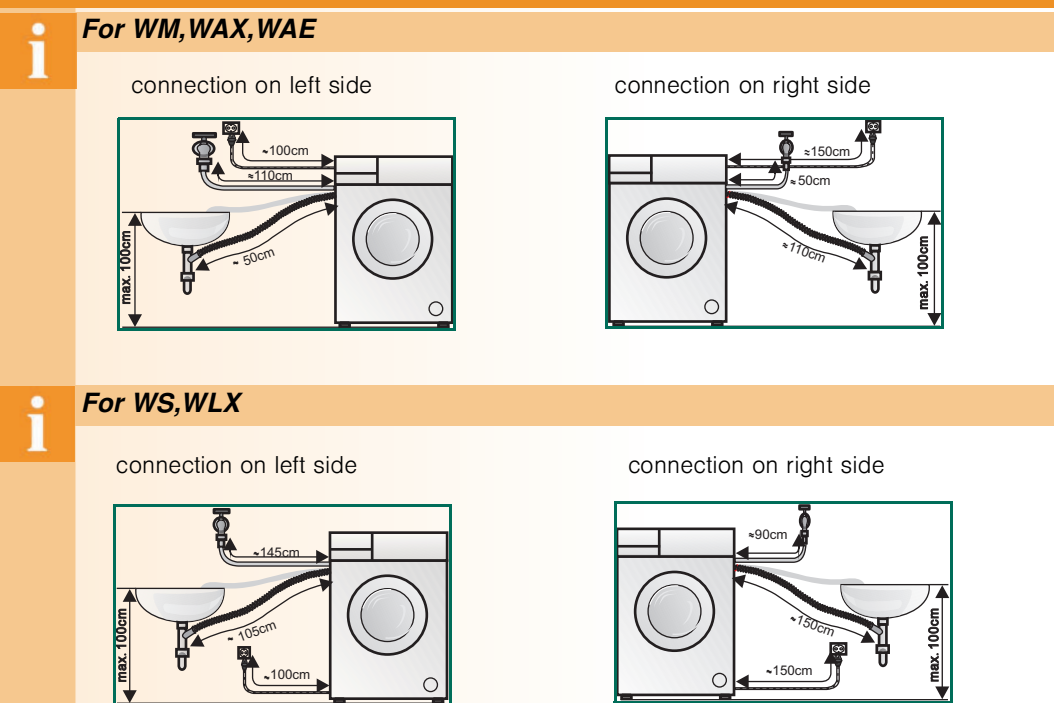 


2

Removing transportation bolt


- ! - Before using the appliance for the first time, always remove and retain all 4 transportation bolt at the back of appliance.
- Be careful when you handle it and avoid injuring.

For WM,WAX,WAE

 1. Release all fixing bolts A by spanner.
2. Remove the four parts B. They will fall to the floor when you tip the machine.

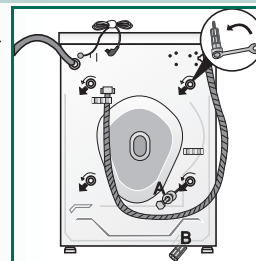


 3. Insert the cover caps C which you will find in the bag containing the documentation.

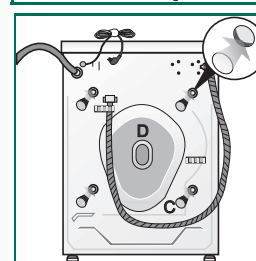


For WS,WLX

 1. Loosen the four bolts by spanner until they are freely movable, remove them.

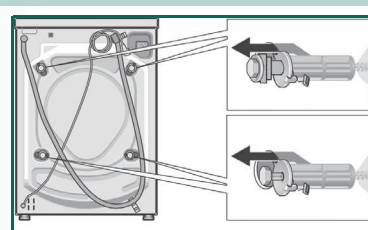

 2. Insert the cover caps which you will find in the bag containing the documentation.

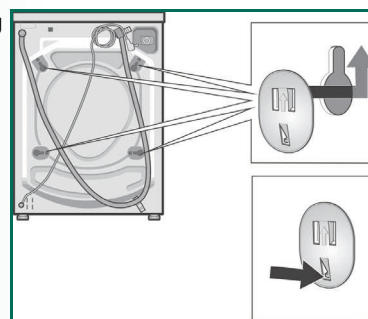

3

Water connection

 
- ! - To prevent leakage or water damage, follow the instructions in this chapter!
- **Attention:** Operate the washing machine with cold water only.
- Do not connect to a mixer tap of a pressureless hot-water heater.
- Do not disassemble the water inlet hose frequently, the untight connection will lead to leakage. We suggest that you use a water inlet hose specially for the machine.
- Do not use a used inlet hose. Only use the inlet hose supplied or one which was purchased from an authorised specialist dealer.
- If in doubt, have the appliance connected by a technician.

Water supply

Water inlet hose:

- Attention:** do not kink, crush, modify or cut through (strength is no longer guaranteed).
- Optimum water pressure in the mains: 100-1000 kPa (1-10 bar)
- When the tap is turned on, the water flow should be more than 8l/min.
- If the water pressure is too high, install a pressure reducing valve.

1. Connect water inlet hose to the tap.
Tighten plastic screw-fittings by hand only.

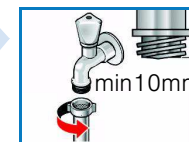

2. Carefully turn on the tap and check that the connection points are not leaking.
Attention: screw connection is under water mains pressure.



- i** Call customer service to get the plastic connector freely. It may connect tightly the water inlet hose and your water tap.

- Available from dealer/customer service:
 - Special water tap for machine.
 - Extended water inlet hose.

Water drainage

Water drainage hose:

- Attention:** do not kink stretch.
- Height difference between installation area and outlet: max. 100 cm

 
Drainage into a sink/bath tub:

- Attention:** Secure the drainage hose to prevent it from slipping out of the sink.
- Attention:** The plug must not be in the plug hole. When the water is being pumped out of the washing machine, check that the water drains away quickly enough. Do not insert the end of the drainage hose into the pumped off water! There is a risk that water will be drawn back into the washing machine!




Drainage into a siphon:

- Attention:** Secure connection point with hose clip, Ø 24-40 mm.

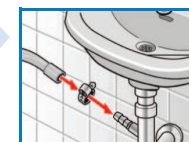

4

 
Alignment

 Loud noise formation, intense vibrations and "wandering" may be due to incorrect alignment!


Align washing machine with spirit level.

1. Loosen lock nut in a clockwise direction with a wrench.


lock nut
appliance
foot

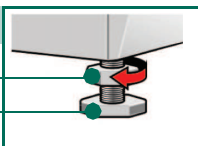

 2. Change height by rotating the appliance feet.
*All four appliance feet must be firmly on the floor.
The washing machine must not wobble!*
Check alignment of the washing machine (if available with a spirit level) and, if required, correct.

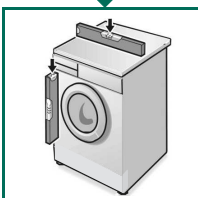

 3. Tighten the lock nut against the housing.
Hold the foot in place and make sure that the height is not adjusted.
The lock nuts on all four appliance feet must be screwed tightly against the housing.

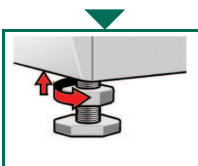


Product standard


The washing machine carry out the national standard as following:


GB 4706.1
GB 4706.24
GB 19606
GB 4343.1
GB 17625.1
GB/T 4288
GB 12021.4

Electrical connection

  - Connect the washing machine to an alternating current via a correctly installed earthed socket only.
- The main voltage and specifications on the washing machine must match the nameplate at the back of machine at the installation location.
- Connected load and required fuse or line protecting cut-out are indicated on the nameplate.
- Ensure that:
 - the mains plug and socket are compatible,
 - the main plug is easy to reach,
 - the cable cross-section is adequate,
 - the earthing system has been installed correctly.

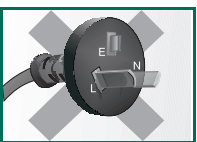

- A damaged power cord may be only replaced by special power cord or power cord from the manufacture or customer service center. Replace by an electrician only.
- Do not use multiple plugs/couplings or extension cables.
- If an earth-leakage circuit-breaker is used, use only a type which features this symbol:  . Only this symbol guarantees compliance with the current valid regulations.
- Mains plug:
 - do not insert/pull out of the socket with damp hands.
 - do not pull the plug out of the socket by tugging the power cord.
 - never pull out of the plug while the appliance is operating.

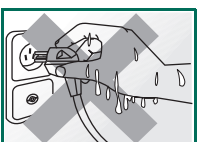 

Transportation, e.g. if moving house

 
1. Before transporting the washing machine:

1. Turn off the tap.
2. Release the water pressure in the water inlet hose.
→ *Operating instructions ; Filter in the water inlet hosey .*
3. Drain any residual detergent solution.
→ *Operating instructions ; Detergent solution pump.*
4. Isolate the washing machine from the power supply.
5. Remove the hoses.

2. Installing transportation bolts

 
For WM, WAX, WAE


- Remove the four cover caps C.
- Remove the rear cover D and prepare the transportation bolts.
- Insert and tighten the transportation bolts.

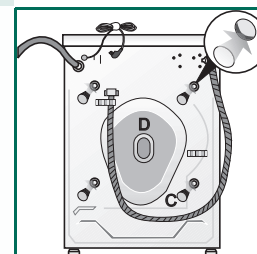


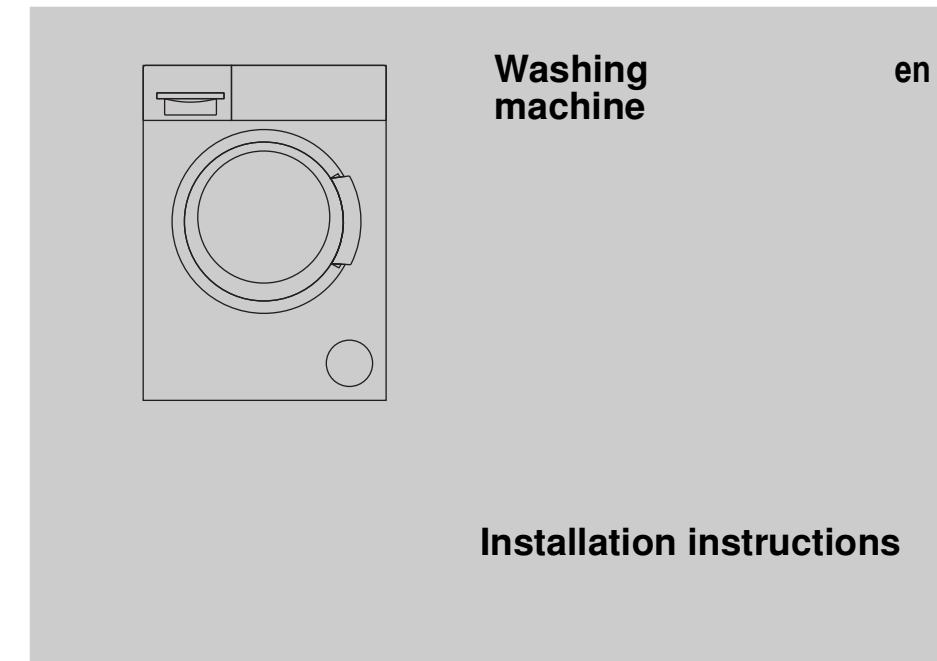 
For WS, WLX

- Remove the four cover caps.
- Prepare the four transportation bolts.
Pull the bolt out of the sleeve until the end of the bolt is flush with the end of the sleeve.
- Insert and tighten the bolts. The lug on the washer must be located in the groove in the rear cover.

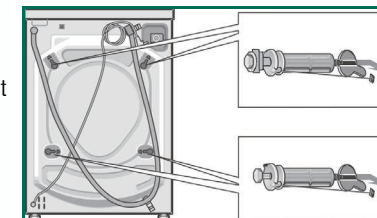














 The transportation bolts **must** be removed after transportation. → *Page 3.*

 To prevent unused detergent from flowing into the outlet during the next wash:
Pour 1 litre of water into dispenser II and start the **Drain** or **Spin** programme.



Contents

	Page
 Safety instructions	1
 Environmental disposal	1
 Installation area	1
 Built-under/Built-in appliance	1
 Standard accessories at the back of machine	2
 Hose and cable lengths	2
 Removing transportation bolt	3
 Water connection	4
 Alignment	5
 Product standard	5
 Electrical connection	6
 Transportation, e.g. if moving hous	7

 **Read installation instructions before switching on the washing machine!**
Also follow the separate Operating instructions.
Any fault or loss caused by not following installation instructions or operating instructions is not in the arrange of the warranty, and in this case manufacture has no responsibility.
Retain all documents for subsequent use or for the next owner.
If in doubt, please contact the local customer service center.

! Safety instructions

- The washing machine is heavy - caution when lifting it.
- Warning: Frozen hoses may tear/burst. Do not install washing machine in areas where there is a risk of frost and/or outdoors.
- Washing machine may be damaged. Do not lift by projecting components (e.g. washing machine door).
- In addition to the instructions mentioned here, special regulations of the relevant water and power supply companies may apply.
- If in doubt, have the appliance connected by a technician.
- Lay hoses and cables in such way that there is no risk of stumbling..

Environmental disposal

- Dispose of packaging in an environmentally friendly manner.
- Keep packaging and associated parts out of the reach of children.
- Environment-conscious recycling can reclaim valuable raw materials.
- All packaging materials used are environment friendly and re-usable.

Installation area

- Stability is important to prevent the machine from wandering!
- The installation area must be firm and level.
- Soft floor coverings/wooden floor/steps are not suitable.
- Keep the environment dry and vented.
- Never put small appliance, such as microwave oven, jar cooker on the machine.
- Keep the machine away from the flaming equipment, such as candle, cooking stove, liquefied gas container etc.
- Never put the pressure containers on the machine.
- Never put the machine over the opening of an uncovered drainage.

! If installing the appliance on a pedestal

- It is **essential** to secure the washing machine feet with holding brackets.

! If installing the appliance on a wooden joist floor

- if possible, install the washing machine in a corner.
- Screw a water-resistant wooden panel (min. 30 mm thick) to the floor.
- It is **essential** to secure the washing machine feet with holding brackets.

Built-under/Built-in appliance

! Build-under/build-in before connection to the power supply.

! Installed in between kitchen units (built-under or built-in)

 
 
- 60 cm cavity width required.
- Install washing machine only under a continuous worktop connected firmly to the adjacent cupboards.

Standard accessories at the back of machine

i

For WM, WAX, WAE

For WS, WLX

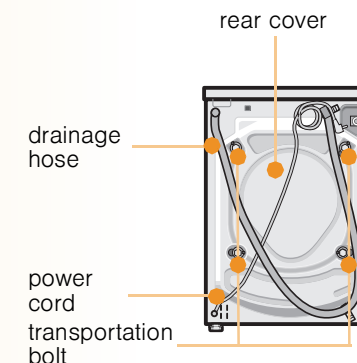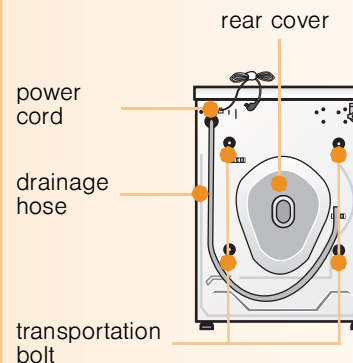


Hose and cable lengths


i

For WM, WAX, WAE

 connection on left side

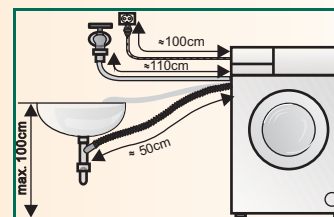


connection on right side

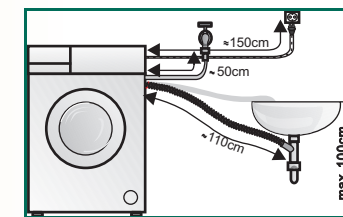 


i

For WS, WLX

 connection on left side

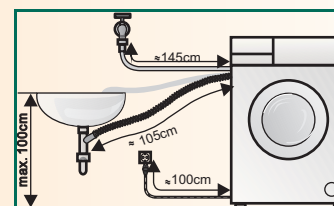

connection on right side

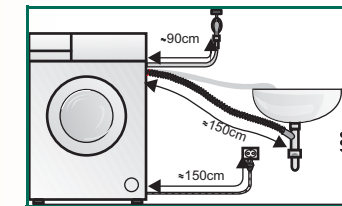 


Removing transportation bolt




- Before using the appliance for the first time, always remove and retain all 4 transportation bolt at the back of appliance.
- Be careful when you handle it and avoid injuring.

For WM, WAX, WAE

 1. Release all fixing bolts A by spanner.
2. Remove the four parts B. They will fall to the floor when you tip the machine.

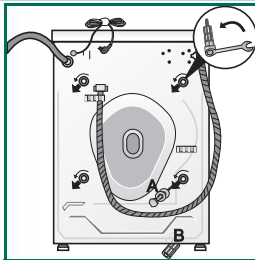


 3. Insert the cover caps C which you will find in the bag containing the documentation.

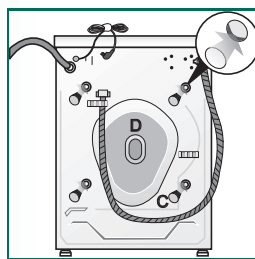


For WS, WLX

 1. Loosen the four bolts by spanner until they are freely movable, remove them.

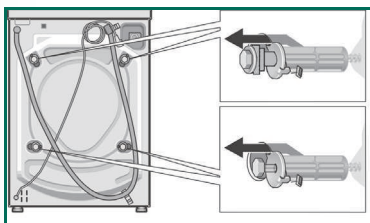

 2. Insert the cover caps which you will find in the bag containing the documentation.

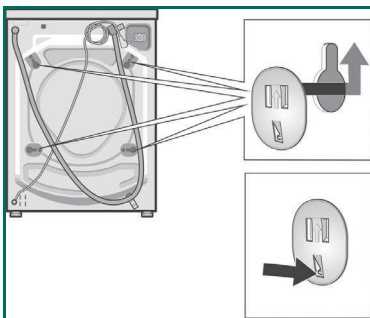

Water connection



- To prevent leakage or water damage, follow the instructions in this chapter!
- **Attention:** Operate the washing machine with cold water only.
- Do not connect to a mixer tap of a pressureless hot-water heater.
- Do not disassemble the water inlet hose frequently, the untight connection will lead to leakage. We suggest that you use a water inlet hose specially for the machine.
- Do not use a used inlet hose. Only use the inlet hose supplied or one which was purchased from an authorised specialist dealer.
- If in doubt, have the appliance connected by a technician.



Water supply

 
Water inlet hose:

Attention: do not kink, crush, modify or cut through (strength is no longer guaranteed).

Optimum water pressure in the mains: 100-1000 kPa (1-10 bar)

- When the tap is turned on, the water flow should be more than 8l/min.
- If the water pressure is too high, install a pressure reducing valve.

1. Connect water inlet hose to the tap.
Tighten plastic screw-fittings by hand only.

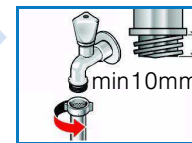

2. Carefully turn on the tap and check that the connection points are not leaking.

 
Attention: screw connection is under water mains pressure.



Call customer service to get the plastic connector freely. It may connect tightly the water inlet hose and your water tap.

Available from dealer/customer service:

- Special water tap for machine.
- Extended water inlet hose.

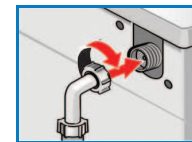

Water drainage

Water drainage hose:

Attention: do not kink stretch.

Height difference between installation area and outlet: max. 100 cm

Drainage into a sink/bath tub:

 
Attention: Secure the drainage hose to prevent it from slipping out of the sink.

Attention: The plug must not be in the plug hole. When the water is being pumped out of the washing machine, check that the water drains away quickly enough. Do not insert the end of the drainage hose into the pumped off water! There is a risk that water will be drawn back into the washing machine!




Drainage into a siphon:

Attention: Secure connection point with hose clip, Ø 24-40 mm.

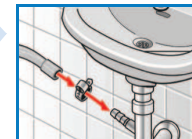


Alignment

 Loud noise formation, intense vibrations and "wandering" may be due to incorrect alignment!

Align washing machine with spirit level.


1. Loosen lock nut in a clockwise direction with a wrench.

 lock nut
appliance
foot

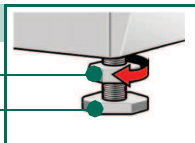


2. Change height by rotating the appliance feet.
*All four appliance feet must be firmly on the floor.
The washing machine must not wobble!*

 Check alignment of the washing machine (if available with a spirit level) and, if required, correct.

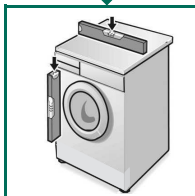

 3. Tighten the lock nut against the housing.
Hold the foot in place and make sure that the height is not adjusted.
The lock nuts on all four appliance feet must be screwed tightly against the housing.

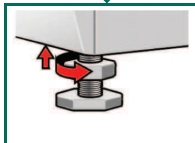



Product standard

The washing machine carry out the national standard as following:

GB 4706.1
GB 4706.24
GB 19606
GB 4343.1
GB 17625.1
GB/T 4288
GB 12021.4

Electrical connection

  - Connect the washing machine to an alternating current via a correctly installed earthed socket only.
- The main voltage and specifications on the washing machine must match the nameplate at the back of machine at the installation location.
- Connected load and required fuse or line protecting cut-out are indicated on the nameplate.
- Ensure that:
 - the mains plug and socket are compatible,
 - the main plug is easy to reach,
 - the cable cross-section is adequate,
 - the earthing system has been installed correctly.
- A damaged power cord may be only replaced by special power cord or power cord from the manufacture or customer service center. Replace by an electrician only.
- Do not use multiple plugs/couplings or extension cables.
- If an earth-leakage circuit-breaker is used, use only a type which features this symbol: 7 . Only this symbol guarantees compliance with the current valid regulations.
- Mains plug:
 - do not insert/pull out of the socket with damp hands.
 - do not pull the plug out of the socket by tugging the power cord.
 - never pull out of the plug while the appliance is operating.

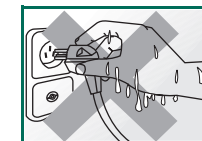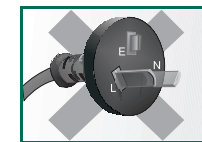

Transportation, e.g. if moving house

 
1. Before transporting the washing machine:

1. Turn off the tap.
2. Release the water pressure in the water inlet hose.
→ *Operating instructions ; Filter in the water inlet hosey .*
3. Drain any residual detergent solution.
→ *Operating instructions ; Detergent solution pump.*
4. Isolate the washing machine from the power supply.
5. Remove the hoses.

2. Installing transportation bolts


For WM, WAX, WAE

- Remove the four cover caps C.
- Remove the rear cover D and prepare the transportation bolts.
- Insert and tighten the transportation bolts.

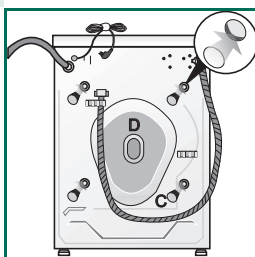

For WS, WLX

 
- Remove the four cover caps.
- Prepare the four transportation bolts. Pull the bolt out of the sleeve until the end of the bolt is flush with the end of the sleeve.
- Insert and tighten the bolts. The lug on the washer must be located in the groove in the rear cover.

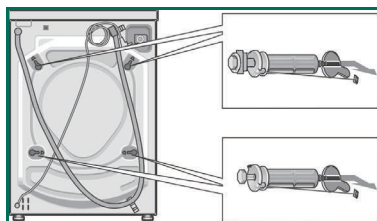

The transportation bolts **must** be removed after transportation. → *Page 3.*



 To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and start the **Drain** or **Spin** programme.

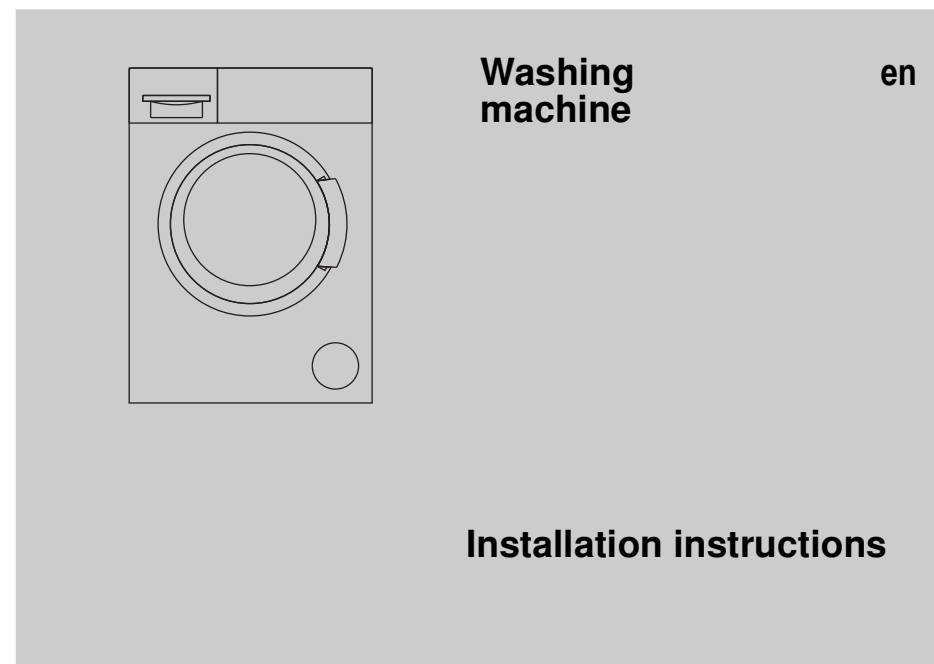

Contents

	<i>Page</i>
■ Safety instructions	1
■ Environmental disposal	1
■ Installation area	1
■ Built-under/Built-in appliance	1
■ Standard accessories at the back of machine	2
■ Hose and cable lengths	2
■ Removing transportation bolt	3
■ Water connection	4
■ Alignment	5
■ Product standard	5
■ Electrical connection	6
■ Transportation, e.g. if moving hous	7



Read installation instructions before switching on the washing machine!
Also follow the separate Operating instructions.
Any fault or loss caused by not following installation instructions or operating instructions is not in the arrange of the warranty, and in this case manufacture has no responsibility.
Retain all documents for subsequent use or for the next owner.
If in doubt, please contact the local customer service center.