

Your new dryer

Congratulations! - You have chosen a modern, high-quality domestic appliance from Bosch.

A distinctive feature of the condensation dryer is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

This directive provides the framework for the EU-wide collection and reuse of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com

Observe the safety instructions on page 13.

Caution - risk of scalding.

Read these instructions before operating the dryer.

Contents

	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Cleaning and care	6
■ Overview of programmes	7
■ Short spin / Refresh	8/9
■ Installation	10
■ Frost protection / Transport	10
■ Technical data	11
■ Optional accessories	11
■ What to do if... / After-sales service	12
■ Safety instructions	13

Reduced temperature for delicate fabrics ☐, for a longer drying time; e.g. acrylic, polyamide, elastane or acetate silk.

Reduces creasing and prolongs the anti-creasing phase after the programme has finished; can be selected in one of two levels.

Indicators which show the programme sequences. Drying, Iron Dry, Cupboard Dry, End / Easy Iron.

Clean the fluff filter and/or air cooler under running water → Page 4/6. Empty the condensation container.

Fill the water tank with distilled water → Page 9.

Intended use

- For domestic use only.
- Only to be used for drying, refreshing or unwrinkling fabrics that have been washed with water.

Do not leave children unsupervised near the dryer. Keep pets away from the dryer.

The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparing for installation, see page 8

Never operate the dryer if it is damaged. Inform your after-sales service.

Only if your hands are dry. Only hold the plug by the plug casing.

Remove all objects from pockets. Pay particular attention to cigarette lighters. The drum must be empty before filling. If necessary, fill the water tank for **Steam Dry / Steam Refresh** programmes → Page 8. See programme overview on page 7. See also separate instructions for "basket for woollens" (depending on the model)

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry


Selecting and adjusting the programme

Select the drying programme ...

... and adapt to individual requirements

Additional functions	Display panel	Programme selector
Low Heat Reduced Ironing		
Menu	For selecting the settings.	
+/−	For changing all the settings in the display panel.	
Electronic start timer	End of the programme after ... (depending on the programme selected, e.g. 1:54h → 2h; you can always select up to the next full hour).	1 -24 hrs
Signal	There are four buzzer volume settings: 0 (off), 1 (quiet), 2 (normal), 3 (loud), 4 (very loud).	0, 1, 2, 3, 4
Appliance lock (depending on the model)	Provides protection against unintentional changes to the functions set (press and hold the Menu button for 5 seconds).	On-Off
Fine adjustment of the drying result	The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for the ☐ Cottons, ☐ Easy-Care, ☐ Mixed Load and ☐ Super Quick 40' programmes → presetting = 0. After one of these programmes has been finely adjusted, the setting is retained for the others.	0, 1, 2, 3
Spin speed	The spin speed that was used in the washing machine; for more precise indication of the projected drying duration only.	600-1800
Service indicators		
clean		
container		
water tank		

Drying

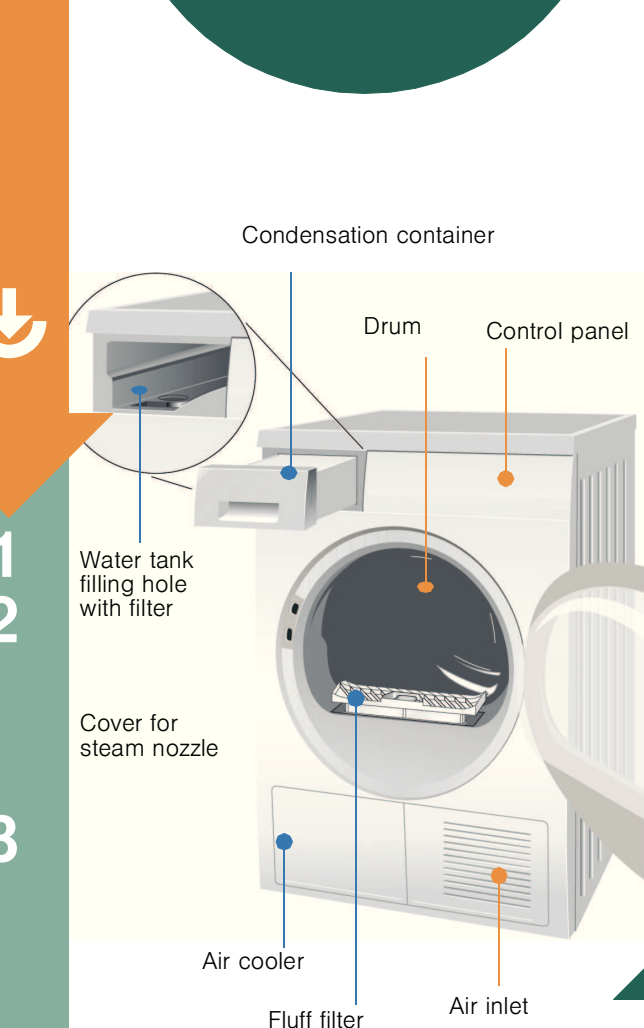

Drying / Short spin / Refresh

Emptying condensation

1. Remove the container, holding it level.
2. Pour out condensation.
3. Push the **container** back in until it clicks into place.

Cleaning the fluff filter

1. Open the door, remove the filter and fold open.
2. Remove the fluff (by wiping the filter with your hand).
3. Close the filter, insert it again and close the door.
4. Remove fluff from the door and the area around it. Very dirty or blocked filters should be rinsed under warm water, and then dried thoroughly.

Clean the filter in the water tank if it is dirty

1. Remove the condensation tank.
2. Remove the filter.
3. Clean the filter under running water.
4. Re-insert the filter and push in the condensation tank until it clicks into place.

Switching off the dryer

Turn the programme selector to **Off**. Do not leave damp laundry in the dryer.

Removing the laundry

The automatic Easy Iron function moves the drum at certain intervals. The load remains loose and soft for an hour (or two hours if you manually select the **Reduced Ironing** function, depending on the model.)

Programme end once → lights up in the display.

Interrupt programme removing or adding laundry.

The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The selected programme must then be continued until it is finished.

Hot steam may escape during the Steam Drying / Steam Refresh programmes.

1. Open the door. The drying cycle is paused.
2. Remove or add laundry and close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

Information on laundry ...

Labelling of fabrics

Follow the manufacturer's care information.

- ☐ Drying at normal temperature.
- ☐ Dry at a low temperature → select **Low Heat** as well.
- ☐ Do not machine dry.

Do not tumble-dry the following fabrics:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) → they may crease.
- Oil-stained laundry.

Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Close zips, hooks and eyes, and do up any buttons. Tie belts, apron strings etc. together.
- Do not overdry easy-care laundry → risk of creasing. Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → *Fine adjustment of the drying result* → Page 1/2.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not select the **Extra Dry** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- When washing laundry that is to be tumble-dried afterwards, dose the fabric softener according to the manufacturer's instructions.
- With a small load, use the Timed Program.

Tips for Steam Dry / Steam Refresh

- Use your dryer for unwrinkling and refreshing fabrics.
- Short spin cycle for reducing creasing.
- Refresh cycle for reducing odours from fabrics.
- Do not use **Steam Dry / Steam Refresh** for the following fabrics:
 - Wool, leather, fabrics with metal, wooden or plastic parts.
 - Wax and oil jackets.

- Sort the laundry by colour and put on separate short Steam Dry / Steam Refresh cycles to prevent the colours from bleeding.
- These programmes do not remove stains → stains must be treated and removed beforehand.
- For best results, so that the laundry will have as few creases as possible, remove each item immediately after the programme has finished and hang on a hanger to finish drying. Pull clothes into shape if required.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Page 7, "Programme overview".
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after each drying cycle → Page 4.
- Keep the air cooler clean → Page 6 "Cleaning and care".
- Keep the supply of cool air unobstructed → Do not cover or block the cooling grill.

Cleaning and care

Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal. This does not affect your dryer's functions in any way.

Air cooler / Protective filter

When cleaning, only remove the protective filter. Clean the air cooler behind the protective filter once a year.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door.
2. Open the maintenance door fully.

3. Turn both locking levers towards each another.
4. Pull out the protective filter/air cooler.

Do not damage the protective filter or air cooler. Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the air cooler thoroughly. Allow to drip dry.
6. Clean the seals.

7. Re-insert the protective filter/air cooler, with the handle facing down.
8. Turn back both locking levers.

9. Close the maintenance door until the lock clicks into place.

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

Do not use steel wool or abrasive materials.

Cover for steam nozzle in the drum

After lengthy operation, limescale and fluff may accumulate on the cover of the steam nozzle. Clean regularly:

1. Open the door and remove the cover with a screw driver. Clean the cover under running water.
2. Push and click the protective cap back in place.

Cleaning and care

Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal. This does not affect your dryer's functions in any way.

Air cooler / Protective filter

When cleaning, only remove the protective filter. Clean the air cooler behind the protective filter once a year.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door.
2. Open the maintenance door fully.

3. Turn both locking levers towards each another.
4. Pull out the protective filter/air cooler.

Do not damage the protective filter or air cooler. Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the air cooler thoroughly. Allow to drip dry.
6. Clean the seals.

7. Re-insert the protective filter/air cooler, with the handle facing down.
8. Turn back both locking levers.

9. Close the maintenance door until the lock clicks into place.

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

Do not use steel wool or abrasive materials.

Cover for steam nozzle in the drum

After lengthy operation, limescale and fluff may accumulate on the cover of the steam nozzle. Clean regularly:

1. Open the door and remove the cover with a screw driver. Clean the cover under running water.
2. Push and click the protective cap back in place.

Cleaning and care

Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal. This does not affect your dryer's functions in any way.

Air cooler / Protective filter

When cleaning, only remove the protective filter. Clean the air cooler behind the protective filter once a year.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door.
2. Open the maintenance door fully.

3. Turn both locking levers towards each another.
4. Pull out the protective filter/air cooler.

Do not damage the protective filter or air cooler. Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the air cooler thoroughly. Allow to drip dry.
6. Clean the seals.

7. Re-insert the protective filter/air cooler, with the handle facing down.
8. Turn back both locking levers.

9. Close the maintenance door until the lock clicks into place.

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

Do not use steel wool or abrasive materials.

Cover for steam nozzle in the drum

After lengthy operation, limescale and fluff may accumulate on the cover of the steam nozzle. Clean regularly:

1. Open the door and remove the cover with a screw driver. Clean the cover under running water.
2. Push and click the protective cap back in place.

Cleaning and care

Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal. This does not affect your dryer's functions in any way.

Air cooler / Protective filter

When cleaning, only remove the protective filter. Clean the air cooler behind the protective filter once a year.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door.
2. Open the maintenance door fully.

3. Turn both locking levers towards each another.
4. Pull out the protective filter/air cooler.

Do not damage the protective filter or air cooler. Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the air cooler thoroughly. Allow to drip dry.
6. Clean the seals.

7. Re-insert the protective filter/air cooler, with the handle facing down.
8. Turn back both locking levers.

9. Close the maintenance door until the lock clicks into place.

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

Do not use steel wool or abrasive materials.

Cover for steam nozzle in the drum

After lengthy operation, limescale and fluff may accumulate on the cover of the steam nozzle. Clean regularly:

1. Open the door and remove the cover with a screw driver. Clean the cover under running water.
2. Push and click the protective cap back in place.

Cleaning and care

Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal. This does not affect your dryer's functions in any way.

Air cooler / Protective filter

When cleaning, only remove the protective filter. Clean the air cooler behind the protective filter once a year.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door.
2. Open the maintenance door fully.

3. Turn both locking levers towards each another.
4. Pull out the protective filter/air cooler.

Do not damage the protective filter or air cooler. Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the air cooler thoroughly. Allow to drip dry.
6. Clean the seals.

7. Re-insert the protective filter/air cooler, with the handle facing down.
8. Turn back both locking levers.

9. Close the maintenance door until the lock clicks into place.

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

Do not use steel wool or abrasive materials.

Cover for steam nozzle in the drum

After lengthy operation, limescale and fluff may accumulate on the cover of the steam nozzle. Clean regularly:

1. Open the door and remove the cover with a screw driver. Clean the cover under running water.
2. Push and click the protective cap back in place.

Programme overview

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...

- ☐ iron laundry
- ☐ lightly iron laundry
- ☐ do not iron laundry
- ☐ mangle laundry

PROGRAMMES	TEXTILE TYPE AND INFORMATION
☐ Cottons	max. 8 kg Hard-wearing fabrics; both-resistant fabrics made of cotton or linen.
☐ Easy-Care	max. 3.5 kg Non-iron laundry made of synthetic fibres and blended fabric; easy-care cotton.
☐ Mixed Load	max. 3 kg Mixed items of laundry made of cotton and synthetics (Mix).
☐ Iron Dry	☐ Fabrics suitable for ironing (iron fabrics in order to avoid creasing).
☐ Cupboard Dry	☐ Single-layer fabrics.
☐ Extra Dry	☐ Fabrics made of thick, multilayered items of clothing.
☐ Steam Dry	☐ For smoothing hard-wearing and easy-care fabrics. Steam smooths the fabrics.
☐ Minimum Iron Daily Load	max. 2.5 kg Further information → Page 8.
☐ Minimum Iron Shirt	max. 1.5 kg
☐ Steam Refresh	☐ For freshening hard-wearing and easy-care fabrics. Steam freshens up the fabrics.
☐ Freshen up	max. 1.5 kg Further information → Page 8.
☐ Sportsweat	max. 1.0 kg Fabrics with membrane coating, water-repellent fabrics; functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).
☐ Woollens Finish	max. 1.5 kg Woolen fabrics suitable for washing machines. Fabrics become fluffier but not dry.
☐ Super Quick 40'	max. 3 kg Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.
☐ Timed Programmes	max. 2 kg Predried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry.
☐ Warm	max. 3 kg Also for subsequent drying.

*For ☐ Cottons and ☐ Easy-Care programmes only.
**Dryness levels can be selected individually → Extra Dry, Cupboard Dry and Iron Dry (depending on the model).
Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

Steam Drying - Steam Refresh

- Steam programmes for unwrinkling or refreshing**
- Your dryer has unwrinkling and refreshing programmes that can be used for reducing odours and minimising creasing in dry fabrics. Steam smooths and freshens up items of clothing.
 - Sorting the laundry according to size, weight, fabric and colour is necessary.
 - Only use Short spin/Refresh for fabrics with the same properties.
 - During steam generation (required), additional noises may occur.
 - The result of refreshing and unwrinkling may vary depending on the type of fabric, size of the load and programme selected.
 - After unwrinkling or refreshing, all fabrics must be removed immediately and hung crease-free on a hanger or a washing line for 15 minutes.

Programmes

- Please observe the treatment symbols and manufacturer's instructions on the fabrics. Do not use Short spin/Refresh for fabrics made of wool, leather, containing metal or wooden parts as well as wax and oil jackets! Do not use any dryer cleaning sets!**

- Steam Dry**
- Suitable for easy-care fabrics, e.g. formal shirts. Fabrics are smoothed. You can expect optimum results if "non-iron" appears on the care label. After the programme has finished, the items must be removed immediately and hung crease-free on a hanger or washing line for 15 minutes. The programme is for up to 5 formal shirts.

- Minimum Iron Daily Load**
- Suitable for hard-wearing cotton fabrics, e.g. bed linen, tablecloths or formal shirts. Fabrics are smoothed. You can expect optimum results if "non-iron" appears on the care label. After the programme has finished, the items must be removed immediately and hung crease-free on a hanger or washing line for 15 minutes. The programme is for up to 5 formal shirts or 1 to 2 larger items.

- Steam Refresh**
- Business**
- Suitable for refreshing suits, jackets and trousers, or dry-clean items that cannot be washed in the washing machine → see the care label. The programme only refreshes fabrics and does not clean them. After the end of the programme, the items must be removed immediately. Programme for 1 suit or 1 to 2 smaller items.

- Freshen up**
- Suitable for refreshing casual wear made of cotton or artificial fibres. Fabrics must be suitable for dryers → see the care label. The programme refreshes fabrics only, and does not clean them. After the programme has finished, the fabrics must be removed immediately. Programme for 1 pullover, 2 pairs of trousers or formal shirts.

Steam Drying - Steam Refresh

- Your water tank empties automatically after the programme has finished. Cleaning is therefore not required.

- Filling the water tank:**
- Fill the dryer's water tank with distilled water before every **Steam Dry - Steam Refresh** cycle.

1. Move the programme selector to **Steam Dry** or **Steam Refresh**. The symbol appears in the display.

2. Remove the condensation tank completely.

- Before every **Steam Dry - Steam Refresh** cycle, fill the water tank with distilled water only. Do not use tap water, condensation or additives.

3. Fill the water tank. Use the jug supplied.

- If the water tank filter is dirty → *clean the filter in the water tank. See page 4.*

4. Pour the distilled water into the filling hole on the water tank, until the symbol goes out on the display panel.

- If drying the recommended load, approximately 250 to 300 ml of distilled water is used in the **Steam Dry - Steam Refresh** programmes.

5. Insert the condensation container all the way.

6. Start the **Steam Dry** or **Steam Refresh** programme.

Installation

- Scope of delivery: dryer, installation and instruction manual, jug, basket for woollens (*depending on the model*).
- Check dryer for transport damage.
- The dryer is heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not install in a room where there is a risk of freezing. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.

1. **Setting up the dryer**
- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Keep the cooling grille on the front of the dryer clear.
- Keep the area around the dryer clean.
- Level the dryer using the threaded feet. Use a spirit level.
- Do not remove the threaded feet under any circumstances.

- Do not install the dryer behind a door or sliding door, which could prevent or restrict opening of the dryer door. This will prevent children from locking themselves in and putting their lives in danger.

2. **Mains connection** see safety information → Page 13.
- Connect to an AC earthed socket. If in doubt, have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ Page 11) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

- Frost protection / Transport**
- Do not operate the dryer if there is a danger of frost.

- Preparation**
1. Empty the condensation container → Page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensation is pumped into the container.
4. Wait 5 min., and then empty the condensation container again.
5. Turn the programme selector to **Off**.
- The water tank must not contain any distilled water. If necessary, run the Steam/Refresh programme.

Technical data

- **Dimensions (DxWxH)** 60 x 60 x 85 cm (adjustable height)
- Weight** approximately 43.5 kg
- Max. capacity** 8 kg
- Condensation container** 4,0 l
- Water tank** approx. 0.4 l
- Connection voltage** 220-240 V
- Connected load** max. 2800 W
- Fuse protection** 13 A
- Ambient temperature** 5 - 35 °C
- Product number** Inside of door
- Production number**

- The rating plate can be found on the back of the dryer.

- **Consumption rates** These are guide values determined under standard conditions.
- | | Spin speed in rpm (residual moisture) | Drying time in min.** | Energy consumption in kWh** |
|------------------|---------------------------------------|-----------------------|-----------------------------|
| Cottons 8 kg | 1400 (approx. 50 %) | 105 | 3.74 |
| | 1000 (approx. 60 %) | 122 | 4.49 |
| | 800 (approx. 70 %) | 139 | 5.17 |
| Iron Dry* | 1400 (approx. 50 %) | 83 | 2.24 |
| | 1000 (approx. 60 %) | 100 | 3.44 |
| | 800 (approx. 70 %) | 117 | 3.86 |
| Easy-Care 3.5 kg | 1000 | 39 | 1.05 |
| | 800 (approx. 40 %) | 42 | 1.35 |
| | 600 (approx. 50 %) | 51 | 1.65 |

- *Test programme to DIN EN 61121
- **The values may differ from those given, depending on overvoltage and undervoltage, the type of fabric, composition of the laundry to be dried, the residual moisture in the fabric and the size of the load.

- **Drum interior light (bulb E14, 25 W)**
- The drum is illuminated after the door is opened or closed, and after the programme has started. The light goes out automatically. To change the bulb → Page 12.

- Optional accessories** (order from the after-sales service using the order number)

- WTZ 1110 **Connecting kit for condensation outlet**
- The condensation is drained off immediately via a hose.

- WTZ 11310 **Washer-dryer stack connection set**
- The dryer can be stacked on top of a suitable washing machine of the same depth and width, to save space. The dryer **must** be secured to the washing machine with this connection set. With pull-out worktop: WTZ 11300

- WTZ 10290 **Installation underneath the worktop**
- Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.

What to do if...

- ! If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:
- GB 0844 8928979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
 - IE 01450 2655

- When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door). Set the programme selector to **Off** and remove the appliance plug from the socket.

- The **Start/Stop** indicator light does not come on. Mains plug plugged in? Programme selected?
- The symbol and **Start/Stop** indicator light are flashing. Empty the condensation container → Page 4. Check the condensation outlet hose, if applicable (kink).
- The symbol and **Start/Stop** indicator light are flashing. Clean the air cooler → Page 6 "Cleaning and care". Clean the fluff filter → Page 4.
- The symbol flashes. Is the water tank empty? Filling with distilled water → Page 9.
- The **Steam Dry - Steam Refresh** does not start. The filter in the water tank may have become dirty. If so, clean the filter in the water tank → Page 4.
- Dryer does not start. Has the **Start/Stop** button been pressed? Is the door closed? Programme set? Ambient temperature greater than 5 °C?

- Water is leaking out. Make sure the dryer is level. Clean the air cooler seal.
- The door opens by itself. Push the door closed until you hear it click into place.
- Items crease even though the **Steam Dry - Steam Refresh** programme has been selected. Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape.
- Creasing. Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → Page 7.

- Drying result is not satisfactory (laundry feels too damp). Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → Page 7. Use fine adjustment for the drying result → Page 1/2. Fine layer of limescale on the humidity sensors → Clean the humidity sensors → Page 6. Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.

- Drying time too long. Rinse the fluff filters under running water → Page 4. Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → Page 10. Ambient temperature higher than 35 °C → ventilate the room.

- The humidity in the room increases significantly. Make sure the room is sufficiently ventilated.

- One or more programme status indicator lamps are flashing. Clean the filter and air cooler under running water → Page 4/6. Check the installation conditions → Page 10. Switch off, allow to cool, switch on again and restart the programme.


- The interior light (depending on the model) does not work. Unplug the appliance plug, fold back the cover cap on the inside above the door (using a Torx 20 screwdriver) and replace the bulb. Close the cover cap.

Safety instructions

- ! **Emergency ONLY use the dryer...**
- The dryer must NEVER...**
- Hazards**
- Pull the appliance plug out of the socket immediately or disconnect the fuse.
 - in rooms inside the house.
 - for drying or unwrinkling/refreshing fabrics.

- be used for purposes other than those described above.
- be modified in terms of its technology or properties.
- The dryer must not be used by children or persons who have not been instructed in its use.
- Do not leave children unsupervised near the dryer.
- Keep pets away from the dryer.
- Remove all objects from pockets, and lighters in particular → **risk of explosion**.
- Do not lean or sit on the door → **risk of tipping**.
- Open the door carefully. Hot steam may escape. The clothes and drum may be hot → **risk of burns**.

- Installation**
- Secure loose leads or hoses, otherwise there is a **risk of tripping**.
 - Below 0 °C there is a possibility of frost damage.

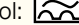- Mains connection**
- Connect the dryer according to specifications to an AC earthed socket, otherwise it cannot be guaranteed that the appliance is completely safe.
 - The cable cross-section must be sufficient.
 - Only use earth-leakage circuit breakers with the following symbol: 
 - The appliance plug and socket must be compatible.
 - Do not use multiple plugs/connectors and/or extension cables.
 - Do not touch or hold the appliance plug with wet hands → **risk of electric shock**.
 - Never pull the appliance plug out of the socket by its cable.
 - Do not damage the mains lead → **risk of electric shock**.

- Operation**
- Only laundry must be loaded into the drum. Before switching on the dryer - check the contents.
 - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → **fire/explosion hazard**.
 - Hazard caused by dust (e.g. coal dust, flour): do not use the dryer → **risk of explosion**.
 - Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
 - Switch off the dryer once the programme has ended.
 - For unwrinkling/refreshing fabrics, use distilled water only. Do not use condensation, tap water or additives.
 - Distilled/condensation water is not for drinking.

- Defect**
- Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service.
 - Do not use a dryer with a faulty mains lead. To prevent risks, a faulty mains lead must only be replaced by the after-sales service.
 - Before changing the bulb of the interior light make absolutely sure you have pulled the appliance plug from the socket → **risk of electric shock**.

- Spare parts Disposal**
- Only use genuine spare parts and accessories for safety reasons.
 - Dryer: unplug the appliance plug, **then** cut the mains lead from the appliance. Dispose of the dryer at an approved public disposal facility.
 - Packaging: keep all packaging out of reach of babies and children. → **danger of suffocation**.
 - All materials are environmentally safe and recyclable. Dispose of in an environmentally-responsible manner.



Dryer en Instruction manual

Your new dryer


Congratulations! - You have chosen a modern, high-quality domestic appliance from Bosch.


A distinctive feature of the condensation dryer is its low energy consumption. Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.


Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner. This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE). This directive provides the framework for the EU-wide collection and reuse of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com


 Observe the safety instructions on page 13.

 Caution - risk of scalding.

 Read these instructions before operating the dryer.

Contents

	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Notes on laundry	5
Cleaning and care	6
Overview of programmes	7
Short spin / Refresh	8/9
Installation	10
Frost protection / Transport	10
Technical data	11
Optional accessories	11
What to do if... / After-sales service	12
Safety instructions	13

Reduced temperature for delicate fabrics , for a longer drying time; e.g. acrylic, polyamide, elastane or acetate silk.


Reduces creasing and prolongs the anti-creasing phase after the programme has finished; can be selected in one of two levels.

Indicators which show the programme sequences. Drying, Iron Dry, Cupboard Dry, End / Easy Iron.


Clean the fluff filter and/or air cooler under running water → Page 4/6.
Empty the condensation container.
Fill the water tank with distilled water → Page 9.


Intended use


- For domestic use only.
- Only to be used for drying, refreshing or unwrinkling fabrics that have been washed with water.

 Do not leave children unsupervised near the dryer. Keep pets away from the dryer. The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparing for installation, see page 8

 Never operate the dryer if it is damaged. Inform your after-sales service.

 Only if your hands are dry. Only hold the plug by the plug casing.

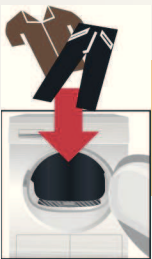

Sorting and loading

Remove all objects from pockets. Pay particular attention to cigarette lighters. The drum must be empty before filling. If necessary, fill the water tank for **Steam Dry / Steam Refresh** programmes → Page 7. See programme overview on page 7. See also separate instructions for "basket for ventilation" (depending on the model)

Selecting and adjusting the programmes

Select the programme

... and adapt to individual requirements


Additional functions

Display panel

Programme selector

Low Heat

Reduced Ironing

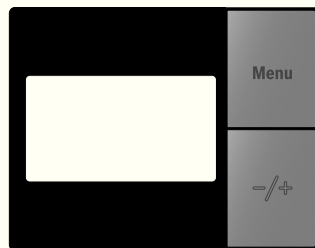

Menu

-/+

Steam Dry

Minimum Iron Shirt

Minimum Iron Daily Load

Steam Refresh

Business

Freshen up

Sportswear

Woollens Finish

Super Quick 40'

Off

Timed Programmes

Cottons

Extra Dry

Cupboard Dry

Iron Dry

Easy-Care

Extra Dry


Cupboard Dry

Iron Dry

Mixed Load






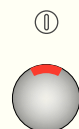

Cupboard Dry

Start Stop

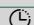

All buttons respond with a light touch

Press the button

	Menu	For selecting the settings.
	-/+	For changing all the settings in the display panel.
	Electronic start timer	End of the programme after ... (depending on the programme selected, e.g. 1:54h – you can always select up to the next full hour).
	Signal	There are four buzzer volume settings: 0 (off), 1 (quiet), 2 (normal), 3 (loud), 4 (very loud).
	Appliance lock (depending on the model)	Provides protection against unintentional changes to the functions set (press and hold the Menu button for 5 seconds).
	Fine adjustment of the drying result	The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 – max. 3). Cottons , Easy-Care , Mixed Load and Super Quick 40' programmes → page 7. After one of these programmes has been finely adjusted, the setting is retained for the next programme.
	Spin speed	The spin speed that was used in the washing machine; for more precise indication of the projected drying duration only.

Inspecting the dryer

Connecting the mains plug

Loading laundry

page 8.

woollens"

the programme

Drying programme ...

Individual requirements

are sensitive,
n is enough!

① Start/Stop button


→ 2h; 1 -24 hrs

loud). 0, 1, 2, 3, 4
On-Off

for the
resetting = 0.
ne others.

600-1800
Ⓞ

Drying

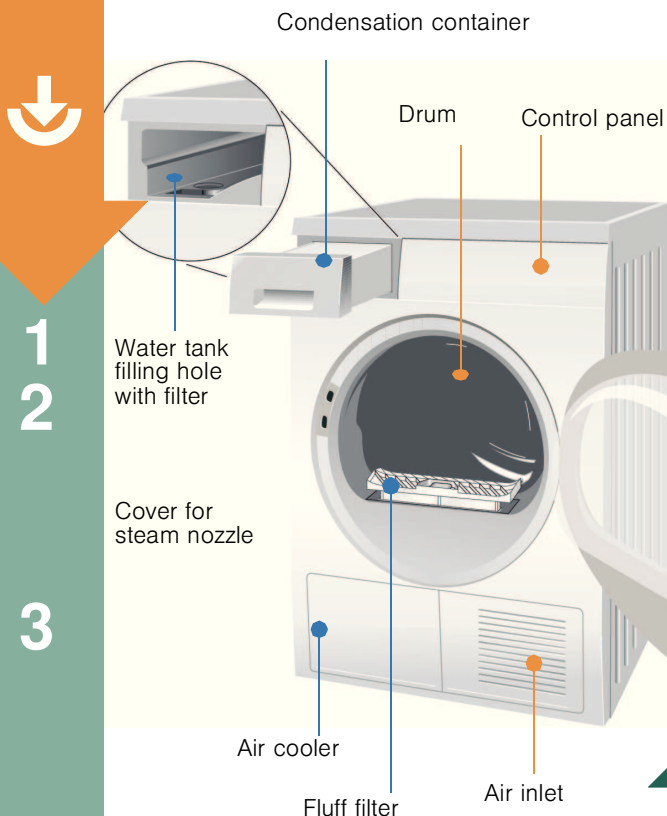


Drying / Short spin / Refresh



Emptying condensation


Empty the container **after** each drying cycle, not during drying!

1. Remove the container, holding it level.
2. Pour out condensation.
3. Push the **container** back in until it clicks into place.

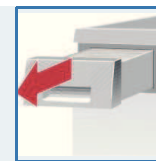



Cleaning the fluff filter

1. Open the door, remove the filter and fold open.
 2. Remove the fluff (by wiping the filter with your hand).
 3. Close the filter, insert it again and close the door.
 4. Remove fluff from the door and the area around it.
- Very dirty or blocked filters should be rinsed under warm water, and then dried thoroughly.

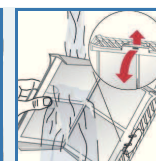


Clean the filter in the water tank if it is dirty

1. Remove the condensation tank.
2. Remove the filter.
3. Clean the filter under running water.
4. Re-insert the filter and push in the condensation tank until it clicks into place.

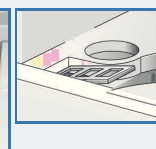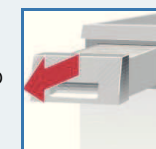


Switching off the dryer

Turn the programme selector to **Off**.
Do not leave damp laundry in the dryer.

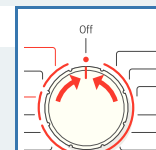

Removing the laundry

The automatic Easy Iron function moves the drum at certain intervals. The load remains loose and soft for an hour (or two hours if you manually select the **Reduced Ironing** function, depending on the model.)

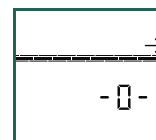

Programme end once → lights up in the display.

Interrupt programme removing or adding laundry.



The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The selected programme must then be continued until it is finished.



Hot steam may escape during the Steam Drying / Steam Refresh programmes.

1. Open the door. The drying cycle is paused.
2. Remove or add laundry and close the door.
3. If required, select a new programme and additional functions.
4. Press the ① **Start/Stop** button. The remaining time is updated after a few minutes.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- ☑ Drying at normal temperature.
- ☑ Dry at a low temperature → select **Low Heat** as well.
- ☑ Do not machine dry.

Do not tumble-dry the following fabrics:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) → they may crease.
- Oil-stained laundry.



Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Close zips, hooks and eyes, and do up any buttons. Tie belts, apron strings etc. together.
- Do not overdry easy-care laundry → risk of creasing. Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → *Fine adjustment of the drying result* → Page 1/2.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not select the **Extra Dry** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- When washing laundry that is to be tumble-dried afterwards, dose the fabric softener according to the manufacturer's instructions.
- With a small load, use the Timed Program.



Tips for Steam Dry / Steam Refresh

- Use your dryer for unwrinkling and refreshing fabrics.
- Short spin cycle for reducing creasing.
- Refresh cycle for reducing odours from fabrics.

Do not use Steam Dry / Steam Refresh for the following fabrics:

- Wool, leather, fabrics with metal, wooden or plastic parts.
- Wax and oil jackets.



- Sort the laundry by colour and put on separate short Steam Dry / Steam Refresh cycles to prevent the colours from bleeding.
- These programmes do not remove stains → stains must be treated and removed beforehand.
- For best results, so that the laundry will have as few creases as possible, remove each item immediately after the programme has finished and hang on a hanger to finish drying. Pull clothes into shape if required.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Page 7, "Programme overview".
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after each drying cycle → Page 4.
- Keep the air cooler clean → Page 6 "Cleaning and care".
- Keep the supply of cool air unobstructed → Do not cover or block the cooling grill.

Cleaning and care



Only when switched off!

Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal. This does not affect your dryer's functions in any way.

Clean the protective filter 5 - 6 times a year
or if flashes after the fluff filter has been cleaned.

Air cooler / Protective filter

When cleaning, only remove the protective filter.
Clean the air cooler behind the protective filter once a year.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door.
2. Open the maintenance door fully.

3. Turn both locking levers towards each other.
4. Pull out the protective filter/air cooler.



Do not damage the protective filter or air cooler.
Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the air cooler thoroughly. Allow to drip dry.
6. Clean the seals.
7. Re-insert the protective filter/air cooler, with the handle facing down.
8. Turn back both locking levers.
9. Close the maintenance door until the lock clicks into place.

Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.







Do not use steel wool or abrasive materials.

Cover for steam nozzle in the drum

After lengthy operation, limescale and fluff may accumulate on the cover of the steam nozzle. Clean regularly:

1. Open the door and remove the cover with a screw driver. Clean the cover under running water.
2. Push and click the protective cap back in place.

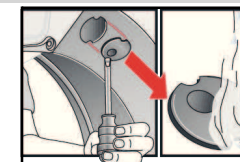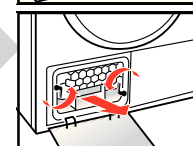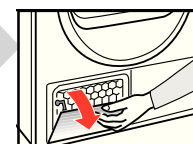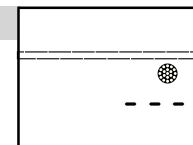

Programme overview

see also pages 5 and 8

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...	iron laundry	lightly iron laundry	do not iron laundry	mangle laundry
TEXTILE TYPE AND INFORMATION				
Cottons	max. 8 kg	Hard-wearing fabrics; boil-resistant fabrics made of cotton or linen.		
Easy-Care	max. 3.5 kg	Non-iron laundry made of synthetic fibres and blended fabric, easy-care cotton.		
Mixed Load	max. 3 kg	Mixed items of laundry made of cotton and synthetics (Mix).		
Iron Dry		Fabrics suitable for ironing (iron fabrics in order to avoid creasing).		
Cupboard Dry		Single-layer fabrics.		
*Extra Dry		Fabrics made of thick, multilayered items of clothing.		
Steam Dry		For smoothing hard-wearing and easy-care fabrics. Steam smooths the fabrics.		
Minimum Iron Daily Load	max. 2.5 kg	Further information → Page 8.		
Minimum Iron Shirt	max. 1.5 kg	For freshening hard-wearing and easy-care fabrics. Steam freshens up the fabrics.		
Steam Refresh				
Business Freshen up	max. 1.5 kg	Further information → Page 8.		
	max. 1.0 kg	Fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).		
Sportswear	max. 1.5 kg			
Woollens Finish	max. 3 kg	Woollen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.		
Super Quick 40'	max. 2 kg	Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.		
Timed Programmes	warm max. 3 kg	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.		

*for **Cottons** and **Easy-Care** programmes only

**Dryness levels can be selected individually → Extra Dry, Cupboard Dry and Iron Dry (depending on the model).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9202 / 9000746180

Robert Bosch Hausgeräte GmbH
Carl-Wery-Str. 34
D-81739 Munich/Germany


WTS86500GB

Steam Drying - Steam Refresh

i Steam programmes for unwrinkling or refreshing

- Your dryer has unwrinkling and refreshing programmes that can be used for reducing odours and minimising creasing in dry fabrics. Steam smooths and freshens up items of clothing.
- Sorting the laundry according to size, weight, fabric and colour is necessary.
- Only use Short spin/Refresh for fabrics with the same properties.
- During steam generation (required), additional noises may occur.
- The result of refreshing and unwrinkling may vary depending on the type of fabric, size of the load and programme selected.
- After unwrinkling or refreshing, all fabrics must be removed immediately and hung crease-free on a hanger or a washing line for 15 minutes.

Programmes

 Please observe the treatment symbols and manufacturer's instructions on the fabrics. Do not use Short spin/Refresh for fabrics made of wool, leather, containing metal or wooden parts as well as wax and oil jackets! Do not use any dryer cleaning sets!

🌀 Steam Dry

Minimum Iron Shirt

Suitable for easy-care fabrics, e.g. formal shirts. Fabrics are smoothed. You can expect optimum results if “non-iron” appears on the care label. After the programme has finished, the items must be removed immediately and hung crease-free on a hanger or washing line for 15 minutes. The programme is for up to 5 formal shirts.

Minimum Iron Daily Load

Suitable for hard-wearing cotton fabrics, e.g. bed linen, tablecloths or formal shirts. Fabrics are smoothed. You can expect optimum results if “non-iron” appears on the care label. After the programme has finished, the items must be removed immediately and hung crease-free on a hanger or washing line for 15 minutes. The programme is for up to 5 formal shirts or 1 to 2 larger items.

✳️ Steam Refresh

Business

Suitable for refreshing suits, jackets and trousers, or dry-clean items that cannot be washed in the washing machine → see the care label. The programme only refreshes fabrics and does not clean them. After the end of the programme, the items must be removed immediately. Programme for 1 suit or 1 to 2 smaller items.

Freshen up


Suitable for refreshing casual wear made of cotton or artificial fibres. Fabrics must be suitable for dryers → see the care label. The programme refreshes fabrics only, and does not clean them. After the programme has finished, the fabrics must be removed immediately. Programme for 1 pullover, 2 pairs of trousers or formal shirts.


Steam Drying - Steam Refresh

i Your water tank empties automatically after the programme has finished. Cleaning is therefore not required.


Filling the water tank:

Fill the dryer's water tank with distilled water before every **Steam Dry - Steam Refresh** cycle.

1. Move the programme selector to **Steam Dry** or **Steam Refresh**. The  symbol appears in the display.

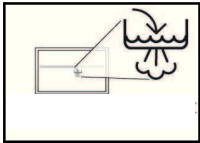


2. Remove the condensation tank completely.

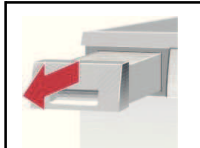



i Before every **Steam Dry - Steam Refresh** cycle, fill the water tank with distilled water only. Do not use tap water, condensation or additives.

3. Fill the water tank. Use the jug supplied.

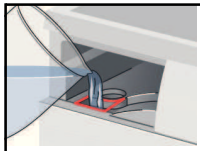

i If the water tank filter is dirty → clean the filter in the water tank. See page 4.

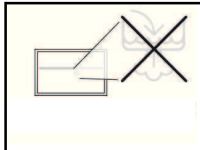


4. Pour the distilled water into the filling hole on the water tank, until the  symbol goes out on the display panel.

i If drying the recommended load, approximately 250 to 300 ml of distilled water is used in the **Steam Dry - Steam Refresh** programmes.


5. Insert the condensation container all the way.




6. Start the **Steam Dry** or **Steam Refresh** programme.

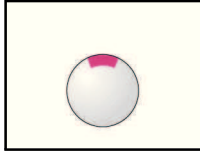


Installation

- 
- Scope of delivery: dryer, installation and instruction manual, jug, basket for woollens (depending on the model).
 - Check dryer for transport damage.
 - The dryer is heavy. Do not attempt to lift it on your own.
 - Be careful to avoid sharp edges.
 - Do not install in a room where there is a risk of freezing. Freezing water may cause damage.
 - If in doubt, have the appliance connected by a specialist.
 - Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.


- 1. Setting up the dryer**
- The appliance plug must always be accessible.
 - Ensure that the appliance is installed on a clean, level and firm surface.
 - Keep the cooling grille on the front of the dryer clear.
 - Keep the area around the dryer clean.
 - Level the dryer using the threaded feet. Use a spirit level.
 - Do not remove the threaded feet under any circumstances.



Remove all accessories from the drum.
The drum must be empty.




Do not install the dryer behind a door or sliding door, which could prevent or restrict opening of the dryer door. This will prevent children from locking themselves in and putting their lives in danger.

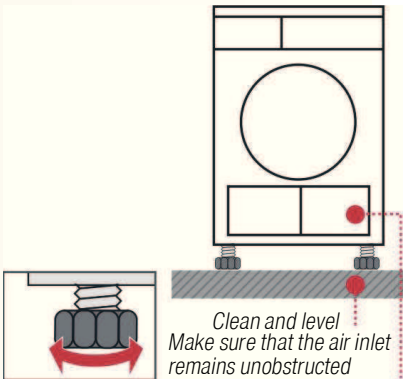


- 2. Mains connection** see safety information → Page 13.
- Connect to an AC earthed socket. If in doubt, have the socket checked by a specialist.
 - The mains voltage and the voltage shown on the rating plate (→ Page 11) must be the same.
 - The connected load and necessary fuse protection are specified on the rating plate.

Frost protection / Transport

- 
- Preparation**
1. Empty the condensation container → Page 4.
 2. Select any programme using the programme selector.
 3. Press the **Start/Stop** button → condensation is pumped into the container.
 4. Wait 5 min., and then empty the condensation container again.
 5. Turn the programme selector to **Off**.

The water tank must not contain any distilled water. If necessary, run the Steam/Refresh programme.





Do not operate the dryer if there is a danger of frost.

Technical data

● Dimensions (DxWxH)	60 x 60 x 85 cm (adjustable height)
Weight	approximately 43.5 kg
Max. capacity	8 kg
Condensation container	4.0 l
Water tank	approx. 0.4 l
Connection voltage	220-240 V
Connected load	max. 2800 W
Fuse protection	13 A
Ambient temperature	5 - 35 °C
Product number	Inside of door
Production number	

The rating plate can be found on the back of the dryer.

- **Consumption rates** These are guide values determined under standard conditions.

	Spin speed in rpm (residual moisture)	Drying time in min.**	Energy consumption in kWh**
 Cottons 8 kg			
Cupboard Dry*	1400 (approx. 50 %)	105	3.74
	1000 (approx. 60 %)	122	4.49
	800 (approx. 70 %)	139	5.17
Iron Dry*	1400 (approx. 50 %)	83	2.24
	1000 (approx. 60 %)	100	3.44
	800 (approx. 70 %)	117	3.86
 Easy-Care 3.5 kg			
Cupboard Dry*	1000	39	1.05
	800 (approx. 40 %)	42	1.35
	600 (approx. 50 %)	51	1.65

*Test programme to DIN EN 61121

**The values may differ from those given, depending on overvoltage and undervoltage, the type of fabric, composition of the laundry to be dried, the residual moisture in the fabric and the size of the load.

- **Drum interior light (bulb E14, 25 W)**
The drum is illuminated after the door is opened or closed, and after the programme has started. The light goes out automatically. To change the bulb → Page 12.

Optional accessories (order from the after-sales service using the order number)

WTZ 1110

Connecting kit for condensation outlet
The condensation is drained off immediately via a hose.

WTZ 11310

Washer-dryer stack connection set
The dryer can be stacked on top of a suitable washing machine of the same depth and width, to save space. The dryer **must** be secured to the washing machine with this connection set. With pull-out worktop: WTZ 11300

WTZ 10290

Installation underneath the worktop
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.

What to do if...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:

- **GB** 0844 8928979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
- **IE** 01450 2655

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).
Set the programme selector to **Off** and remove the appliance plug from the socket.

● The Start/Stop indicator light does not come on.	Mains plug plugged in? Programme selected?
● The symbol and Start/Stop indicator light are flashing.	Empty the condensation container → <i>Page 4</i> . Check the condensation outlet hose, if applicable (kink).
● The symbol and Start/Stop indicator light are flashing.	Clean the air cooler → <i>Page 6 "Cleaning and care"</i> . Clean the fluff filter → <i>Page 4</i> .
● The symbol flashes.	Is the water tank empty? Filling with distilled water → <i>Page 9</i> .
● The Steam Dry - Steam Refresh does not start.	The filter in the water tank may have become dirty. If so, clean the filter in the water tank → <i>Page 4</i> .
● Dryer does not start.	Has the Start/Stop button been pressed? Is the door closed? Programme set? Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level. Clean the air cooler seal.
● The door opens by itself.	Push the door closed until you hear it click into place.
● Items crease even though the Steam Dry - Steam Refresh programme has been selected.	Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape.
● Creasing.	Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → <i>Page 7</i> .
● Drying result is not satisfactory (laundry feels too damp).	Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → <i>Page 7</i> . Use fine adjustment for the drying result → <i>Page 1/2</i> . Fine layer of limescale on the humidity sensors → Clean the humidity sensors → <i>Page 6</i> . Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.
● Drying time too long.	Rinse the fluff filters under running water → <i>Page 4</i> . Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → <i>Page 10</i> . Ambient temperature higher than 35 °C → ventilate the room.
● The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated.
● One or more programme status indicator lamps are flashing.	Clean the filter and air cooler under running water → <i>Page 4/6</i> . Check the installation conditions → <i>Page 10</i> . Switch off, allow to cool, switch on again and restart the programme.
● The interior light (depending on the model) does not work.	Unplug the appliance plug, fold back the cover cap on the inside above the door (using a Torx 20 screwdriver) and replace the bulb. Close the cover cap.

Safety instructions



Emergency ONLY use the dryer...	– Pull the appliance plug out of the socket immediately or disconnect the fuse. – in rooms inside the house. – for drying or unwrinkling/refreshing fabrics.
The dryer must NEVER...	– be used for purposes other than those described above. – be modified in terms of its technology or properties.
Hazards	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets, and lighters in particular → risk of explosion . – Do not lean or sit on the door → risk of tipping . – Open the door carefully. Hot steam may escape. The clothes and drum may be hot → risk of burns .
Installation	– Secure loose leads or hoses, otherwise there is a risk of tripping . – Below 0 °C there is a possibility of frost damage.
Mains connection	– Connect the dryer according to specifications to an AC earthed socket, otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol: – The appliance plug and socket must be compatible. – Do not use multiple plugs/connectors and/or extension cables. – Do not touch or hold the appliance plug with wet hands → risk of electric shock . – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → risk of electric shock .
Operation	– Only laundry must be loaded into the drum. Before switching on the dryer - check the contents. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → fire/explosion hazard . – Hazard caused by dust (e.g. coal dust, flour): do not use the dryer → risk of explosion . – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material. – Switch off the dryer once the programme has ended. – For unwrinkling/refreshing fabrics, use distilled water only. Do not use condensation, tap water or additives. – Distilled/condensation water is not for drinking.
Defect	– Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use a dryer with a faulty mains lead. To prevent risks, a faulty mains lead must only be replaced by the after-sales service. – Before changing the bulb of the interior light make absolutely sure you have pulled the appliance plug from the socket → risk of electric shock .
Spare parts	– Only use genuine spare parts and accessories for safety reasons.
Disposal	– Dryer: unplug the appliance plug, then cut the mains lead from the appliance. Dispose of the dryer at an approved public disposal facility. – Packaging: keep all packaging out of reach of babies and children. → danger of suffocation . – All materials are environmentally safe and recyclable. Dispose of in an environmentally-responsible manner.



en Instruction manual