

Your washer dryer

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by BOSCH. The washer dryer is distinguished by its economical use of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

Contents

- Intended use 1
- Preparation 1/2
- Preparation Drying 2/3/4
- Preparation Washing or Washing + Drying 2/3/4
- Set and adjust the programme 3/4
- After washing/drying 5
- Important information 6
- Programme overview 7
- Drying table 8
- Consumption and noise values 8
- Display and Option buttons 9
- Additional functions and Individual settings 10
- Information on the display 11
- Emergency release 11
- What to do if 12/13
- Safety instructions 13

Intended use

- For domestic use only.
- For the washing of machine-washable fabrics in a detergent solution.
- To be operated with cold mains water and commercially available low foam detergents and care products which are suitable for use in front loaded washer dryer.
- Operating conditions:
 - ambient temperature 0-40°C.
 - relative humidity of air: under 80% (tested at 25°C).

- ⚠ Do not leave children unattended near the washer dryer!
- ⚠ The washer dryer is not to be used by children or the old unattended. Keep pets away from the washer dryer!
- Install and operate the washer dryer in a room with a drain.
- Do not wash the carpet.
- In order to ensure your safety, you must plug the cable into a socket which is connected reliable with grounded earth.

GB Standards:	GB 4706.1-2005	GB 4706.20-2004	GB 4706.24-2008
	GB 19606-2004	GB 4343.1-2009	GB 12021.4-2004
	GB 17625.1-2003	GB/T4288-2008	GB/T 23118-2008

Chief Distributor: BSH Home Appliances (China) Co., Ltd.
20, 21F CN International Mansion No. 129 Zhongshan Road
210005 Nanjing, Jiangsu Province, P.R.China

Preparation

Before using for the first time -> see page 6

The washer dryer was tested before leaving the factory. To remove any water left over from testing procedures, the first cycle should be carried out without any laundry with **Drum clean** programme. → page 6: **Before using for the first**

⚠ **Correct installation according to separate Installation and maintenance instructions.**

Check the machine

- Never switch on a damaged machine!
- Inform your customer service!

Insert mains plug

⚠ **With dry hands only! Only hold the plug itself!**

Turn on the tap



- According to the water-cooling principle, the cold water must be inlet in the course of drying process; turn on the water tap even if the drying programme is selected.

Protection of the environment/ Conservation tips

- Load the maximum amount of laundry to wash or dry for the particular programme → page 7, **Programme overview**
- Select **Intensive 60°C** and cancel the additional function of **Speed wash** to obtain good cleaning results with significantly lower energy consumption.
- Dose the detergent according to the manufacturer's instructions and water hardness.
- If the laundry is then to be dried in the appliance, select the highest selectable spin speed, because the more water that is spun out of the appliance, the less time and energy is required to dry it.
- Select **Drum clean** to clean the drum without any laundry. It is suggested that you can use this programme every 3 months or every 50 drying cycles.
- Select the washing and drying without interruption of **Spin** programme, if you want to dry the handwash laundry or dripping-wet laundry. Select the highest possible speed of dehydration according to the sorts of laundry, or else it will waste of time and energy!

Drying

Washing+Washing+Drying without interruption

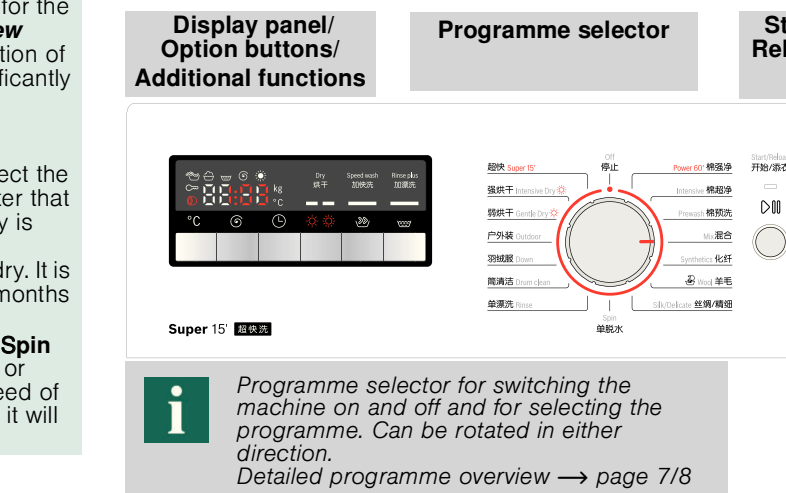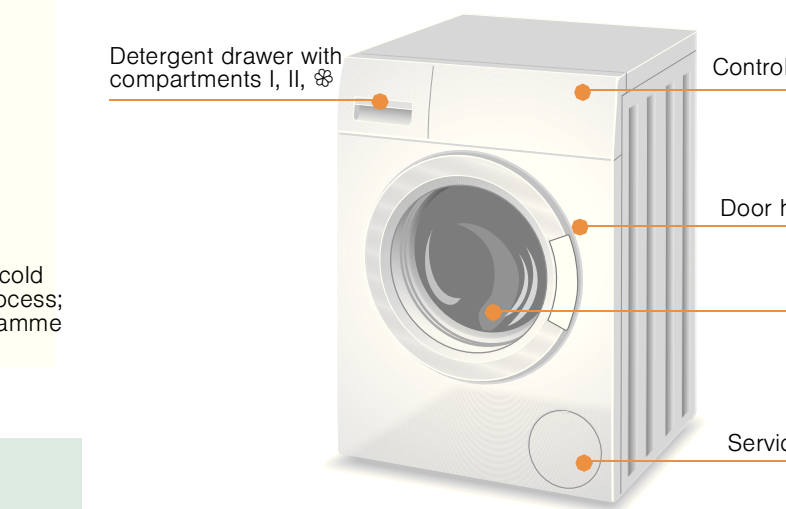

Sort and load the laundry (drying)

- Sort according to the care information provided by the manufacturer.
- Sort according to the care labels, type, colour, soiling and temperature.
- Do not exceed the maximum load → page 7, **Programme overview**.
- If drying programme selected → page 4, **Sort and load the laundry (drying)**.

Add detergent and care product

- Add the appropriate dose according to: Amount of washing, soiling, water hardness (ask your water supply company) and manufacturer's instructions. → page 7, **Programme overview**.
- Use commercially available low foam detergents for washer dryer only.
- Models without insert for liquid detergent: pour liquid detergent into an appropriate dispenser and place in the drum.
- During operation: close the detergent drawer!
- Dilute viscous fabric softener and fabric conditioner with water. This prevents blockages.

Set and adjust the programme

- Turn the programme selector to desired washing programme. → page 7, **Programme overview**.
- The pre-set parameters of the selected programme will scroll on the display; use additional functions and option buttons to change the parameters. → page 9/10.

i All buttons are sensitive and a gentle tap is adequate! If you press and hold the **°C Temp.**, **Spin speed** or **Finish in** option buttons, the setting options automatically scroll through.

If washing and drying without interruption is desired (only possible for **Super 15**, **Power 60**, **Intensive**, **Prewash**, **Mix**, **Synthetics**, **Spin**, **Rinse** and **Outdoor**): Touch **Start/Reload** function button to change drying mode as below:
 – **FF** (drying mode end);
 – Intensive Dry **60°C**, Intensive Dry **60°C** (select Intensive Dry **60°C** indicator light is on);
 – Gentle Dry **60°C**, Gentle Dry **60°C** (select Gentle Dry **60°C** indicator light is on).
 Detailed drying mode description. → page 9.
 Select drying modes. → page 7, **Programme overview**.

For **Power 60**, **Mix**, **Spin**, and **Rinse**, please select the appropriate drying mode (**Intensive dry** or **Gentle dry**) according to the laundry. For other programs, it is recommended to use the default drying mode.

Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction. Detailed programme overview → page 7/8

Sort and load the laundry (drying)

- Only dry laundry that is labeled with the following care symbols:
- ☼ = **Intensive Dry**
- ☼ = **Gentle Dry**
- The following textiles should not be tumble-dried:
- ☒ = do not tumble-dry care symbol;
- Woollens or items containing wool. Risk of shrinking!
- Delicate fabric (silk, synthetic net curtain). Risk of creasing!
- Items containing foam rubber or similar material;
- Items which have been treated with inflammable solvents, such as stain removers, petrol, paint thinners. Explosion hazard!
- Items still containing hair lacquer or similar substances. Dangerous vapors!
- Items sealed or processed by rubber.
- Do not exceed the maximum drying load. → page 7.

Set and adjust the drying programme

- Turn the programme selector to **Intensive dry** or **Gentle dry** → page 7, **Programme overview**.

The default drying mode of the programme is automatic drying **60°C** **1**, in this programme the drying time is automatically adjusted to the load amount to reach cupboard dried laundry ready to fold and stack in the cupboard. To get a better effect, you may select automatic drying **60°C** **2**. You can change the drying mode to time dry and define the drying time by touching the **Start/Reload** button, select drying duration. → page 8: **Drying table**.

i All buttons are sensitive and a gentle tap is adequate! If you press and hold the **Finish in** option buttons, the setting options automatically scroll through.

Select Start/Reload

... Drying

... Washing / Washing+drying

Remove laundry

- Open washer dryer door and remove laundry.
- Leave the washing machine door and detergent drawer open so that any residual water can evaporate!

Turn off the tap

– Make sure that the programme is ended, **End** is displayed and the door lock is released. Set programme selector to **Off**.

Switch off

- Make sure that the programme is ended, **End** is displayed and the door lock is released. Set programme selector to **Off**.

Programme ended when ...

- ... Start/Reload indicate light goes out and **End** or **---** (if **---** was selected, without drain) appears on the display field, the buzzer sounds. Set volume of buzzer → page 10.
- If **---** was selected, **---** displays after the programme ends, touch the **Start/Reload** button:
- The programme continues with draining the water and spinning the laundry (the default spin speed can be changed in advance, but before touching the **Start/Reload** button).
- If you only want to drain the water, touch the **Start/Reload** button after the draining process ends. The programme is paused and the door lock is released. You can remove the laundry.
- If **Hot** flashes on the display field → high drum temperature. Cool-down programme is running until drum is cooled down.

Change the programme ...

- If you have selected the wrong programme by mistake:
- Reselect the washing/drying programme.
- If required, adjust the programme setting and/or select additional functions. → page 9/10.
- Select **Start/Reload** button.

Pause the programme ...

- Touch the **Start/Reload** button.
- Follow the instructions in the display field: when **1** lights up and **455** appears in the display, the door can be opened. If required, add/remove a laundry item;
- If **1** is displayed, the door cannot be opened due to a high water level in drum or a high temperature.
- Touch **Start/Reload** button to continue the programme.
- The pause function cannot be activated during drying phase.

... or terminate the programme

- Washing programmes with high temperature:
- Cool down laundry: Select **Rinse**, touch **Start/Reload**.
- Washing programmes at lower temperature:
- Select **Spin**, touch **Start/Reload**.

Drying programme:

- Select **Intensive dry** or **Gentle dry**, touch **Start/Reload** function button, set 15 minutes drying time (for cool down the laundry), then touch **Start/Reload** button.

Important information

Washing drying preparing/Protecting the laundry and the machine

- Empty pockets.
- Look out for metal items (paperclips, etc.).
- Trousers, knitwear and knitted textiles, e.g. Jersey garments, T-shirts or sweatshirts should be turned inside out.
- Ensure that the underwired bras is machine washable.
- Wash delicates in a net/bag (tights, curtains, underwired bras).
- Fasten zips, do up any buttons.
- Brush sand out of pockets and collars.
- Remove curtain hooks or place curtains in a net/bag.
- Use only tumble-dry textiles if you select drying.
- Before tumble-drying, handwash items should be spun using the appropriate spin speed.
- Remove as much water as possible before tumble-drying. Recommended spin speed for cottons is more than 1000 rpm; for easy-care is more than 800 rpm.
- In order to ensure uniform drying, sort the items according to fabric type and degree of drying required.
- Items which require ironing do not have to be ironed immediately after being tumble-dried. It is a good idea to fold or roll them together for a while, so that any remaining moisture is evenly distributed.
- To achieve good drying performance, dry quilt covers, Terry towels or other big pieces of textile individually. Terry towels not more than 4 pieces (or 3 kg).

Before using for the first time

Do not put any laundry in the washer dryer. Turn on the tap, pour ½ measuring cup of detergent into dispenser II. Set the **Drum clean 40°C** programme and select **Start/Reload**. At the end of the programme, set the programme selector to **Off**.

After a long time of no using or moving the machine

The water seal may be empty. If you select a single drying programme, at the beginning of the program water from detergent drawer will flow into the machine automatically to supply the water seal, which can prevent the overflow of the hot and humid steam in the drying programme.

Laundry with different degrees of soiling

- Light Wash new items separately. Do not prewash.
- If required, pretreat stains. Cancel the function of **Speed wash**. If the laundry is cotton fabric or linen fabric, select **Intensive** programme.
- Heavy Load less laundry, and cancel the function of **Speed wash**. If the laundry is cotton fabric or linen fabric, please select **Prewash** or **Intensive** programme.

Soaking

Load laundry of the same colour
 Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set **Intensive 30°C** programme and select **Start/Reload**. After approx. 10 minutes, select **Start/Reload**. After the required soaking time, reselect **Start/Reload** if the programme is to be continued or change the programme.

Dyeing/bleaching

Do not dye and chlorine bleach laundry in the washer dryer.

Outdoor

Outdoor programme is not possible for specialized Jackets. Check the laundry washing and drying labels before selecting programme to ensure the laundry is possible for machine washing and drying.

Programme overview

(see also the information on page 9, 10)

Programmes	°C	max. wash load (kg)	max. dry load (kg)	Type of laundry
Power 60	60	4.0	4.0/2.5	Hard-wearing textiles: made of cotton or blended fabric.
Intensive	90	7.0/4.0***	4.0/-	Long time washing program for heavily soiled hard-wearing textiles made of cotton or linen.
Prewash		4.0/-	4.0/-	Energy-intensive program for heavily soiled hard-wearing textiles made of cotton or linen.
Intensive dry	60	4.0/-	4.0/-	Cotton/coloureds textiles, dry at normal heat setting.
Gentle dry	60	3.5/2.5	-/2.5	Easy care textiles, dry at low heat setting.
Mix	60	3.5	-/2.5	Mixed load consisting of textiles made of cotton and synthetics.
Synthetics	40	3.5/2.0***	1.0/-	Textiles made of synthetic materials or blended fabrics.
Wool	40	2.0	2.0	Hand and machine washable wool or wool-rich fabrics. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).
Silk/Delicate	40	2.0	2.0	For delicate, washable textiles: e.g. made of silk, satin, synthetic fibres or blended fabrics.
Super 15	60	3.5/2.0***	1.0/-	Extra short program approx. 15 minutes, suitable for lightly soiled and small amounts of laundry.
Down	60	2.0	-/7.0	Machine-washable textiles filled with down (e.g. jackets, pillows, blankets).
Outdoor	40	2.0	-/7.0	Weatherproof and outdoor clothing with membrane coating and water-resistant textiles. Special program for drum hygiene or fluff removal.
Drum clean	40, 90	0.0	0.0	90° = antibacterial program, use no detergent 40° = antibacterial program, special drum cleaning detergent can be used
Spin		7.0	4.0/2.5	*cold = fluff rinsing program, to remove fluff accumulated in the tub during drying cycles Extra spin with selectable spin speed.
Rinse plus				Extra rinse with spin.

i The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load or cancel additional function, e.g. **Speed wash**.
1 Max. load according to GB 12021.4-2004 Black value; Max. load for washing; Red: Max. load for drying.
 *** default setting of selected programme additional function and drying function.
 * - Available when **Pre-wash** is selected, the default function will be reduced accordingly.
 ** - Obligatory; - optional.
 - If additional function **Speed wash** is selected, the default function will be reduced accordingly.

Drying table

Cottons/Coloureds (textiles made of cotton or linen such as underwear, T-shirts, sweaters, trousers)

Dry weight in kg	<0.5	0.5-1.0	1.0-2.0	2.0-3.0	3.0-4.0	-0.25	-0.5	-1.5	-2.5	
	Estimated drying time in minutes					Selectable drying time in minutes				
Cupboard dry	R _u 1	<55	55-70	70-100	100-135	135-160	30	60	90	120
	R _u 2	<65	65-80	80-110	110-150	150-170				
Recommended programme		Intensive dry (auto)					Intensive dry (time)			

Quilt/Terry towel (big or thick textiles such as bed sheets, table cloths, jeans, workwear)

Dry weight in kg	<0.5	0.5-1.0	1.0-2.0	2.0-3.0	3.0-4.0	-0.25	-0.5	-1.0	-2.0	
	Estimated drying time in minutes					Selectable drying time in minutes				
Cupboard dry	R _u 1	<70	70-80	80-120	120-150	150-180	30	60	90	120
	R _u 2	<75	75-90	90-130	130-160	160-180				
Recommended programme		Intensive dry (auto)					Intensive dry (time)			

Easy-Care (synthetic or mixed textiles such as shirts, sportswear, coats)

Dry weight in kg	<0.5	0.5-1.0	1.0-2.0	2.0-2.5		-0.25	-0.5	-1.0	-1.5	
	Estimated drying time in minutes					Selectable drying time in minutes				
Cupboard dry	R _u 1	<70	70-100	100-140	140-180					
	R _u 2	<100	100-150	150-180	180					
Recommended programme		Gentle dry (auto)					Gentle dry (time)			

¹ Times are approximated and refer to standard load, spinning programme and environment temperature.
ⁱ The maximum selectable drying time (time dry) is 120 minutes; if the load of the laundry to be dried is more than 2.5kg, please select autodry function. Auto dry is recommended to achieve good drying result and save energy. Time dry 15 minutes programme is for cooling down the laundry.

Consumption and noise values

Model	WVH24360TI	WVH28368TI
Grade*	1	1
Power consumption (Kwh/cycle)	1.18	1.18
Water consumption (L/cycle)	69	69
Washing efficiency	1.03	1.03
Noise value**		
Washing value	51dB(A)	50dB(A)
Spin value	66dB(A)	67dB(A)
Drying value	57dB(A)	55dB(A)
Washing/Drying consumption value***		
Power consumption (Kwh/kg)	0.77	0.77
Water consumption (L/kg)	19.0	18.5


* Energy consumption tested under standard programme **Intensive 60 °C**, and cancel the additional function of **Speed wash** according to GB12021.4-2004.
 ** Noise value tested according to GB19606-2004.
 *** Drying energy consumption tested under standard programme **Intensive 60 °C**, without additional function of **Speed wash**, select R_u 1: **Auto Dry** according to GB/T 23118-2008. The drying load (3.5kg) includes 1 pc of bedsheet, 6 pcs of pillowslips and some towels, dry the other loads in the second drying cycle.



8

Display and Option buttons

Display symbols

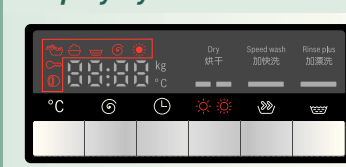

If the selected programme is running, the corresponding symbol will illuminate, indicating the current program status and information.
 * Contents of display may vary depending on selections.

Display information



In the standby phase, the time, kg, temperature and speed of the selected programme scrolls alternately on the display.

Option buttons

You can change the pre-set parameters (e.g. temperature, spin speed and dry mode) even while the selected programme is running. The effects depend on the progress of the programme. For example, pre-set spin speed can not be changed if the spin process is active; pre-set temperature can not be changed if the machine is heated; the drying modes can not be changed if the machine runs.
°C Temp.
 You can change the indicated washing temperature. The maximum washing temperature which can be selected depends on the programme that has been chosen → page 7.
Spin speed
 You can change the indicated spin speed. The maximum spin speed which can be selected depends on the chosen programme. If - - - is select, the load is held in the rinsing water.
Finish in
 When you select a programme, the respective programme duration is displayed. You can delay the start of the programme before it begins. The finish-in time indicates when the programme will be finished. It can be set in hour increments up to a maximum of 24h. Press and hold the **Finish in** button until the required number of hours is shown (h=hour). Select **Start/Reload**, the door is locked.

Childproof lock

Programme will not be changed by accidental operation.
 To activate the childproof lock:
 - After the programme starts or **finish in time** being activated → page 9, press and hold the **Finish in** button for 5 seconds;
 - Release when the symbol lights up. If button signal is on, an acoustic signal will be heard.
 When the programme ends, **Finish in** appears but the machine door is still locked, the **Start/Reload** indicator remains on to remind you to deactivate the childproof lock.
 To deactivate the childproof lock:
 - Touch the **Finish in** button until the symbol turns off.
 - Release the button.

Additional functions

See also **Programme overview** → page 7
 Select or cancel additional functions desired by touching **Speed wash** or **Rinse plus** button:
 - Indicator flashes, indicating the additional function has been selected.
 - You can cancel the additional function by touching function button again, then indicator is off.
 - You can select two additional functions at the same time.
Speed wash Shorten the washing time. For slightly soiled items.
Rinse Plus Additional rinse cycles, extended washing time. For areas with very soft water or for further improvement of the rinsing result.


Start/Reload

For starting or pausing the washing/drying programme, with the function of adding the laundry in the process.

Sleep mode

In standby mode, or scheduling a program duration and in the end of the process without operating the machine in over five minutes, the display will be shut down automatically to save power. The Start/Reload indicator will flash in the frequency of 0.5 seconds on and 1.5 seconds off.
 As long as you touch any key, the display will return to the original status.

Signal volume (for button signal and information signal)

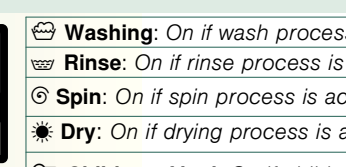

1. Activate setting mode for signal volume
 2. Set volume for ...

Childproof lock

Programme will not be changed by accidental operation.
 To activate the childproof lock:
 - After the programme starts or **finish in time** being activated → page 9, press and hold the **Finish in** button for 5 seconds;
 - Release when the symbol lights up. If button signal is on, an acoustic signal will be heard.
 When the programme ends, **Finish in** appears but the machine door is still locked, the **Start/Reload** indicator remains on to remind you to deactivate the childproof lock.
 To deactivate the childproof lock:
 - Touch the **Finish in** button until the symbol turns off.
 - Release the button.

Additional functions

See also **Programme overview** → page 7
 Select or cancel additional functions desired by touching **Speed wash** or **Rinse plus** button:
 - Indicator flashes, indicating the additional function has been selected.
 - You can cancel the additional function by touching function button again, then indicator is off.
 - You can select two additional functions at the same time.
Speed wash Shorten the washing time. For slightly soiled items.
Rinse Plus Additional rinse cycles, extended washing time. For areas with very soft water or for further improvement of the rinsing result.


Start/Reload

For starting or pausing the washing/drying programme, with the function of adding the laundry in the process.

Sleep mode

In standby mode, or scheduling a program duration and in the end of the process without operating the machine in over five minutes, the display will be shut down automatically to save power. The Start/Reload indicator will flash in the frequency of 0.5 seconds on and 1.5 seconds off.
 As long as you touch any key, the display will return to the original status.

Signal volume (for button signal and information signal)

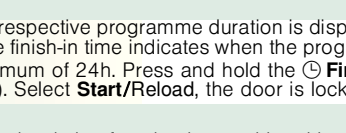

Childproof lock

Programme will not be changed by accidental operation.
 To activate the childproof lock:
 - After the programme starts or **finish in time** being activated → page 9, press and hold the **Finish in** button for 5 seconds;
 - Release when the symbol lights up. If button signal is on, an acoustic signal will be heard.
 When the programme ends, **Finish in** appears but the machine door is still locked, the **Start/Reload** indicator remains on to remind you to deactivate the childproof lock.
 To deactivate the childproof lock:
 - Touch the **Finish in** button until the symbol turns off.
 - Release the button.

Additional functions

See also **Programme overview** → page 7
 Select or cancel additional functions desired by touching **Speed wash** or **Rinse plus** button:
 - Indicator flashes, indicating the additional function has been selected.
 - You can cancel the additional function by touching function button again, then indicator is off.
 - You can select two additional functions at the same time.
Speed wash Shorten the washing time. For slightly soiled items.
Rinse Plus Additional rinse cycles, extended washing time. For areas with very soft water or for further improvement of the rinsing result.


Start/Reload

For starting or pausing the washing/drying programme, with the function of adding the laundry in the process.

Sleep mode

In standby mode, or scheduling a program duration and in the end of the process without operating the machine in over five minutes, the display will be shut down automatically to save power. The Start/Reload indicator will flash in the frequency of 0.5 seconds on and 1.5 seconds off.
 As long as you touch any key, the display will return to the original status.

Signal volume (for button signal and information signal)

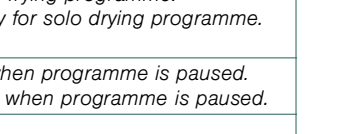

Childproof lock

Programme will not be changed by accidental operation.
 To activate the childproof lock:
 - After the programme starts or **finish in time** being activated → page 9, press and hold the **Finish in** button for 5 seconds;
 - Release when the symbol lights up. If button signal is on, an acoustic signal will be heard.
 When the programme ends, **Finish in** appears but the machine door is still locked, the **Start/Reload** indicator remains on to remind you to deactivate the childproof lock.
 To deactivate the childproof lock:
 - Touch the **Finish in** button until the symbol turns off.
 - Release the button.

Additional functions

See also **Programme overview** → page 7
 Select or cancel additional functions desired by touching **Speed wash** or **Rinse plus** button:
 - Indicator flashes, indicating the additional function has been selected.
 - You can cancel the additional function by touching function button again, then indicator is off.
 - You can select two additional functions at the same time.
Speed wash Shorten the washing time. For slightly soiled items.
Rinse Plus Additional rinse cycles, extended washing time. For areas with very soft water or for further improvement of the rinsing result.

Start/Reload

For starting or pausing the washing/drying programme, with the function of adding the laundry in the process.

Sleep mode

In standby mode, or scheduling a program duration and in the end of the process without operating the machine in over five minutes, the display will be shut down automatically to save power. The Start/Reload indicator will flash in the frequency of 0.5 seconds on and 1.5 seconds off.
 As long as you touch any key, the display will return to the original status.

Information on the display

Please close the door immediately because of rising water level. In pause status R_u 1 and HES are displayed alternately.
 Door is locked due to safety reasons (water level and/or temperature is too high). For washing programme, in pause status, R_u 1 is displayed. If you need to open the door, wait for the temperature to drop or drain the water (e.g. select **Spin** programme).
 For drying programme, if you need to open the door, wait for the temperature to drop or select 15 minutes drying programme to cool down the laundry.

Door cannot be opened

Door cannot be locked/unlocked due to high temperature of the door lock. Keep the machine switched on for a moment or switch off the machine, then switch on the machine again in 5 seconds.

No water supply

No water supply:
 - Turn on the tap.
 - Recover supply hose kinked or trapped.
 - Clean the inlet filter. → **Installation and maintenance instructions: Page 8.**
 Clean drain pump → **Installation and maintenance instructions: Page 8;** outlet pipe/drainage hose blocked.

The symbol flashes, indicating the laundry inside are unbalanced

The symbol flashes, indicating the laundry inside are unbalanced. The Washer-dryer's unbalanced load detection system can not adjust the imbalance, and subsequent washing or drying program is automatically stopped.
 If it happens in the drying process and the symbol h_ol flashes on the display, the cooling programme will keep running automatically until the symbol h_ol disappears. The door can be opened. If you want to take out the laundry soon, select **Intensive dry** and time dry 15 minutes programme to cool down the machine.
 - Wash small and large items of laundry together.

After the auto drying, the symbols and display alternately, suggesting that the effect may be not satisfactory

After the auto drying, the symbols and display alternately, suggesting that the effect may be not satisfactory.
 H₁: the laundry is too much; L₁: the laundry is too little.
 F: Set feedback of touch button and volume of buzzer. → page 10
 E: Information on the display. → page 11.

Emergency release

e.g. in the event of power failure
 If power cut when programme is running, the safety device will lock the door to avoid water flowing out of the machine. If the laundry has to be moved:
 - The programme will continue to run when the power is restored. The laundry can be removed when the programme ended.
 - Release emergency release to open the door if the laundry need to be removed immediately!
Risk of scalding.
 The detergent solution and laundry may be hot. If possible, leave it to cool down. Do not open the washer dryer door if water can be seen through the glass.
 - Set the programme selector to **Off** and disconnect the mains plug.
 - Drain the detergent solution → **Installation and maintenance instructions: page 8.**
 - Pull the emergency release with a tool and release. The washer dryer door can then be opened.

What to do if ...

Water is leaking out. - Fit/refit drainage hose correctly.
 - Tighten the screw connection of the supply hose.
 No water supply. Detergent not dispensed. - **Start/Reload** not selected?
 - Tap not turned on?
 - Filter blocked? Clean the filter → **Installation and maintenance instructions, Page 8.**
 - Supply hose kinked or trapped?
 - There is water in the drum already.
 Washer dryer door cannot be opened. - Safety function active. Programme stopped? → page 5.
 - - - (= no final spin) selected? → page 9.
 - Can be opened by emergency release only → page 13.
 - Childproof lock activated? Deactivate it → page 10.
 Programme does not start. - **Start/Reload** or **Finish-in time** selected?
 - Washer dryer door closed?
 - Clean the drain pump → **Installation and maintenance instructions, page 8.**
 - Clean waste pipe and/or drainage hose.
 Water not visible in the drum. - Not a fault - water below the visible area.
 Spin result not satisfactory. - Wash small and large items of laundry together.
 - Speed selected too low? → page 9.
 Spin cycle performed several times. - Not a fault - unbalanced load detection system adjusts the imbalance.
 Compartment not rinsed out completely. - Remove the insert. Clean detergent drawer and insert it again → **Installation and maintenance instructions, page 7.**
 Odour formation in the washer dryer. - Run the **Drum clean** programme without laundry.
 - Use standard detergents.
 Foam escapes from the detergent drawer. - Too much detergent used?
 - Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II in the detergent drawer.
 - Reduce detergent dosage for the next wash cycle.
 - Use commercially available low foam detergents and care products which are suitable for use in washer dryer.
 Excessive noise, vibrations and wandering during spin cycle. - Are the appliance feet fixed?
 - Secure the appliance feet → **Installation and maintenance instructions, page 5.**
 - Transportation safety devices removed?
 - Remove transport bolts → **Installation and maintenance instructions, page 3.**
 Display panel/indicator lamps do not function while the appliance is running. - Power failure?
 - Circuit breaker tripped? Reset the circuit breaker/change the fuse.
 - If the fault occurs repeatedly, call the customer service.
 Programme sequence longer than usual. - Not a fault - unbalanced load detection system adjusts imbalance by repeatedly distributing the laundry.
 - Not a fault - foam detection system active - adds an additional rinse cycle.
 Detergent residues on the laundry. - Occasionally, phosphate-free detergents contain water-insoluble residues.
 - Select **Rinse** or brush the laundry after washing.
 Drying duration is extended. - According to the water-cooling principle, high environment temperature will lead to weak drying efficiency, so the drying duration will be extended.
 - If dripping laundry is dried directly or laundry isn't fully dehydrated before drying, the drying duration will be extended.
 - Run the **Drum Clean** programme without laundry to remove fluff accumulated in the tub and drying system.
 - Tap not turned on? Turn on the tap even though you select the single drying programme.
 Drying programme does not start. - Drying programme not selected? → page 9, **function buttons instructions and page 7, Programme overview.**
 - Loading door not closed properly?
 - Flashes? Wash small and large items of laundry together.
 - Clean the pump. → Page 8, **Installation and maintenance instructions.**

What to do if ...

Spinning noise during drying - This is an innovative process called thermospinning to reduce energy consumption during drying.
 Some water spots leaves on laundry after drying. - Laundry is too little, resulting in the drying duration is too short and the remaining water in the system can not evaporate timely. Opening the door will remove the water.
 - Open the door gently; avoid opening the door rapidly.
 The drying result is not satisfying (laundry is not dry enough) - Inlet water temperature is too high.
 - The laundry is not spun well enough before drying - select the maximum spin speed in washing.
 - Machine overloads: please follow the load recommendation in program table and load display, do not overload machine, because of maximum load amount for drying is lower than for washing unload the machine after washing with maximum load for washing and separate the load into two drying cycles
 - The line voltage of the power supply is too low, too high, or unstable.
 - Thick multilayer textiles or textiles with thick fillings - these textiles are easily dried at the surface, but not inside. This equalization process may take long time. Please use time drying programs to completely dry this kind of textiles.
 Differently coloured fluff is redeposited on the laundry - Run the **Drum clean** programme without laundry inside to remove fluff accumulated in the tub during tumble drying.
 If you cannot correct a fault yourself or a repair is required:
 - Turn the programme selector to **Off** and pull the mains plug out of the socket.
 - Turn off the tap and call the customer services.

Safety instructions

Read and follow the operating and installation and maintenance instructions and all other information enclosed with the washer dryer.
 - Retain documents for subsequent use.
Risk of electric shock
 - Never pull out the mains plug by tugging the power cord.
 - Never insert/pull out the mains plug with damp hands.
Risk of death
 For worn-out appliances:
 - Pull out the mains plug.
 - Sever the power cord and discard together with the plug.
 - Destroy the latch on the washer dryer door.
 This will prevent children from locking themselves and risking their lives.
Risk of suffocation
 - Keep packaging, plastic film and packaging parts out of the reach of children.
Risk of poisoning
Risk of explosion
 - Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvents may lead to an explosion after being loaded into the washer dryer.
 Rinse items of laundry thoroughly by hand before.
Risk of injury
 - Washer dryer door may become very hot.
 - Take care when draining hot detergent solution.
 - Do not climb onto the washer dryer.
 - Do not lean on the open washer dryer door.
 - Do not touch the drum in case it is still spinning.
 - Make sure the pump cap is screwed on when the machine is running, avoid water leakage and touching the working components of pump.
 - If a drying programme was interrupted, the washer dryer and the laundry may be very hot, select **Intensive dry** or **Gentle dry** and set 15 minutes drying programme to cool down the laundry, then remove the laundry.

Safety instructions

Read and follow the operating and installation and maintenance instructions and all other information enclosed with the washer dryer.
 - Retain documents for subsequent use.
Risk of electric shock
 - Never pull out the mains plug by tugging the power cord.
 - Never insert/pull out the mains plug with damp hands.
Risk of death
 For worn-out appliances:
 - Pull out the mains plug.
 - Sever the power cord and discard together with the plug.
 - Destroy the latch on the washer dryer door.
 This will prevent children from locking themselves and risking their lives.
Risk of suffocation
 - Keep packaging, plastic film and packaging parts out of the reach of children.
Risk of poisoning
Risk of explosion
 - Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvents may lead to an explosion after being loaded into the washer dryer.
 Rinse items of laundry thoroughly by hand before.
Risk of injury
 - Washer dryer door may become very hot.
 - Take care when draining hot detergent solution.
 - Do not climb onto the washer dryer.
 - Do not lean on the open washer dryer door.
 - Do not touch the drum in case it is still spinning.
 - Make sure the pump cap is screwed on when the machine is running, avoid water leakage and touching the working components of pump.
 - If a drying programme was interrupted, the washer dryer and the laundry may be very hot, select **Intensive dry** or **Gentle dry** and set 15 minutes drying programme to cool down the laundry, then remove the laundry.

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

en Instruction manual

Read these instructions before switching on the washer dryer.
 Also follow the separate installation instructions.
 - Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
 - Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
 - Follow the safety instructions on page 13!

Your washer dryer

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by BOSCH. The washer dryer is distinguished by its economical use of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

Contents

- Intended use 1
- Preparation 1/2
- Preparation Drying 2/3/4
- Preparation Washing or Washing + Drying 2/3/4
- Set and adjust the programme 3/4
- After washing/drying 5
- Important information 6
- Programme overview 7
- Drying table 8
- Consumption and noise values 8
- Display and Option buttons 9
- Additional functions and Individual settings 10
- Information on the display 11
- Emergency release 11
- What to do if 12/13
- Safety instructions 13

Intended use

- For domestic use only.
- For the washing of machine-washable fabrics in a detergent solution.
- To be operated with cold mains water and commercially available low foam detergents and care products which are suitable for use in front loaded washer dryer.
- Operating conditions:
 - ambient temperature 0-40°C.
 - relative humidity of air: under 80% (tested at 25°C).

- ⚠ – Do not leave children unattended near the washer dryer!
- The washer dryer is not to be used by children or the old unattended. Keep pets away from the washer dryer!
- Install and operate the washer dryer in a room with a drain.
- Do not wash the carpet.
- In order to ensure your safety, you must plug the cable into a socket which is connected reliable with grounded earth.

GB Standards:

GB 4706.1-2005	GB 4706.20-2004	GB 4706.24-2008
GB 19606-2004	GB 4343.1-2009	GB 12021.4-2004
GB 17625.1-2003	GB/T4288-2008	GB/T 23118-2008

Chief Distributor: BSH Home Appliances (China) Co., Ltd.
20, 21F CN International Mansion No. 129 Zhongshan Road
210005 Nanjing, Jiangsu Province, P.R.China

Preparation

Before using for the first time -> see page 6

The washer dryer was tested before leaving the factory. To remove any water left over from testing procedures, the first cycle should be carried out without any laundry with **Drum clean** programme. → page 6: **Before using for the first**

⚠ Correct installation according to separate Installation and maintenance instructions.

Check the machine

- Never switch on a damaged machine!
- Inform your customer service!

Insert mains plug

⚠ With dry hands only!
Only hold the plug itself!

Turn on the tap


- According to the water-cooling principle, the cold water must be inlet in the course of drying process; turn on the water tap even if the drying programme is selected.

Protection of the environment/ Conservation tips

- Load the maximum amount of laundry to wash or dry for the particular programme → page 7, **Programme overview**
- Select **Intensive 60°C** and cancel the additional function of **Speed wash** to obtain good cleaning results with significantly lower energy consumption.
- Dose the detergent according to the manufacturer's instructions and water hardness.
- If the laundry is then to be dried in the appliance, select the highest selectable spin speed, because the more water that is spun out of the appliance, the less time and energy is required to dry it.
- Select **Drum clean** to clean the drum without any laundry. It is suggested that you can use this programme every 3 months or every 50 drying cycles.
- Select the washing and drying without interruption of **Spin** programme, if you want to dry the handwash laundry or dripping-wet laundry. Select the highest possible speed of dehydration according to the sorts of laundry, or else it will waste of time and energy!

Drying


Washing Washing+Drying without interruption

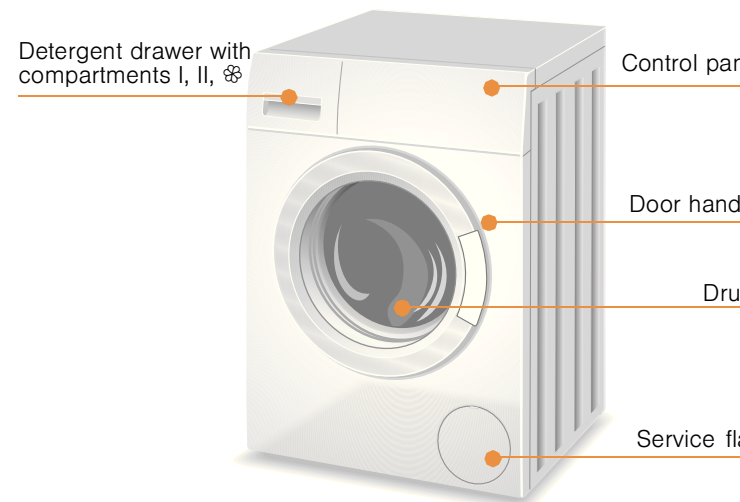

Display panel/
Option buttons/
Additional functions

Programme selector

Start/
Reload

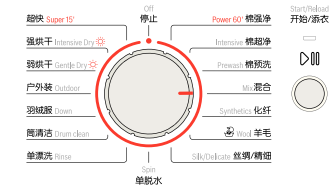

i Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.
Detailed programme overview → page 7/8

7

Removing laundry

 
Open washer dryer door and remove laundry.
Leave the washing machine door and detergent drawer open so that any residual water can evaporate!

6


Turn off the tap

5

Switch off


– Make sure that the programme is ended,  is displayed and the door lock is released. Set programme selector to ● **Off**.

 Programme ended when ...

... Start/Reload indicate light goes out and  or - - - - (if - - - - was selected, without drain) appears on the display field, the buzzer sounds. Set volume of buzzer → page 10.

If - - - - was selected, - - - - displays after the programme ends, touch the **Start/Reload** button:

 - The programme continues with draining the water and spinning the laundry (the default spin speed can be changed in advance, but before touching the **Start/Reload** button).
- If you only want to drain the water, touch the **Start/Reload** button after the draining process ends. The programme is paused and the door lock is released. You can remove the laundry.

If  flashes on the display field → high drum temperature. Cool-down programme is running until drum is cooled down.

 
 
4

Change the programme ...

If you have selected the wrong programme by mistake:

- Reselect the washing/drying programme.
- If required, adjust the programme setting and/or select additional functions. → page 9/10.
- Select **Start/Reload** button.

Pause the programme ...

- Touch the **Start/Reload** button.
- Follow the instructions in the display field: when  lights up and **YES** appears in the display, the door can be opened. If required, add/remove a laundry item; If  is displayed, the door cannot be opened due to a high water level in drum or a high temperature.
- Touch **Start/Reload** button to continue the programme.
- The pause function cannot be activated during drying phase.

... or terminate the programme

Washing programmes with high temperature:

- Cool down laundry: Select **Rinse**, touch **Start/Reload**.

Washing programmes at lower temperature:

- Select **Spin**, touch **Start/Reload**.

Drying programme:

- Select **Intensive dry**  or **Gentle dry** , touch  function button, set 15 minutes drying time (for cool down the laundry), then touch **Start/Reload** button.



Important information



Washing drying preparing/Protecting the laundry and the machine

- Empty pockets.
- Look out for metal items (paperclips, etc.).
- Trousers, knitwear and knitted textiles, e.g. Jersey garments, T-shirts or sweatshirts should be turned inside out.
- Ensure that the underwired bras is machine washable.
- Wash delicates in a net/bag (tights, curtains, underwired bras).
- Fasten zips, do up any buttons.
- Brush sand out of pockets and collars.
- Remove curtain hooks or place curtains in a net/bag.
- Use only tumble-dry textiles if you select drying.
- Before tumble-drying, handwash items should be spun using the appropriate spin speed.
- Remove as much water as possible before tumble-drying. Recommended spin speed for cottons is more than 1000 rpm; for easy-care is more than 800 rpm.
- In order to ensure uniform drying, sort the items according to fabric type and degree of drying required.
- Items which require ironing do not have to be ironed immediately after being tumble-dried. It is a good idea to fold or roll them together for a while, so that any remaining moisture is evenly distributed.
- To achieve good drying performance, dry quilt covers, terry towels or other big pieces of textile individually. Terry towels not more than 4 pieces (or 3 kg).



Before using for the first time

Do not put any laundry in the washer dryer. Turn on the tap, pour ½ measuring cup of detergent into dispenser II. Set the **Drum clean 40 °C** programme and select **Start/Reload**. At the end of the programme, set the programme selector to ● **Off**.





After a long time of no using or moving the machine

The water seal may be empty. If you select a single drying programme, at the beginning of the program water from detergent drawer will flow into the machine automatically to supply the water seal, which can prevent the overflow of the hot and humid steam in the drying programme.



Laundry with different degrees of soiling

		Wash new items separately.
Light		Do not prewash. If required, pretreat stains. Cancel the function of Speed wash . If the laundry is cotton fabric or linen fabric, select Intensive programme.
Heavy		Load less laundry, and cancel the function of Speed wash . If the laundry is cotton fabric or linen fabric, please select Prewash or Intensive programme.



Soaking

Load laundry of the same colour

Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set **Intensive 30 °C** programme and select **Start/Reload**. After approx. 10 minutes, select **Start/Reload**. After the required soaking time, reselect **Start/Reload** if the programme is to be continued or change the programme.



Dyeing/bleaching

Do not dye and chlorine bleach laundry in the washer dryer.



Outdoor

Outdoor programme is not possible for specialized Jackets. Check the laundry washing and drying labels before selecting programme to ensure the laundry is possible for machine washing and drying.

Programme overview

(see also the information on page 9, 10)

Programmes	°C	max. wash load (kg)	max. dry load (kg)	Type of laundry	Speed wash	Compartiment**	Rinse plus
Power 60'	* - 60	4.0	4.0/2.5	Hard-wearing textiles made of cotton or blended fabric.	✓	●	✓
Intensive	* - 90	7.0/4.0***	4.0/--	Long time washing program for heavily soiled hard-wearing textiles made of cotton or linen.	✓*	●	✓*
Prewash			4.0/--	Energy-intensive program for heavily soiled hard-wearing textiles made of cotton or linen.	✓*	●	✓*
Intensive dry ☀			4.0/--	Cotton/coloureds textiles, dry at normal heat setting.			✓*
Gentle dry ☀			--/2.5	Easy care textiles, dry at low heat setting.			✓*
Mix	* - 60	3.5	3.5/2.5	Mixed load consisting of textiles made of cotton and synthetics.	○	●	✓*
Synthetics			--/2.5	Textiles made of synthetic materials or blended fabrics.	○	●	✓*
👉 Wool			2.0	Hand and machine-washable wool or wool-rich textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). e.g. cashmere, ohair or angora. Also suited for hand washable silk.	○	●	
Silk/Delicate	* - 40			For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.	○	●	✓*
Super 15'		3.5/2.0***	1.0/--	Extra short program approx. 15 minutes; suitable for lightly soiled and small amounts of laundry.	○	●	✓*
Down	* - 60	2.0		Machine-washable textiles filed with down (e.g. jackets, pillows, blankets).	●	●	✓*
Outdoor	* - 40		--/1.0	Weatherproof and outdoor clothing with membrane coating and water-resistant textiles.	●	●	✓*
Drum clean	* , 40, 90	0.0		Special program for drum hygiene or fluff removal 90° = antibacterial program, use no detergent 40° = antibacterial program, special drum cleaning detergent can be used *cold = fluff rinsing program, to remove fluff accumulated in the tub during drying cycles	○		
Spin		7.0	4.0/2.5	Extra spin with selectable spin speed.			✓*
Rinse				Extra rinse with spin.			✓*

i The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load or cancel additional function, e.g. **Speed wash**.

i Max. load according to GB 12021.4-2004.Black value: Max load for washing; Red: Max load for drying.

* Default setting of selected programme additional function and drying function.

** ☀ : Available when **Pre-wash** was selected; ● : Obligate; ○ : optional.

*** If additional function **Speed wash** is selected, the default Max.load will be reduced accordingly.

BSH Electrical Appliances (Jiangsu) Co., Ltd.	WWH24360TI	9000784195
No.208 Yaoxin Road, Nanjing Economy and Technology Development Zone	WWH28368TI	1112
210046, Jiangsu Province, P.R.China		

Drying table

Cottons/Coloureds (textiles made of cotton or linen such as underwear, T-shirts, sweaters, trousers)

Dry weight in kg	<0.5	0.5~1.0	1.0~2.0	2.0~3.0	3.0~4.0	~0.25	~0.5	~1.5	~2.5	
	Estimated drying time in minutes					Selectable drying time in minutes				
Cupboard dry	Rule 1	<55	55~70	70~100	100~135	135~160	30	60	90	120
	Rule 2	<65	65~80	80~110	110~150	150~170				
Recommended programme	Intensive dry (auto)					Intensive dry (time)				

Quilt/Terry towel (big or thick textiles such as bed sheets, table cloths, jeans, workwear)

Dry weight in kg	<0.5	0.5~1.0	1.0~2.0	2.0~3.0	3.0~4.0	~0.25	~0.5	~1.0	~2.0	
	Estimated drying time in minutes					Selectable drying time in minutes				
Cupboard dry	Rule 1	<70	70~80	80~120	120~150	150~180	30	60	90	120
	Rule 2	<75	75~90	90~130	130~160	160~180				
Recommended programme	Intensive dry (auto)					Intensive dry (time)				

Easy-Care (synthetic or mixed textiles such as shirts, sportswear, coats)

Dry weight in kg	<0.5	0.5~1.0	1.0~2.0	2.0~2.5		~0.25	~0.5	~1.0	~1.5
	Estimated drying time in minutes					Selectable drying time in minutes			
Cupboard dry	Rule 1	<70	70~100	100~140	140~180	30	60	90	120
	Rule 2	<100	100~150	150~180	180				
Recommended programme	Gentle dry (auto)					Gentle dry (time)			

i Times are approximated and refer to standard load, spining programme and environment temperature.

i The maximum selectable drying time (time dry) is 120 minutes, if the load of the laundry to be dried is more than 2.5kg, please select autody function. Auto dry is recommended to achieve good drying result and save energy. Time dry 15 minutes programme is for cooling down the laundry.


Consumption and noise values

Model	WVH24360TI	WVH28368TI
Grade*	1	1
Power consumption (Kwh/cycle)	1.18	1.18
Water consumption (L/cycle)	69	69
Washing efficiency	1.03	1.03
Noise value**		
Washing value	51dB(A)	50dB(A)
Spin value	66dB(A)	67dB(A)
Drying value	57dB(A)	55dB(A)
Washing/Drying consumption value***		
Power consumption (Kwh/kg)	0.77	0.77
Water consumption (L/kg)	19.0	18.5

* Energy consumption tested under standard programme **Intensive 60 °C**, and cancel the additional function of **Speed wash** according to GB12021.4-2004.

** Noise value tested according to GB19606-2004.

*** Drying energy consumption tested under standard programme **Intensive 60 °C**, without additional function of **Speed wash**, select **Rule 1: Auto Dry** according to GB/T 23118-2008. The drying load (3.5kg) includes 1 pc of bedsheet, 6 pcs of pillowslips and some towels, dry the other loads in the second drying cycle.

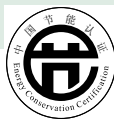

Display and Option buttons

Display symbols



- Washing:** On if wash process is running.
- Rinse:** On if rinse process is running.
- Spin:** On if spin process is active.
- Dry:** On if drying process is active.
- Childproof lock:** On if childproof lock is activated. Activate/deactivate childproof lock → page 10
- Door:** On if door can be opened.
- Overdosage:** Foam detected. Maybe too much detergent.

i

If the selected programme is running, the corresponding symbol will illuminate, indicating the current program status and information.

* Contents of display may vary depending on selections.

Display information



kg, e.g. 2.0 kg*: maximum load recommendation in kg for selected washing/drying programme. →page 7, **Programme overview**.

°C, e.g. 50 °C*: the set temperature for selected programme.

Time, e.g. 1:30*: programme remaining time; 2:45*: Finish in time defined by user. →page 9, **Finish in**; 1:20*: Time dry, drying time defined manually →page 9, **(Dry)**.

Dry:
Rule 1: Auto dry mode 1, for solo drying programme.
Rule 2: Auto dry mode 2, extra dry for solo drying programme.
OFF: Drying programme is off.

YES: On if door can be opened when programme is paused.
NO: On if door can not be opened when programme is paused.

End: End of programme

- - - -: On if - - - - is chosen or the programme is off.

FF*: Set feedback of touch button and volume of buzzer. →page 10

E: FF*: Information on the display. →page 11.

i

In the standby phase, the time, kg, temperature and speed of the selected programme scrolls alternately on the display.

* Example of display may vary depending on selections.

Option buttons

You can change the pre-set parameters (e.g. temperature, spin speed and dry mode) even while the selected programme is running. The effects depend on the progress of the programme. For example, pre-set spin speed can not be changed if the spin process is active; pre-set temperature can not be changed if the machine is heated; the drying modes can not be changed if the machine runs.

°C Temp.

You can change the indicated washing temperature. The maximum washing temperature which can be selected depends on the programme that has been chosen → page 7.

Spin speed

You can change the indicated spin speed. The maximum spin speed which can be selected depends on the chosen programme. If - - - is select, the load is held in the rinsing water.

Finish in

When you select a programme, the respective programme duration is displayed. You can delay the start of the programme before it begins. The finish-in time indicates when the programme will be finished. It can be set in hour increments up to a maximum of 24h. Press and hold the **Finish in** button until the required number of hours is shown (h=hour). Select **Start/Reload**, the door is locked.

Dry

You can activate, deactivate and set the drying function by touching this option button. You can select desired drying programme and mode when mode of washing and drying without interruption is selected; When single drying programme is selected, you can choose auto dry (Rule 1/Rule 2) or time dry with desired drying time. Set drying duration → page 8.

Additional functions and Individual settings

Additional functions

See also **Programme overview** → page 7

Select or cancel additional functions desired by touching (**Speed wash**) or (**Rinse plus**) button:

- Indicator flashes, indicating the additional function has been selected.
- You can cancel the additional function by touching function button again, then indicator is off.
- You can select two additional functions at the same time.

Speed wash Shorten the washing time. For slightly soiled items.

Rinse Plus Additional rinse cycles, extended washing time. For areas with very soft water or for further improvement of the rinsing result.

Start/Reload

For starting or pausing the washing/drying programme, with the function of adding the laundry in the process.


Sleep mode

In standby mode, or scheduling a program duration and in the end of the process without operating the machine in over five minutes, the display will be shut down automatically to save power. The Start/Reload indicator will flash in the frequency of 0.5 seconds on and 1.5 seconds off.


As long as you touch any key, the display will return to the original status.

Signal volume (for button signal and information signal)

1. Activate setting mode for signal volume

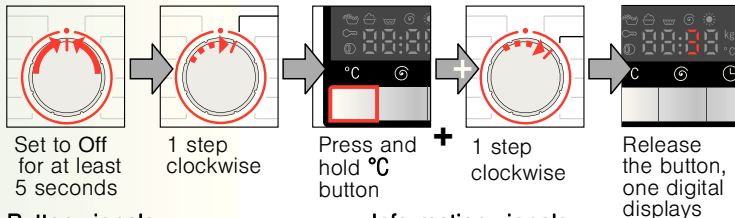

2. Set volume for ...

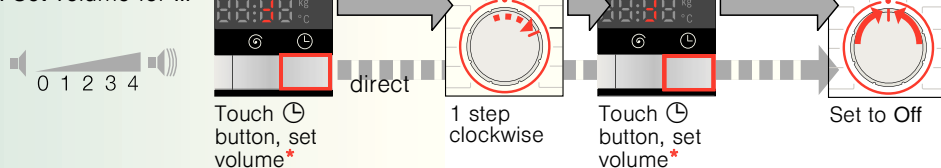

* If required, set repeatedly.

Childproof lock

Programme will not be changed by accidental operation.

To activate the childproof lock:

- After the programme starts or **finish in time** being activated → page 9, press and hold the **Finish in** button for 5 seconds;
- Release when the symbol lights up. If button signal is on, an acoustic signal will be heard.

When the programme ends, appears but the machine door is still locked, the **Start/Reload** indicator remains on to remind you to deactivate the childproof lock.

To deactivate the childproof lock:


- Touch the **Finish in** button until the symbol turns off.
- Release the button.

symbol flashes if the programme has been changed while childproof lock is activated. If the childproof lock is deactivated while the programme selector is on a different position from when the childproof lock was activated, the running programme will be halted.

Information on the display

	Please close the door immediately because of rising water level. In pause status and are displayed alternately.
	Door is locked due to safety reasons (water level and/or temperature is too high). For washing programme, in pause status, is displayed. If you need to open the door, wait for the temperature to drop or drain the water (e.g. select Spin programme). - For drying programme, if you need to open the door, wait for the temperature to drop or select 15 minutes drying programme to cool down the laundry.
	Door cannot be locked/unlocked due to high temperature of the door lock. Keep the machine switched on for a moment or switch off the machine, then switch on the machine again in 5 seconds.
	Door cannot be unlocked due to high temperature after the drying programme. If you want to take out the laundry soon, select Intensive dry and set 15 minutes drying programme to cool down the machine.
	No water supply: - Turn on the tap. - Recover supply hose kinked or trapped. - Clean the inlet filter. → <i>Installation and maintenance instructions: Page 8.</i>
	Clean drain pump → <i>Installation and maintenance instructions: Page 8;</i> outlet pipe/drainage hose blocked.
	The symbol flashes, indicating the laundry inside are unbalanced. The Washer-dryer's unbalanced load detection system can not adjust the imbalance, and subsequent washing or drying program is automatically stopped. If it happens in the drying process and the symbol flashes on the display, the cooling programme will keep running automatically until the symbol disappears. The door can be opened. If you want to take out the laundry soon, select Intensive dry and time dry 15 minutes programme to cool down the machine. - Wash small and large items of laundry together.
	After the auto drying, the symbols and display alternately, suggesting that the effect may be not satisfactory. : the laundry is too much; : the laundry is too little.
other displays	Switch off the appliance, wait 5 seconds and switch it back on. If the display appears again, call the customer service → <i>Warranty card.</i>

Emergency release *e.g. in the event of power failure*

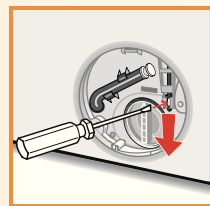

If power cut when programme is running, the safety device will lock the door to avoid water flowing out of the machine. If the laundry has to be moved:

- The programme will continue to run when the power is restored. The laundry can be removed when the programme ended.
- Release emergency release to open the door if the laundry need to be removed immediately!



Risk of scalding.
The detergent solution and laundry may be hot.
If possible, leave it to cool down.
Do not open the washer dryer door if water can be seen through the glass.

- Set the programme selector to **Off** and disconnect the mains plug.
- Drain the detergent solution → *Installation and maintenance instructions: page 8.*
- Pull the emergency release with a tool and release. The washer dryer door can then be opened.

What to do if ...

Water is leaking out.	<ul style="list-style-type: none"> - Fit/refit drainage hose correctly. - Tighten the screw connection of the supply hose.
No water supply. Detergent not dispensed.	<ul style="list-style-type: none"> - Start/Reload not selected? - Tap not turned on? - Filter blocked? Clean the filter → <i>Installation and maintenance instructions, Page 8.</i> - Supply hose kinked or trapped? - There is water in the drum already.
Washer dryer door cannot be opened.	<ul style="list-style-type: none"> - Safety function active. Programme stopped? → <i>page 5.</i> - - - - (= no final spin) selected? → <i>page 9.</i> - Can be opened by emergency release only → <i>page 13.</i> - Childproof lock activated? Deactivate it → <i>page 10.</i>
Programme does not start.	<ul style="list-style-type: none"> - Start/Reload or Finish-in time selected? - Washer dryer door closed?
Detergent solution is not drained.	<ul style="list-style-type: none"> - Clean the drain pump → <i>Installation and maintenance instructions, page 8.</i> - Clean waste pipe and/or drainage hose.
Water not visible in the drum.	<ul style="list-style-type: none"> - Not a fault - water below the visible area.
Spin result not satisfactory.	<ul style="list-style-type: none"> - Wash small and large items of laundry together. - Speed selected too low? → <i>page 9.</i>
Spin cycle performed several times.	<ul style="list-style-type: none"> - Not a fault - unbalanced load detection system adjusts the imbalance.
Compartment ☼ not rinsed out completely.	<ul style="list-style-type: none"> - Remove the insert. Clean detergent drawer and insert it again → <i>Installation and maintenance instructions, page 7.</i>
Odour formation in the washer dryer.	<ul style="list-style-type: none"> - Run the Drum clean ☼ programme without laundry. - Use standard detergents.
Foam escapes from the detergent drawer.	<ul style="list-style-type: none"> - Too much detergent used? - Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II in the detergent drawer. - Reduce detergent dosage for the next wash cycle. - Use commercially available low foam detergents and care products which are suitable for use in washer dryer.
Excessive noise, vibrations and wandering during spin cycle.	<ul style="list-style-type: none"> - Are the appliance feet fixed? - Secure the appliance feet → <i>Installation and maintenance instructions, page 5.</i> - Transportation safety devices removed? - Remove transport bolts → <i>Installation and maintenance instructions, page 3.</i>
Display panel/indicator lamps do not function while the appliance is running.	<ul style="list-style-type: none"> - Power failure? - Circuit breaker tripped? Reset the circuit breaker/change the fuse. - If the fault occurs repeatedly, call the customer service.
Programme sequence longer than usual.	<ul style="list-style-type: none"> - Not a fault - unbalanced load detection system adjusts imbalance by repeatedly distributing the laundry. - Not a fault - foam detection system active - adds an additional rinse cycle.
Detergent residues on the laundry.	<ul style="list-style-type: none"> - Occasionally, phosphate-free detergents contain water-insoluble residues. - Select Rinse or brush the laundry after washing.
Drying duration is extended.	<ul style="list-style-type: none"> - According to the water-cooling principle, high environment temperature will lead to weak drying efficiency, so the drying duration will be extended. - If dripping laundry is dried directly or laundry isn't fully dehydrated before drying, the drying duration will be extended. - Run the Drum Clean ☼ programme without laundry to remove fluff accumulated in the tub and drying system. - Tap not turned on? Turn on the tap even though you select the single drying programme.
Drying programme does not start.	<ul style="list-style-type: none"> - Drying programme not selected? → <i>page 9, ☼ ☼ function buttons instructions and page 7, Programme overview.</i> - Loading door not closed properly? - ☼ flashes? Wash small and large items of laundry together. - Clean the pump. → <i>Page 8, Installation and maintenance instructions.</i>

What to do if ...

Spinning noise during drying	<ul style="list-style-type: none"> - This is an innovative process called thermospinning to reduce energy consumption during drying.
Some water spots leaves on laundry after drying.	<ul style="list-style-type: none"> - Laundry is too little, resulting in the drying duration is too short and the remaining water in the system can not evaporate timely. Opening the door will remove the water. - Open the door gently; avoid opening the door rapidly.
The drying result is not satisfying (laundry is not dry enough)	<ul style="list-style-type: none"> - Inlet water temperature is too high. - The laundry is not spun well enough before drying - select the maximum spin speed in washing. - Machine overloads: please follow the load recommendation in program table and load display, do not overload machine, because of maximum load amount for drying is lower than for washing unload the machine after washing with maximum load for washing and separate the load into two drying cycles - The line voltage of the power supply is too low, too high, or unstable. - Thick multilayer textiles or textiles with thick fillings - these textiles are easily dried at the surface, but not inside. This equalization process may take long time. Please use time drying programs to completely dry this kind of textiles.
Differently coloured fluff is redeposited on the laundry	<ul style="list-style-type: none"> - Run the Drum clean ☼ programme without laundry inside to remove fluff accumulated in the tub during tumble drying.
If you cannot correct a fault yourself or a repair is required:	<ul style="list-style-type: none"> - Turn the programme selector to ● Off and pull the mains plug out of the socket. - Turn off the tap and call the customer services.



Safety instructions

- Read and follow the operating and Installation and maintenance instructions and all other information enclosed with the washer dryer.
 - Retain documents for subsequent use.
- Risk of electric shock**
- Never pull out the mains plug by tugging the power cord.
 - Never insert/pull out the mains plug with damp hands.
- Risk of death**
- For worn-out appliances:
- Pull out the mains plug.
 - Sever the power cord and discard together with the plug.
 - Destroy the latch on the washer dryer door. This will prevent children from locking themselves and risking their lives.
- Risk of suffocation**
- Keep packaging, plastic film and packaging parts out of the reach of children.
- Risk of poisoning**
- Keep detergents and care products out of the reach of children.
- Risk of explosion**
- Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvents may lead to an explosion after being loaded into the washer dryer.
 - Rinse items of laundry thoroughly by hand before.
- Risk of injury**
- Washer dryer door may become very hot.
 - Take care when draining hot detergent solution.
 - Do not climb onto the washer dryer.
 - Do not lean on the open washer dryer door.
 - Do not touch the drum in case it is still spinning.
 - Make sure the pump cap is screwed on when the machine is running, avoid water leakage and touching the working components of pump.
 - If a drying programme was interrupted, the washer dryer and the laundry may be very hot, select **Intensive dry** ☼ or **Gentle dry** ☼ and set 15 minutes drying programme to cool down the laundry, then remove the laundry.



Washer dryer XQG70-24360 (WVH24360TI)
XQG70-28368 (WVH28368TI)



BOSCH

en Instruction manual



Read these instructions before switching on the washer dryer.

Also follow the separate installation instructions.



- Any failure and losses caused by ingoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and liability.
- Please keep all documents in a safety place for further reference. If you have any doubt, please contact our local service center.
- Follow the safety instructions on page 13!