

## Your new dryer

**Congratulations** - you have chosen to buy a modern, high-quality Bosch domestic appliance.

The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements → [page 6](#).

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

### Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment - WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: [www.bosch-home.com](http://www.bosch-home.com)



Observe the safety instructions on page 13.



Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.

## Contents

	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Important information	6
■ Overview of programmes	7
■ Installation	8
■ Frost protection / Transport	8
■ Care and cleaning	9
■ Technical data	10
■ Optional accessories	10
■ Normal noises	11
■ What to do if ... / After-sales service	12
■ Safety instructions	13

Select On/Off for buzzer at the end of the programme.

Reduced temperature for delicate fabrics that require a longer drying time; e.g. polyacrylics, polyamide, elastane, acetate silk.

Reduces creasing and prolongs the 'reduced ironing' phase after the programme has finished.

## Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.



Do not leave children unsupervised near the dryer. Keep pets away from the dryer.

The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

## Preparation

Installation → [page 8](#)



Never start the dryer if it is damaged. Inform your after-sales service.



Make sure your hands are dry. Hold the plug only.



Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading. See programme overview on page 7.




Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading. See programme overview on page 7.

## Selecting and adjusting the programme

Select the drying programme ...

... and adapt to individual requirements

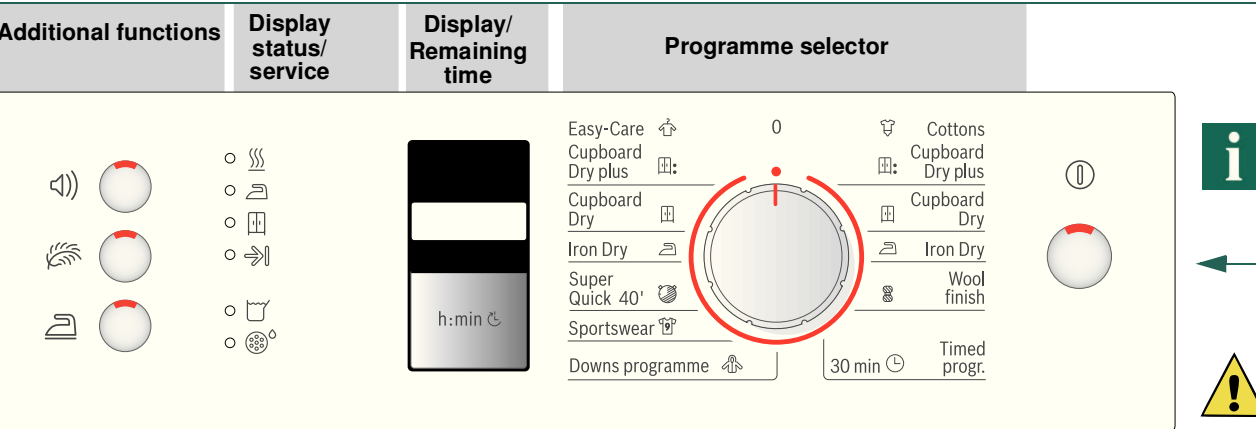

All buttons are sensitive and only need to be touched lightly.

Press the **(start)** button

Only use the dryer with the fluff filter inserted.

## Drying



Do not pull out/empty the condensation container when drying is in progress.

## Emptying condensation

Empty the container **after each** drying cycle, not during drying.

1. Remove the condensation container and hold it level.
  2. Pour out the condensation.
  3. Always push container in fully until it clicks into place.
- If the **(Container)** indicator lamp flashes despite the container having been emptied → [Filter in condensation container, page 9](#).

## Cleaning the fluff filter

The fluff filter consists of two parts.

Clean the inner fluff filter **after every** drying cycle.

1. Open the door. Remove fluff from the door/door area.
2. Pull out the inner fluff filter and open it out.
3. Remove the fluff (by wiping the filter with your hand). If the fluff filter is heavily soiled or blocked, rinse it under running water and dry thoroughly.

Clean the outer fluff filter **after every 5** drying cycles:

4. Remove the outer fluff filter.
5. Open it and remove any fluff. Rinse under running water and dry thoroughly.

## Switching off the dryer

Turn the programme selector to **0 (Off)**. Do not leave laundry in the dryer.

## Removing the laundry

Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **(Less ironing)** function is selected).

## End of programme

as soon as the **(AntiCrease/End)** indicator lamp lights up.

## Interrupt programme

Adding or removing laundry.



The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.

1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the **(start)** button. The remaining time is updated after a few minutes.

## Information on laundry ...



### Labelling of fabrics

Follow the manufacturer's care information.

- ☑ Dry at normal temperature.
- ☑ Dry at low temperature → in addition, select **(Low heat)**.
- ☒ Do not machine dry.



Always observe the safety instructions on page 13.

Do not tumble-dry the following fabrics, for example:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



### Drying tips

- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → [page 7](#)
- **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Cupboard Dry plus** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

### Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → [Programme overview page 7](#).
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

## Important Information

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensation container must be cleaned regularly.



Never operate the dryer without the fluff filters and/or condensation container with filter.

### Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → [page 4](#).

### Filter in the condensation container

The filter in the condensation container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensation container before cleaning the filter → [page 4/9](#).

### Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets. Do not dry non-breathable fabrics. Avoid drying items that produce a lot of fluff. Woollens should be refreshed only, using the woollens programme.

## Programme overview see also page 5.

After drying, laundry is to be ...		max. 7 kg		max. 3.5 kg		max. 2 kg		max. 1.5 kg		max. 2 kg		max. 3 kg		max. 3 kg	
☑ Cottons		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Easy-Care		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Super Quick 40°		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Sportswear		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Downs programme		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Wool finish		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Timed progr. 30 min		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ T-shirt		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Shirts		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Trousers		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Skirts/dresses		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Sportswear		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Anoraks		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Towelling gowns		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Underwear		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Socks		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Bed linen		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Table linen		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Terry towels		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry
☑ Tea towels		☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Cupboard Dry plus	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry	☑ Iron Dry	☑ Cupboard Dry



## Installation



- Scope of delivery: dryer, installation and operating instructions.
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.

## 1.

### Setting up the dryer


- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.



Take all accessory parts out of the drum.  
The drum must be empty.



Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.

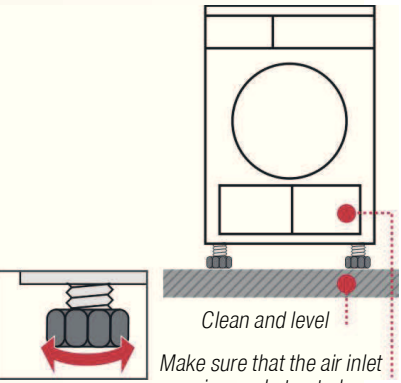

## 2.

### Mains connection see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

## Frost protection



Do not operate the dryer if there is a danger of frost.



### Preparation

1. Empty the condensation container → page 4.
2. Select any programme using the programme selector.
3. Press the **(start)** button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensation container again.
5. Turn the programme selector to **0 (Off)**.

## Transport



- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.



The dryer contains residual water; this can flow out if the dryer is tilted.

## Care and cleaning



Appliance must be switched off.



### Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. **Cln** appears in the display panel. Do not pull out the condensation container during the cleaning process.



### Dryer housing, control panel, air intake


Wipe with a soft, damp cloth.  
Do not use harsh cleaning agents or solvents.  
Remove detergent and cleaning agent residue immediately.




### Filter in the condensation container

The filter is cleaned automatically when the condensation container is emptied.  
However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.


1. Pull out the condensation container.

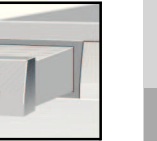


2. Pull the filter out of its snap-in lock.

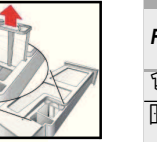

3. Clean the filter under running water or in the dishwasher.

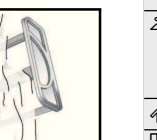

4. Refit the filter.

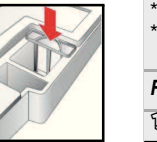

5. Insert the condensation container so that it locks into place.



Only operate the dryer with the filter inserted.



### Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.



1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or abrasive materials.



## Technical data

● <b>Dimensions (DxWxH)</b>	60 x 60 x 85 cm (height adjustable)
<b>Weight</b>	approximately 51 kg
<b>Max. capacity</b>	7 kg
<b>Condensation container</b>	4.0 l
<b>Connection voltage</b>	220-240 V
<b>Connected load</b>	max. 1000 W
<b>Fuse protection</b>	10 A
<b>Ambient temperature</b>	5 - 35 °C
<b>Product number</b>	
<b>Production number</b>	under the door

The rating plate can be found on the back of the dryer.

- **Drum interior light (depending on model) (bulb E14, 25 W)**

The drum lights up after the door is opened or closed, and after the programme starts, and switches off automatically. Changing the bulb → page 12.

## Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
👕 <b>Cottons 7 kg</b>				
🗄 Cupboard Dry*	1400 rpm	(50%)	134 min	1.75 kWh
	1000 rpm	(60%)	155 min	2.03 kWh
	800 rpm	(70%)	175 min	2.32 kWh
👚 Iron Dry*	1400 rpm	(50%)	98 min	1.24 kWh
	1000 rpm	(60%)	119 min	1.52 kWh
	800 rpm	(70%)	139 min	1.81 kWh

👤 <b>Easy-Care 3.5 kg</b>				
🗄 Cupboard Dry*	800 rpm	(40%)	54 min	0.57 kWh
	600 rpm	(50%)	68 min	0.72 kWh

\* Programme setting for testing in accordance with applicable standard EN61121.  
\*\* The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Fabrics/programmes	Drying time	Annual energy consumption
👕 <b>Cottons 7 kg / 3.5 kg*</b>		
🗄 Cupboard Dry***	124 min / per cycle	258 kWh / per year

\*\*\* Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

## Optional accessories (from after-sales service using order number)

**Washer-dryer stack connection set**  
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set.

WTZ 11310 Same as WTZ 11310, but with pull-out worktop.

WTZ 11300


WTZ 10290 **Installation underneath the worktop**  
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.

WMZ 20500


**Platform**  
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

## Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

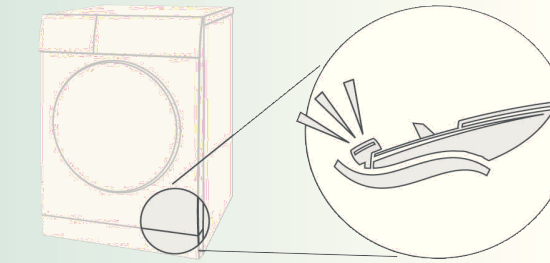


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

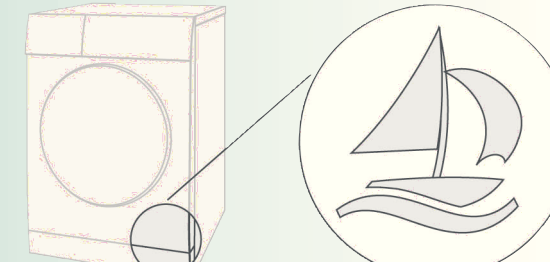

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

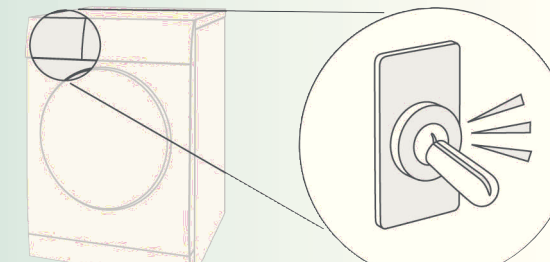

The automatic cleaning process causes a clicking noise.

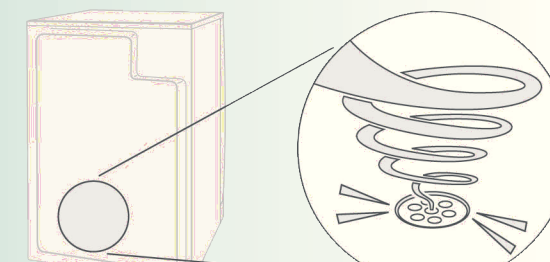

The process of pumping the condensation into the condensation container generates pumping noises.

## What to do if...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:  
– **GB 0844 8928979** (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)  
– **IE 01450 2655**

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door).  
Turn the programme selector to **0 (Off)** and unplug the mains plug from the socket.

● The <b>(start)</b> indicator lamp does not light up.	Mains plug plugged in? Programme selected?
● The display panel light and indicator lights (depending on model) go out and the <b>(start)</b> indicator light flashes.	Energy-saving mode is activated → see the separate <i>Energy-saving mode</i> instructions.
● The <b>(Container)</b> indicator lamp and the <b>(start)</b> button are flashing.	Empty the condensation container → page 4. Clean the condensation container filter if necessary → page 9. Dryer transported? → Wait 2 hours and start again.
● The <b>(Filter)</b> indicator lamp and the <b>(start)</b> button are flashing.	Rinse the fluff filter under running water → page 4.
● <b>Cln</b> appears in the display panel.	Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensation container.
● Dryer does not start.	<b>(start)</b> button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it click into place.
● The required degree of dryness was not achieved or the drying time was too long.	Rinse the fluff filters under running water → page 4. Empty the condensation container. Check the water drainage (if applicable). Ambient temperature greater than 35 °C? → Ventilate the room. Air inlet may be blocked → Keep clear. Was an unsuitable programme selected? → page 7. Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Power failure → Restart dryer. Fine layer of limescale on the moisture sensors → Clean the sensors → page 6.
● Laundry damp.	Select the next drying programme up or use the Timed programme as a supplement → page 7. Warm laundry feels damper than it really is.
● The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated. Air inlet blocked? → Keep clear.
● Power failure.	Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.
● Other intermittent noises and vibrations.	Not an error. Normal noises → page 11.
● Loud humming noise for several seconds.	Has the condensation container been properly inserted? → Push the condensation container all the way in. Not an error. Normal noises → page 11.
● The interior light is not working (depending on model).	Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screwdriver) and replace the bulb → page 10. Close the cover cap. Never operate the dryer without a cover cap.

## Safety instructions



- Emergency ONLY use the dryer...**
  - Pull the appliance plug out of the socket immediately or disconnect the fuse.
  - in rooms inside the house.
  - to dry fabrics.
- The dryer must NEVER...**
  - be used for purposes other than those described above.
  - be modified in terms of its technology or properties.
- Hazards**
  - The dryer must not be used by children or persons who have not been instructed in its use.
  - Do not leave children unsupervised near the dryer.
  - Keep pets away from the dryer.
  - Remove all objects from pockets, and lighters in particular → **Risk of explosion.**
  - Do not lean or sit on the door → **Risk of tipping.**
- Installation**
  - Secure loose cables → **Risk of tripping.**
  - Do not operate a dryer if there is a risk of frost.
- Mains connection**
  - Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
  - The cable cross-section must be sufficient.
  - Only use earth-leakage circuit breakers with the following symbol:
  - The appliance plug and socket must be compatible.
  - Do not use multiple plugs/connectors and/or extension cables.
  - Do not touch or hold the appliance plug with wet hands → **Risk of electric shock.**
  - Never pull the appliance plug out of the socket by its cable.
  - Do not damage the mains lead → **Risk of electric shock.**
- Operation**
  - Only load the drum with laundry.
  - Check the contents before you switch the dryer on.
  - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion.**
  - Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → **Risk of explosion**
  - Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material.
  - When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → **Risk of fire/explosion.**
  - Switch off the dryer once the programme has ended.
  - The water from condensation is not drinking water and may be contaminated with fluff.
- Defect**
  - Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service.
  - Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
  - Always pull the mains plug out of the socket before changing the bulb for the interior light → **Risk of electric shock.**
- Spare parts**
  - Only use genuine spare parts and accessories for safety reasons.
- Disposal**
  - Pull out the appliance plug, **then** cut off the mains cable from the appliance. Dispose of at a municipal waste disposal facility.
  - Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg.
  - Packaging: Keep all packaging out of reach of babies and children → **Risk of suffocation.**
  - All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.



Dryer

en Instruction manual



# Your new dryer

**Congratulations** - you have chosen to buy a modern, high-quality Bosch domestic appliance.


The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements → *page 6*.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.


## Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.


This appliance is designated according to European directive  2002/96/EC which governs waste electrical and electronic equipment - WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: [www.bosch-home.com](http://www.bosch-home.com)




Observe the safety instructions on *page 13*.




Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.


Contents	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Notes on laundry	5
Important Information	6
Overview of programmes	7
Installation	8
Frost protection / Transport	8
Care and cleaning	9
Technical data	10
Optional accessories	10
Normal noises	11
What to do if ... / After-sales service	12
Safety instructions	13

- Select On/Off for buzzer at the end of the programme.
- Reduced temperature for delicate fabrics  that require a longer drying time; e.g. polyacrylics, polyamide, elastane, acetate silk.
- Reduces creasing and prolongs the 'reduced ironing' phase after the programme has finished.


## Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.
-  Do not leave children unsupervised near the dryer. Keep pets away from the dryer. The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.


## Preparation Installation → page 8



Never start the dryer if it is damaged. Inform your after-sales service.



Make sure your hands are dry. Hold the plug only.





Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading. See programme overview on *page 7*.



 
 
 
 

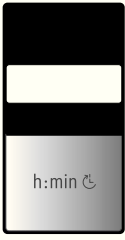
 


 
 



 



 
 
 

 






## Selecting and adjusting the programmes

... and adapt to individual requirements

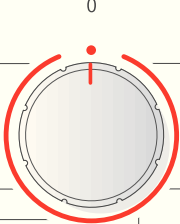Press

  All buttons are sensitive. They need to be touched gently.

 Only use the dryer if the door is closed and the drum is empty.

Additional functions	Display status/service	Display/Remaining time	Programme selector
  	   	 h:min	<div><div>Easy-Care  Cupboard Dry plus  Cupboard Dry  Iron Dry  Super Quick 40'  Sportswear  Downs programme </div><div>0  30 min </div><div>Cottons  Cupboard Dry plus  Cupboard Dry  Iron Dry  Wool finish  Timed progr. </div></div>
 <b>(Signal)</b>		<b>h:min</b> 	End of programme after 1-24 hours (button may need to be pressed several times) can always be set to the nearest full hour.
 <b>(Low heat)</b>		<b>Cln</b>	Automatic cleaning of the heat exchanger.
 <b>(Less ironing)</b>		<b>(Container)</b>	drying, iron dry, cupboard dry, anti-crease /end Empty the condensation container. Clean the filter in the condensation container if necessary → <i>page 9</i> .
	 <b>(Filter)</b>		Rinse the fluff filters under running water → <i>page 4</i> .

Inspecting the dryer

Connecting the mains plug

Loading laundry

Selecting the programme

Starting the programme

Individual requirements

Positive and only lightly.

Press the (start) button

Remove the fluff filter

## Drying

Condensation container with filter

Drum interior light (depending on model)

Control panel

Drum

Two-part fluff filter

Air inlet

## Drying



Do not pull out/empty the condensation container when drying is in progress.




## Emptying condensation

Empty the container **after each** drying cycle, not during drying.

1. Remove the condensation container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.

If the (**Container**) indicator lamp flashes despite the container having been emptied → *Filter in condensation container, page 9.*

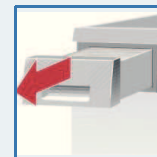

## Cleaning the fluff filter

The fluff filter consists of two parts.


Clean the inner fluff filter **after every** drying cycle.

1. Open the door. Remove fluff from the door/door area.
2. Pull out the inner fluff filter and open it out.
3. Remove the fluff (by wiping the filter with your hand).  
If the fluff filter is heavily soiled or blocked, rinse it under running water and dry thoroughly.

Clean the outer fluff filter **after every 5** drying cycles:

4. Remove the outer fluff filter.
5. Open it and remove any fluff.  
Rinse under running water and dry thoroughly.


6. Close and re-insert the fluff filter.

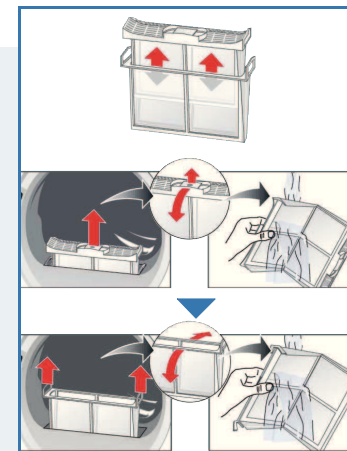

## Switching off the dryer

Turn the programme selector to **0 (Off)**.

Do not leave laundry in the dryer.

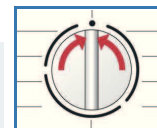

## Removing the laundry

Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional (**Less ironing**) function is selected).

**End of programme** as soon as the **(AntiCrease/End)** indicator lamp lights up.



**Interrupt programme** Adding or removing laundry.

The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.


1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the (**start**) button. The remaining time is updated after a few minutes.

# Information on laundry ...



## Labelling of fabrics

### Follow the manufacturer's care information.

- ☐ Dry at normal temperature.
- ☐ Dry at low temperature → in addition, select  (Low heat).
- ☒ Do not machine dry.





Always observe the safety instructions on page 13.

Do not tumble-dry the following fabrics, for example:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



## Drying tips

- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7  **Wool finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the : **Cupboard Dry plus** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

## Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

# Important Information

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensation container must be cleaned regularly.



Never operate the dryer without the fluff filters and/or condensation container with filter.

## Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process.

The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4.

## Filter in the condensation container

The filter in the condensation container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensation container before cleaning the filter → page 4/9.

## Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets.

Do not dry non-breathable fabrics.

Avoid drying items that produce a lot of fluff.

Woollens should be refreshed only, using the woollens programme.

# Programme overview

see also page 5.



After drying, laundry is to be ...																
☞ ironed ☞ lightly ironed ☞ not ironed ☞ mangled																
	T-shirt	Shirts	Trousers	Skirts/dresses	Sportswear	Work clothing	Anoraks	Towelling gowns	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/		
☞ Cottons	Suitable for cottons, coloureds and linens.															
☞ Iron Dry	☞	☞	☞	☞		☞			☞		☞	☞			☞	
☞ Cupboard Dry									☞	☞	☞		☞		☞	
☞ Cupboard Dry plus								☞	☞	☞	☞		☞		☞	
☞ Easy-Care	For non-iron laundry made of synthetic fibres and mixed fabric, cotton.															
☞ Iron Dry	☞	☞	☞	☞	☞	☞			☞							
☞ Cupboard Dry	☞	☞			☞											
☞ Cupboard Dry plus							☞				☞	☞				
☞ Super Quick 40'	For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, composition of the laundry to be dried, residual moisture in the fabric and size of the load.															
☞ Sportswear	For fabrics with a membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry removable internal lining from jackets/trousers separately).															
☞ Downs programme	Garments with down feather fillings, pillows and blankets. By non quilt loads-please add just 1 piece per drying.															
☞ Wool finish	For woollen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.															
☞ Timed progr. 30 min	For pre-dried, multi-layered fabrics or small, individual items of laundry. Also for subsequent drying.															

9210 / 9000813187

Robert Bosch Hausgeräte GmbH  
Carl-Wery-Str. 34  
81739 München/Deutschland

WTTW84360SN



## Installation



- Scope of delivery: dryer, installation and operating instructions.
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.


1.

### Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.



Take all accessory parts out of the drum.  
The drum must be empty.

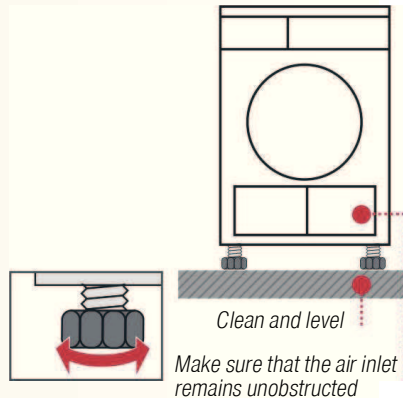

Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.

2.

### Mains connection see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

## Frost protection



Do not operate the dryer if there is a danger of frost.



### Preparation

1. Empty the condensation container → page 4.
2. Select any programme using the programme selector.
3. Press the **ⓘ (start)** button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensation container again.
5. Turn the programme selector to **0 (Off)**.

## Transport



- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.



The dryer contains residual water; this can flow out if the dryer is tilted.

## Care and cleaning



Appliance must be switched off.



### Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. **Cln** appears in the display panel. Do not pull out the condensation container during the cleaning process.



### Dryer housing, control panel, air intake


Wipe with a soft, damp cloth.  
Do not use harsh cleaning agents or solvents.  
Remove detergent and cleaning agent residue immediately.




### Filter in the condensation container

The filter is cleaned automatically when the condensation container is emptied. However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.

1. Pull out the condensation container.

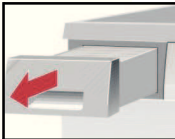


2. Pull the filter out of its snap-in lock.

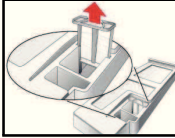

3. Clean the filter under running water or in the dishwasher.



4. Refit the filter.

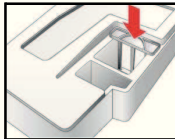

5. Insert the condensation container so that it locks into place.



Only operate the dryer with the filter inserted.



### Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or abrasive materials.



## Technical data

● <b>Dimensions (DxWxH)</b>	60 x 60 x 85 cm (height adjustable)
<b>Weight</b>	approximately 51 kg
<b>Max. capacity</b>	7 kg
<b>Condensation container</b>	4.0 l
<b>Connection voltage</b>	220-240 V
<b>Connected load</b>	max. 1000 W
<b>Fuse protection</b>	10 A
<b>Ambient temperature</b>	5 - 35 °C
<b>Product number</b>	
<b>Production number</b>	under the door

The rating plate can be found on the back of the dryer.

- **Drum interior light** (depending on model) (**bulb E14, 25 W**)  
The drum lights up after the door is opened or closed, and after the programme starts, and switches off automatically. Changing the bulb → *page 12*.

## Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
👕 Cottons 7 kg				
🗋 Cupboard Dry*	1400 rpm	(50%)	134 min	1.75 kWh
	1000 rpm	(60%)	155 min	2.03 kWh
	800 rpm	(70%)	175 min	2.32 kWh
👕 Iron Dry*	1400 rpm	(50%)	98 min	1.24 kWh
	1000 rpm	(60%)	119 min	1.52 kWh
	800 rpm	(70%)	139 min	1.81 kWh
👕 Easy-Care 3.5 kg				
🗋 Cupboard Dry*	800 rpm	(40%)	54 min	0.57 kWh
	600 rpm	(50%)	68 min	0.72 kWh

\* Programme setting for testing in accordance with applicable standard EN61121.

\*\* The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Fabrics/programmes	Drying time	Annual energy consumption
<b>Cottons 7 kg / 3.5 kg*</b>		
☒ Cupboard Dry***	124 min / per cycle	258 kWh / per year

\*\*\* Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

## Optional accessories (from after-sales service using order number)

**WTZ 11310 Washer-dryer stack connection set**  
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set.


**WTZ 11300** Same as WTZ 11310, but with pull-out worktop.

**WTZ 10290 Installation underneath the worktop**  
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.


**WMZ 20500 Platform**  
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

## Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

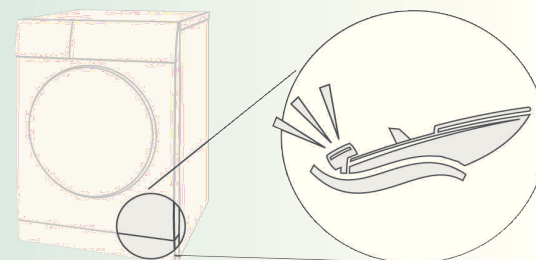


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

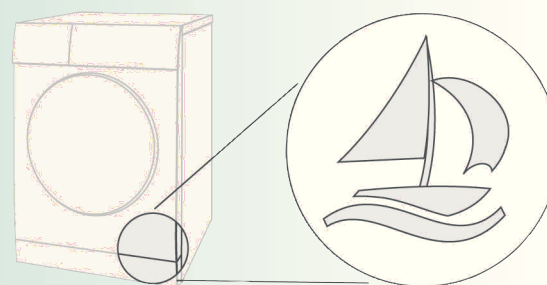

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

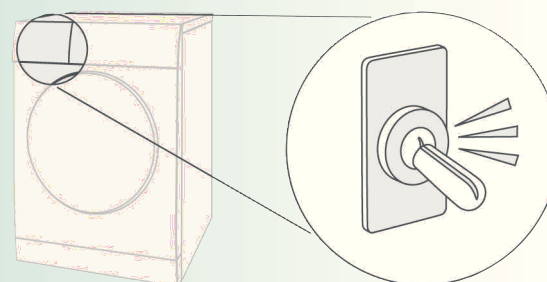

The automatic cleaning process causes a clicking noise.

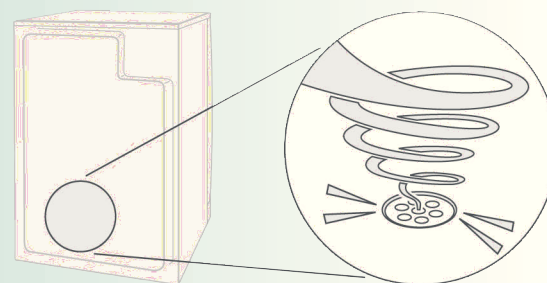

The process of pumping the condensation into the condensation container generates pumping noises.



What to do if...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:


- **GB 0844 8928979** (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
- **IE 01450 2655**

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door). Turn the programme selector to **0 (Off)** and unplug the mains plug from the socket.

● The <b>ⓘ (start)</b> indicator lamp does not light up.	Mains plug plugged in? Programme selected?
● The display panel light and indicator lights ( <i>depending on model</i> ) go out and the <b>ⓘ (start)</b> indicator light flashes.	Energy-saving mode is activated → see the separate <i>Energy-saving mode</i> instructions.
● The <b>☑ (Container)</b> indicator lamp and the <b>ⓘ (start)</b> button are flashing.	Empty the condensation container → <i>page 4</i> . Clean the condensation container filter if necessary → <i>page 9</i> . Dryer transported? → Wait 2 hours and start again.
● The <b>⚙ (Filter)</b> indicator lamp and <b>ⓘ (start)</b> button are flashing.	Rinse the fluff filter under running water → <i>page 4</i> .
● <b>CIn</b> appears in the display panel.	Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensation container.
● Dryer does not start.	<b>ⓘ (start)</b> button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it click into place.
● The required degree of dryness was not achieved or the drying time was too long.	Rinse the fluff filters under running water → <i>page 4</i> . Empty the condensation container. Check the water drainage (if applicable). Ambient temperature greater than 35 °C? → Ventilate the room. Air inlet may be blocked → Keep clear. Was an unsuitable programme selected? → <i>page 7</i> . Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Power failure → Restart dryer. Fine layer of limescale on the moisture sensors → Clean the sensors → <i>page 6</i> .
● Laundry damp.	Select the next drying programme up or use the Timed programme as a supplement → <i>page 7</i> . Warm laundry feels damper than it really is.
● The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated. Air inlet blocked? → Keep clear.
● Power failure.	Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.
● Other intermittent noises and vibrations.	Not an error. Normal noises → <i>page 11</i> .
● Loud humming noise for several seconds.	Has the condensation container been properly inserted? → Push the condensation container all the way in. Not an error. Normal noises → <i>page 11</i> .
● The interior light is not working ( <i>depending on model</i> ).	Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screwdriver) and replace the bulb → <i>page 10</i> . Close the cover cap. Never operate the dryer without a cover cap.

Safety instructions



<b>Emergency</b>	– Pull the appliance plug out of the socket immediately or disconnect the fuse.
<b>ONLY use the dryer...</b>	– in rooms inside the house. – to dry fabrics.
<b>The dryer must NEVER...</b>	– be used for purposes other than those described above. – be modified in terms of its technology or properties.
<b>Hazards</b>	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets, and lighters in particular → <b>Risk of explosion</b> . – Do not lean or sit on the door → <b>Risk of tipping</b> .
<b>Installation</b>	– Secure loose cables → <b>Risk of tripping</b> . – Do not operate a dryer if there is a risk of frost.
<b>Mains connection</b>	– Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol:  – The appliance plug and socket must be compatible. – Do not use multiple plugs/connectors and/or extension cables. – Do not touch or hold the appliance plug with wet hands → <b>Risk of electric shock</b> . – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → <b>Risk of electric shock</b> .
<b>Operation</b>	– Only load the drum with laundry. Check the contents before you switch the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → <b>Risk of fire/explosion</b> . – Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → <b>Risk of explosion</b> – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material. – When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → <b>Risk of fire/explosion</b> . – Switch off the dryer once the programme has ended. – The water from condensation is not drinking water and may be contaminated with fluff.
<b>Defect</b>	– Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service. – Always pull the mains plug out of the socket before changing the bulb for the interior light → <b>Risk of electric shock</b> .
<b>Spare parts</b>	– Only use genuine spare parts and accessories for safety reasons.
<b>Disposal</b>	– Pull out the appliance plug, <b>then</b> cut off the mains cable from the appliance. Dispose of at a municipal waste disposal facility. – Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg. – Packaging: Keep all packaging out of reach of babies and children → <b>Risk of suffocation</b> . – All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.



en Instruction manual