

Your new dryer

Congratulations! - You have chosen a modern, high-quality domestic appliance from Bosch. A distinctive feature of the dryer is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

Disposal in an environmentally-responsible manner
Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE). The guideline provides an EU-wide framework for the return and recycling of old appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com

Observe the safety instructions on page 11.

Read these instructions and observe the separate installation instructions for the **condensate hose connection** before operating the dryer.

Contents	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Notes on laundry	5
Maintenance and cleaning	6
Overview of programmes	7
Installation	8
Transport	8
Technical data	9
Optional accessories	9
What to do if... / After-sales service	10
Safety instructions	11

Intended use

- for domestic use only,
- only to be used for drying fabrics that have been washed with water.

Do not leave children unsupervised near the dryer. Keep pets away from the dryer. The dryer may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they are supervised or have been instructed by a responsible person.

Preparing for installation see page 8. Before drying for the first time, run the drying operation once with the dryer empty → page 7.

Never start the dryer if it is damaged! Inform your after-sales service.

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry


Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.

Selecting and adjusting the programme

Select the drying programme ...

... and adapt to individual requirements


Additional functions / status / service indicators Programme selector Detailed programme overview → page 7.

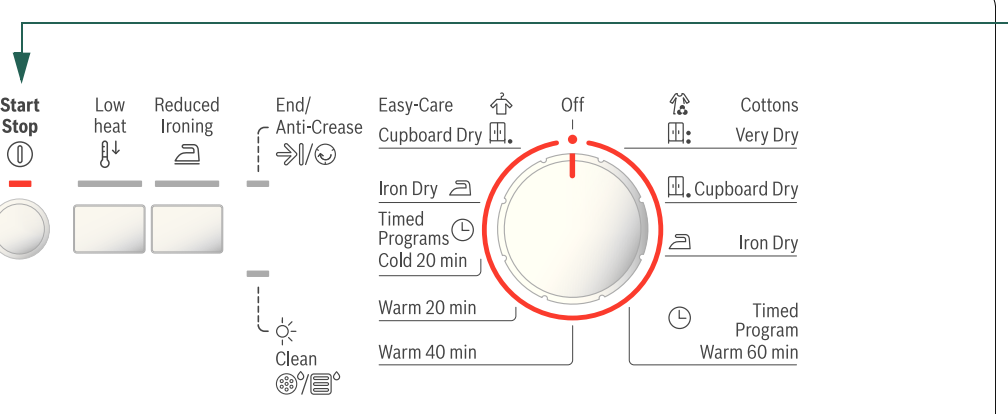

Clean	Lit → check the hose for condensation outlet. Flashing → clean the fluff filter and/or air cooler.
Low Heat	Reduced temperature for delicate fabrics, e.g. polyacrylics, polyamide, elastane, acetate silk; for a longer drying time.
Reduced Ironing	Reduces creasing and prolongs the anti-crease phase after the end of the programme.

Only operate the dryer with the fluff filter inserted!

Drying

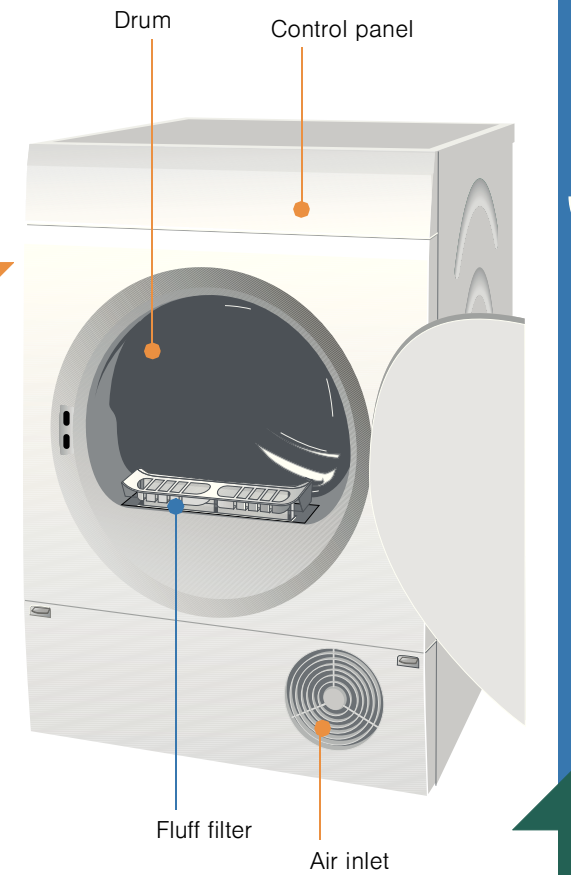


Drying



Cleaning the fluff filter


Clean the fluff filter after each drying operation.

 - Open the door, remove the fluff filter. If the fluff filter is heavily soiled or blocked, rinse it with warm water, and dry it thoroughly.
- Re-insert the fluff filter so that you hear it click into place.
- Remove fluff from door/door area.



Switching off the dryer

 Turn the programme selector to Off. Do not leave laundry in the dryer.



Removing the laundry

Your dryer is equipped with an automatic anti-crease function. The drum is moved at specific time intervals for 30 minutes once the programme has ended. The laundry remains loose and soft (for 90 minutes if the Reduced Ironing additional function is selected → depending on the model).



End of the programme

once the End/Anti-Crease indicator light flashes.



Adding more or removing laundry



The drying operation can be paused to add more laundry or remove laundry. The programme must then be continued until it has finished.

The drum and the door may be hot!

- Open door, the drying process is interrupted.
- Load or remove laundry and close door.
- If required, select a new programme and additional functions.
- Press the Start/Stop button.

Information on laundry ...

Labelling of fabrics

Follow the manufacturer's care information.

- Drying at normal temperature.
- Drying at a lower temperature → select Low Heat as well.
- Do not machine dry.

The safety information MUST be observed → page 11! Do not tumble-dry the following fabrics for example:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) → they may crease.
- Laundry contaminated with oil.

Before using the dryer for the first time

- Do not put any laundry inside the dryer. Turn the programme selector to Timed Programmes (→ page 7) and press Start/Stop. At the end of the programme, turn the programme selector to Off.

Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with larger items (e.g. hand towels).
- Close zips, hooks and eyelets, and button up covers. Tie cloth belts, bands, etc. together.
- Do not over-dry easy-care laundry → risk of creasing! Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink during their first drying. → Do not use the Very Dry programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads → this improves the drying result.

Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview, page 7.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying operation → page 4.
- Do not obstruct or seal up the air inlet.

Care and cleaning



Only when switched off!

Dryer housing, control panel, air inlet, moisture sensors

- Wipe off with a soft, damp cloth.
- Do not use harsh cleaning agents/solvents.
- Remove detergent and cleaning agent residue immediately.

Clean the air cooler 5 or 6 times a year or if Clean flashes after cleaning the fluff filter.


Air cooler

Remove the air cooler before cleaning it.


- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.




- Unlock the maintenance door (1).
- Open the maintenance door fully (2).

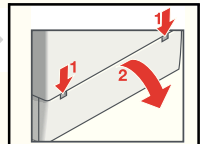

- Turn both locking levers outwards (1).
- Remove the front insert (2).

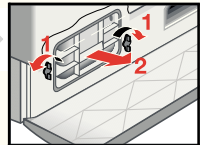


- Remove the air cooler.

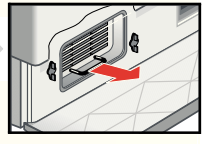

Do not damage the air cooler. When cleaning, use warm water only. Do not use hard or sharp-edged objects.

- Clean the air cooler completely. Let it drip completely dry. Clean the seals.

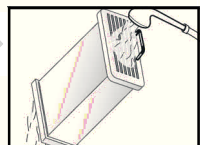

- Insert the air cooler first (handle facing down), then the front insert.
- Turn back both locking levers.
- Lock the maintenance door.

Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

- Open the door.
- Clean the moisture sensors using a slightly damp sponge with a rough surface.



Do not use steel wool or abrasive materials.

Your new dryer

Congratulations! - You have chosen a modern, high-quality domestic appliance from Bosch.
A distinctive feature of the dryer is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Disposal in an environmentally-responsible manner
Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive  2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The guideline provides an EU-wide framework for the return and recycling of old appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com



Observe the safety instructions on page 11.



Read these instructions and observe the separate installation instructions for the **condensate hose connection** before operating the dryer.

Contents

	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Notes on laundry	5
Maintenance and cleaning	6
Overview of programmes	7
Installation	8
Transport	8
Technical data	9
Optional accessories	9
What to do if... / After-sales service	10
Safety instructions	11

Intended use

- for domestic use only,
- only to be used for drying fabrics that have been washed with water.



*Do not leave children unsupervised near the dryer.
Keep pets away from the dryer.
The dryer may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they are supervised or have been instructed by a responsible person.*

Preparing for installation see page 8.


Before drying
run the drying o



*Never start the dryer if it is damaged!
Inform your after-sales service.*



*Make sure your hands are dry.
Hold by the plug only.*

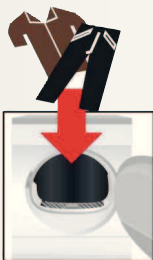

Sorting and lo

*Remove all items from pockets.
Check for cigarette lighters.
The drum must be empty prior to loading.*

Selecting and adjusting th


Select the d

... and adapt to indiv

Detailed programm

Additional functions /
status / service indicators

Programme selector

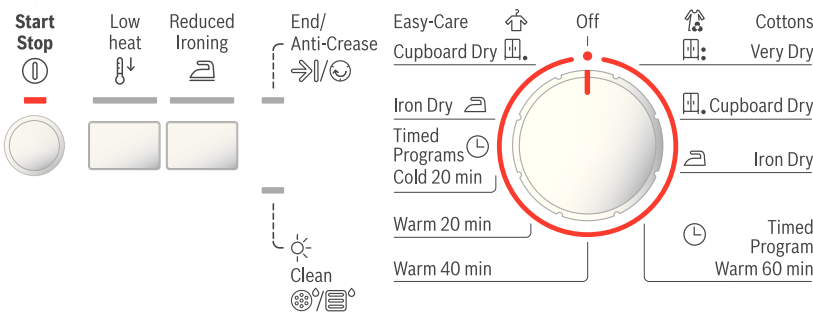

Clean  / 

Lit → check the hose for condensation outlet.

Flashing → clean the fluff filter and/or air cooler.

Low Heat 

Reduced temperature for delicate fabrics  e.g. polyacrylics, polyamide, elastane, acetate silk; for a longer drying time.

Reduced Ironing 

Reduces creasing and prolongs the anti-crease phase after the end of the programme.

ing for the first time,
operation once with the dryer empty → page 7.

pecting the
dryer

necting the
mains plug

loading laundry

the programme
drying programme ...


individual requirements

overview → page 7.

Press the **Start/Stop** button

Only operate the dryer
with the fluff filter
inserted!


Drying

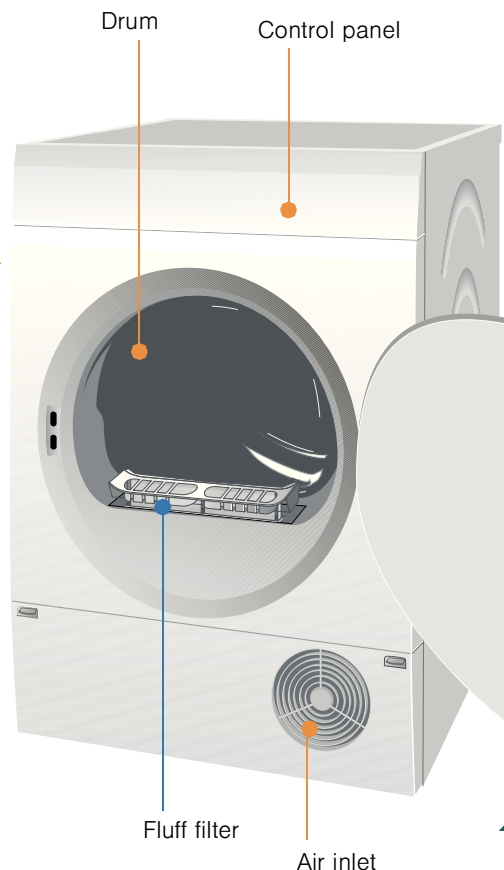

Cleaning the fluff filter


Clean the fluff filter after each drying operation.

 1. Open the door, remove the fluff filter.
2. Remove the fluff (by wiping the filter with your hand).
If the fluff filter is heavily soiled or blocked, rinse it with warm water, and dry it thoroughly.
3. Re-insert the fluff filter so that you hear it click into place.
4. Remove fluff from door/door area.



Switching off the dryer

 
Turn the programme selector to **Off**.
Do not leave laundry in the dryer.



Removing the laundry

Your dryer is equipped with an automatic anti-crease function. The drum is moved at specific time intervals for 30 minutes once the programme has ended. The laundry remains loose and soft (for 90 minutes if the **Reduced Ironing** additional function is selected → depending on the model).

 End of the programme once the **End/Anti-Crease** indicator light flashes.



Adding more or removing laundry



The drying operation can be paused to add more laundry or remove laundry.
The programme must then be continued until it has finished.



The drum and the door may be hot!

1. Open door, the drying process is interrupted.
2. Load or remove laundry and close door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- ☐ Drying at normal temperature.
- ☐ Drying at a lower temperature → select **Low Heat**  as well.
- ☒ Do not machine dry.



The safety information MUST be observed → page 11!

Do not tumble-dry the following fabrics for example:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) → they may crease.
- Laundry contaminated with oil.



Before using the dryer for the first time

- Do not put any laundry inside the dryer. Turn the programme selector to Timed Programmes (→ page 7) and press  **Start/Stop**. At the end of the programme, turn the programme selector to **Off**.



Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with larger items (e.g. hand towels).
- Close zips, hooks and eyelets, and button up covers. Tie cloth belts, bands, etc. together.
- Do not over-dry easy-care laundry → risk of creasing!
Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink during their first drying.
→ Do not use the : **Very Dry** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads → this improves the drying result.

Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it
→ Programme overview, page 7.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying operation → page 4.
- Do not obstruct or seal up the air inlet.

Care and cleaning



Only when switched off!



Dryer housing, control panel, air inlet, moisture sensors

- Wipe off with a soft, damp cloth.
- Do not use harsh cleaning agents/solvents.
- Remove detergent and cleaning agent residue immediately.

Clean the air cooler 5 or 6 times a year
or if **Clean** /  flashes after cleaning the fluff filter.




Air cooler


Remove the air cooler before cleaning it.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door (1).
2. Open the maintenance door fully (2).

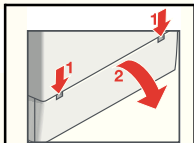

3. Turn both locking levers outwards (1).
4. Remove the front insert (2).

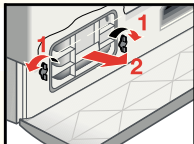


5. Remove the air cooler.



Do not damage the air cooler.

When cleaning, use warm water only. Do not use hard or sharp-edged objects.

6. Clean the air cooler completely. Let it drip completely dry.
Clean the seals.

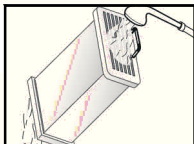

7. Insert the air cooler first (handle facing down), then the front insert.
8. Turn back both locking levers.
9. Lock the maintenance door.



Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

1. Open the door.
2. Clean the moisture sensors using a slightly damp sponge with a rough surface.



Do not use steel wool or abrasive materials.

Programme overview

see also page 5.

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying, laundry is to be ...			☞ ironed	☞ lightly ironed	☞ not ironed	☞ mangled
PROGRAMMES						
TEXTILE TYPE AND INFORMATION						
****☞ Cottons	max. 6 kg	Hard-wearing fabrics, boil-proof fabrics made of cotton or linen.				
***☞ Easy-Care	max. 3 kg	Non-iron laundry made of synthetic fibres and mixed fabric, easy-care cotton.				
Iron Dry ☞	☞ ☞ ☞ ☞	The condition of the laundry means it is suitable for ironing (iron clothes in order to avoid creases).				
Cupboard Dry ☞.	☞ ☞	For single-layered laundry.				
*Very Dry ☞:	☞	For laundry with thick, multi-layered parts.				
☞ Timed Programs						
Warm 60 min						
Warm 40 min	max. 3 kg	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.				
Warm 20 min						
☞ Timed Programs Cold 20 min	max. 3 kg	All types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.				

*Only for the programme ☞ Cottons.

**Dryness levels can be selected individually → Very Dry ☞, Cupboard Dry ☞ and Iron Dry ☞ (depending on the model). Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9208/9000814042



Robert Bosch Hausgeräte GmbH
Carl-Wery-Str. 34
81739 München/Deutschland

WTC84101AU

Installation

- Delivery specification: dryer, instructions for installation and use, and the separate installation instructions for the condensate hose connection.
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.
- Do not set up in a room that is susceptible to frost.
- Freezing water may cause damage.
- If in doubt, have the appliance connected by an expert.

1. Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Keep the air inlet on the front of the dryer clear.
- Keep the area around the dryer clean.
- Adjust the height of the dryer using the threaded feet at the front.
Do not remove the threaded feet under any circumstances.




Take all accessory parts out of the drum. The drum must be empty.



Do not install the dryer behind a door or sliding door, as these may prevent the dryer door from opening.

Observing this instruction may stop a child from becoming shut inside the dryer and having its life put in danger.

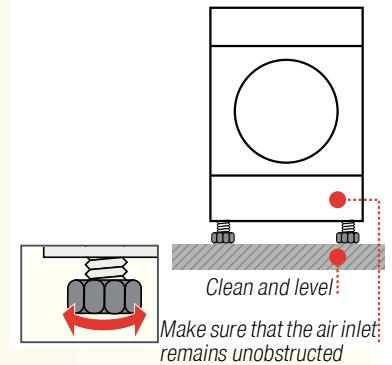

2. Installing the hose for condensation outlet

→ see the separate installation instructions for the condensate hose connection.



The dryer must have its condensate drain line installed and run to a suitable drain!

3. Mains connection safety information → page 11.

- Connect to an AC earthed socket. If in doubt have the socket checked by an expert.
- The mains voltage and the voltage shown on the rating plate (→ Page 9) must correspond.
- The connected load and necessary fuse protection are specified on the rating plate.

Transport



Do not operate the dryer if there is a danger of frost.



The dryer contains residual water; this can flow out if the dryer is tilted.

Technical data

Dimensions (DxWxH)	60 x 60 x 85 cm
Weight	approximately 35 kg
Max. capacity	6 kg
Ambient temperature	5 - 35 °C
Connection voltage	220 - 240 V
Connected load	2300 W
Fuse protection	10 A

Product number	→ Rating plate or inside of the door
Production number	

You can find the rating plate on the back of the dryer.

Consumption rates		These are guide values determined under standard conditions. Deviations of up to 10 % are possible.		
		Spin speed in rpm (residual moisture)	Drying time** in minutes, includ- ing 8 minutes cool cycle	Energy consumption** in kWh
 Cottons 6 kg	Cupboard Dry  .*	1400 (approx. 50 %)	98	3.20
		1000 (approx. 60 %)	117	3.84
		800 (approx. 70 %)	138	4.48
	Iron Dry  .*	1400 (approx. 50 %)	76	2.45
1000 (approx. 60 %)		91	2.94	
800 (approx. 70 %)		106	3.43	
 Easy-Care 3 kg	Cupboard Dry  .*	800 (approx. 40 %)	42	1.16
		600 (approx. 50 %)	53	1.45

*Test program to DIN EN 61121.
**The values may deviate from the values shown here, because of over/undervoltage, type of fabric, composition of the laundry to be dried, residual moisture in the material and size of the load.

Optional accessories (order from the after-sales service using the order number)

WTZ 11311	Washer-dryer stack connection set The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. This connection set must always be used to secure the dryer to the washing machine. If the worktop of the washing machine is less than 544 mm deep, please consult the after-sales service or your specialist retailer.
WMZ 20500	Platform For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

What to do if ...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:

- **GB** 0844 8928979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
- **IE** 01450 2655

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).
Set the programme selector to **Off** and remove the appliance plug from the socket.

● The ⓘ Start/Stop indicator light does not come on.	Mains plug plugged in? Programme selected? Check the socket fuse.
● The Clean 🌀/📄 indicator light comes on.	Check the hose for condensation outlet.
● The Clean 🌀/📄 indicator light is flashing.	Clean the fluff filter → page 4. Clean the air cooler if necessary → page 6.
● Dryer does not start.	Has the ⓘ Start/Stop button been pressed? Door closed? Programme set?
● Programme stops shortly after it has started.	Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it engage.
● The required degree of dryness was not achieved or the drying time was too long.	Clean the fluff filter → page 4. Ambient temperature higher than 35 °C → airing. Air inlet may be blocked → keep unobstructed. Was an unsuitable programme selected? → page 7. Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Mains failure → Restart the dryer. Thin layer of limescale on the moisture sensors. Clean the moisture sensors → page 6.
● Laundry damp.	Use the next drying programme up or use the timer programme as a supplement → page 7. Warm laundry feels damper than it really is!
● The humidity in the room has increased significantly.	Make sure the room is sufficiently ventilated. Air inlet blocked? → keep unobstructed. Ensure that the air cooler is in use.
● One or more indicator lights is/are flashing.	Clean the air fluff filter and air cooler if necessary → page 4/6. Check the installation conditions → page 8. Switch off, allow to cool, switch on again and restart the programme.
● Mains failure.	Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.

Safety instructions



- Emergency**
ONLY use the dryer...
- Pull the appliance plug out of the socket immediately or disconnect the fuse.
 - in rooms inside the house.
 - to dry fabrics.
- The dryer must NEVER...**
- be used for other purposes than those described above.
 - be modified in terms of its technology or attributes.
- Dangers**
- The dryer must not be used by children or persons who have not been instructed in its use.
 - Do not leave children unsupervised near the dryer.
 - Keep pets away from the dryer.
 - Remove all objects from pockets.
Make especially sure that cigarette lighters are removed as they constitute an
→ **explosion hazard.**
 - Do not lean or sit on the door → **risk of tipping.**
 - Open the door carefully. Hot steam may escape.
- Installation**
- Secure loose cables → **tripping hazard.**
 - Do not operate the dryer if there is a risk of frost.
- Mains connection**
- Connect the dryer according to specifications to an AC earthed socket, as otherwise it cannot be guaranteed that the appliance is completely safe.
 - The cable cross-section must be sufficient.
 - Only use earth-leakage circuit breakers with the following symbol: 
 - The appliance plug and socket must be compatible.
 - Do not use multiple plugs/couplings and/or extension cables.
 - Do not touch or hold the appliance plug with wet hands
→ **risk of electric shock.**
 - Never pull the appliance plug out of the socket by its cable.
 - Do not damage the mains lead → **risk of electric shock.**
- Operation**
- Only load the drum with laundry.
Check the contents before you switch the dryer on.
 - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → **fire/explosion hazard.**
 - Dust (e.g. coal dust, flour) poses a danger:
do not use the dryer → **explosion hazard.**
 - Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
 - Switch off the dryer once the programme has ended.
- Defect**
- Do not use the dryer if it is defective or if you suspect it is.
Repairs must only be carried out by the after-sales service.
 - Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
- Spare parts**
- Only use genuine spare parts and accessories for safety reasons.
- Disposal**
- Dryer: pull out the appliance plug, **then** cut off the mains cable from the appliance. Dispose of the appliance at a municipal waste disposal facility.
 - Packaging: do not leave children alone with packing parts
→ **risk of suffocation.**
 - All materials are environmentally safe and can be reused. Dispose of all materials in an environmentally-responsible manner.



Dryer

en Instruction manual