

Your new dryer

Congratulations! - You have chosen a modern, high-quality domestic appliance from Bosch.

The condensation dryer with heat pump and automatic cleaning of the heat exchanger is outstanding in terms of efficient energy consumption and low maintenance requirements → [page 6](#).

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com



Observe the safety instructions on [page 13](#).



Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.

Contents

	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Button signals	5
■ Important Information	6
■ Overview of programmes	7
■ Installation	8
■ Frost protection / Transport	8
■ Cleaning and care	9
■ Technical data	10
■ Optional accessories	10
■ Normal noises	11
■ What to do if... / After-sales service	12
■ Safety instructions	13

Reduces creasing and extends the anti-creasing phase once the program has ended; two settings available.

Reduced temperature for delicate fabrics that require a longer drying time; e.g. for polyacrylics, polyamide, elastane or acetate.

Programme sequence displays: drying, iron dry, cupboard dry, slackening/ready.

Rinse the fluff filter under running water → [Page 4](#). Empty the condensate container.

If necessary, clean the filter in the condensate container → [Page 9](#).

Intended use

- only for domestic use.
- only to be used for drying fabrics that have been washed with water.



Do not leave children unsupervised near the dryer. Keep pets away from the dryer. The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

Observe the safety instructions on [page 13](#).

Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

Preparing for installation, see [Page 8](#)



Never operate the dryer if it is damaged. Inform your after-sales service.



Only if your hands are dry. Only hold the plug by the plug casing.



Remove all objects from pockets. Pay particular attention to cigarette lighters. The drum must be empty before filling.



See programme overview on [page 7](#). See also separate instructions for "basket for woollens" (depending on the model).



Observe the safety instructions on [page 13](#).



Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.



Observe the safety instructions on [page 13](#).



Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.



Observe the safety instructions on [page 13](#).



Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.



Observe the safety instructions on [page 13](#).



Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.



Observe the safety instructions on [page 13](#).



Observe the safety instructions on [page 13](#).

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Cleaning the fluff filter

Information on laundry ...

Important Information

Programme overview

Button signals

Interruption programme

Do not pull out/empty the condensate container when drying is in progress

Drying

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Switching off the dryer

Removing the laundry

The programme has ended

Emptying condensation

Installation


- Scope of delivery: dryer, installation and instruction manual, basket for woollens (*depending on the model*).
- Check dryer for transport damage.
- The dryer is very heavy. Do not lift without assistance.
- Be careful to avoid sharp edges.
- Do not install in a room which is susceptible to frost. Water may cause damage once it starts to freeze.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off.

1. Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Level the dryer using the threaded feet.
- Use a spirit level.
- Do not remove the threaded feet under any circumstances.



Remove all accessories from the drum. The drum must be empty.

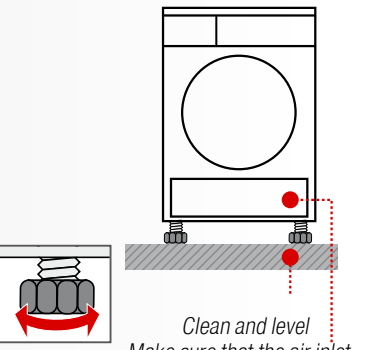

Clean and level. Make sure that the air inlet remains unobstructed.



Do not install the dryer behind a door or sliding door, which could prevent or restrict opening of the dryer door. This will prevent children from locking themselves in and putting their lives in danger.

2. Mains connection

see safety information → Page 13.

- Connect to an AC earthed socket. If in doubt, have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ Page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection



Do not operate the dryer if there is a danger of frost.



Preparation

1. Empty the condensate container → page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensation is pumped into the container.
4. Wait 5 minutes and then empty the condensate container again.
5. Turn the programme selector to **Off**.

Transport

- Preparation of dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, leave the dryer to stand for two hours.



There may be residual water in the dryer. This can leak out if the dryer is at an angle.

Care and cleaning



Only when the appliance is switched off.



Heat exchanger

The heat exchanger of the dryer is cleaned automatically when drying is in progress. **Cln** appears in the display panel. Do not pull the condensate container out during the cleaning process.



Dryer housing, control panel, air intake

Wipe with a soft, damp cloth.

Do not use harsh cleaning agents or solvents.

Remove detergent and cleaning agent residue immediately.


Water may occasionally accumulate between the window and the seal. This does not impair the functions of your dryer in any way.



Filter in the condensation tank

The filter is cleaned automatically when the condensate container is emptied.

However, the filter should still be cleaned regularly under running water. This prevents stubborn deposits/dirt from building up.

Cleaning is only required if the symbol  flashes again in the display panel after the condensate container has been emptied.

1. Pull out the condensate container.



 
2. Pull the filter out of its snap-in lock.



3. Clean the filter under running water or in the dishwasher.



4. Refit the filter.



5. Insert the condensate container so that it locks into place.



Only operate the dryer with the filter inserted.



Moisture sensor

The dryer is equipped with stainless-steel moisture sensors. These measure how damp the laundry is. After long periods of use, a fine layer of limescale can form on the moisture sensors.



1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.

Do not use steel wool or other abrasive materials.




Technical data


● Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approximately 53 kg
Max. capacity	7 kg
Condensate container	4.0 l
Connection voltage	220-240 V
Connected load	max. 800 W
Fuse protection	10 A
Ambient temperature	5 - 35°C
Product number	
Production number	under the door

The rating plate can be found on the back of the dryer.

- **Drum interior light** (*depending on model*): The drum lights up after the door is opened and after the programme starts, and switches off automatically.


Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
 Cottons 7 kg Cupboard Dry*	1400 rpm	(50%)	151 min	1.33 kWh
	1000 rpm	(60%)	178 min	1.65 kWh
	800 rpm	(70%)	205 min	1.92 kWh
Iron Dry*	1400 rpm	(50%)	110 min	0.94 kWh
	1000 rpm	(60%)	137 min	1.24 kWh
	800 rpm	(70%)	166 min	1.55 kWh

 Easy-Care 3.5 kg Cupboard Dry*	800 rpm	(40%)	64 min	0.54 kWh
	600 rpm	(50%)	81 min	0.68 kWh

* Programme setting for testing in accordance with applicable standard EN61121.

** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Fabrics/programmes	Drying time	Annual energy consumption
 Cottons 7 kg / 3.5 kg* Cupboard Dry***	139 min / cycle	212 kWh / year

***Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories

(from after-sales service using order number, depending on model)

WTZ 20410 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set. WTZ 11400: with pull-out worktop.


Installation underneath the worktop
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.

Platform


For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

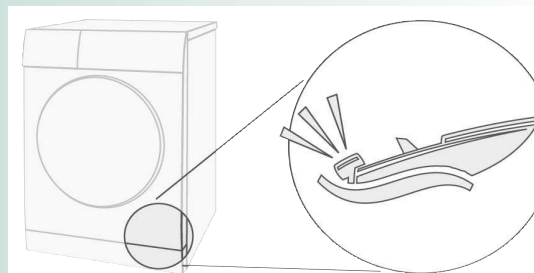


The compressor in the dryer may occasionally generate a droning noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

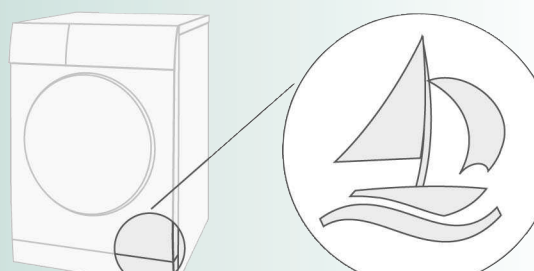

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

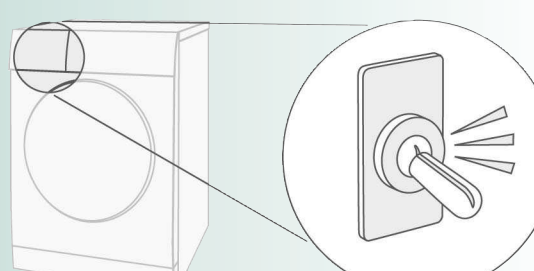

The automatic cleaning process causes a clicking noise.

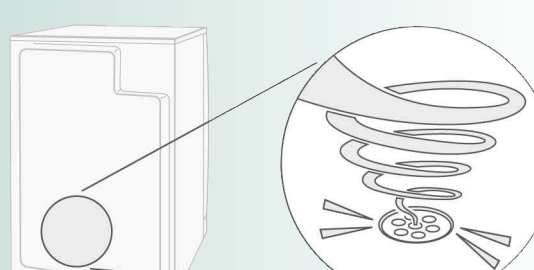








The process of pumping the condensation into the condensate container generates pumping noises.

What to do if ...




If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:
– **GB** 0844 8928979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)
When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).
Set the programme selector to **Off** and remove the appliance plug from the socket.

- The  **Start/Stop** indicator lamp does not light up. Mains plug plugged in? Programme selected? Check the socket fuse.
- The display panel light and indicator lights (*depending on model*) go out and the  **Start/Stop** indicator light flashes. Energy-saving mode is activated → see the separate *Energy-saving mode* instructions.
- The  symbol and  **Start/Stop** indicator lamp flash. Empty container for condensation → see page 4. Clean the condensate container filter if necessary → Page 9. Each time the dryer is transported, you must wait two hours before operating it.
- The  symbol and  **Start/Stop** indicator lamp flash. Rinse the fluff filter under running water → Page 4.
- Dryer does not start.  **Start/Stop** button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it click into place.
- Creasing. Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → Page 7.
- Drying result is not satisfactory (laundry feels too damp). Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → Page 7. Use fine adjustment for the drying result → Page 1/2. Fine layer of limescale on the humidity sensors → Clean the humidity sensors → Page 9. Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.
- Drying time too long. Rinse the fluff filters under running water → Page 4. Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → Page 8. Ambient temperature higher than 35 °C → ventilate the room.
- The humidity in the room increases significantly. Make sure the room is sufficiently ventilated.
- **Cln** appears in the display panel. Not an error! Automatic cleaning of the heat exchanger. Do not empty the condensate container.
- Power cut. Remove the laundry from the dryer immediately and spread it out. Heat may escape. Be careful as the door, the drum and the laundry may be hot.
- Other intermittent noises and vibrations. Not an error! Normal noises → Page 11.
- Loud humming noise for several seconds. Has the condensate container been properly reinserted? → Push the condensate container all the way in. Not an error! Normal noises → Page 11.

Safety instructions



- Emergency ONLY use the dryer...**
 - Pull the appliance plug out of the socket immediately or disconnect the fuse.
 - in rooms inside the house.
 - to dry fabrics.
- The dryer must NEVER...**
 - be used for purposes other than those described above.
 - be modified in terms of its technology or properties.
- Hazards**
 - The dryer must not be used by children or persons who have not been instructed in its use.
 - Do not leave children unsupervised near the dryer.
 - Keep pets away from the dryer.
 - Remove all objects from the pockets of garments.
 - Pay particular attention to cigarette lighters → **Risk of explosion**
 - Do not lean or sit on the door → **Risk of tipping**.
- Installation**
 - Secure loose cables → **Tripping hazard**.
 - Do not operate the dryer where there is a risk of frost.
- Mains connection**
 - Connect the dryer according to specifications to an AC earthed socket, otherwise it cannot be guaranteed that the appliance is completely safe.
 - The cable cross-section must be sufficient.
 - Only use earth-leakage circuit breakers with the following symbol: 
 - The appliance plug and socket must be compatible.
 - Do not use multiple plugs/connectors and/or extension cables.
 - Do not touch or hold the appliance plug with wet hands → **Risk of electric shock**.
 - Never pull the appliance plug out of the socket by its cable.
 - Do not damage the mains lead → **Risk of electric shock**.
- Operation**
 - Only laundry must be loaded into the drum.
 - Before switching on the dryer - check the contents.
 - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → **Fire/explosion hazard**.
 - Hazard caused by dust (e.g. coal dust, flour): do not use the dryer → **Risk of explosion!**
 - Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
 - Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
 - Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury**.
 - Switch off the dryer once the programme has ended.
 - The water from condensation is not drinking water and may be contaminated with fluff.
- Defect**
 - Do not use the dryer if it is defective or if you suspect that it is.
 - Repairs must only be carried out by the after-sales service.
 - Do not use a dryer with a faulty mains lead. To prevent risks, a faulty mains lead must only be replaced by the after-sales service.
- Spare parts Disposal**
 - Only use genuine spare parts and accessories for safety reasons.
 - Dryer: unplug the appliance plug, **then** cut the mains lead from the appliance. Dispose of the dryer at an approved public disposal facility.
 - The heat exchanger contains fluorinated greenhouse gas R134a covered by the Kyoto Protocol → dispose of in a proper manner. Capacity: 0.22 kg.
 - Packaging: keep all packaging out of reach of babies and children. → **Danger of suffocation!**
 - All materials are environmentally safe and recyclable. Dispose of in an environmentally-responsible manner.



Dryer

BOSCH

en Instruction manual

Your new dryer

Congratulations! - You have chosen a modern, high-quality domestic appliance from Bosch.

The condensation dryer with heat pump and automatic cleaning of the heat exchanger is outstanding in terms of efficient energy consumption and low maintenance requirements → *page 6*.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.


Environmentally responsible disposal


Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive  2002/96/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com


 Observe the safety instructions on page 13.

 Read these instructions and the separate **Energy-saving mode** instructions before operating the dryer.

Contents

	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Notes on laundry	5
Button signals	5
Important Information	6
Overview of programmes	7
Installation	8
Frost protection / Transport	8
Cleaning and care	9
Technical data	10
Optional accessories	10
Normal noises	11
What to do if... / After-sales service	12
Safety instructions	13

Reduces creasing and extends the anti-creasing phase once the program has ended; two settings available.

Reduced temperature for delicate fabrics  that require a longer drying time; e.g. for polyacrylics, polyamide, elastane or acetate.


Programme sequence displays: drying, iron dry, cupboard dry, slackening/ready.

Rinse the fluff filter under running water → *Page 4*.


Empty the condensate container.


If necessary, clean the filter in the condensate container → *Page 9*.


Intended use

- only for domestic use.
 - only to be used for drying fabrics that have been washed with water.
-  Do not leave children unsupervised near the dryer.
- Keep pets away from the dryer.
- The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparing for installation, see Page 8

 Never operate the dryer if it is damaged. Inform your after-sales service.

 Only if your hands are dry. Only hold the plug by the plug casing.

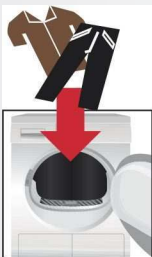

Sorting and loading

Remove all objects from pockets. Pay particular attention to cigarette lighters. The drum must be empty before filling.


See programme overview on page 7.


See also separate instructions for "basket for v (depending on the model)

Selecting and adjusting the


Select the d


 
 
 

 
 


 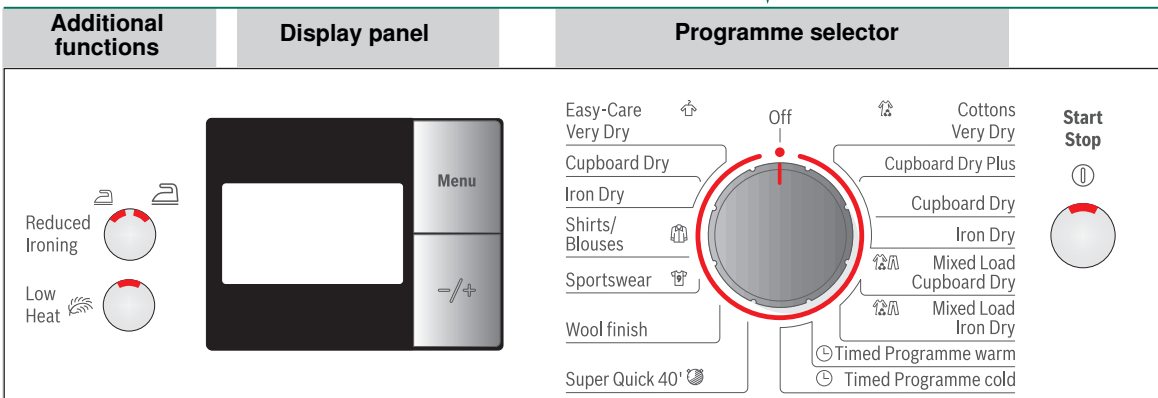


 

 


... and adapt to indiv



 All buttons are sensitive and must be touched lightly.

Press the

 Only use the dryer if the plug is inserted!

	Menu	For selecting the settings.
	-/+ (Change)	To change all settings in the display panel.
	Electronic start timer	End of the programme following... (depending on the programme selected, e.g. duration 1:54h → 2h; the nearest whole hour is always selected).
	Signal	Signal volume selectable in four stages: 0 (off), 1 (quiet), 2 (normal), 3 (loud), 4 (very loud).
	Appliance lock	Protection against accidental adjustment of functions that have been set (hold menu button for 5 seconds).
	Fine adjustment of the drying result	The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for  Cottons ,  Easy-Care ,  Mixed Load and  Super Quick 40' programmes → <i>page 7</i> . After one of these programmes has been finely adjusted, the setting is retained for the next programme.
	Spin speed	Speed at which the washing machine was spun; only used if the anticipated drying time needs to be displayed more accurately.
	Reduced Ironing	
	Low Heat	
	Status indicators	
	Service displays	
	Fluff filter	
	Container	

Inspecting the dryer

Connecting the mains plug

Loading laundry

woollens"

the programme

rying programme ...

idual requirements

sensitive and only need to
ly.

① **Start/Stop button**

ver with the fluff filter

1 -24 hrs

oud). 0, 1, 2, 3, 4


ton down for **On-Off**

the 0, 1, 2, 3

resetting = 0.
others.

600-1800

Drying

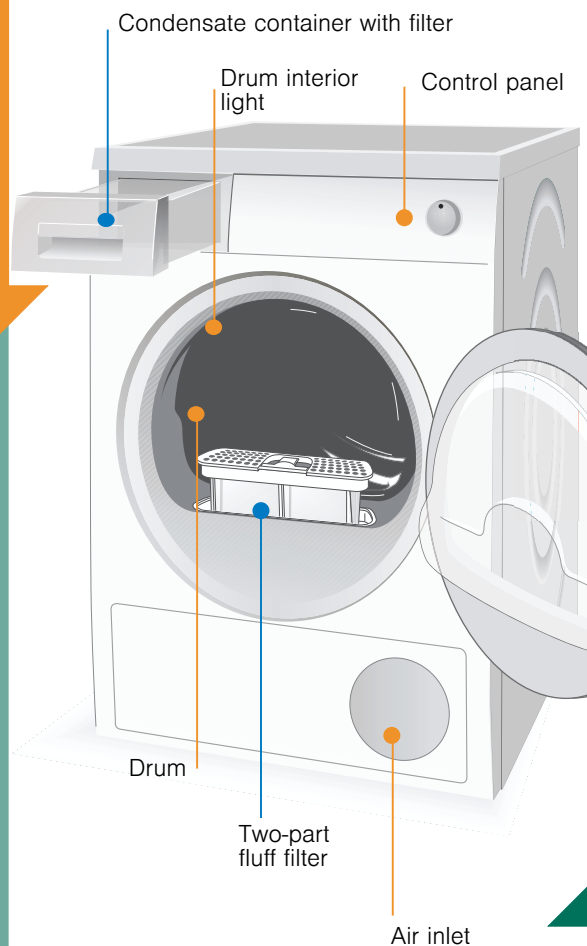


Do not pull out/empty
the condensate container when drying is in progress



Emptying condensation

Empty the container **after each** drying cycle, not during drying!

1. Remove the condensate container and hold it level.
 2. Pour out the condensation.
 3. Always push the container fully back in until it locks in place.
- If the **Container** indicator lamp is flashing → page 9.

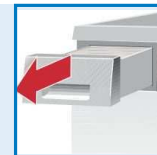




Cleaning the fluff filter



Clean fluff filters reduce energy consumption.


The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

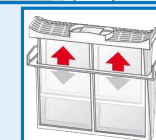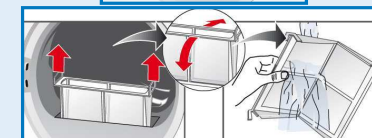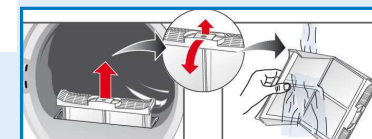

Switching off the dryer

Turn the programme selector to **Off**.
Do not leave laundry in the dryer.

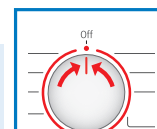

Removing the laundry

Your dryer is equipped with an automatic anti-crease function. The drum is moved at specific time intervals for 30 minutes once the programme has ended. The laundry stays loose and fluffy (60 or 120 minutes if the additional **Reduced Ironing** function is selected).

The programme has ended when → lights up in the display panel.



Interrupt programme removing or adding laundry.



The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The selected programme must then be continued until it is finished.



Never switch the dryer off before the drying process has ended.

1. Open the door. The drying cycle is interrupted.
2. Remove or add laundry and close the door.
3. If required, select a new programme and additional functions.
4. Press the ① **Start/Stop button**. The remaining time is updated after a few minutes.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- ☐ Drying at normal temperature.
- ☑ Drying at low temperature → also select **Low Heat**
- ☒ Do not machine dry.



Always observe the safety instructions on page 13!

Do not tumble-dry the following fabrics for example:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) → they may crease.
- Oil-stained laundry.



Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. hand towels).
- Close zips, hooks and eyes, and do up any buttons.
- Tie belts, apron strings etc. together.
- Do not overdry easy-care laundry → risk of creasing
- Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7
- **Wool Finish** programme (*depending on the model*).
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → *Fine adjustment of the drying result* → Page 1/2.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not select the **Very Dry** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener according to the manufacturer's instructions.
- Use the Zeitprogramm (Timed programme) for small loads → this improves the drying result.

 
Environmental protection / Energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus consuming less energy. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → “Programme overview” → Page 7.
- Ensure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals



Setting the volume for button signals



Turn to **Off** 1 x to the right Press and hold **Low heat** and turn 2 x to the right Press **1 Start/Stop** until the required volume is reached Turn to **Off**

Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Important Information

Your dryer is designed to be particularly energy-saving and its technical features include a refrigeration circuit that uses energy efficiently, in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.



Never operate the dryer without the fluff filters and without filter in condensate container.



Fluff filter

During drying, fluff and hairs from the laundry are trapped in the fluff filter. A blocked fluff filter may impair the heat exchange process.

The fluff filter should therefore be cleaned after every drying cycle. Rinse the filter regularly under running water → Page 4.



Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter must be cleaned regularly under running water. Empty the condensate container before cleaning the filter → Page 9.



Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets.

Do not dry airtight fabrics.

Avoid drying fabrics that produce a lot of fluff.

Woollens should be refreshed only using the woollens programme.

Programme overview

see also page 5

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...	☞ iron laundry	☞ lightly iron laundry	☞ do not iron laundry	🔄 mangle laundry
TEXTILE TYPE AND INFORMATION				
**👤👤 Cottons	max. 7 kg	Hard-wearing fabrics, boil-resistant fabrics made of cotton or linen.		
**👤👤 Easy-Care	max. 3.5 kg	Non-iron laundry made of synthetic fibres and blended fabric, easy-care cotton.		
**👤👤👤 Mixed Load	max. 3 kg	Mixed items of laundry made of cotton and synthetics (Mix).		
Iron Dry	☞☞☞☞☞🔄	Fabrics suitable for ironing (iron fabrics in order to avoid creasing).		
Cupboard Dry	☞	Single-layer fabrics.		
*Cupboard Dry Plus/ Very Dry	☞	Fabrics made of thick, multilayered items of clothing.		
*Very Dry	☞	Fabrics made of very thick, multi-layered items of clothing which need to be dried longer.		
👤👤 Shirts/Blouses	max. 3 kg	For cotton or linen fabrics that are still damp and easy-care fabrics. Creasing in fabrics is reduced. Fabrics are not dried completely. Laundry ready for ironing and/or hanging up!		
👤👤 Sportswear	max. 1.5 kg	Fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).		
Wool finish	max. 3 kg	Woolen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.		
🕒 Super Quick 40'	max. 2 kg	Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.		
🕒 Timed Programme warm	max. 3 kg	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry.		
🕒 Timed Programme cold	max. 3 kg	Also for subsequent drying.		
		All types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.		

*for 👤👤 Cottons and 👤👤 Easy-Care programmes only

**Dryness levels can be selected individually → Very Dry, Cupboard Dry Plus/Very Dry, Cupboard Dry and Iron Dry (depending on the model).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9308 / 9000907242



Robert Bosch Hausgeräte GmbH
Carl-Wery-Str. 34
D-81739 München/Deutschland

WTW86562GB

Installation



- Scope of delivery: dryer, installation and instruction manual, basket for woollens (*depending on the model*).
- Check dryer for transport damage.
- The dryer is very heavy. Do not lift without assistance.
- Be careful to avoid sharp edges.
- Do not install in a room which is susceptible to frost. Water may cause damage once it starts to freeze.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off.


1.

Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Level the dryer using the threaded feet. Use a spirit level.
- Do not remove the threaded feet under any circumstances.



Remove all accessories from the drum.
The drum must be empty.

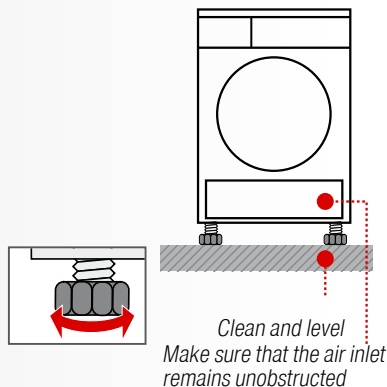

Do not install the dryer behind a door or sliding door, which could prevent or restrict opening of the dryer door. This will prevent children from locking themselves in and putting their lives in danger.

2.

Mains connection see safety information → Page 13.

- Connect to an AC earthed socket. If in doubt, have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ Page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection



Do not operate the dryer if there is a danger of frost.



Preparation

1. Empty the condensate container → page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensation is pumped into the container.
4. Wait 5 minutes and then empty the condensate container again.
5. Turn the programme selector to **Off**.

Transport



- Preparation of dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, leave the dryer to stand for two hours.



There may be residual water in the dryer. This can leak out if the dryer is at an angle.

Care and cleaning



Only when the appliance is switched off.



Heat exchanger

The heat exchanger of the dryer is cleaned automatically when drying is in progress, **Cln** appears in the display panel. Do not pull the condensate container out during the cleaning process.




Dryer housing, control panel, air intake


Wipe with a soft, damp cloth.
Do not use harsh cleaning agents or solvents.
Remove detergent and cleaning agent residue immediately.
Water may occasionally accumulate between the window and the seal. This does not impair the functions of your dryer in any way.




Filter in the condensation tank

The filter is cleaned automatically when the condensate container is emptied.
However, the filter should still be cleaned regularly under running water. This prevents stubborn deposits/dirt from building up.
Cleaning is only required if the symbol  flashes again in the display panel after the condensate container has been emptied.


1. Pull out the condensate container.

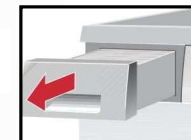


2. Pull the filter out of its snap-in lock.

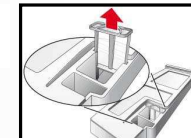

3. Clean the filter under running water or in the dishwasher.

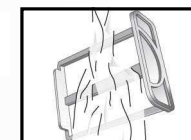

4. Refit the filter.

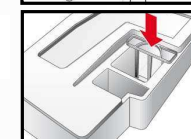

5. Insert the condensate container so that it locks into place.



Only operate the dryer with the filter inserted.



Moisture sensor

The dryer is equipped with stainless-steel moisture sensors. These measure how damp the laundry is. After long periods of use, a fine layer of limescale can form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or other abrasive materials.



Technical data

● Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approximately 53 kg
Max. capacity	7 kg
Condensate container	4.0 l
Connection voltage	220-240 V
Connected load	max. 800 W
Fuse protection	10 A
Ambient temperature	5 - 35°C
Product number	
Production number	under the door

The rating plate can be found on the back of the dryer.

- **Drum interior light** (depending on model): The drum lights up after the door is opened and after the programme starts, and switches off automatically.

Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
👤 Cottons 7 kg				
Cupboard Dry*	1400 rpm	(50%)	151 min	1.33 kWh
	1000 rpm	(60%)	178 min	1.65 kWh
	800 rpm	(70%)	205 min	1.92 kWh
Iron Dry*	1400 rpm	(50%)	110 min	0.94 kWh
	1000 rpm	(60%)	137 min	1.24 kWh
	800 rpm	(70%)	166 min	1.55 kWh
👤 Easy-Care 3.5 kg				
Cupboard Dry*	800 rpm	(40%)	64 min	0.54 kWh
	600 rpm	(50%)	81 min	0.68 kWh

* Programme setting for testing in accordance with applicable standard EN61121.

** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Fabrics/programmes	Drying time	Annual energy consumption
👤 Cottons 7 kg / 3.5 kg*		
Cupboard Dry***	139 min / cycle	212 kWh / year

***Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories

(from after-sales service using order number, depending on model)


WTZ 20410 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set. WTZ 11400: with pull-out worktop.

WTZ 10290 Installation underneath the worktop
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.


WMZ 20500 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

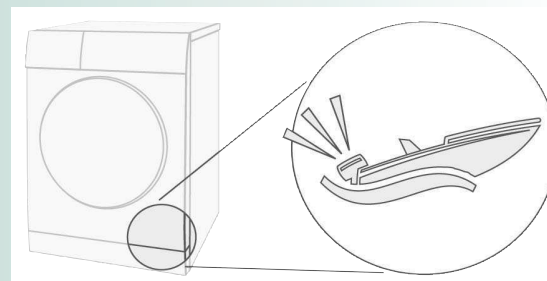


The compressor in the dryer may occasionally generate a droning noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

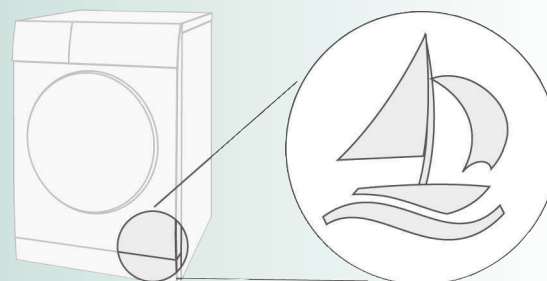

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

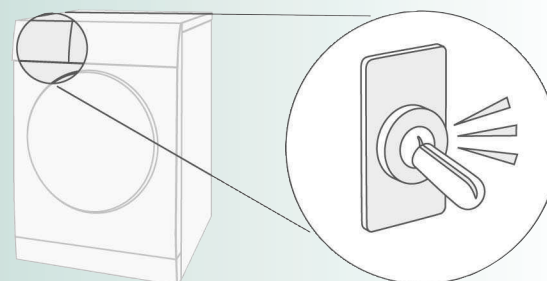

The automatic cleaning process causes a clicking noise.

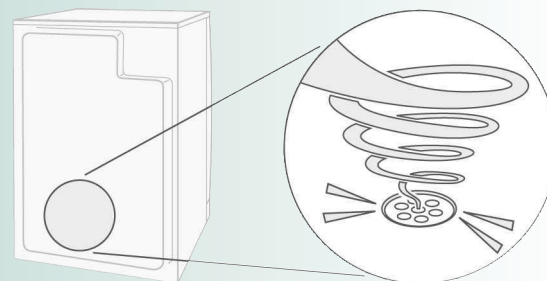

The process of pumping the condensation into the condensate container generates pumping noises.

What to do if ...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:


- **GB** 0844 8928979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
- **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).
Set the programme selector to **Off** and remove the appliance plug from the socket.

● The ① Start /Stop indicator lamp does not light up.	Mains plug plugged in? Programme selected? Check the socket fuse.
● The display panel light and indicator lights (<i>depending on model</i>) go out and the ① Start /Stop indicator light flashes.	Energy-saving mode is activated → see the separate <i>Energy-saving mode</i> instructions.
● The ☐ symbol and ① Start /Stop indicator lamp flash.	Empty container for condensation → <i>see page 4</i> . Clean the condensate container filter if necessary → <i>Page 9</i> . Each time the dryer is transported, you must wait two hours before operating it.
● The ⚙ symbol and ① Start /Stop indicator lamp flash.	Rinse the fluff filter under running water → <i>Page 4</i> .
● Dryer does not start.	① Start /Stop button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it click into place.
● Creasing.	Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → <i>Page 7</i> .
● Drying result is not satisfactory (laundry feels too damp).	Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → <i>Page 7</i> . Use fine adjustment for the drying result → <i>Page 1/2</i> . Fine layer of limescale on the humidity sensors → Clean the humidity sensors → <i>Page 9</i> . Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.
● Drying time too long.	Rinse the fluff filters under running water → <i>Page 4</i> . Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → <i>Page 8</i> . Ambient temperature higher than 35 °C → ventilate the room.
● The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated.
● CIn appears in the display panel.	Not an error! Automatic cleaning of the heat exchanger. Do not empty the condensate container.
● Power cut.	Remove the laundry from the dryer immediately and spread it out. Heat may escape. Be careful as the door, the drum and the laundry may be hot.
● Other intermittent noises and vibrations.	Not an error! Normal noises → <i>Page 11</i> .
● Loud humming noise for several seconds.	Has the condensate container been properly reinserted? → Push the condensate container all the way in. Not an error! Normal noises → <i>Page 11</i> .

Safety instructions



Emergency ONLY use the dryer...	– Pull the appliance plug out of the socket immediately or disconnect the fuse. – in rooms inside the house. – to dry fabrics.
The dryer must NEVER...	– be used for purposes other than those described above. – be modified in terms of its technology or properties.
Hazards	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from the pockets of garments. Pay particular attention to cigarette lighters → Risk of explosion – Do not lean or sit on the door → Risk of tipping .
Installation	– Secure loose cables → Tripping hazard . – Do not operate the dryer where there is a risk of frost.
Mains connection	– Connect the dryer according to specifications to an AC earthed socket, otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol:  – The appliance plug and socket must be compatible. – Do not use multiple plugs/connectors and/or extension cables. – Do not touch or hold the appliance plug with wet hands → Risk of electric shock . – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → Risk of electric shock .
Operation	– Only laundry must be loaded into the drum. Before switching on the dryer - check the contents. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → Fire/explosion hazard . – Hazard caused by dust (e.g. coal dust, flour): do not use the dryer → Risk of explosion! – Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate. – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material. – Light things, such as long hair, may be sucked into the air inlet of the dryer → Risk of injury . – Switch off the dryer once the programme has ended. – The water from condensation is not drinking water and may be contaminated with fluff.
Defect	– Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use a dryer with a faulty mains lead. To prevent risks, a faulty mains lead must only be replaced by the after-sales service.
Spare parts	– Only use genuine spare parts and accessories for safety reasons.
Disposal	– Dryer: unplug the appliance plug, then cut the mains lead from the appliance. Dispose of the dryer at an approved public disposal facility. – The heat exchanger contains fluorinated greenhouse gas R134a covered by the Kyoto Protocol → dispose of in a proper manner. Capacity: 0.22 kg. – Packaging: keep all packaging out of reach of babies and children. → Danger of suffocation! – All materials are environmentally safe and recyclable. Dispose of in an environmentally-responsible manner.



en Instruction manual