

Your new dryer

Congratulations - you have chosen to buy a modern, high-quality Bosch domestic appliance.

The condensation dryer with heat pump and automatic cleaning of the heat exchanger is outstanding in terms of efficient energy consumption and low maintenance requirements → [page 6](#).

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive

2002/96/EC which governs waste electrical and electronic equipment - WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com



Observe the safety instructions on page 13.



Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.

Contents

	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Button signals	5
■ Fine adjustment of the drying result	6
■ Important Information	6
■ Overview of programmes	7
■ Installation	8
■ Frost protection / Transport	8
■ Signal	8
■ Care and cleaning	9
■ Technical data	10
■ Optional accessories	10
■ Normal noises	11
■ What to do if ... / After-sales service	12
■ Safety instructions	13

Reduced temperature for delicate fabrics ☐ that require a longer drying time; e.g. polyacrylics, polyamide, elastane, acetate silk.

Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.



Do not leave children unsupervised near the dryer. Keep pets away from the dryer.

The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparation

Installation → [page 8](#)



Never start the dryer if it is damaged. Inform your after-sales service.



Make sure your hands are dry. Hold the plug only.



Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.

See programme overview on page 7. See also separate instructions for "basket for woollens" (depending on the model)

Inspecting the dryer

Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the

Select the drying programme ...

... and adapt to individual requirements

Additional functions	Display status/ service	Programme selector
Low Heat [⊖]	<ul style="list-style-type: none">○ Drying○ Iron Dry○ Cupboard Dry○ Anti-Crease/End○ Container○ Clean	<div>Easy-Care [⊕] Off [⊖] Cottons [⊕] Start Stop [⊕]</div> <div>Extra Dry Extra Dry</div> <div>Cupboard Dry Cupboard Dry</div> <div>Iron Dry Iron Dry</div> <div>SuperQuick 40' [⊕] Timed Programme [⊕] warm 30 min.</div> <div>Wool finish</div>
	Container	Empty the condensate container. Clean the filter in the condensate container if necessary → page 9 .
	Clean	Rinse the fluff filters under running water → page 4 .
	Fine adjustment of the drying result	The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for the [⊕] Cottons, [⊕] Easy-Care and [⊕] SuperQuick 40' programmes → presetting = 0. After one of these programmes has been finely adjusted, the setting is retained for the others. Further information → page 6 .



All buttons are sensitive and only need to be touched lightly.

Press the [⊕] Start/Stop button




Only use the dryer with the fluff filter inserted.

0, 1, 2, 3

Drying



Do not pull out/empty the condensate container when drying is in progress.

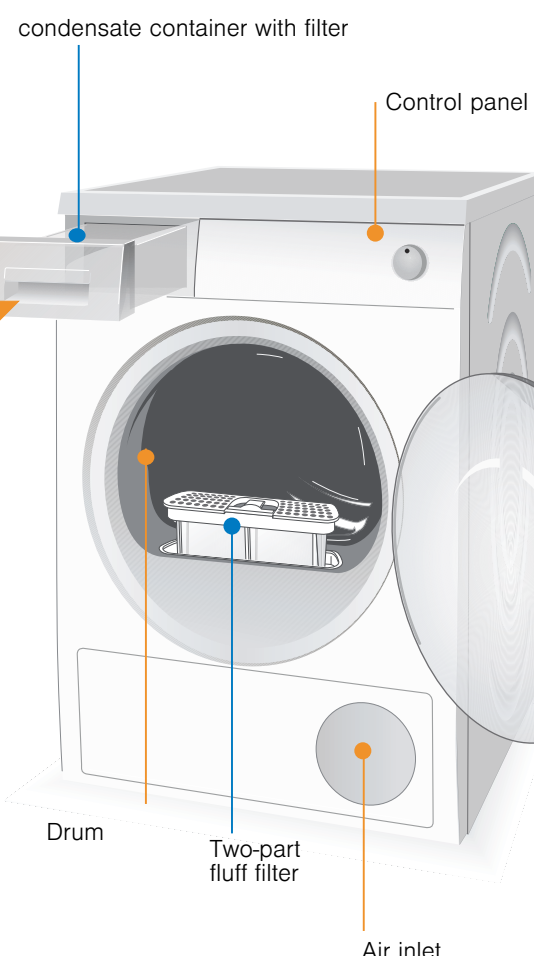

Clean fluff filters reduce energy consumption.



The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

Switching off the dryer

Turn the programme selector to **Off**. Do not leave laundry in the dryer.

Removing the laundry

Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Less ironing** function is selected (*depending on model*)).

End of programme

as soon as the **Anti-Crease/End** indicator lamp lights up.

Interrupt programme

Adding or removing laundry.



The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.

1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the [⊕] Start/Stop button.

Emptying condensation



Empty the container **after each** drying cycle, not during drying.
1. Remove the condensate container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.
If the **Container** indicator lamp flashes despite the container having been emptied → [Filter in condensate container, page 9](#).

Cleaning the fluff filter



Clean fluff filters reduce energy consumption.



The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

Information on laundry ...

Labelling of fabrics

Follow the manufacturer's care information.

- ☑ Dry at normal temperature.
- ☑ Dry at low temperature → in addition, select **Low Heat** [⊖].
- ☑ Do not machine dry.



Always observe the safety instructions on page 13. Do not tumble-dry the following fabrics, for example:
– Non-breathable fabrics (e.g. rubber-coated).
– Delicate materials (silk, curtains made from synthetic material) → these may crease.
– Oil-stained laundry.



Drying tips

- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → [page 7](#)
- **Wool finish** programme (*depending on model*).
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → [Fine adjustment of the drying result](#) → [page 6](#).
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Extra Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → [Programme overview](#) → [page 7](#).
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals



Setting the volume for button signals

- Turn to **Off** 1 x to the right Press and hold **Low Heat** [⊖] and turn 2 x to the right Press [⊕] **Start/Stop** until the required volume is reached Turn to **Off**
- Selectable values: off, quiet, normal, loud.

Fine adjustment of the drying result



Adjustment of the levels of dryness

- Turn to **Off** 1 x to the right Press and hold **Low Heat** [⊖] and turn 5 x to the right Press **Low Heat** [⊖] until the required level is reached Turn to **Off**



Drying, Iron Dry, Cupboard Dry, Anti-Crease/End are displayed in sequence. Short signal when changing from level 3 to 0, otherwise long signal.

Important Information

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.



Never operate the dryer without the fluff filters and without filter in condensate container.

Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → [page 4](#).

Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → [page 4/9](#).

Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets. Do not dry non-breathable fabrics. Avoid drying items that produce a lot of fluff. Woollens should be refreshed only, using the woollens programme.

Programme overview

see also [page 5](#).

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying, laundry is to be ...

☐ mangled

☐ not ironed

☐ lightly ironed

☐ ironed

☐ SuperQuick 40'

☐ Cottons

☐ Easy-Care

☐ Iron Dry

☐ Cupboard Dry

☐ Extra Dry

☐ Wool finish

☐ Timed Programme warm 30 min

☐ max. 7 kg

☐ max. 3.5 kg

☐ max. 2 kg

☐ max. 3 kg

☐ max. 3 kg

☐ Hardwearing fabrics, boil-proof fabrics made of cotton or linen.

☐ Non-iron laundry made of synthetic fibres and mixed fabric; easy-care cotton.

☐ The condition of the laundry means it is suitable for ironing (iron clothes in order to avoid creases).

☐ For single-layered laundry.

☐ For laundry with thick, multi-layered parts.

☐ Laundry which needs to be dried quickly, e.g. made from synthetics, cotton or mixed fabrics. The values may deviate from the values shown here, because of type of fabric, composition of the laundry to be dried, residual moisture in the material and size of the load.

☐ Woolen fabrics suitable for washing machines. Fabrics become fluffier but not dry.

☐ Remove fabrics once the programme has ended and allow to dry.

☐ Pre-dried, multi-layered, delicate fabrics made of acrylic, or separate small items of laundry. Also for subsequent drying.

*for [⊕] Cottons and [⊕] Easy-Care programmes only

**Dryness levels can be selected individually → Extra Dry, Cupboard Dry and Iron Dry (*depending on the model*)).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing.

Recommendation: Dry separately.

9308 / 9000914273

Robert Bosch Hausgeräte GmbH

Carl-Wery-Str. 34

81739 München/Deutschland

WTW84161GB

7

Installation

- ! Scope of delivery: dryer, installation and operating instructions, woollens basket (*depending on model*).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.

1.

- Setting up the dryer**
- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.

! Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.

2.

- Mains connection** see Safety instructions → page 13.
- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection / Transport



- Frost protection - preparation**
- 1. Empty the condensate container → page 4.
- 2. Select any programme using the programme selector.
- 3. Press the **Start/Stop** button → condensed water is pumped into the container
- 4. Wait 5 minutes and then empty the condensate container again.
- 5. Turn the programme selector to **Off**.



- Transport**
- Prepare the dryer → see Frost protection - preparation.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.




The dryer contains residual water; this can flow out if the dryer is tilted.

Signal



Switching on/off an acoustic signal at the end of the programme

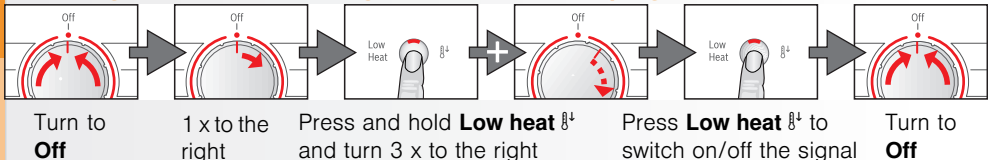

Low heat light on → an acoustic signal at the end of the programme is switched on.
Low heat light off → an acoustic signal at the end of the programme is switched off.

Care and cleaning



- Heat exchanger**
- The dryer's heat exchanger is cleaned automatically during drying.
- Do not pull out the condensate container during the cleaning process.



- Dryer housing, control panel, air intake**
- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents or solvents.
- Remove detergent and cleaning agent residue immediately.



- Filter in the condensate container**
- The filter is cleaned automatically when the condensate container is emptied.
- However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.

1. Pull out the condensate container.

2. Pull the filter out of its snap-in lock.

3. Clean the filter under running water or in the dishwasher.

4. Refit the filter.

5. Insert the condensate container so that it locks into place.



Only operate the dryer with the filter inserted.



- Moisture sensor**
- The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.



1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or abrasive materials.

Technical data

- Dimensions (DxWxH)** 60 x 60 x 85 cm (height adjustable)
- Weight** approximately 51 kg
- Max. capacity** 7 kg
- condensate container** 4.0 l
- Connection voltage** 220-240 V
- Connected load** max. 800 W
- Fuse protection** 10 A
- Ambient temperature** 5 - 35 °C
- Product number**
- Production number** under the door

The rating plate can be found on the back of the dryer.

- Drum interior light** (*depending on model*): The drum lights up after the door is opened and after the programme starts, and switches off automatically.

Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
👕 Cottons 7 kg				
Cupboard Dry*	1400 rpm	(50%)	151 min	1.33 kWh
	1000 rpm	(60%)	178 min	1.65 kWh
	800 rpm	(70%)	205 min	1.92 kWh
Iron Dry*	1400 rpm	(50%)	110 min	0.94 kWh
	1000 rpm	(60%)	137 min	1.24 kWh
	800 rpm	(70%)	166 min	1.55 kWh
👚 Easy-Care 3.5 kg				
Cupboard Dry*	800 rpm	(40%)	64 min	0.54 kWh
	600 rpm	(50%)	81 min	0.68 kWh

* Programme setting for testing in accordance with applicable standard EN61121.
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Fabrics/programmes	Drying time	Annual energy consumption
👕 Cottons 7 kg / 3.5 kg*		
Cupboard Dry***	139 min / cycle	212 kWh / year

*** Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories

(from after-sales service using order number, depending on model)

WTZ 20410 **Washer-dryer stack connection set**
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set.


WTZ 11400 Same as WTZ 20410, but with pull-out worktop.

WTZ 10290 **Installation underneath the worktop**
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.


WMZ 20500 **Platform**
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

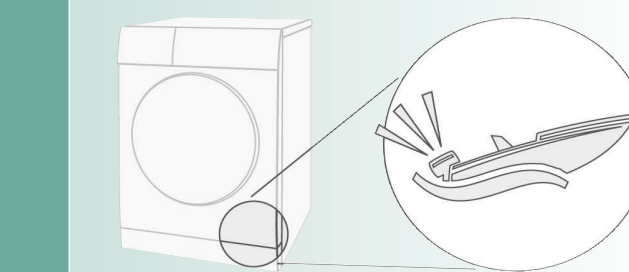


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

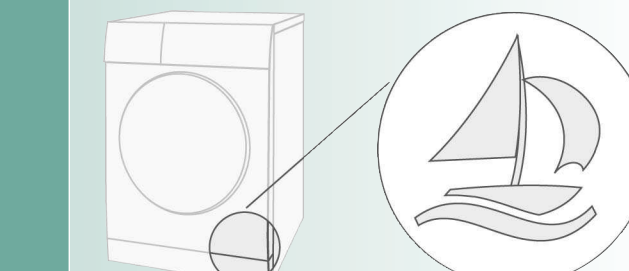

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

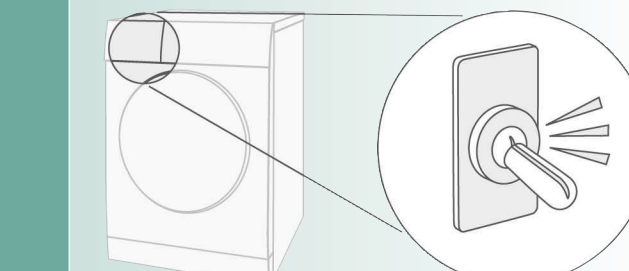


The automatic cleaning process causes a clicking noise.

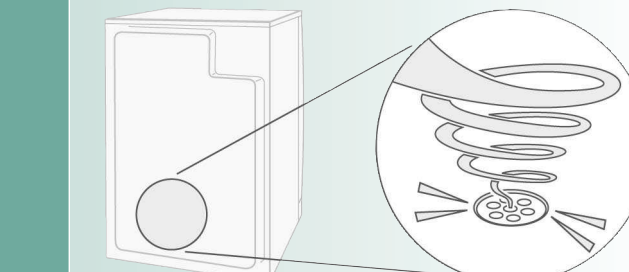

The process of pumping the condensation into the condensate container generates pumping noises.

11

 What to do if...




If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:
- **GB** 0844 892 8979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
- **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)
When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door).
Turn the programme selector to **Off** and unplug the mains plug from the socket.

- The **Start/Stop** indicator lamp does not light up. Mains plug plugged in? Programme selected? Check the socket fuse.
- The display panel light and indicator lights (*depending on model*) go out and the **Start/Stop** indicator light flashes. Energy-saving mode is activated → see the separate *Energy-saving mode* instructions.
- The **Container** indicator lamp and the **Start/Stop** button are flashing. Empty the condensate container → page 4. Clean the condensate container filter if necessary → page 9. Dryer transported? → Wait 2 hours and start again.
- The **Clean** indicator lamp and **Start/Stop** button are flashing. Rinse the fluff filter under running water → page 4.
- Dryer does not start.
 - Start/Stop button selected?
 - Door closed?
 - Programme set?
 - Ambient temperature greater than 5 °C?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it click into place.
- Creasing. Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → page 7.
- Drying result is not satisfactory (laundry feels too damp). Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → page 7. Use fine adjustment for the drying result → page 1/2 and 6. Fine layer of limescale on the humidity sensors → Clean the humidity sensors → page 9. Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.
- Drying time too long. Rinse the fluff filters under running water → page 4. Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → page 8. Ambient temperature higher than 35 °C → ventilate the room.
- The humidity in the room increases significantly. Make sure the room is sufficiently ventilated.
- Power failure. Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
- Other intermittent noises and vibrations. Not an error. Normal noises → page 11.
- Loud humming noise for several seconds. Has the condensate container been properly inserted? → Push the condensate container all the way in. Not an error. Normal noises → page 11.

12

 Safety instructions



Emergency
ONLY use the dryer...

The dryer must NEVER...
Hazards

- Pull the appliance plug out of the socket immediately or disconnect the fuse.
- in rooms inside the house.
- to dry fabrics.
- be used for purposes other than those described above.
- be modified in terms of its technology or properties.
- The dryer must not be used by children or persons who have not been instructed in its use.
- Do not leave children unsupervised near the dryer.
- Keep pets away from the dryer.
- Remove all objects from pockets, and lighters in particular → **Risk of explosion.**
- Do not lean or sit on the door → **Risk of tipping.**

Installation

- Secure loose cables → **Risk of tripping.**
- Do not operate a dryer if there is a risk of frost.
- Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
- The cable cross-section must be sufficient.

Mains connection

- Only use earth-leakage circuit breakers with the following symbol:
- The appliance plug and socket must be compatible.
- Do not use multiple plugs/connectors and/or extension cables.
- Do not touch or hold the appliance plug with wet hands → **Risk of electric shock.**
- Never pull the appliance plug out of the socket by its cable.
- Do not damage the mains lead → **Risk of electric shock.**

Operation

- Only load the drum with laundry.
- Check the contents before you switch the dryer on.
- Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion.**
- Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → **Risk of explosion**
- Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material.
- Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
- When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → **Risk of fire/explosion.**
- Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury.**
- Switch off the dryer once the programme has ended.
- The water from condensation is not drinking water and may be contaminated with fluff.

Defect

- Do not use the dryer if it is defective or if you suspect that it is.
- Repairs must only be carried out by the after-sales service.
- Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.

Spare parts

- Only use genuine spare parts and accessories for safety reasons.

Disposal

- Pull out the appliance plug, **then** cut off the mains cable from the appliance.
- Dispose of at a municipal waste disposal facility.
- Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg.
- Packaging: Keep all packaging out of reach of babies and children → **Risk of suffocation.**
- All materials are environmentally sound and can be reused.
- Dispose of in an environmentally-responsible manner.

13



Dryer


en Instruction manual

10

Your new dryer

Congratulations - you have chosen to buy a modern, high-quality Bosch domestic appliance.
The condensation dryer with heat pump and automatic cleaning of the heat exchanger is outstanding in terms of efficient energy consumption and low maintenance requirements → [page 6](#).
Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.
This appliance is designated according to European directive  2002/96/EC which governs waste electrical and electronic equipment - WEEE).
The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.bosch-home.com




Observe the safety instructions on [page 13](#).



Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.

Contents

	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Notes on laundry	5
Button signals	5
Fine adjustment of the drying result	6
Important Information	6
Overview of programmes	7
Installation	8
Frost protection / Transport	8
Signal	8
Care and cleaning	9
Technical data	10
Optional accessories	10
Normal noises	11
What to do if ... / After-sales service	12
Safety instructions	13

Reduced temperature for delicate fabrics  that require a longer drying time; e.g. polyacrylics, polyamide, elastane, acetate silk.

Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.



*Do not leave children unsupervised near the dryer.
Keep pets away from the dryer.
The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.*

Preparation Installation → [page 8](#)



*Never start the dryer if it is damaged.
Inform your after-sales service.*



*Make sure your hands are dry.
Hold the plug only.*



*Remove all items from pockets.
Check for cigarette lighters.
The drum must be empty prior to loading.*


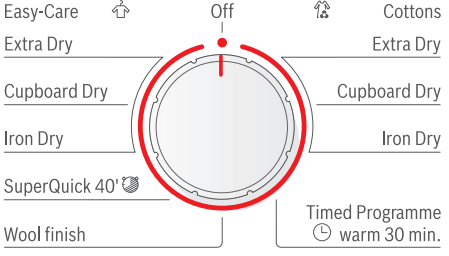
 



*See programme overview on [page 7](#).
See also separate instructions for "basket for v (depending on the model)*

Sorting and lo

Selecting and

Select the d

... and adapt to indiv

Additional functions	Display status/ service	Programme selector
 Low Heat	<ul style="list-style-type: none">DryingIron DryCupboard DryAnti-Crease/EndContainerClean	
	Container	Empty the condensate container. Clean the filter in the condensate container if necessary → page 9 .
	Clean	Rinse the fluff filters under running water → page 4 .
 Low heat	Fine adjustment of the drying result	The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for the  Cottons ,  Easy-Care and  SuperQuick 40' programmes → presetting = 0. After one of these programmes has been finely adjusted, the setting is retained for the others. Further information → page 6 .



All buttons are sens
need to be touched

Press the (



Only use the dryer
inserted.

Inspecting the dryer

Connecting the mains plug

Loading laundry

woollens"

adjusting the drying programme ...

Individual requirements

positive and only lightly.

Start/Stop button

with the fluff filter

0, 1, 2, 3

Drying

condensate container with filter

Control panel

Drum

Two-part fluff filter

Air inlet



Do not pull out/empty the condensate container when drying is in progress.

Drying




Emptying condensation

Empty the container **after each** drying cycle, not during drying.

1. Remove the condensate container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.

If the **Container** indicator lamp flashes despite the container having been emptied → *Filter in condensate container, page 9.*

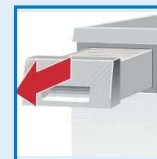





Cleaning the fluff filter



Clean fluff filters reduce energy consumption.


The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

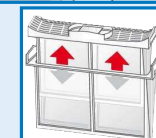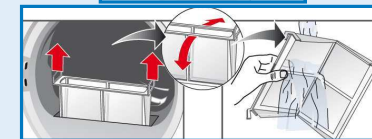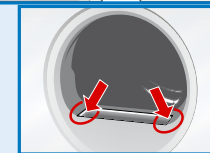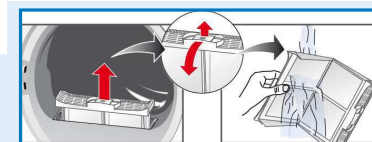

Switching off the dryer

Turn the programme selector to **Off**. Do not leave laundry in the dryer.

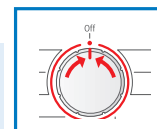

Removing the laundry

Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Less ironing** function is selected (*depending on model*)).

End of programme as soon as the **Anti-Crease/End** indicator lamp lights up.



Interrupt programme Adding or removing laundry.



The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.


1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- ☐ Dry at normal temperature.
- ☐ Dry at low temperature → in addition, select **Low Heat** .
- ☒ Do not machine dry.



Always observe the safety instructions on page 13.

Do not tumble-dry the following fabrics, for example:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



Drying tips

- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers.
- Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → Risk of creasing.
- Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7
- **Wool finish** programme (*depending on model*).
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → *Fine adjustment of the drying result* → page 6.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried.
- → Do not use the **Extra Dry** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.


Environmental protection / Energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview → page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals



Setting the volume for button signals

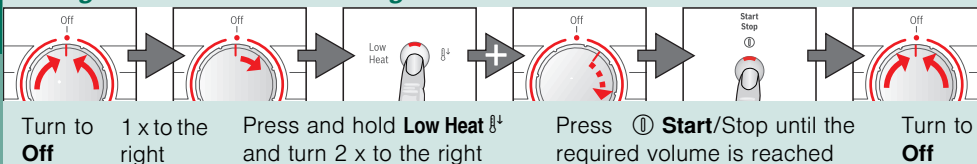


Selectable values: off, quiet, normal, loud.

Fine adjustment of the drying result



Adjustment of the levels of dryness

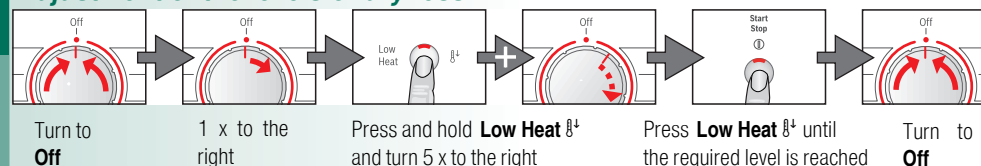

Drying, Iron Dry, Cupboard Dry, Anti-Crease/End are displayed in sequence. Short signal when changing from level 3 to 0, otherwise long signal.

0	1	2	3

Important Information

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.



Never operate the dryer without the fluff filters and without filter in condensate container.



Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process.

The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4.



Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → page 4/9.



Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets.

Do not dry non-breathable fabrics.

Avoid drying items that produce a lot of fluff.

Woollens should be refreshed only, using the woollens programme.

Programme overview

see also page 5.

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying, laundry is to be ...		ironed	lightly ironed	not ironed	mangled
PROGRAMMES					
TEXTILE TYPE AND INFORMATION					
Cottons	max. 7 kg	Hard-wearing fabrics, boil-proof fabrics made of cotton or linen.			
Easy-Care	max. 3.5 kg	Non-iron laundry made of synthetic fibres and mixed fabric, easy-care cotton.			
Iron Dry		The condition of the laundry means it is suitable for ironing (iron clothes in order to avoid creases).			
Cupboard Dry		For single-layered laundry.			
*Extra Dry		For laundry with thick, multi-layered parts.			
SuperQuick 40'	max. 2 kg	Laundry which needs to be dried quickly, e.g. made from synthetics, cotton or mixed fabrics. The values may deviate from the values shown here, because of type of fabric, composition of the laundry to be dried, residual moisture in the material and size of the load.			
Wool finish	max. 3 kg	Woollen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.			
Timed Programme warm 30 min	max. 3 kg	Pre-dried, multi-layered, delicate fabrics made of acrylic, or separate small items of laundry. Also for subsequent drying.			

*for **Cottons** and **Easy-Care** programmes only

**Dryness levels can be selected individually → Extra Dry, Cupboard Dry and Iron Dry (depending on the model).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9308 / 9000911273

Robert Bosch Hausgeräte GmbH
Carl-Wery-Str. 34
81739 München/Deutschland

WTW84161GB

Installation



- Scope of delivery: dryer, installation and operating instructions, woollens basket (depending on model).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.

1.

Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.



Take all accessory parts out of the drum. The drum must be empty.


Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.



2.

Mains connection see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

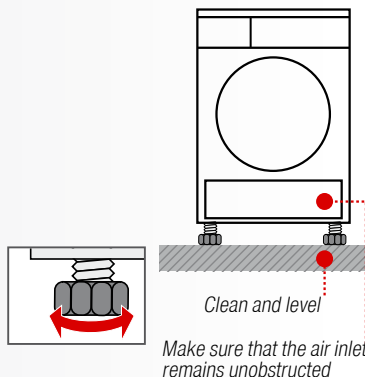

Frost protection / Transport



Do not operate the dryer if there is a danger of frost.



Frost protection - preparation

1. Empty the condensate container → page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensate container again.
5. Turn the programme selector to **Off**.



Transport

- Prepare the dryer → see Frost protection - preparation.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.




The dryer contains residual water; this can flow out if the dryer is tilted.

Signal



Switching on/off an acoustic signal at the end of the programme

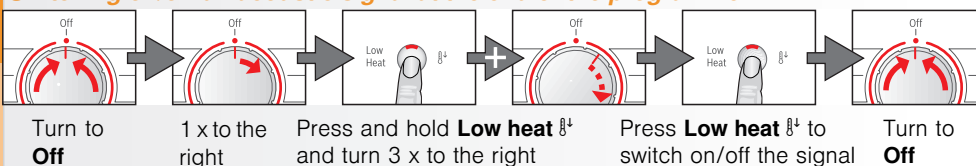

Low heat light on → an acoustic signal at the end of the programme is switched on.
Low heat light off → an acoustic signal at the end of the programme is switched off.

Care and cleaning



Appliance must be switched off.



Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. Do not pull out the condensate container during the cleaning process.



Dryer housing, control panel, air intake


Wipe with a soft, damp cloth. Do not use harsh cleaning agents or solvents. Remove detergent and cleaning agent residue immediately.




Filter in the condensate container

The filter is cleaned automatically when the condensate container is emptied. However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.


1. Pull out the condensate container.

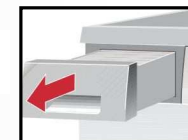


2. Pull the filter out of its snap-in lock.

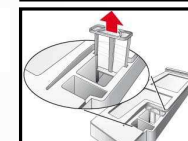

3. Clean the filter under running water or in the dishwasher.

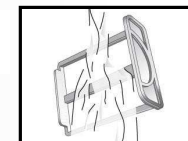

4. Refit the filter.

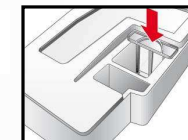

5. Insert the condensate container so that it locks into place.



Only operate the dryer with the filter inserted.



Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or abrasive materials.





Technical data

● Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approximately 51 kg
Max. capacity	7 kg
condensate container	4.0 l
Connection voltage	220-240 V
Connected load	max. 800 W
Fuse protection	10 A
Ambient temperature	5 - 35 °C
Product number	
Production number	under the door

The rating plate can be found on the back of the dryer.

- **Drum interior light** (depending on model): The drum lights up after the door is opened and after the programme starts, and switches off automatically.

Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
 Cottons 7 kg				
Cupboard Dry*	1400 rpm	(50%)	151 min	1.33 kWh
	1000 rpm	(60%)	178 min	1.65 kWh
	800 rpm	(70%)	205 min	1.92 kWh
Iron Dry*	1400 rpm	(50%)	110 min	0.94 kWh
	1000 rpm	(60%)	137 min	1.24 kWh
	800 rpm	(70%)	166 min	1.55 kWh
 Easy-Care 3.5 kg				
Cupboard Dry*	800 rpm	(40%)	64 min	0.54 kWh
	600 rpm	(50%)	81 min	0.68 kWh

* Programme setting for testing in accordance with applicable standard EN61121.

** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Fabrics/programmes	Drying time	Annual energy consumption
Cottons 7 kg / 3.5 kg*		
Cupboard Dry***	139 min / cycle	212 kWh / year

*** Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories

(from after-sales service using order number, depending on model)

WTZ 20410 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set.


WTZ 11400
Same as WTZ 20410, but with pull-out worktop.

WTZ 10290 Installation underneath the worktop
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.


WMZ 20500 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

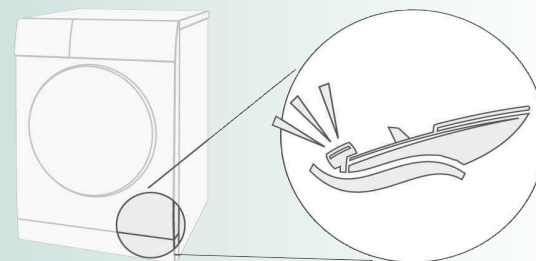


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

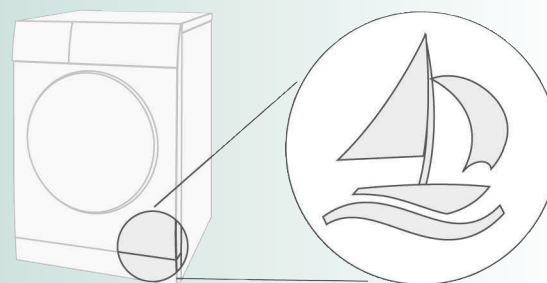

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

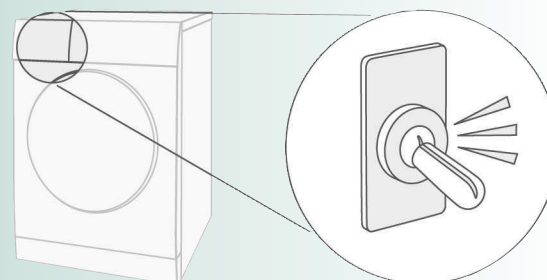

The automatic cleaning process causes a clicking noise.

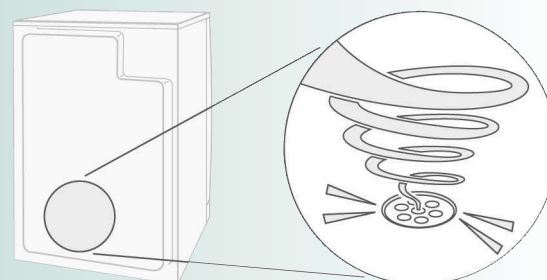

The process of pumping the condensation into the condensate container generates pumping noises.

What to do if...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:

– **GB** 0844 892 8979 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)

– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)


When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door).

Turn the programme selector to **Off** and unplug the mains plug from the socket.

● The ① Start/Stop indicator lamp does not light up.	Mains plug plugged in? Programme selected? Check the socket fuse.
● The display panel light and indicator lights (<i>depending on model</i>) go out and the ① Start/Stop indicator light flashes.	Energy-saving mode is activated → see the separate <i>Energy-saving mode</i> instructions.
● The Container indicator lamp and the ① Start/Stop button are flashing.	Empty the condensate container → <i>page 4</i> . Clean the condensate container filter if necessary → <i>page 9</i> . Dryer transported? → Wait 2 hours and start again.
● The Clean indicator lamp and ① Start/Stop button are flashing.	Rinse the fluff filter under running water → <i>page 4</i> .
● Dryer does not start.	① Start/Stop button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it click into place.
● Creasing.	Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → <i>page 7</i> .
● Drying result is not satisfactory (laundry feels too damp).	Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → <i>page 7</i> . Use fine adjustment for the drying result → <i>page 1/2 and 6</i> . Fine layer of limescale on the humidity sensors → Clean the humidity sensors → <i>page 9</i> . Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.
● Drying time too long.	Rinse the fluff filters under running water → <i>page 4</i> . Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → <i>page 8</i> . Ambient temperature higher than 35 °C → ventilate the room.
● The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated.
● Power failure.	Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
● Other intermittent noises and vibrations.	Not an error. Normal noises → <i>page 11</i> .
● Loud humming noise for several seconds.	Has the condensate container been properly inserted? → Push the condensate container all the way in. Not an error. Normal noises → <i>page 11</i> .

Safety instructions



Emergency	– Pull the appliance plug out of the socket immediately or disconnect the fuse.
ONLY use the dryer...	– in rooms inside the house. – to dry fabrics.
The dryer must NEVER...	– be used for purposes other than those described above. – be modified in terms of its technology or properties.
Hazards	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets, and lighters in particular → Risk of explosion . – Do not lean or sit on the door → Risk of tipping .
Installation	– Secure loose cables → Risk of tripping . – Do not operate a dryer if there is a risk of frost.
Mains connection	– Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol:  – The appliance plug and socket must be compatible. – Do not use multiple plugs/connectors and/or extension cables. – Do not touch or hold the appliance plug with wet hands → Risk of electric shock . – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → Risk of electric shock .
Operation	– Only load the drum with laundry. Check the contents before you switch the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → Risk of fire/explosion . – Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → Risk of explosion – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material. – Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate. – When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → Risk of fire/explosion . – Light things, such as long hair, may be sucked into the air inlet of the dryer → Risk of injury . – Switch off the dryer once the programme has ended. – The water from condensation is not drinking water and may be contaminated with fluff.
Defect	– Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
Spare parts	– Only use genuine spare parts and accessories for safety reasons.
Disposal	– Pull out the appliance plug, then cut off the mains cable from the appliance. Dispose of at a municipal waste disposal facility. – Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg. – Packaging: Keep all packaging out of reach of babies and children → Risk of suffocation . – All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.



Dryer



BOSCH

en Instruction manual