




PIV...N...
Hob



BOSCH

[en] Instruction manual

PIV...N...

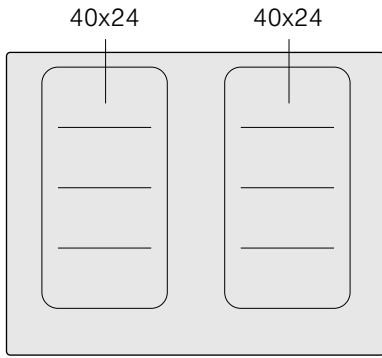

		g*	b*
40x24		2.000 W	2.500 W
		2.000 W	3.200 W
		3.300 W	3.600 W

* IEC 60335-2-6

en Table of contents

Safety precautions	3
Elements that may damage the appliance	4
Protecting the environment	5
Environmentally-friendly disposal	5
Energy-saving advice	5
Induction cooking	5
Advantages of induction cooking	5
Cookware	5
Getting to know your appliance	6
The control panel	6
The hotplates	6
Residual heat indicator	7
Programming the hob	7
Turning the hob on and off	7
Setting the hotplate	7
Cooking guidelines table	7
Flexible zone	9
Advice on using cookware	9
Warnings	9
As one hotplate	9
As two hotplates	9
Childproof lock	10
Turning on and off the childproof lock	10
Childproof lock	10

Powerboost function	10
Usage restrictions	10
How to activate	10
How to deactivate	10
Time programming function	10
A hotplate should switch off automatically.	10
The timer	11
Cleaning lock function	11
Automatic time limitation	11
Basic settings	11
Accessing the basic settings	12
Care and cleaning	12
Hob	12
Hob frame	12
Fixing malfunctions	13
Normal noise while the appliance is working	13
After-sales service	14
Tested dishes	14

Additional information on products, accessories, replacement parts and services can be found at www.bosch-home.com and in the online shop www.bosch-eshop.com

Safety precautions

Please read this manual carefully. Please keep the instruction and installation manual as well as the appliance certificate in a safe place for later use or for subsequent owners.

Check the appliance after removing it from the packaging. If it has suffered any damage in transport, do not connect the appliance, contact the Technical Assistance Service and provide written notification of the damage caused, otherwise you will lose your right to any type of compensation.

This appliance must be installed according to the installation instructions included.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

Do not use covers. These can cause accidents, due to overheating, catching fire or materials shattering, for example.

Do not use inappropriate child safety shields or hob guards. These can cause accidents.

This appliance is not intended for operation with an external clock timer or a remote control.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

We advise that you exercise caution using or standing near an induction hob while it is in operation, if you wear a pacemaker or a similar medical device. Consult your doctor or the device manufacturer concerning its conformity or any possible incompatibilities,

Risk of fire!

- Hot oil and fat can ignite very quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.
- The hotplates become very hot. Never place combustible items on the hob. Never place objects on the hob.
- The appliance gets hot. Do not keep combustible objects or aerosol cans in drawers directly underneath the hob.
- The hob switches off automatically and can no longer be operated. It may switch on unintentionally at a later point. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

Risk of burns!

- The hotplates and surrounding area (particularly the hob surround, if fitted) become very hot. Never touch the hot surfaces. Keep children at a safe distance.
- The hotplate heats up but the display does not work. Switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Metal objects on the hob quickly become very hot. Never place metal objects (such as knives, forks, spoons and lids) on the hob.
- After each use, always turn off the hob at the main switch. Do not wait until the hob turns off automatically after the pan is removed.

Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.

- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Cracks or fractures in the glass ceramic may cause electric shocks. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

Malfunction risk!

The hob is equipped with a fan in the lower section. If there is a drawer under the hob it should not be used to store small objects or paper, since they could damage the fan or interfere with the cooling if they are sucked into it.

There should be a minimum of 2 cm between the contents of the drawer and fan intake.

Risk of injury!

- When cooking in a bain marie, the hob and cooking container could shatter due to overheating. The cooking container in the bain marie must not directly touch the bottom of the water-filled pot. Only use heat-resistant cookware.
- Saucepans may suddenly jump due to liquid between the pan base and the hotplate. Always keep the hotplate and saucepan bases dry.

Elements that may damage the appliance

Caution!

- Rough pan bases may scratch the hob.
- Avoid leaving empty pots and pans on the hotplate. Doing so may cause damage.
- Do not place hot pans on the control panel, the indicator area, or the hob frame. Doing so may cause damage.
- Hard or pointed objects dropped on the hob may damage it.
- Aluminium foil and plastic containers will melt if placed on the hotplate while it is hot. The use of laminated sheeting is not recommended on the hob.

Overview

The following table presents the most common damage caused:

Damage	Cause	Measure
Stains	Food spillage	Immediately remove spilt food using a glass scraper.
	Unsuitable cleaning products	Only use cleaning products specifically designed for glass-ceramic hobs.
Scratches	Salt, sugar and sand	Do not use the hob as a tray or working surface.
	Pans with rough bottoms may scratch the glass ceramic	Check pans.
Fading	Unsuitable cleaning products	Only use cleaning products specifically produced for glass-ceramic hobs.
	Contact with pans	Lift pots and pans before moving them around.
Chips	Sugar, substances with a high sugar content	Immediately remove spilt food using a glass scraper.

Protecting the environment

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Energy-saving advice

- Always use the correct lid for each pan. Cooking without a lid uses a lot more energy. Use a glass lid to provide visibility and avoid having to lift the lid.

- Use pans with flat bases. Bases that are not flat use a lot more energy.
- The diameter of the pan base must match the size of the hotplate. Please note: pan manufacturers usually provide the diameter for the top of the pan, which is usually larger than the diameter of the pan base.
- Use a small pan for small amounts of food. A large pan which is not full uses a lot of energy.
- Use little water when cooking. This saves energy and preserves all the vitamins and minerals in vegetables.
- Select the lowest power level to maintain cooking. If the power level is too high, energy is wasted.

Induction cooking

Advantages of induction cooking

Induction cooking represents a radical change from the traditional method of heating; the heat is generated directly in the pan. It therefore offers a number of advantages:

- Time savings for cooking and frying; since the pan is heated directly.
- Energy is saved.
- Care and cleaning are simpler. Foods that have spilt do not burn as quickly.
- Heat and safety control; the hob supplies or cuts off power as soon as the control knob is turned on. The induction hotplate stops supplying heat if the pan is removed without having previously switched it off.

 
Cookware

Only ferromagnetic pans are suitable for induction cooking; these may be made from:


- enamelled steel
- cast iron
- special stainless steel induction pans.

To determine whether a pan is suitable, check to see if a magnet will stick to its base.


There are other types of cookware for induction whose base is not entirely ferromagnetic.



When using large cookware on a smaller ferromagnetic area, only the ferromagnetic zone heats up, so heat might not be uniformly distributed.

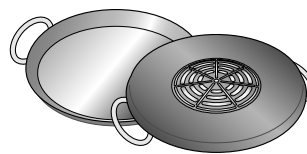

Pans with aluminium areas inserted in the base reduce the ferromagnetic area, so less heat may be supplied and the pan may be difficult to detect or not be detected at all.

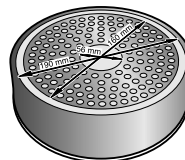

For good cooking results, the diameter of the cookware's ferromagnetic area should match the size of the hotplate. If cookware is not detected on a hotplate, try it on the next smaller hotplate down.

Unsuitable pans

Never use diffuser hobs or pans made from:

- common thin steel
- glass
- earthenware
- copper
- aluminium

Characteristics of the pan base

The characteristics of the pan base may affect the uniformity of the cooking results. Pans made from materials which help diffuse heat, such as stainless steel sandwich pans, distribute heat uniformly, saving time and energy.

Absence of pan or unsuitable size

If no pan is placed on the selected hotplate, or if it is made of unsuitable material or is not the correct size, the power level displayed on the hotplate indicator will flash. Place a suitable pan on the hotplate to stop the flashing. If this takes more than 90 seconds, the hotplate will switch off automatically.

Empty pans or those with a thin base

Do not heat empty pans, nor use pans with a thin base. The hob is equipped with an internal safety system. However, an empty pan may heat up so quickly that the "automatic switch off" function may not have time to react and the pan may reach very high temperatures. The base of the pan could melt and damage the glass on the hob. In this case, do not touch the pan and switch the hotplate off. If it fails to work after it has cooled down, please contact the Technical Assistance Service.


Pan detection

Each hotplate has a minimum limit for detecting pans, which varies depending on the material of the pan being used. You should therefore use the hotplate that is most suitable for the diameter of your pan.

Getting to know your appliance

On *page 2*, you will find information on the dimensions and power of the hotplates.

The control panel

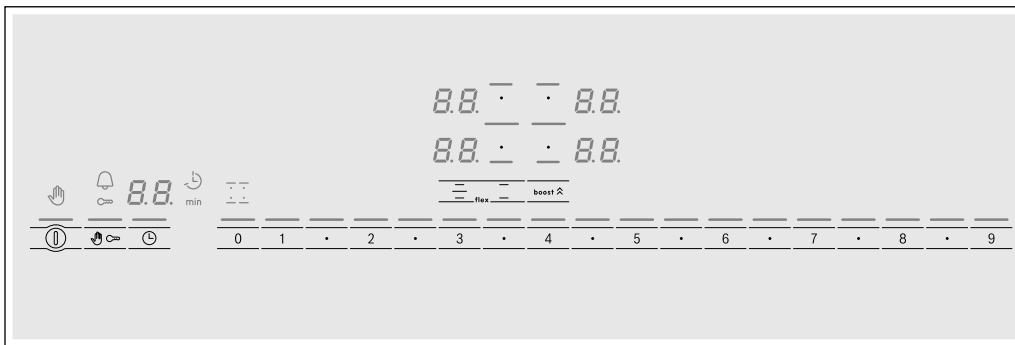

Control panels	
	Main switch
	Selecting the hotplate
1•2•...8•9	Programming zone
	Cleaning lock function
	Childproof lock
	Timer programming
	Flexible zone
boost	Powerboost Function

Indicators	
1-9	Power levels
	Functionality
00	Time program function
H/h	Residual heat
b	Powerboost Function
	Timer
	Childproof lock
	Cleaning lock
	Automatic shut-off
	Flexible zone

Control panels

Pressing a symbol activates its corresponding function.

Note: Always keep the control surfaces dry. Moisture can affect proper working.

The hotplates

Hotplate	
Single hotplate	Use a correctly sized pan.
Flexible hotplate	See "flexible hotplate" section
Only use pans suitable for induction cooking, see the "Appropriate cookware" section.	

Residual heat indicator

The hob has a residual heat indicator for each hotplate to show those which are still hot. Avoid touching them when this indicator is lit.

Although the hob is switched off, the indicator **h** or **H** will remain on for as long as the hotplate is hot.

If the pan is removed before the hotplate is turned off, the indicator **h** or **H** and the selected power level will appear alternately.

Programming the hob

This section will show you how to program the hotplates. The table contains power levels and cooking times for several dishes.

Turning the hob on and off

The hob is turned on and off using the main switch.

To switch on: press the **I** symbol. The main switch indicator and the hotplate selection indicators light up. The hob is ready for use.

To switch off: press the **I** symbol. The main switch indicator and the hotplate indicators turn off. The hob is switched off. The residual heat indicator will remain lit until the hotplates have cooled down sufficiently.

Note: The hob turns off automatically when all of the hotplates are off for more than 15 seconds.

Setting the hotplate

Select the power level required with the 1 to 9 symbols.

Power level 1 = minimum power

Power level 9 = maximum power


Each power level has an intermediate level. This level is marked with the **●** symbol in the programming zone.

Selecting the power level

The hob must be switched on.

1. Press the **▽** or **○** symbol on the hotplate. Indicator **0.0** will come on.

2. Then press the required power level symbol.

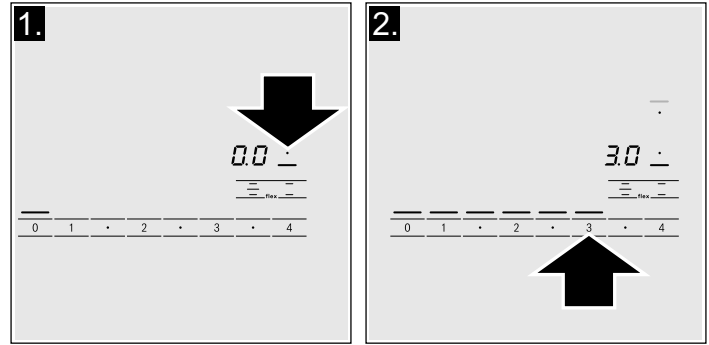

The power level has been set.

Changing the power level

Select the hotplate and then press the symbol for the desired power level. To select an intermediate level, press the **●** symbol that is between the power level symbols.

Switch off the hotplate

Select the hotplate and then press the power level symbol 0.

Note: If no pan has been placed on the induction hotplate, the selected power level flashes. After a certain time, the hotplate switches off.

Cooking guidelines table

The table below contains some examples.

Cooking times depend on the power level, type, weight and quality of the food. As such they are approximate.

When heating purées, creams and thick sauces, stir occasionally.

Use power level 9 to begin cooking.

	Power level	Cooking time
Melting		
Chocolate, chocolate coating	1-1.5	-
Butter, honey, gelatin	1-2	-
Heating and keeping warm		
Stew (e.g., lentils)	1.5-2	-
Milk**	1.5-2.5	-
Sausages heated in water**	3-4	-
Defrosting and heating		
Frozen spinach	3-4	15-25 min.
Frozen goulash	3-4	30-40 min.

* Uncovered cooking

** Uncovered

*** Turn frequently

	Power level	Cooking time
Slow cooking, simmering		
Potato dumplings*	4.5-5.5	20-30 min.
Fish*	4-5	10-15 min.
White sauces (e.g., bechamel)	1-2	3-6 min.
Whipped sauces (e.g., Bearnaise, Hollandaise)	3-4	8-12 min.
Boiling, steaming, sautéing		
Rice (with a double amount of water)	2-3	15-30 min.
Rice pudding	2-3	30-40 min.
Unpeeled potatoes	4-5	25-30 min.
Peeled potatoes with salt	4-5	15-25 min.
Pasta*	6-7	6-10 min.
Soups	3.5-4.5	15-60 min.
Vegetables	2.5-3.5	10-20 min.
Greens, frozen foods	3.5-4.5	7-20 min.
Cooked in a pressure cooker	4.5-5.5	-
Stewing		
Meat roll	4-5	50-60 min.
Stew	4-5	60-100 min.
Goulash	3-4	50-60 min.
Bake / Fry with a little oil**		
Steaks, plain or breaded	6-7	6-10 min.
Frozen steaks	6-7	8-12 min.
Chops, plain or breaded***	6-7	8-12 min.
Beefsteak (3 cm thick)	7-8	8-12 min.
Chicken breast (2 cm thick)***	5-6	10-20 min.
Frozen chicken breast***	5-6	10-30 min.
Hamburgers, meatballs (3 cm thick)***	4.5-5.5	30-40 min.
Plain fish and fish fillet	5-6	8-20 min.
Breaded fish and fish fillet	6-7	8-20 min.
Frozen breaded fish (e.g., fish fingers)	6-7	8-12 min.
Prawns and shrimps	7-8	4-10 min.
Frozen meals (e.g., stir-fries)	6-7	6-10 min.
Pancakes	6-7	fry individually
Omelette	3.5-4.5	fry individually
Fried eggs	5-6	3-6 min.
Frying** (150-200 g per serving with 1-2 l of oil)		
Frozen foods (e.g., French fries, chicken nuggets)	8-9	fry one portion at a time
Frozen croquettes	7-8	
Meat (e.g., chicken pieces)	6-7	
Fish, in breadcrumbs or batter	6-7	
Greens, mushrooms, in breadcrumbs or batter (e.g., baby mushrooms)	6-7	
Confectionery products (e.g., fritters, fruit in batter)	4-5	

* Uncovered cooking

** Uncovered

*** Turn frequently

Flexible zone

 
This may be used as a single zone or two individual zones depending on the cooking needs in each situation.

It consists of 4 independently-controlled inductors. When the flexible zone is working, only the zone covered by the cookware is activated.


Advice on using cookware

To ensure that the cookware is detected and heat is distributed evenly, correctly centre the cookware:


As one hotplate



 Diameter less than or equal to 13 cm
Place the cookware on one of the four positions shown in the image.




 Diameter greater than 13 cm
Place the cookware on one of the three positions shown in the image.



If the cookware takes up more than one hotplate, place it at the top or bottom edge of the flexible zone.


As two independent hotplates

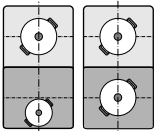


The front and back hotplates, each with two inductors, can be used independently by selecting the necessary power for each one. In this case, it is recommended to only use one pan on each hotplate.

Warnings

 When using cookware of a different size or made of a different material, noise and vibrations that do not affect the correct working of the zone may occur.



To obtain maximum power with the Powerboost Function, place the cookware in the centre of the flexible zone when used as a single hotplate.

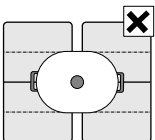

On hobs with more than one flexible zone, it is not recommended to use several zones at the same time for a single pan.

As one hotplate

The flexible zone is normally used as one single hotplate.

How to activate

The hob must be switched on.

1. Select the flexible zone with the $\overline{\text{—}}$ or $\underline{\text{—}}$ symbol. The indicator $\overline{\text{—}}$ lights up.

2. Select the power level in the programming zone.

The flexible zone is switched on.

Changing the power level

Change the desired power level in the programming zone.

Adding more cookware

Select the flexible zone then press and hold the $\overline{\text{—}}$ symbol until the cookware is detected. The previously selected power level is maintained.

Note: If the pan on the hotplate that is switched on is moved or removed, the hob will perform an automatic search and the previously selected power level will be maintained.

To deactivate

Select the hotplate and press the 0 symbol.

As two hotplates

The flexible zone can be used as two independent hotplates.

How to activate

The hob must be switched on.

1. Select the flexible zone then press the $\overline{\text{—}}$ symbol.

The indicator $\overline{\text{—}}$ lights up between the $\overline{\text{—}}$ and $\underline{\text{—}}$ symbols.

2. Select one of the hotplates in the flexible zone. The indicator $\overline{\text{—}}$ lights up.

3. Select the power level in the programming zone.

How to deactivate

Select the hotplate and press the 0 symbol. The hotplate switches off.


 
Note: When a hob is switched off and switched on again, the flexible zone returns to being one single hotplate.


Childproof lock

The hob can be protected against being accidentally turned on, to ensure that children do not switch on the hotplates.

Turning on and off the childproof lock.

The hob should be switched off.

To turn on: press and hold the  symbol for approx. 4 seconds. The  symbol lights up for 4 seconds. The hob is locked.

To turn off: press and hold the  symbol for approx. 4 seconds. The lock is now deactivated.

 
Childproof lock

With this function, the childproof lock automatically activates when a hob is switched off.




Activating and deactivating


All of the relevant information on the automatic childproof lock connection can be found in the *Basic settings* chapter.

Powerboost function

   The Powerboost function can be used to heat large amounts of water more quickly than the power level .



Usage restrictions

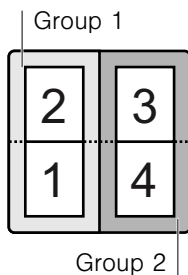This function can always be activated for a hotplate, provided the other hotplate in the same group is not in use. (See illustration). Otherwise,  and  flash in the heat setting display; the  heat setting is then set automatically without activating the function.





 
Note: The greatest amount of power supplied in the flexible zone is obtained by placing a pan in the centre of the zone, as indicated in the *Flexible zone* chapter.

How to activate

1. Select a hotplate.
2. Press the **boost**  symbol.
The  indicator lights up.

The Powerboost function will have been activated.

How to deactivate

1. Select a hotplate.
2. Press the **boost**  symbol.
The  indicator will no longer be displayed and the hotplate will return to the power level .

The Powerboost function will have been deactivated.

Note: In certain circumstances, the Powerboost function may turn off automatically in order to protect the electronic components inside the hob.

Time programming function

 

 
This function may be used in two different ways:

- to automatically switch off a hotplate.
- as a timer.


A hotplate should switch off automatically.

Enter a cooking time for your dish. The hotplate switches off automatically after the time that is set has elapsed.

Setting procedure

1. Select the hotplate and set the required heat setting.
2. Touch the  symbol twice.  and  light up in the timer display.


3. Within the next 10 seconds, select the required cooking time on the settings range.

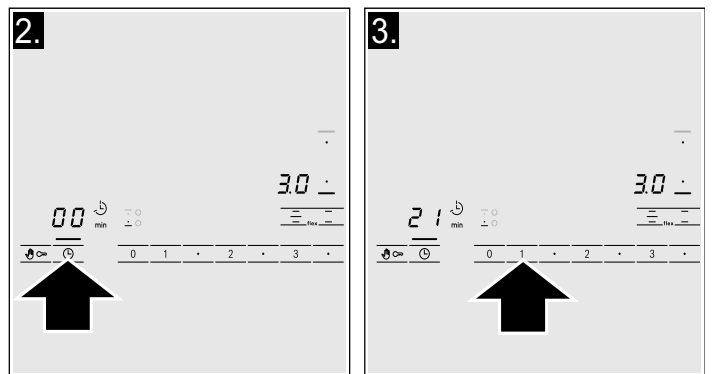



The cooking time begins to elapse.

Note: The same cooking time can be automatically programmed for the all the hotplates. The programmed time passes independently for each of the hotplates. The *Basic settings* chapter provides information on automatically programming the cooking time.



 Changing or cancelling the time


Select the hotplate and press the  symbol twice.

The  and  displays appear

 
Change the cooking time using symbols **1** to **9** or press **0** to cancel the time.

Once the time has elapsed

The hotplate switches off once this time has elapsed. A beep is heard and  appears in the hotplate and the time programming function display shows  for 10 seconds.

When the  symbol is pressed, the displays turn off and the beep goes off.




Notes

- If a cooking time has been programmed, the display always shows the time of this function. To check the cooking time remaining in a hotplate, select a hotplate and press the  symbol twice.
- If a time has been programmed for several hotplates, the time of the selected hotplate is always shown.
- Any cooking time can be programmed for up to 99 minutes.

The timer

The timer can be set for periods of up to 99 minutes. It is independent of the other settings. This function does not automatically switch off a hotplate.




How to program

1. Press the  symbol. The indicator  lights up.  lights up in the time program function display.



2. Set the required time using symbols **1** to **9**.

The time starts again after a few seconds.

Once the time has elapsed

Once the time has elapsed, a beep will sound.  and  are displayed in the time program function display. After pressing the  symbol, the indications turn off.


Changing or cancelling the time

Press the  symbol, the  indicator lights up.

Change the time using the **1** to **9** symbols or press **0** to cancel.

Cleaning lock function

Cleaning the control panel while the hob is on may change the settings.

 
In order to avoid this, the hob has a cleaning lock function. Press the  symbol. A signal sounds. The control panel is

locked for 35 seconds. The surface of the control panel can now be cleaned without risk of changing the settings.

Note: The lock does not affect the main switch. The hob may be switched off when desired.

Automatic time limitation

If the hotplate remains in use for a long time and no changes are made in the settings, the automatic time limitation function is triggered.

 

 
 

 

 

 
 
 
 

The hotplate stops heating. The  symbol and the residual heat indicator  flash alternatively in the display.

The indicator goes out when any symbol is pressed. The hotplate can now be reset.

 

 
 
 


 

 
 
 
 
When the automatic time function is used, it is governed by the selected power level (from 1 to 10 hours).

Basic settings

The device has several basic settings. These settings may be adapted to the user's individual needs.

Indicator	Function
	Childproof lock  Deactivated.*  Activated.
	Audible signals  Confirmation and error signals deactivated.  Only confirmation signal deactivated.  All signals activated.*
	Automatic programming of cooking time  Switched off.*  1-99 Automatic shut-off time.
	Duration of the time program function warning signal  10 seconds*.  30 seconds.  1 minute.


*Factory settings


Indicator	Function
	Power-Management function  = Deactivated.*  = 1,000 W. minimum power.  = 1,500 W.  = 2,000 W. etc.  or  = maximum power of the hob.
	Hotplate time selection  Unlimited: the last hotplate programmed remains selected.*  Limited: The hotplate will only remain selected for 10 seconds.
	Return to basic settings  Personal settings.*  Return to factory settings.


 
*Factory settings


Accessing the basic settings

The hob must be switched off.


1. Switch on the hob using the main switch.
2. Within the next 10 seconds, touch and hold the  symbol for 4 seconds.

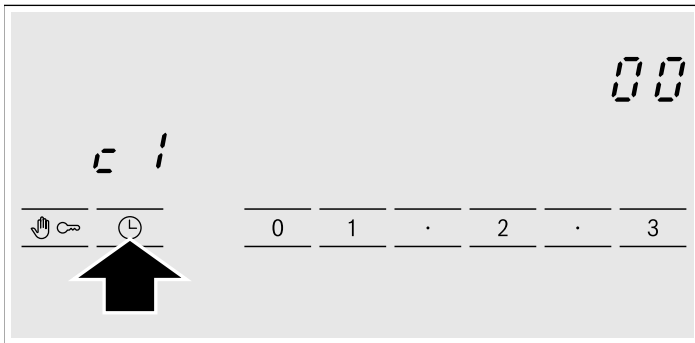


In the display,  appears on the left and  appears on the right.

3. Touch the  symbol repeatedly until the required function is displayed.

4. Then select the required setting from the settings range.

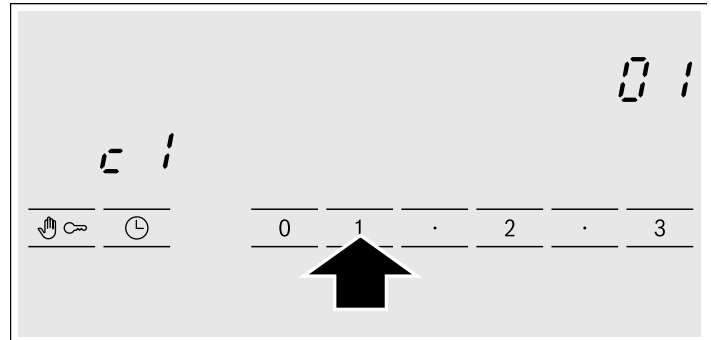

5. Touch and hold the  symbol for at least 4 seconds. The settings have been saved.

Leaving the basic settings

Turn off the hob with the main switch.

Care and cleaning

The advice and warnings contained in this section aim to guide you in cleaning and maintaining the hob, so that it is kept in the best possible condition

Hob

Cleaning

Clean the hob after each use. This prevents food remains left on the surface from burning. Wait until the hob is cool enough before attempting to clean it.

Only use cleaning products specifically designed for hobs. Follow the instructions provided on the packaging.

Do not use:

- Undiluted washing-up liquid
- Dishwasher detergent
- Abrasive products
- Corrosive products such as oven sprays or stain removers
- Sponges that may scratch
- High-pressure or steam cleaners

The best way to remove stubborn stains is to use a glass scraper. Follow the manufacturer's instructions.

Suitable glass scrapers can be obtained through the Technical Assistance Service or from our online shop.

Hob frame

In order to avoid damage to the hob frame, follow the indications below:

- Use only slightly soapy hot water
- Do not use sharp or abrasive products
- Do not use a glass scraper

Fixing malfunctions

Malfunctions are usually due to small details. Before calling the Technical Assistance Service, you should consider the following advice and warnings.

Indicator	Malfunction	Solution
none	The electric power supply has been cut off. The appliance has not been correctly connected following the connection diagram. Electronic system malfunction.	Use other electrical appliances to check whether there has been a power cut. Check that the appliance has been connected correctly according to the connection diagram. If in the above checks, the malfunction is not resolved, contact the Technical Assistance Service.
E flashes	The control panel is damp or an object is resting on it.	Dry the control panel area or remove the object.
E_r + number / d + number / P + number	Electronic system malfunction.	Unplug the hob from the mains. Wait about 30 seconds before plugging it in again. *
$F0 / F9$	There is an internal error in the working.	Unplug the hob from the mains. Wait about 30 seconds before plugging it in again. *
$F2 / F5$	The electronic system has overheated and the corresponding hotplate has been switched off.	Wait until the electronic system has cooled down completely. Then push any symbol on the hob.*
$F4$	The electronic system has overheated and all hotplates have been switched off.	
$U1$	Supply voltage outside normal operating limits.	Please contact your electricity board.
$U2 / U3$	The hotplate has overheated and has switched off in order to protect its cooking surface.	Wait until the electronic system has cooled down sufficiently before switching it back on.

* If the warning persists call the Technical Assistance Service.

Do not rest hot pans on the control panel.

Normal noise while the appliance is working

Induction heating technology is based on the creation of electromagnetic fields that generate heat directly at the base of the pan. Depending on how the pan has been manufactured, certain noises or vibrations may be produced such as those described below:

A deep humming sound as in a transformer

This noise is produced when cooking with a high power level. It is caused by the amount of energy transferred from the hob to the pan. The noise disappears or becomes faint when the power level is lowered.

A low whistling sound

This noise is produced when the pan is empty. The noise disappears when water or food is added to the pan.

A crackling sound

This noise occurs in pans which are made from different materials superimposed on one another. It is caused by the vibrations that occur in the adjoining surfaces of the different superimposed materials. The noise comes from the pan. The amount of food and cooking method can vary noise intensity.

A high-pitched whistling sound

This noise is produced mainly in pans made from different materials superimposed on one another, and it occurs when such pans are heated at maximum power on two hotplates at the same time. The whistling disappears or becomes fainter as soon as the power level is lowered.

Noise from the fan

For proper use of the electronic system, the temperature of the hob must be controlled. To do this, the hob has a fan which turns on when a high temperature is detected. The fan may also work by inertia after the hob has been switched off, if the temperature detected is still too high.

The noises described are normal, they are part of induction heating technology and not a sign of malfunction.

After-sales service

Our after-sales service is there for you if your appliance should need to be repaired. We are committed to find the best solution also in order to avoid an unnecessary call-out.

E number and FD number:

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the appliance certificate.

Please note that a visit from an after-sales service engineer is not free of charge, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

GB 0844 8928979

Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.

IE 01450 2655

0.03 € per minute at peak. Off peak 0.0088 € per minute.

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.

Tested dishes

This table has been prepared for assessment institutions to provide controls for our appliances.

The data in the table refers to our Schulte-Ufer cookware accessories (4 piece cookware set for the HEZ 390042 induction hob) with the following measurements:

- Saucepan Ø 16 cm, 1.2 l for hotplates of Ø 14.5 cm
- Pot Ø 16 cm, 1.7 l for hotplates of Ø 14.5 cm
- Pot Ø 22 cm, 4.2 l for hotplates of Ø 18 cm
- Frying pan Ø 24 cm, for hotplates of Ø 18 cm

Tested dishes	Hotplate	Preheating		Cooking		
		Power level	Time (Min:S)	Cover	Power level Cover	
Melting chocolate						
Cookware: saucepan						
Chocolate coating (e.g. Dr. Oetker brand, dark 55%, 150 g.)	Ø 14.5 cm	-	-	-	1 - 1.	No
Heating lentil stew and keeping it heated						
Cookware: Pot						
Initial temperature 20 °C						
<i>Lentil stew*</i>						
Amount 450 g.	Ø 14.5 cm	9	1:30 without stirring	Yes	1.	Yes
Amount: 800 g.	Ø 18 cm	9	2:30 without stirring	Yes	1.	Yes
<i>Canned lentil stew, e.g. Erasco lentils with chorizo</i>						
Amount 500 g.	Ø 14.5 cm	9	1:30 stir after approx. 1:00	Yes	1.	Yes
Amount 1 kg.	Ø 18 cm	9	2:30 stir after approx. 1:00	Yes	1.	Yes
Making bechamel sauce						
Cookware: Saucepan						
Milk temperature: 7 °C						
Ingredients: 40 g of butter, 40 g of flour, 0.5 l of milk (3.5% fat) and a pinch of salt	Ø 14.5 cm					
1. Melt butter, mix in flour and salt and heat everything together		1	approx. 3:00	No		
2. Add milk and bring the sauce to a boil, stirring continuously		7	approx. 5:20	No		
3. Keep the bechamel sauce at a boil for two more minutes, stirring continuously					1	No

*Recipe according to DIN 44550

***Recipe according to DIN EN 60350-2

Tested dishes	Hotplate	Preheating			Cooking	
		Power level	Time (Min:S)	Cover	Power level	Cover
Cooking rice pudding						
Cookware: Pot						
Milk temperature: 7 °C						
Heat milk until it begins to bubble. Change the recommended heating level and add rice, sugar and salt to the milk						
Ingredients: 190 g. of short-grain rice, 23 g. of sugar, 750 ml. of milk (3.5% fat) and a pinch of salt	Ø 14.5 cm	8.	approx. 6:30	No	2 stir after approx. 10:00	Yes
Ingredients: 250 g. of short-grain rice, 30 g. of sugar, 1 l. of milk (3.5% fat) and a pinch of salt	Ø 18 cm					
Cooking rice*						
Cookware: Pot						
Water temperature 20 °C						
Ingredients: 125 g of short-grain rice, 300 g of water and a pinch of salt	Ø 14.5 cm	9	approx. 2:30	Yes	2	Yes
Ingredients: 250 g of short-grain rice, 600 g of water and a pinch of salt	Ø 18 cm	9	approx. 2:30	Yes	2.	Yes
Pan-frying pork sirloin						
Cookware: Frying pan						
Sirloin initial temperature: 7 °C	Ø 18 cm	9	1:30	No	7	No
2 pieces of sirloin (total weight approx. 200 g, 1 cm thick)						
Frying crêpes**						
Cookware: Frying pan	Ø 18 cm	9	1:30	No	7	No
55 ml of crêpe batter						
Frying frozen potato chips						
Cookware: Pot	Ø 18 cm	9	Until the temperature of the oil reaches 180 °C	No	9	No
Ingredients: 1.8 kg of sunflower oil, for cooking: 200 g of frozen potato chips (e.g. McCain 123 Frites Original)						

*Recipe according to DIN 44550

***Recipe according to DIN EN 60350-2



Robert Bosch Hausgeräte GmbH

Carl-Wery-Straße 34

81739 München

Germany

www.bosch-home.com



9000925369

00
930906