






A sample energy label with explanations is provided here.  
 The energy label for your appliance can be found on the side or front of the appliance. Remove the label and stick it here.  
 The energy label includes an overview of the specific values of your appliance.  
 Much more important information can be found in your operating and installation instructions.  
 This additional sheet is a part of your operating instructions. Retain all documentation for subsequent use.

## i Correct detergent selection

The care label is crucial for selecting the correct detergent, temperature and treatment of the laundry. See also [www.sartex.ch](http://www.sartex.ch)


On the website [www.cleanright.eu](http://www.cleanright.eu), you can find much more useful information about detergents, care products and cleaning agents for private use.

Laundry and type of textile	Washing programme	Washing temperature	Detergent
Boil-washable <b>white</b> laundry made of linen or cotton 	Cottons	20 °C - 90 °C	Standard detergent that contains bleach and optical brighteners
<b>Coloured</b> washing made of linen or cotton 	Cottons	20 °C - 60 °C	Detergent for colours without bleach or optical brighteners
<b>Coloured</b> laundry made of easy-care fibres, synthetic materials 	Easy-Care	20 °C - 60 °C	Detergent for colours/delicates without optical brighteners
Delicate fine textiles, silk or viscose 	Delicate/Silk	20 °C - 40 °C	Delicates
Wool 	Wool	20 °C - 40 °C	Detergent for woollens

## i Information on protection of the environment and making savings

In addition to the information in the instructions for use, you can reduce costs further and protect the environment by observing the following information.

Energy (reduction in the washing temperature) and detergent can be reduced for lightly and normally soiled laundry.

Reduced temperature and amount of detergent according to dosing recommendation low 	Light	No visible dirt or stains. Items of clothing have a bodily odour, e.g. light-weight summer clothing/sportswear (worn for a few hours), T-shirts, shirts, blouses (worn for up to 1 day), guest bed linen and towels (used for 1 day)
	Normal	Soiling visible/or a few light stains noticeable, e.g. T-shirts, shirts, blouses (soaked with sweat, worn several times), towels, bed linen (used for up to 1 week)
	Heavy	Dirt and/or stains clearly visible, e.g. tea towels, baby items, work clothing
Temperature according to care label and amount of detergent according to dosing recommendation high		

9311/9000945060

 







 
## en Information on the EU regulation

In accordance with the European Ecodesign Directive (EU) 1015/2010, you will find additional product information below. You can use this product information to operate your appliance in a way that is efficient and environmentally friendly.

## i Product information

### ● Most efficient programmes for cotton textiles

The following programmes (standard programmes, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programmes for Baumwolle (Cottons) in accordance with European Ecodesign Directive (EU) no. 1015/2010	Load	Approximate programme duration
Cottons programme  +  button EcoPerfect	7 kg	2½ h
Cottons programme  +  button EcoPerfect	3,5 kg	2½ h
Cottons programme  +  button EcoPerfect	3,5 kg	2¼ h

Programme setting for testing and energy labelling according to directive 2010/30/EU with cold water (15 °C). The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated programme temperature for energy-saving reasons.

### ● Energy consumption when appliance switched off and not switched off

Appliance switched off:	0.12 W	Appliance not switched off (ready):	2.77 W
-------------------------	--------	-------------------------------------	--------

### ● Programme duration, residual moisture, energy and water consumption for the main washing programmes (approximate information)

Programme	Approximate information on the residual moisture		
	WIS28 ...	WIS24 ...	WIS20 ...
	WI14 ...	WI12 ...	WI10 ...
	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cottons	53 %	58 %	68 %
Easy-Care	40 %	40 %	40 %
Delicate/Silk	30 %	30 %	30 %
Wool	45 %	45 %	45 %

**Information on residual moisture** based on programme-dependent spin speed limits and maximum loads.

**The instructions for use contain approximate information on the programme duration, energy consumption and water consumption in the main washing programmes.**

The values may deviate from the specified values depending on the following factors: water pressure and hardness; water inlet temperature; type, amount and soiling of laundry; detergent used; fluctuations in the power supply; and additional functions selected.