

Overview of programmes

Program/type of laundry/information	Settings
Name of the program : Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (☼ = cold) Spin speed* additional settings that can be selected
 Cottons : Hard-wearing textiles, heat-resistant textiles made of cotton or linen Notes - For the Eco setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the Eco setting or, if necessary, set a higher temperature. - The Speed setting is suitable as a short program for lightly soiled laundry.	8 kg/5** kg; ☼ - 90 °C ----, 0 - 1400* rpm Speed Eco =   , Pre-wash, Rinse Plus
 Easy-Care : Textiles made of synthetic materials or blended fabrics	4 kg; ☼ - 60 °C ----, 0 - 1200 rpm Speed Eco =   Prewash, Rinse Plus
 Wool : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). Notes - Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. - Use a detergent that is suitable for machine-washing wool.	max. 2 kg; ☼ - 40 °C ----, 0 - 800 rpm -
 SuperQuick 15'/30' : Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry Note : When selecting the Speed setting, the program SuperQuick 15' is run.	2/3.5 kg; ☼ - 40 °C 0 - 1200 rpm Speed = 
 Mix : Mixed load of cottons and synthetic fabrics	4 kg; ☼ - 40 °C ----, 0 - 1400* rpm Speed Eco =   , Pre-wash, Rinse Plus
 Rinse : Extra rinse with selectable spin speed	-; - ----, 0 - 1400** rpm -
* max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting	

Program/type of laundry/information	Settings
 Spin/Drain  : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0. Note: The display of the Ready-in time is only updated once the program is restarted.	-; - ---, 0 - 1400** rpm -
 Drum Clean : Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use.	0 kg; 90 °C 1200 rpm -
Notes ■ Run the drum-care program without any laundry. ■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.	
 Delicate/Silk : For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note: Use a detergent suitable for machine-washing delicates or silk.	2 kg;  - 40 °C ---, 0 - 800 rpm Speed Eco   , Pre-wash, Rinse Plus
Duvet: Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	2 kg;  - 60 °C ---, 0 - 1200 rpm Speed Eco    , Rinse Plus
 Sportswear : Sportswear and leisure wear made from microfibre fabrics Notes ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	2 kg;  - 40 °C ---, 0 - 800 rpm Speed Eco   , Pre-wash, Rinse Plus
 Dark Wash : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	3.5 kg;  - 40 °C ---, 0 - 1200 rpm Speed Eco   , Pre-wash, Rinse Plus
* max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting	

Program/type of laundry/information	Settings
 Shirt/Blouses: Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	2 kg;  - 60 °C ----, 0 - 800 rpm Speed Eco =   Pre-wash, Rinse Plus
Notes - Shirts/blouses are only given a short spin on the Easy-Iron (depend on model) setting. Hang them up to dry while still dripping wet. -> Self-smoothing effect - Use the Delicate/Silk program to wash shirts/blouses made of silk/delicate fabrics.	
 Anti-allergy+: Hard-wearing fabrics made of cotton or linen	7.5 kg/5** kg;  - 60 °C ----, 0 - 1400* rpm Speed Eco =   , Pre-wash, Rinse Plus
Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	
 Curtains: 3.5 kg heavy curtains or 25 - 30 m ² lightweight drapes	3.5 kg;  - 40 °C ----, 0 - 800 rpm Speed Eco =    , Pre-wash, Rinse Plus
Notes - Shorter rinse and final spin cycles. - Use a detergent that is suitable for machine-washing curtains. - The Prewash button is set by default. If you do not require a pre-wash cycle, press the button to deactivate the function.	
* max. The maximum spin speed depends on the program and model	
** reduced load for the Speed setting	



Consumption values table

Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

Program	Load	Energy consumption*	Water consumption*	Program duration*
Cottons 20 °C	8 kg	0,25 kWh	87 l	2 ¾ h
Cottons 40 °C	8 kg	1,03 kWh	87 l	3 h
Cottons 60 °C	8 kg	0,96 kWh	87 l	2 ¾ h
Cottons 90 °C	8 kg	2,20, kWh	97 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,70 kWh	61 l	2 h
Mix 40 °C	4 kg	0,60 kWh	45 l	1 ¼ h
Delicate/Silk 30 °C	2 kg	0,19 kWh	37 l	¾ h
Wool 30 °C	2 kg	0,19 kWh	40 l	¾ h

Program	Approximate information on the residual moisture**		
	WAT28... max. 1400 rpm	WAT24... max. 1200 rpm	WAT20... max. 1000 rpm
Cottons	48 %	53 %	62 %
Easy-Care	40 %	40 %	40 %
Delicate / Silk	30 %	30 %	30 %
Wool	45 %	45 %	45 %
* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.			
** Information on residual moisture based on program-dependent spin-speed limit and maximum loads.			

Most efficient programs for cotton fabrics

The following programs (standard programs, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programs for cottons in accordance with the (EU) directive no. 1015/2010		
Program + temperature + button	Load	Approximate program duration
Cottons +  + Eco  	8 kg	3 ½ h
Cottons +  + Eco  	4 kg	3 ½ h
Cottons +  + Eco  	4 kg	3 ½ h
Program setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The specification of the program temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated program temperature for energy-saving reasons.		

Notes

- This supplementary sheet is included with your installation and operating instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

WAT28460ME

9000988781 (9408)

