



Register your new Bosch now:
www.bosch-home.com/welcome



Tumble dryer
WTW87565AU



BOSCH

en Installation and operating instructions

Your new tumble dryer

You have opted for a tumble dryer manufactured by Bosch.

Please take a few minutes to read and become familiar with the advantages of your tumble dryer.

To meet the high quality demands required by Bosch, every tumble dryer that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.bosch-home.com or contact our Customer Service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before operating the tumble dryer.

Display rules

Warning!

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

Caution!

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

Note/tip

Information about the optimum use of the appliance/any other useful information.

1. 2. 3. / a) b) c)

The steps are represented by numbers or letters.

■ / -

Lists are represented by a small box or a dash.

Contents

 Intended use	4	 Signal setting	20
 Safety instructions	4	 Noises	21
Electrical safety	4	 Cleaning	22
Safety for children	5	Cleaning the dryer and the control panel	22
Appliance safety	5	Cleaning the moisture sensor	22
 Environmental protection	7	Cleaning the filter in the condensate container	22
Packaging/old appliance	7	 Faults and what to do about them	23
Coolant	7	 After-sales service	25
Energy-saving tips	7	 Consumption values	26
 The main points in brief	8	Consumption values table	26
 Getting to know your appliance	9	 Technical data	27
Dryer	9	 Installation and connection	28
Control panel	10	Scope of delivery	28
Display panel	11	Installing and connecting the dryer	28
 Laundry	12	Changing the condensation drain	29
Preparing the laundry	12	Optional accessories	31
Sorting washing according to:	12	Transport and frost protection	31
 Programmes and buttons	13		
Programmes	13		
Buttons	15		
 Operating the appliance	16		
Loading laundry and switching on the dryer	16		
Setting a programme	16		
Starting the programme	17		
Programme sequence	17		
Changing the programme or adding laundry	17		
Cancelling the programme	17		
Programme end	17		
Removing laundry and switching off the dryer	17		
Clean the fluff filter	18		
Emptying the condensate container	19		



Intended use

- Operate the dryer:
 - Indoors only (not in an outside area),
 - Only inside the home and
 - Only to dry and refresh fabrics that have a care label specifying that they are suitable for use in a dryer.
- The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they **are supervised** or have **been instructed** in its use by a responsible adult.
- Keep children under the age of 3 years old away from the dryer.
- Do not let children carry out any unsupervised cleaning or maintenance work on the dryer.
- Keep pets away from the dryer.



Safety instructions

Electrical safety



Warning

Risk of death!

There is a risk of electric shock as the dryer is operated with electricity.

You should therefore observe the following:

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable directly at the plug and never by the cable, as this could damage it.
- Do not use extension cables, multiple plugs or connectors.
- Only have the mains cable replaced by our after-sales service.

Safety for children

Warning

Risk of death or injury!

You should therefore observe the following:

- Do not leave the dryer unattended when children or other people who cannot assess the risks are nearby.
- Do not let children play with the dryer.
- Children may become entangled in packaging or film if allowed to play with them, or they may pull them over their heads and suffocate. Keep packaging, packaging parts and film out of the reach of children.
- Children may lock themselves in the dryer. Therefore, when an appliance has reached the end of its service life, unplug it from the mains, cut through the mains cable and destroy the lock on the dryer door.

Appliance safety

Warning

Risk of death!

- Do not use the dryer if industrial chemicals have been used to clean it.
- Laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite or cause an explosion when drying is in progress. Before drying, rinse the laundry in hot water with detergent.
- Coal dust or flour in the area around the dryer may cause an explosion.
- Only replace defective components with genuine spare parts.

Caution!

Risk of material damage to the dryer or fabrics

- Only use the dryer for drying and freshening up fabrics at home and for fabrics that have been washed with water and are suitable for tumble-drying. Any other use is not considered intended use and is prohibited.
- Foamed material or foam rubber may become deformed or melt during drying. Do not dry any laundry that contains foamed material or rubber.
- Do not lean or sit on the dryer door, as the dryer may tip over.
- Loose cables or hoses may cause you to trip. Avoid tripping hazards.
- Light things, such as hair, may be sucked into the air inlet during operation; keep these away from the dryer.
- The last phase of the drying cycle takes place without any heat (cooling cycle) to ensure that the laundry remains at a temperature that will not damage it.



Environmental protection

Packaging/old appliance



Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2012/19/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides a framework for the collection and recycling of old appliances, which is valid across the EU.

Coolant

The dryer's heat exchanger contains fluorinated greenhouse gas in a hermetically sealed unit.


Greenhouse gas:	R407c
Capacity (g):	385
GWP (kgCO₂/kgRefrig):	1653
Total GWP (kgCO₂):	636.4


Dispose of the dryer properly.

Energy-saving tips

- Spin the laundry before drying. The drier the laundry, the shorter the drying time will be, thus consuming less energy.
- Load the dryer with the maximum load.
 - Note:** Do not exceed the maximum load for the programs, as this prolongs the drying time and increases energy consumption.
- Ventilate the room and keep the air inlet on the dryer free to ensure air exchange.
- Clean the fluff filter after each drying cycle. If the fluff filter is dirty, the drying time is prolonged and energy consumption is increased.
- **Energy saving mode:** If the dryer is not operated for a prolonged period, it automatically switches off before the program starts and when the program has ended to save energy. The display panel and indicator lamps go off after a few minutes and the Start button flashes. To activate the lighting, press any button, open or close the dryer door or turn the program selector.

The main points in brief

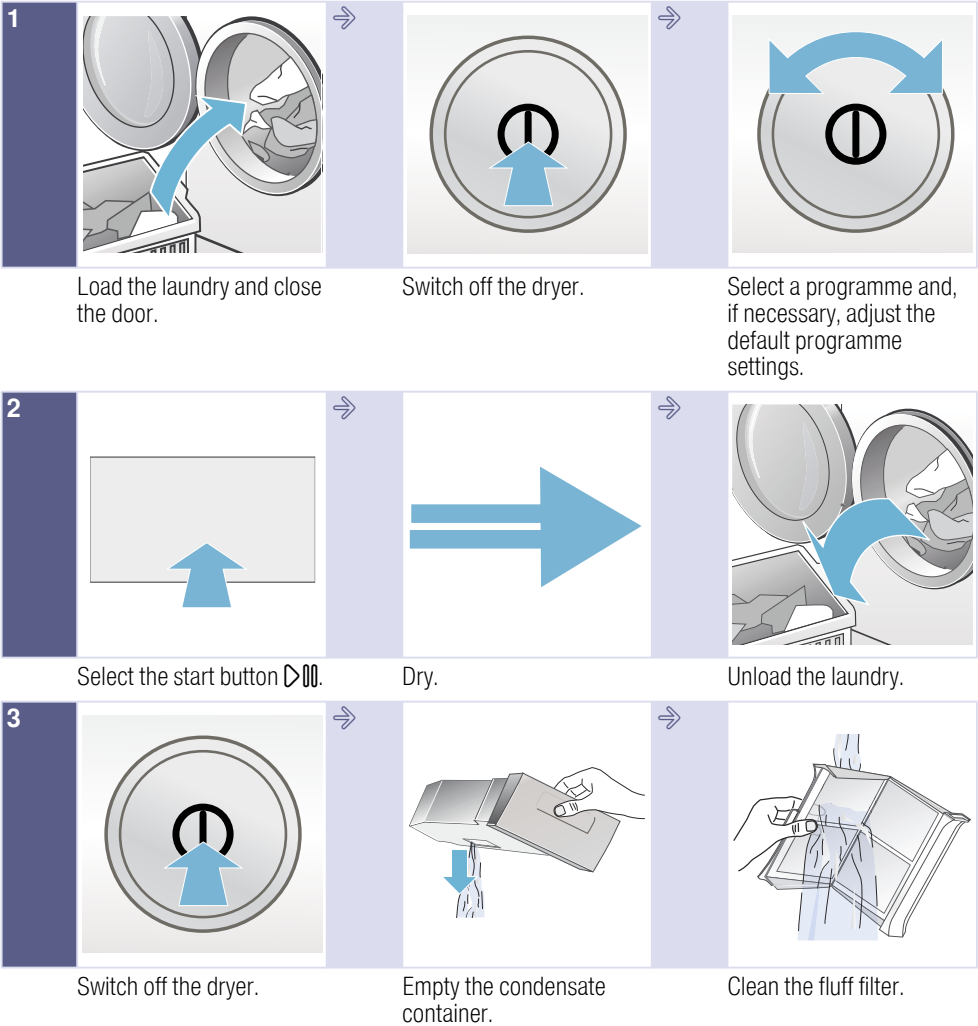

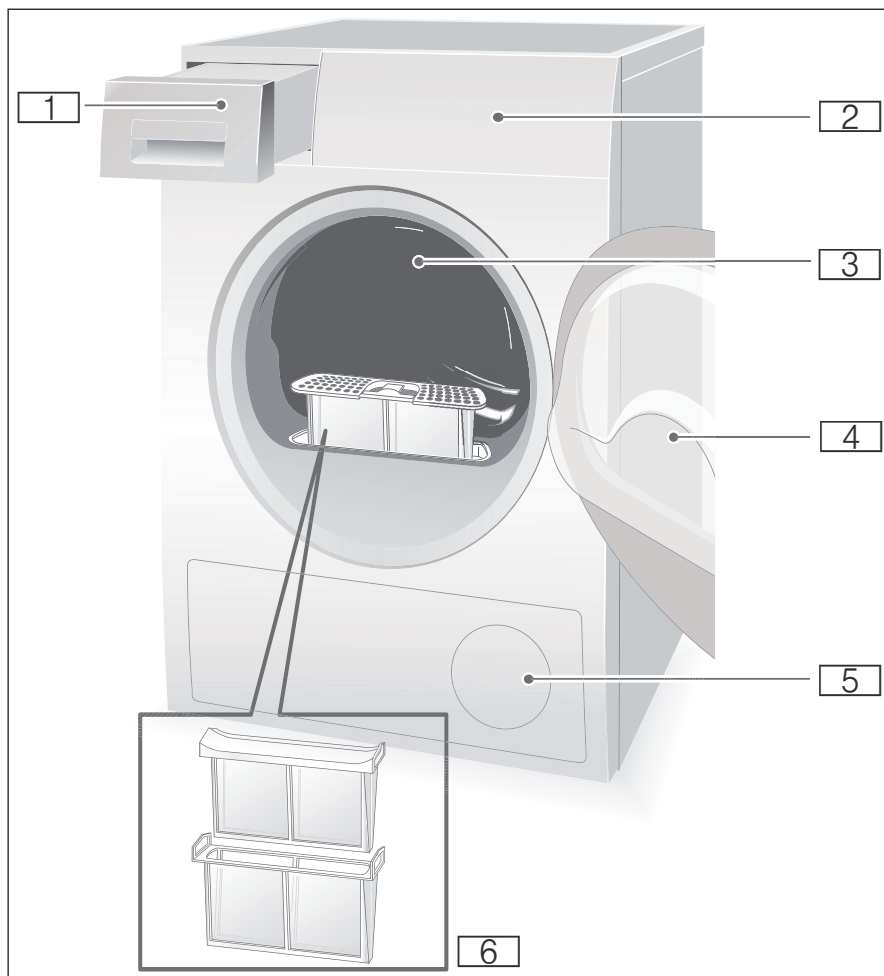
 **Getting to know your appliance****Dryer**

- 1** Condensate container
- 2** Control and display panel
- 3** Drum interior light (depending on the model)
- 4** Dryer door
- 5** Air inlet
- 6** Fluff filter

en Getting to know your appliance

Control panel


Note: All buttons are sensitive and only need to be touched briefly.

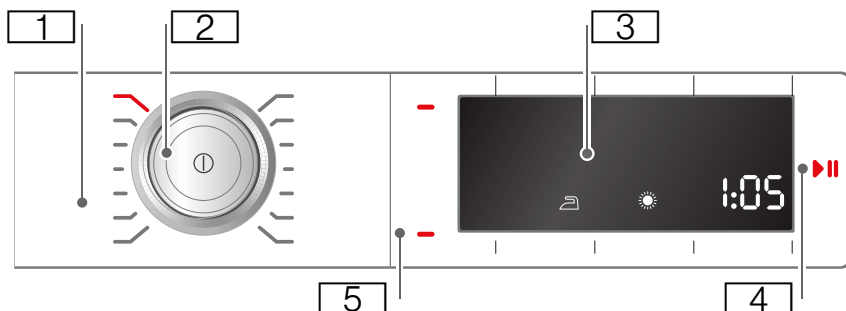

- 1 Programmes → Page 13.
- 2 Programme selector and On/Off button.
- 3 Display panel with buttons → Page 13.
- 4 Start button for starting, interrupting or cancelling the programme.
- 5 Buttons → Page 15.

Display panel


Buttons on the display panel

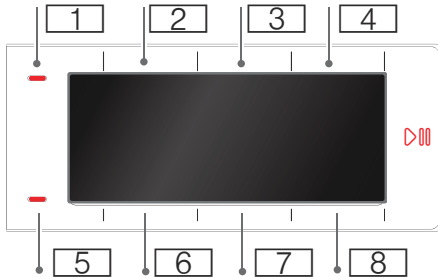

- 1 Selects the **childproof lock**.
- 2 Selects **Anti-Crease**.
- 3 Selects **Anti-Crease**.
- 4 Selects **Low-Heat Drying**.
- 5 Switches the **signal** on or off.
- 6 Adjusts the **dryness level**.
- 7 The **degree of dryness** finely adjusts the dryness levels.
- 8 - **Finished in +** delays the start of the programme.

For a detailed description of all buttons, see → *Page 15* onwards.

Display panel

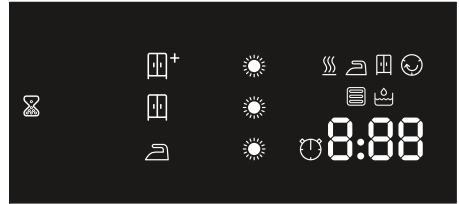

- Dryness levels.
- Fine adjustment of the dryness level.
- Timed programme selected.
- 1:47 min** Expected programme duration in hours and minutes.
- 3 h** Programme delay in hours when "Finished in" time is selected.
- Empties the condensate container; → *Page 19*.
- Cleans the fluff filters; → *Page 18*.
- Heat exchanger is automatically cleaned.
- Programme progress: Dry; Iron Dry; Cupboard Dry; Anti-Crease; End and Pause.



Laundry

Preparing the laundry



Warning

Risk of explosion or fire!

Remove any cigarette lighters and matches from pockets.

Caution!

The dryer drum and fabrics may be damaged.

Remove all objects from pockets and take note of the following information:

- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks and eyes, and do up any buttons.
- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Remove any metal objects, such as paper clips, from pockets.
- Knitted fabrics, such as T-shirts and jerseys, often shrink slightly the first time they are tumble-dried. Use a gentle programme.
- Do not over-dry easy-care laundry. This increases creasing of the laundry.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.

Sorting washing according to:

- Suitable for tumble drying
- Dry at normal temperature
- Dry at low temperature
- Do not tumble-dry

If you dry thin- and thick-layered fabrics and fabrics with several layers together, these will dry to differing degrees. To achieve an even drying result, you should therefore only dry laundry of the same type of fabric and structure together. If you feel that the laundry is still too damp afterwards, you can select a time programme for subsequent drying → *Page 13*.



 

 




Caution!






Risk of material damage to the dryer or laundry.

  Do not dry non-breathable fabrics, such as rubber-coated laundry.


 






Programmes and buttons

Programmes

Programme and fabrics	Maximum load and programme settings/info
Name of the programme Which fabrics is the programme suitable for?	The maximum load is based on the dry weight of the fabrics
 Cottons Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.	Possible programme settings 9 kg
 Easy Care Synthetic or blended fabrics.	3.5 kg
 Mixed Load Mixed load consisting of cotton and synthetic fabrics.	3 kg
 Delicates For delicate, washable underwear, e.g. made of velvet, lace, Lycra, silk or satin.	1 kg
 Wool finish Fabrics made from wool or a wool blend that are suitable for tumble drying.	3 kg
 Timed programme cold Time programme for all types of fabric except for wool and silk. All types of fabric. For freshening up or airing items of laundry that have not been worn for long.	3 kg You can alter the programme length using the button for the "Finished in" time.
 Timed programme warm Timed programme for all types of fabric. Dry laundry that is still slightly damp or has already been pre-dried. Also suitable for the subsequent drying of multi-layered, thick laundry that does not dry readily. Note: This programme is suitable for drying individual woollen fabrics, sports shoes and soft toys. Only dry these using the basket for woollens → <i>Page 31</i> .	3 kg You can alter the programme length using the button for the "Finished in" time.
 Shirts Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.	3 kg
 Quilt Fabrics, pillows, quilts or bedspreads filled with synthetic fibres. Dry large items individually. Observe the care label.	2.5 kg

 Down Wear	1.5 kg
Fabrics, pillows, bedspreads or eiderdowns filled with down. Dry large items individually.	
 Sportswear	1.5 kg
Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics.	
 Towels	6 kg
Hard-wearing towels made of cotton.	
 SuperQuick 40'	2 kg
Synthetics and light cottons.	
 AllergyPlus	4 kg
Hard-wearing fabrics.	
Note: Particularly suitable for the highest hygiene requirements.	

Buttons

Buttons	Explanations and notes
Note:	Not all buttons and their functions can be selected in all programmes.
Child lock push 3 sec.	You can activate or deactivate the childproof lock by pressing and holding the childproof lock button for three seconds.
Easy-Iron 60 min	The drum moves the laundry at regular intervals after drying to prevent creasing. You can extend the automatic Anti-Crease function by 60 minutes after any programme has finished.
Easy-Iron 120 min	The drum moves the laundry at regular intervals after drying to prevent creasing. You can extend the automatic Anti-Crease function by 120 minutes after any programme has finished.
Low Heat	Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane, may increase the drying time.
End signal	An audible signal sounds after the programme has ended.
Drying target:	Select the dryness level according to the laundry to be dried. If you have selected a dryness level, this is stored for all programmes, except for Cottons, even after the dryer has been switched off.
 Cupboard Dry Plus	Multi-layered, thick laundry that does not dry readily.
 Cupboard Dry	Normal, single-layered laundry.
 Iron Dry	Normal, single-layered laundry that still needs to be damp after drying and is suitable for ironing or hanging up.
Fine adjust	If the laundry is too damp after drying, you can finely adjust the dryness levels e.g. Cupboard Dry. The dryness level can be increased with the degree of dryness in three stages, from  to    . If you have adjusted the dryness level, the setting for all programmes with a selectable dryness level is retained even after the dryer is switched off.
- Finished in +	The programme will end in between 1 h and 24 h. Set the "Finished in" time in increments of one hour to delay the start of the programme. The required number of hours after the programme ends is displayed on the display panel. The drying time for timed programmes can be set to between 10 minutes and 3 hours and 30 minutes, in 10-minute increments.
 Start/Pause	Starts or pauses the programme.




Operating the appliance

Loading laundry and switching on the dryer

Note: The dryer must be correctly positioned and connected, → *Page 28*.



1. Place the laundry in the drum.
2. Press the  button to switch the dryer on.
3. Close the dryer door.

Caution!

Risk of material damage to the dryer or laundry.


Do not trap any laundry between the dryer door and the door seal.

Note: The dryer drum is lit up after the door is opened and closed and once the programme has started. The drum interior light goes out on its own.

Setting a programme

Note: If you have activated the childproof lock, you must deactivate it before you can set a programme, see → *Page 15*.

1. Select the required programme; detailed information on the programmes can be found from → *Page 13* onwards.

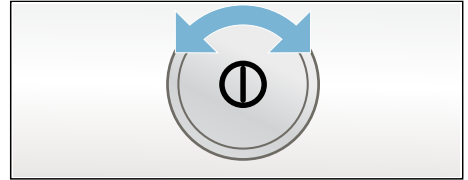

2. Use the programme selector to set the required programme. The default programme settings for the selected programme appear in the display panel.

Note: Default programme settings are standard settings that are already defined when a programme is selected. After selecting a programme, you can see the default programme settings in the display panel.

3. If required, adjust the default programme settings. You can find detailed information on this from → *Page 13* onwards.

Starting the programme

Press the Start button.

Note: If you want to lock the programme to prevent it from being inadvertently adjusted, you can select the childproof lock, see → *Page 15*.

Programme sequence

The programme status is displayed in the display field.

Changing the programme or adding laundry

You can remove or add laundry and change or alter the programme at any time during drying.

1. To pause the programme, open the dryer door or press the Start button.
2. Add or remove laundry.
3. Select another programme or an additional function, if required.
4. Close the dryer door.
5. Press the Start button.

Note: The programme duration in the display panel is updated depending on the load and residual moisture in the laundry. The values displayed may change after the programme is changed or the load is adapted.

Cancelling the programme


The programme can be interrupted at any time; to pause, open the dryer door or press the Start button.

Caution!


Risk of fire. Laundry may catch fire.

If you cancel the programme, you must remove the laundry items and spread them out so that the heat can disperse.

Programme end

-  - appears in the display panel.

Removing laundry and switching off the dryer

1. Remove the laundry.
2. Press the  button to switch the dryer off.




Clean the fluff filter


Note: During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is blocked or dirty, this reduces the flow of air, which prevents the dryer from achieving its maximum performance. Clean fluff filters also reduce energy consumption and the drying time.

Clean the fluff filter **after each** drying cycle:

1. Open the dryer door and remove all fluff from the door.
2. Pull out the two-part fluff filter.

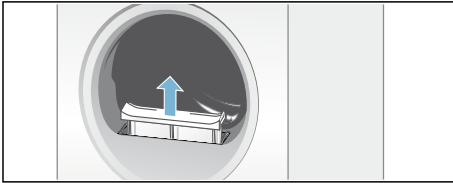


3. Remove the fluff from the recess in the fluff filter.

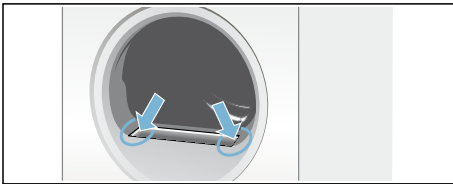


Note: Ensure that no fluff falls into the open shaft.


4. Pull apart the two-part fluff filter.

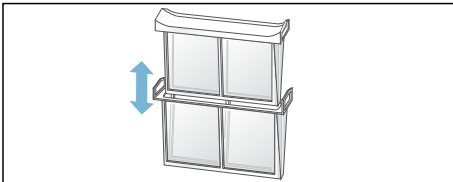


5. Open both filters and remove all the fluff.

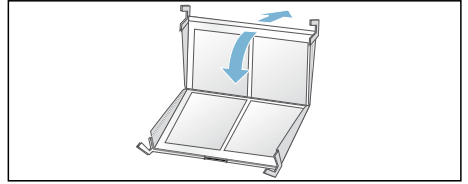

6. Rinse away the fluff under warm, running water.

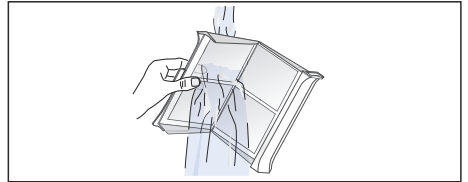

7. Dry the fluff filter, close it and reinsert the two-part fluff filter.

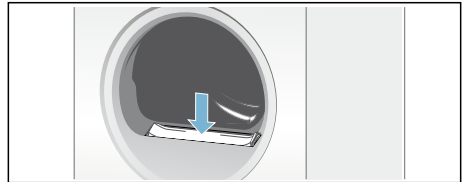

Caution!

The dryer may be damaged.

Do not operate the dryer without a fluff filter or if the fluff filter is defective.


Emptying the condensate container

Notes


- You can drain off the condensation into the waste-water system using an optional condensation drain*.
- If you drain the condensation using an optional condensation drain, you do not have to empty the condensate container.

Note: After each drying cycle, empty the condensate container; otherwise the next drying programme may be cancelled as a result of the condensate container being full.

1. Pull out the condensate container horizontally.

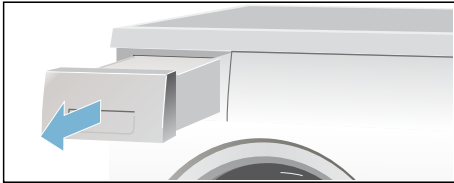

2. Pour out the condensation water.

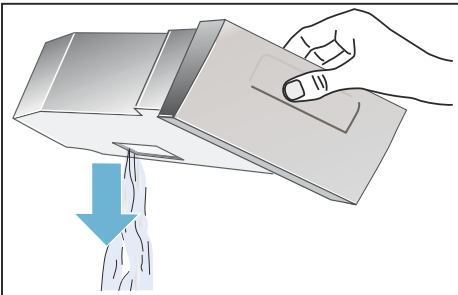


Caution!

Dirty condensation water may be harmful to your health and cause material damage.

Condensation water is not suitable for drinking and may be contaminated with fluff. Do not drink the condensation water or reuse it.

3. Push in the condensate container until you feel it lock back into place in the dryer.

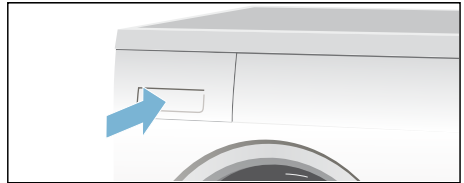

Note: The filter in the condensate container filters the condensation which is used during the dryer's automatic cleaning cycle. The filter is cleaned by emptying the condensation. Nevertheless, you should check the filter regularly for remaining deposits and remove them. See → Page 22.


* Depending on the model

Signal setting

You can change the following settings:

- The volume of the audible signal at the end of the programme and/or
- The volume of the audible button signals.
- Activate or deactivate automatic switch-off.

You will need to activate the setting mode in order to change these settings.

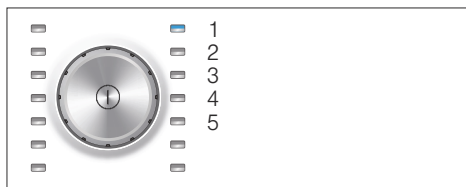

Activating setting mode

 
1. Switch the dryer on.
2. Select the Cottons programme in position 1.
3. Press and hold the button for the dryness level and, at the same time, turn the programme selector clockwise to position 2.
4. Release the button for the dryness level.

The setting mode is now activated and the preset volume for the audible signal at the end of the programme appears on the display panel.


Changing the volume or automatic switch-off

Leave the programme selector or turn it to:

- Position 2: Press the button for the "Finished in" time to change the volume of the **audible signal at the end of the programme** and/or



 - Position 3: Press the button for the "Finished in" time to change the volume of the **audible button signals**.



- Position 4: Press the button for the "Finished in" time to activate or deactivate **automatic switch-off** of the dryer. "ON" for activated and "OFF" for deactivated.
Note: To save energy, your dryer will switch itself off after 15 minutes when the "Automatic switch-off" function is active.


Exiting setting mode

You can now end the process and switch off the dryer. The settings have been saved.


Noises

Note: During drying, the compressor and the pump generate noises which are entirely normal.


From time to time, the compressor in the dryer generates a humming noise. However, the volume may vary depending on the programme and progress of the drying process.

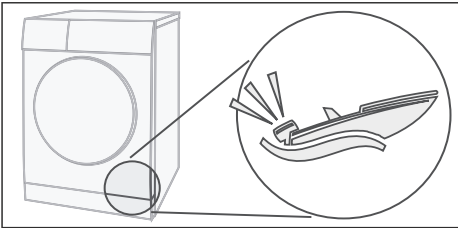


Every now and then, the compressor is ventilated. This creates a whirring noise.

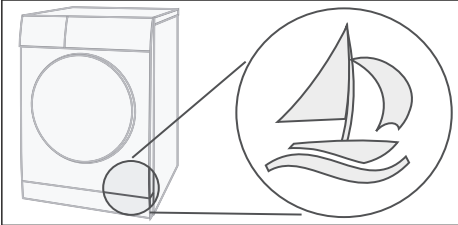

The automatic cleaning of the dryer causes a clicking sound.

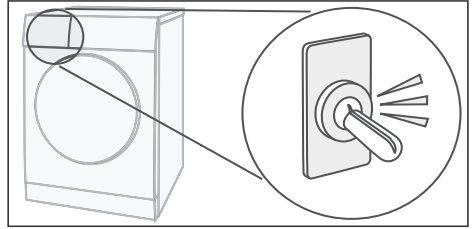

The condensation is pumped into the condensate container using a pump. This generates pumping noises.

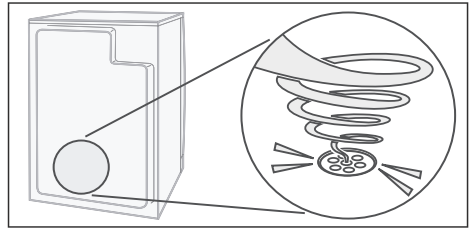



Cleaning

Cleaning the dryer and the control panel

⚠ Warning
Risk of death!

There is a risk of electric shock as the dryer is operated with electricity. Disconnect the dryer from the mains before cleaning.

Clean the dryer using only water and a soft, damp cloth.

Remove all detergent residue, spray residue or other residues immediately. Do not use cleaning agents or agents for pre-treating laundry (e.g. prewash sprays, stain removers). Do not use high-pressure cleaners or steam jet cleaners to clean your appliance.

Cleaning the moisture sensor

Note: The dryer is equipped with a stainless-steel moisture sensor. The moisture sensor measures how damp the laundry is. After long periods of use, a fine layer of limescale can form on the moisture sensors. This must be removed regularly.



Open the door and clean the moisture sensor with a rough sponge.


Caution!
The moisture sensor may be damaged.

Do not clean the moisture sensor with steel wool and abrasive materials.


Cleaning the filter in the condensate container

Note: The filter in the condensate container cleans the condensation water that is used during the dryer's automatic cleaning cycle.


1. Pull out the condensate container horizontally.
2. Pour out the condensation water.
3. Remove the filter.

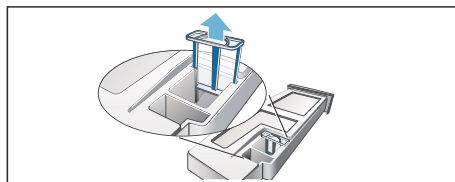

4. Clean the filter under warm, running water or in the dishwasher.

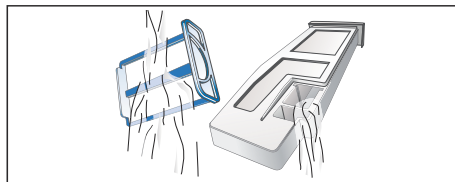

5. Push in the filter until you feel it lock into place.

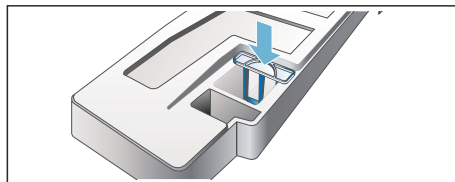




Caution!
The dryer may be contaminated with fluff and thus become damaged.

Only operate the dryer with the filter inserted.

6. Push in the condensate container until you feel it lock into place.

Faults and what to do about them

Faults	Cause/remedy
 on the display panel and drying has been interrupted.	<ul style="list-style-type: none"> ■ Empty the condensate container; → <i>Page 19</i> and the dryer; → <i>Page 31</i>. ■ If the optional condensation drain* is installed, the drain hose may be blocked or kinked. Check the hose for deposits and rinse the hose. Lay the hose without any kinks.
 on the display panel.	Clean the fluff filter and press the Start button → <i>Page 18</i> .
selfCleaning on the  display panel.	Not a fault. The heat exchanger is cleaned automatically. Do not pull out the condensate container while this is displayed.
Dryer does not start.	<ul style="list-style-type: none"> ■ Mains plug plugged in or fuse checked? ■ Programme selected? Select a programme. ■ Dryer door open? Close the door. ■ Is the childproof lock activated? Deactivate the childproof lock. ■ "Finished in" time selected? Programme starts after a delay → <i>Page 15</i>.
Creasing.	<ul style="list-style-type: none"> ■ Creasing occurs when you have exceeded the maximum load or selected the wrong programme for the type of fabric. All the required information can be found in the programme table → <i>Page 13</i>. ■ Remove clothes immediately after drying; creasing may occur if they are left in the drum.
Water is leaking out.	Not a fault; the dryer may be positioned on an incline. Level the dryer.
Laundry is not dried correctly or is still too damp.	<ul style="list-style-type: none"> ■ After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse. ■ Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier → <i>Page 15</i>. ■ Select a programme with a longer drying time or increase the drying level. This does not increase the temperature. ■ Select a timed programme for subsequent drying of laundry that is still damp → <i>Page 13</i>. ■ If you have exceeded the maximum load for the programme, the laundry may not be dried properly. ■ Clean the moisture sensor in the drum. A fine layer of limescale may adversely affect the performance of the sensors and your washing will not dry properly → <i>Page 22</i>. ■ Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded. <p>Note: See also the laundry tips → <i>Page 12</i>.</p>
* Depending on the model	

Faults	Cause/remedy
Drying time too long?	<ul style="list-style-type: none"> ■ The fluff filter may be dirty and cause a longer drying time. Clean the fluff filter. ■ If the air inlet on the dryer is blocked or not freely accessible, this may increase the drying time. Make sure that the air inlet remains unobstructed. ■ If the ambient temperature is higher than 35 °C, this may extend the drying time. ■ Insufficient air circulation in the room may increase the drying time. Ventilate the room.
Display panel goes off and Start button flashes.	Not a fault. Energy-saving mode is active → <i>Page 7</i> .
Residual water in the condensate container despite the dryer being connected to the condensation drain*.	Not a fault. If the condensation drain is installed, residual water remains in the condensate container due to the dryer's self-cleaning function.
Humidity in the room increases.	Not a fault. Make sure the room is sufficiently ventilated.
Power cut.	The drying programme is interrupted. Remove the laundry and spread it out, or restart the programme.
Unusual noises when drying.	Not a fault. Noises are produced by the automatic cleaning of the heat exchanger → <i>Page 21</i> .
The dryer feels cold despite drying.	Not a fault. The dryer can dry efficiently at low temperatures using a heat pump.
* Depending on the model	

Note: If you cannot rectify the fault yourself by turning the dryer off and on, please contact our after-sales service.



After-sales service

After-sales service

If you cannot rectify the fault yourself (faults, what to do?), please contact our after-sales service. We will always find an appropriate solution to avoid unnecessary visits by engineers.

The contact information for your nearest after-sales service can be found here or in the enclosed after-sales service directory.

Please provide after-sales service with the dryer's product number (E-no.) and production number (FD).

E-Nr. _____ FD _____

You can find this information on the inside of the dryer door or on the rear of the dryer.

Trust the expertise of the manufacturer.

Contact us. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts.



Consumption values

Consumption values table

Programme	Spin speed used for spinning the laundry	Duration**	Energy consumption**
Cottons		9 kg	9 kg
Cupboard Dry*	1400 rpm	133 min	1.72 kWh
	1000 rpm	157 min	2.13 kWh
	800 rpm	181 min	2.48 kWh
Iron Dry*	1400 rpm	98 min	1.22 kWh
	1000 rpm	123 min	1.62 kWh
	800 rpm	147 min	2.00 kWh
Easy-Care		3.5 kg	3.5 kg
Cupboard Dry*	800 rpm	50 min	0.55 kWh
	600 rpm	64 min	0.69 kWh

For testing in accordance with the EN 61121 standard, use the tumble dryer with a connected, external condensation outlet hose.

* Programme setting for testing in accordance with the EN 61121 standard.

** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.



Technical data

Dimensions:

85 x 60 x 60 cm

Height x width x depth

Weight:

Approx. 57 kg

Maximum load:

9 kg

Condensate container:

4.6 l

Mains voltage:

220 - 240 V

Connected load:

Max. 1000 W

Fuse:

10 A

Drum interior light***Ambient temperature:**

5 - 35 °C

* depending on the model



Installation and connection

Scope of delivery

 
- Dryer
- Installation and operating instructions
- Basket for woollens*
- Condensation drain*

Installing and connecting the dryer



Warning **Risk of death!**

There is a risk of electric shock as the dryer is operated with electricity.

- Check the dryer for visible damage. You must not operate the dryer if it is damaged.
- Before connecting the dryer to the power supply, ensure that the electric voltage specified on the rating plate matches the voltage of your socket.
- Only use earth-leakage circuit breakers with the following symbol: .
- Ensure that the mains cable is not kinked or trapped, and that it does not come into contact with heat sources or sharp edges.



Warning **Children may lock themselves in the dryer, putting their lives at risk!**

Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening.

Caution! **Risk of injury**

- Due to the heavy weight of the dryer, you may injure yourself if you lift it. Do not lift the dryer on your own.
- You could cut your hands on the sharp edges of the dryer. Do not hold the dryer by the sharp edges.
- Protruding parts on the dryer may break off when it is lifted or pushed. Do not move the dryer by holding onto protruding parts.

Caution! **Risk of material damage to the dryer or fabrics.**

- Check the dryer for damage caused during transportation. Never operate a dryer if it is damaged.
- Any residual water in the dryer may freeze and damage the dryer. Do not install the dryer in rooms that are at risk of frost.

During installation, ensure that:

- The dryer is placed on a clean, level and firm surface,
- The mains plug can be accessed at all times,
- The air inlet on the dryer is kept clear and there is sufficient ventilation,
- The area around the dryer is kept clean and
- The dryer is levelled using the threaded feet. Use a spirit level to do this.

* Depending on the model


Changing the condensation drain

Notes


- The condensation from the dryer can either be discharged into the condensate container or drained off via a connection to the waste-water system. The factory setting is for the condensation from the dryer to be discharged into the condensate container.
- If the condensation drain is installed, residual water remains in the condensate container because of the dryer's self-cleaning function.

Change the condensation drain as follows:


1. Remove the accessory from the dryer drum.

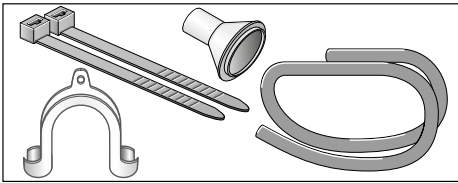


2. Delivery status of the dryer. The hose for discharging the condensation into the condensate container is secured to the connecting piece.
3. Disconnect the hose from the connecting piece and move it into the "parked" position.

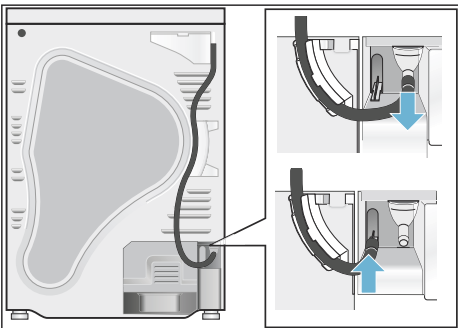

4. Remove the drain hose from the accessory and secure it to the empty connecting piece.

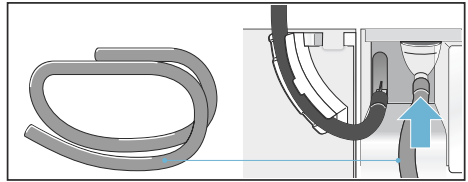

5. Depending on how you connect the hose (A, B or C), secure the drain hose with the remaining accessories on the other side.

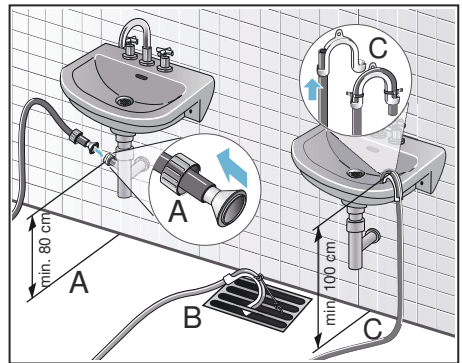

Caution!

Blocked water can be drawn back into the dryer and may cause material damage.

Check that the water drains away from the wash basin quickly. The drain must not be sealed or blocked.


Caution!

Material damage due to leaks or draining water.


Secure the drain hose so that it cannot slip out. Do not kink the drain hose. Observe the height difference between the installation surface and the drain of max. 100 cm, and 80 cm for a drain in a siphon.

en Installation and connection


- 6.** Pull out the condensate container fully.

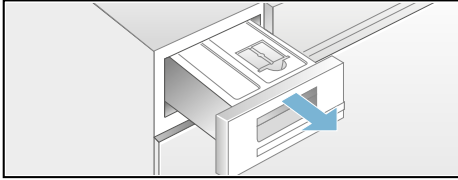


- 7.** Turn the condensate container 180° onto its underside and remove the stopper that is fitted. Turn the condensate container back and insert the stopper into the recess on the top side of the condensate container.

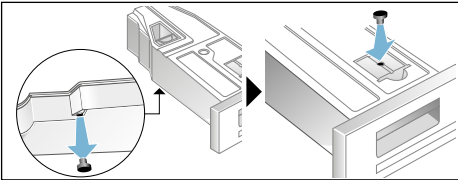

- 8.** Pull the filter out of the notch and place it into the recess on the condensate container.

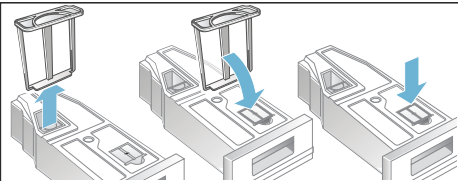

- 9.** Slide in the condensate container until it clicks into place.

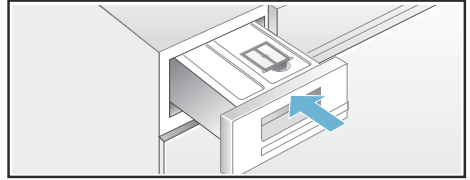

The condensation is now discharged via the drain hose into the waste-water system or into a wash basin.

Note: If you want to change the condensation drain back to the condensate container, carry out these steps in reverse order.

Optional accessories

Order optional accessories* from the after-sales service:

■ Washer-dryer stack connection set:

To save space, the dryer can be placed on top of a suitable washing machine of the same width and depth.

The dryer must be secured to the washing machine using this connection set.

Order number with pull-out worktop:

WTZ11400;

Order number without pull-out worktop: **WTZ20410.**

■ Platform:

For easier loading and unloading, raise your dryer using a platform. Transport laundry using the clothes basket that is Transport laundry with the integrated clothes basket integrated in the platform's pull-out drawer.integrated into the platform drawer.

Order number: **WMZ20500.**

■ Basket for woollens:

Dry individual woollen items, sports shoes and soft toys in the basket for woollens.

Order number: **WMZ20600.**

Transport and frost protection

Empty the condensate container and residual water from the dryer:

1. Select any programme using the programme selector.
2. Press the Start button.
3. Wait for 5 minutes.
Note: The condensation is drained.
4. Empty the condensate container again.
5. Switch off the dryer.

Caution!

Any residual water may leak out and cause material damage.

Transport the dryer in an upright position.

Caution!

The dryer contains coolant and may be damaged.

Allow the dryer to rest for two hours before initial use.

* Depending on the model



Advice and repair order in the event of faults

GB 0344 892 8979 (Calls charged at local or mobile rate.)

IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

You can find the contact information for all countries in the attached after-sales service directory.

Robert Bosch Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München, GERMANY



9000991406 (9411)