# Your washing machine

**Congratulations** - You have opted for a modern, high-quality domestic appliance manufactured by Bosch. This washing machine is distinguished by its economical water and energy consumption. Each machine that leaves our factory has been inspected thoroughly to ensure that it functions properly and is in perfect condition.

For further information and a selection of our products go to our web site: www.bosch-home.com

You can find the contact details for your nearest after-sales service here or in the after-sales service directory (depending on model), see also Installation Instructions, page 7

- GB 0844 8928979 Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may

- **IE** 01450 2655

## **Environmentally friendly waste disposal**

All packaging must be disposed of in accordance with environmental guidelines.

This appliance is certified in accordance with European Directive 2012/19/EC on waste electrical and electronic equipment (WEEE) This directive provides the framework for the EU-wide collection and reuse of used appliances.

Intended use Programmes Setting and adjusting the programme Washing ... After washing . Individual settings Important information Overview of programmes Safety instructions Consumption values ■ Before washing for the first time/Care Information to indicator lights Maintenance ■ What to do if..



## - Always fill the washing machine with a maximum amount of

 
- laundry for the relevant programme
- The selectable temperatures apply to the care labels on the
- Measure the detergent according to the manufacturer's
- If the laundry is then dried in the tumble dryer, select the spin

- for machine-washable fabrics and hand-washable wool in detergent solution,
- cially available detergents and care products which are suitable for use in washing machines.
- The washing machine may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they are supervised or have been instructed by a res-



- Do not leave children unattended near the washing machine.

- The washing machine is not to be used by children or persons not familiar with the




Read these instructions and the separate | installation instructions before operating the

# Environmental protection/Conservation tips

 - Wash normally soiled washing without a pre-wash.
- textiles. The temperatures in the machine may deviate from this so that you get the optimum mix of energy-saving and washing results
- instructions and water hardness.
- speed according to the instructions of the dryer manufacturer.

## Intended use

## for use in the household only,



ponsible person.



Observe the safety instructions on page 8.

operating instructions.



washing machine.

Detailed overview of programmes  $\rightarrow$  page 7

Algodón/Algodão (Cottons)	hard-wearing fabrics
Algodón/Algodão + Prelav. (Cottons + Prewash)	hard-wearing fabrics
(Rinse)	with subsequent spin cycle
Centrif. adicional ତ (Spin)	laundry washed by hand
₩ (Empty)	the rinsing water
★ Lana/Lã (Wool)	hand/machine-washable textiles
Delicado (Delicate)	delicate washable fabrics
Sintéticos (Easy-Care)	easy-care fabrics

## Sorting and loading laundry Correct installation according to the separate Installation instructions.

Checking the machine - Never use a damaged machine.



Follow the manufacturer's care information. According to the information on the care labels. According to type, colour, soiling and temperature. Do not exceed the maximum load  $\rightarrow$  page 7

Before washing for the first time

Wash once without any laundry  $\rightarrow$  page 9.



Insert large and small items of laundry. Close the washing machine door. Take care not to trap items of laundry between the washing machine door and the rubber seal.

## Add detergent and care products





Compartment II: Detergent for the main wash, water softener, bleach, stain remover

Make sure your hands are dry.

Take hold of the plug only.


Preparation

Inform the after-sales service.

Connecting the mains

**Compartment** %: Fabric softener, starch

**Compartment I**: Detergent for pre-wash

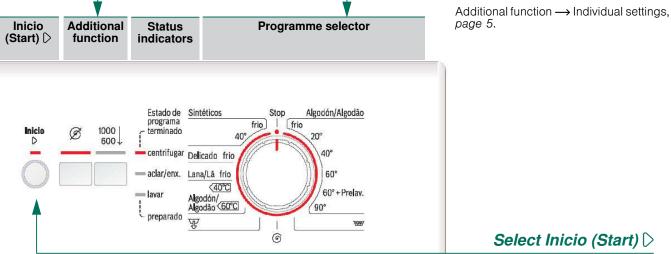


Observe the important information  $\rightarrow$  page 6. Washing machine door

Pour liquid detergent into the appropriate dispenser and place in the drum.

## Dilute thick fabric softener and fabric conditioner with water. This prevents blockages.

## Setting and adjusting programmes

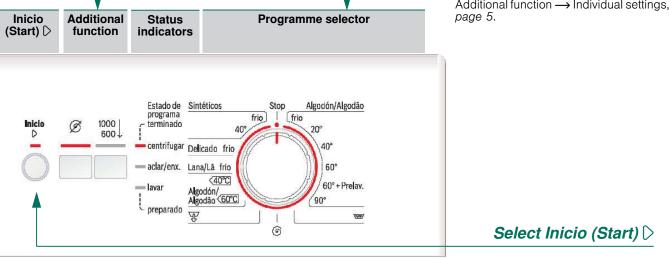

Programme selector for switching the machine on and off and for selecting the programme. Can be turned in either direction.



## Detergent drawer with compartments I, II, &

Control panel Washing machine

 
door handle

Service flap

Washing

0 🗆 -





# End of programme when ...

... the status indicator centrifugar (spin) - terminado (end)

## Interrupting the programme

Programmes at high temperatures

 Cool washing: Select (Rinse) - Select **Inicio** (**Start**) D.

 
Programmes at lower temperatures:

- Select **Spin** © or 😿 (**Empty**). - Select Inicio (Start) ▷.

## Changing the programme, if ...

- . you have selected the wrong programme by mistake:
- Reselect the programme.
- Select **Inicio** (**Start**) D. The new programme starts from the beginning.

Open the washing machine door and remove the washing. If Rinse stop @ (without final spin) is active: Turn the programme selector to \( \mathbb{F} \) (Empty) or select the spin speed. select Inicio (Start) .



## Turning the tap off

Removina the washina

Not required for AquaStop models → Hinweise Installation Instructions, page 7.

## Switching of

rn the programme selector to Off (stop).

## Individual settings

Additional functions → and overview of programmes, see page 7. Reduce spin speed. Clothing remains immersed in the last rinse water. Inicio (Start)

For starting the programme.



## Vashing with varying degrees of soiling

Wash new items of clothing separately.

Do not pre-wash.

Select programme Algodón / Algodão (Cottons) (Eco) 60°C

Washing must not be treated with fabric softener

Starching is possible in all wash programmes if liquid starch is used. Pour the starch in accordance with the manufacturer's instructions into fabric softener compartment & (rinse first



Dye should only be used in normal household quantities. Salt may damage stainless steel.





 


Protecting the washing and the machine - When measuring the amount of all detergents/additives and cleaning agents, always check the

 
- manufacturer's instructions. Empty pockets.
- Look out for metal items (paperclips, etc.).
- Wash delicates in a laundry bag (tights, curtains, underwired bras). - Fasten zips, do up any buttons.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place in the laundry bag.













Always follow the dye manufacturer's instructions! Do **not** use the washing machine for bleaching clothes!

			Type of laundry	
Programmes	o,	тах.		Additional functions; information
Algodón/Algo- dão (Cottons)	frio (cold), 20, 40, 60, 90 °C			
+ Prelav (+ Prewash)	J. 09	5.5 kg	Hard-wearing fabrics, heat-resistant fabrics made $_{\rm 1000L}$ , ${\cal B}$ of cotton or linen	600, ©
Algodón / Algodão Eco	40, 60 °C			
Sintéticos (Easy- Care)	frio (cold), 40 °C	2.5 kg	Easy-care fabrics made of cotton, linen, synthetic $_{\rm 1000l}$ , ${\cal B}$ fibres or blended fabrics	Ø '1009'
Delicado (Delicate)	frio (cold), 30 °C	<u>.</u>	For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	nool, ര sool, മ No spin between rinse cycles
(₩ool)	frio (cold), 30 °C	Z Kg	Hand- or machine-washable fabrics made of wool or containing wool	Hand- or machine-washable fabrics made of wool age of laundry. Longer programme breaks (fabrics rest in the

Safety instructions

Read the instruction manual and installation instructions and all other information enclosed

Retain the documents for subsequent use.

Danger to life

Risk of injury

**Risk of electric shock** – Never pull the cable to disconnect the mains plug.

Never insert/disconnect the mains plug with damp hands.

For worn-out appliances:

 Disconnect the mains plug. Sever the mains cable and discard along with the plug.

Destroy the lock on the washing machine door. This will prevent

children from locking themselves in and risking their lives.

Danger of suffocation Keep packaging, film and packaging parts out of the reach of

Risk of poisoning Risk of explosion

Keep detergents and care products out of the reach of children.

Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvent may cause an explosion after being loaded into the washing machine. Rinse items of laundry thoroughly by hand beforehand.

The washing machine door can become very hot.

Be careful when draining hot detergent solution.

 Do not climb onto the washing machine. Do not lean on the open washing machine door.

Do not reach into the drum if it is still rotating.

 Be careful when opening the detergent drawer while the machine is in operation.

## Before washing for the first time

Do not load any laundry into the machine. Turn on the tap. Add the following to compartment with the washing machine and act accordingly.

approx. 1 litre water

detergent (dosage according to the manufacturer's instructions for light soiling and the appropriate degree of water hardness) Set the programme selector to Algodón/Algodão (Cottons) 60 °C and select Inicio (Start) D. At

Care



**Risk of electric shock.** *Disconnect the mains plug.* Risk of explosion. No solvents.

Machine housing, control panel

 Remove detergent residue immediately. Wipe off with a soft, damp cloth. Do not clean with a jet of water.

Cleaning the detergent drawer.

... if it contains detergent or fabric softener residues. 1. Pull out, press insert down, remove drawer completely.

Leave the washing machine door open so that the drum can dry out.

Rust stains - use chlorine-free cleaning agent, not steel wool.

- Open the tap completely. Supply hose kinked or trapped.

our website or from our after-sales service ( $\rightarrow$  page 1).

 $\rightarrow$  page 10.

Indicator lights for status displays flash:


Information to indicator lights

the end of the programme, turn the programme selector to Stop (Off).

2. To remove the insert: press the insert upwards from below with your

3. Clean the detergent dispenser tray and insert with water and a brush and

**5.** Push in the detergent drawer.

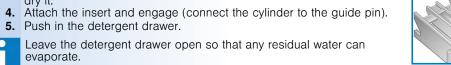

Ensure there is no laundry in the machine This should not be necessary if the correct detergent dosage has been used. If it is necessary, however, proceed according to the descaling agent manufacturer's instructions. Suitable descalers can be obtained via

Close the washing machine door properly; laundry may be caught.

Detergent solution pump blocked; Clean the detergent solution pump

Drainage hose/waste pipe blocked; Clean the drainage hose at the siphon

- Clean the filter  $\rightarrow$  page 10. Water pressure too low.



# Consumption values

Programme	Load	Electricity***	Water***	Programme duration***
Cottons cold	5.5 kg	0.20 kWh	57 I	1 3/4 h
Cottons 20 °C	5.5 kg	0.25 kWh	57 I	1 3/4 h
Cottons 30 °C	5.5 kg	0.40 kWh	57 I	1 3/4 h
Cottons 40 °C*	5.5 kg	0.75 kWh	57 I	1 3/4 h
Cottons 60 °C	5.5 kg	1.20 kWh	57 I	2 h
Cottons 90 °C	5.5 kg	2.00 kWh	64 I	2 h
asy-Care 40 °C*	2.5 kg	0.60 kWh	501	1 1/2 h
Delicate cold	2 kg	0.10 kWh	551	3/4 h
Wool cold	2 kg	0.20 kWh	301	1 h

Programme setting for testing in accordance with currently applicable EN60456 standard. Note on comparative tests: When testing the test programmes, wash the specified load using the maximum

Programme	Load	Annual energy consumption	Annual water consumption
Cottons Eco 40 / 60 °C **	5.5/2.75 kg	182 kWh	9020

Programme settings for testing and energy labelling in accordance with europian standard 2010/30/EU with cold water(15 °C).

\*\*The values may deviate from the specified values depending on water pressure, water hardness, and inlet temperature, ambient temperature, type, amount and level of laundry soiling, detergent used, fluctuations in the power supply and selection of options.

Maintenance



Risk of scalding. Allow the detergent solution to cool down

## Detergent solution pump

Turn the programme selector to **Stop** (**Off**) and disconnect the mains

- 1. Remove the service flap for detergent solution pump.
- **2.** Carefully unscrew the pump cover (residual water).
- 3. Clean the interior, pump cover thread and pump housing (the impeller in the detergent solution pump must rotate).
- **4.** Replace the pump cover and screw it tightly.

**5.** Place the service flap back.

To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment II and start the \( \mathbb{F} \) (Empty) programme.

 
## Drainage hose at the siphon

 
Turn the programme selector to **Stop** (**Off**) and disconnect the mains plug.

- 1. Loosen the hose clamp, carefully remove the drainage hose
- . Clean the drainage hose and siphon connecting piece.
- 3. Reattach the drainage hose and secure the connection with the hose










Reduce the water pressure in the supply hose:

- 1. Turn off the tap.
- 2. Select any programme (except Centrif. adicional © (Spin) / \(\varpsite{\pi}\) (Empty) )
- 3. Select Inicio (Start) D. Let the programme run for approximately 40



- **5.** Clean the filter: Disconnect the hose from the tap. Clean the filter using a small brush.
- and/or for Standard and Aqua-Secure models

 Remove the filter with pliers and clean.





## What to do if ... Water is leaking out - Attach/replace the drainage hose correctly

Water is leaking out.	<ul><li>Attach/replace the drainage hose correctly.</li><li>Tighten the screw connection of the supply hose.</li></ul>	
No water supply. Detergent not dispensed.	<ul> <li>Inicio (Start)  not selected?</li> <li>Tap not turned on?</li> <li>Filter blocked? Clean the filter → page 10.</li> <li>Supply hose kinked or trapped?</li> </ul>	
Washing machine door cannot be opened.	<ul> <li>Safety function active. Wait approx. 2 minutes.</li> <li>Is Rinse stop   (without final spin) selected? -&gt; page 1, 5</li> </ul>	
Programme does not start.	<ul><li>Inicio (Start)   selected?</li><li>Washing machine door closed?</li></ul>	
Detergent solution is not drained.	<ul> <li>Clean the detergent solution pump → page 10.</li> <li>Clean the waste pipe and/or drainage hose.</li> <li>Is Rinse stop   (without final spin) selected? -&gt; page 1, 5.</li> </ul>	
Water not visible in the drum.	<ul> <li>Not a fault - water below the visible area.</li> </ul>	
Unsatisfactory spin result. Laundry wet/too damp.	<ul> <li>Not a fault - the unbalanced-load detection system has cancelled the spin cycle because of uneven distribution of the laundry. Distribute small and large items of laundry evenly inside the drum.</li> <li>Selected speed too low? -&gt; page 5.</li> </ul>	Register your new Bosch now: www.bosch-home.com/welcome
Spin cycle performed several times.	<ul> <li>Not a fault - unbalanced load detection system adjusts the imbalance.</li> </ul>	
Residual water in the compartment & for care products.	<ul> <li>Not a fault - the action of the care product is not affected.</li> <li>Clean the insert if necessary -&gt; page 9.</li> </ul>	
Odour formation in the washing machine.	<ul> <li>Run programme Algodón/Algodão (Cottons) 90 °C without laundry. Use standard detergent.</li> </ul>	
Foam escaping from the detergent drawer.	<ul> <li>Too much detergent used?</li> <li>If foam is escaping from the detergent drawer:</li> <li>Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II (not with outdoor or down fabrics).</li> <li>Reduce the detergent dosage for the next wash cycle.</li> </ul>	
Intense noise formation, vibrations and "wandering" during the spin cycle.	<ul> <li>Are the appliance feet fixed?         Secure the appliance feet → Installation instructions.</li> <li>Transportation safety devices removed?         Remove the transportation safety devices → Installation instructions.</li> </ul>	Washing machine
Indicator lamps do not function during operation.	<ul><li>Power cut?</li><li>Fuses triggered? Reset/change the fuses.</li><li>If the fault occurs repeatedly, call the after-sales service.</li></ul>	WAB20066EE
Programme sequence longer than usual.	<ul> <li>Not a fault - unbalanced load detection system adjusts imbalance by repeatedly distributing the laundry.</li> <li>Not a fault - foam detection system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises and a system active - adds an additional rises are rises and a system active - adds an additional rises are rises and a system active - adds an additional rises are rises and a system active - adds an additional rises are rises and a system active - adds an additional rises are rises and a system active - adds an additional rises are rises and a system active - adds an additional rises are rises and a system active - adds an additional rises are rises and a system active - adds an additional rises are rises and a system active - additional rises are rises and a system active - additional rises are rises and a system active - additional rises are rises and a system active - additional rises are rises and a system active - additional rises are rises and a system active - additional rises are rises and a system active - additional rises are rises</li></ul>	

- Select (Rinse) or brush the laundry after washing.

you cannot correct a fault yourself or a repair is required:

Turn the programme selector to **Stop** (**Off**) and remove the mains plug from the socket. - Turn off the water supply and call the after-sales service  $\rightarrow$  Installation instructions.

rinse cycle.

Detergent residues on - Occasionally, phosphate-free detergents contain water-insoluble

**en** operating instructions







# Your washing machine

**Congratulations** - You have opted for a modern, high-quality domestic appliance manufactured by Bosch. This washing machine is distinguished by its economical water and energy consumption. Each machine that leaves our factory has been inspected thoroughly to ensure that it functions properly and is in perfect condition.

For further information and a selection of our products go to our web site: www.bosch-home.com


You can find the contact details for your nearest after-sales service here or in the after-sales service directory (depending on model), see also Installation Instructions, page 7.

- GB 0844 8928979 Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.
- **IE** 01450 2655

## Environmentally friendly waste disposal

All packaging must be disposed of in accordance with environmental guidelines.

This appliance is certified in accordance with European Directive 2012/19/EC on waste electrical and electronic equipment (WEEE). This directive provides the framework for the EU-wide collection and reuse of used appliances.

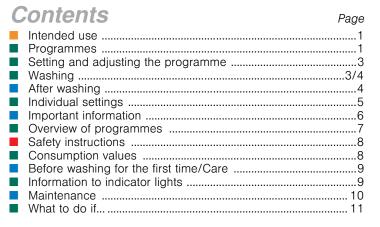

# R

## Environmental protection/Conservation tips

- Always fill the washing machine with a maximum amount of laundry for the relevant programme.
- Wash normally soiled washing without a pre-wash.
- The selectable temperatures apply to the care labels on the textiles. The temperatures in the machine may deviate from this so that you get the optimum mix of energy-saving and washing results
- Measure the detergent according to the manufacturer's instructions and water hardness.
- If the laundry is then dried in the tumble dryer, select the spin speed according to the instructions of the dryer manufacturer.

## Intended use

- for use in the household only,
- for machine-washable fabrics and hand-washable wool in detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.
- The washing machine may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they **are supervised** or **have been instructed** by a responsible person.



- Observe the safety instructions on page 8.
- Do not leave children unattended near the washing machine.
- The washing machine is not to be used by children or persons not familiar with the operating instructions.
- Keep pets away from the washing machine.
   Read these instructions and the separate installation instructions before operating the washing machine.

## Preparation



Correct installation according to the separate Installation instructions.



## Checking the machine

- Never use a damaged machine.
- Inform the after-sales service.



# Connecting the mains plug



Make sure your hands are dry.
Take hold of the plug only.



## Turning the tap on



Compartment II: Detergent for the main wash, water softener, bleach, stain remover


Compartment %: Fabric softener, starch

Compartment I: Detergent for pre-wash

## **Programmes**

Detailed overview of programmes  $\rightarrow$  page 7.

Algodón/Algodão (Cottons)	hard-wearing fabrics
Algodón/Algodão + Prelav. (Cottons + Prewash)	hard-wearing fabrics
(Rinse)	with subsequent spin cycle
Centrif. adicional © (Spin)	laundry washed by hand
₩ (Empty)	the rinsing water
	hand/machine-washable textiles
Delicado (Delicate)	delicate washable fabrics
Sintéticos (Easy-Care)	easy-care fabrics

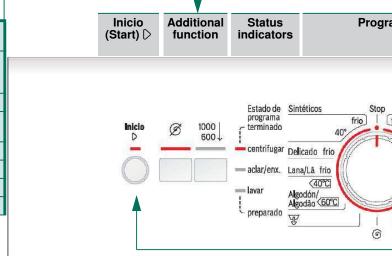





Before washing for the first time Wash once without any laundry  $\rightarrow$  page 9.

## Sorting and loading laundry

Follow the manufacturer's care information.
According to the information on the care labels.
According to type, colour, soiling and temperature.
Do not exceed the maximum load → page 7.

 
Observe the important information → page 6.

Insert large and small items of laundry.

Close the washing machine door. Take care not to trap items of laundry between the washing machine door and the rubber seal.

## Add detergent and care products

Measure accordingly:
Amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions. ur liquid detergent into the appropriate dispenser and place in the drum.



## Setting and adjusting programmes

Additional function  $\rightarrow$  Individual settings, page 5.

Select Inicio (Start) ▷

2


Programme selector for witching the machine on and off and for selecting the programme. Can be turned in either direction.

mme selector

Algodón/Algodão

60° + Prelay.

# Washing

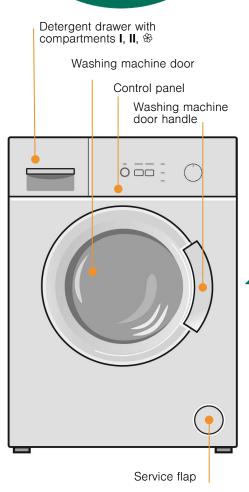

Washing



Open the washing machine door and remove the washing. If Rinse stop  $\mathscr{D}$  (without final spin) is active: Turn the programme selector to  $\mathfrak{F}$  (**Empty**) or select the spin speed. select **Inicio** (**Start**)  $\triangleright$ .

- Re

- Remove any foreign objects - risk of rusting.

 Leave the washing machine door and detergent drawer open so that any residual water can evaporate.

## Turning the tap off

Not required for AquaStop models → Hinweise Installation Instructions, page 7.

## Switching off

Turn the programme selector to Off (stop).

## End of programme when ...

... the status indicator centrifugar (spin) - terminado (end) flashes.

## Interrupting the programme

Programmes at high temperatures:

- Cool washing: Select 📾 (Rinse).
- Select Inicio (Start) ▷.
- Programmes at lower temperatures:
- Select Spin ⑤ or ∜ (Empty).
- Select Inicio (Start) D.

## Changing the programme, if ...

- ... you have selected the wrong programme by mistake:
- Reselect the programme.
- Select **Inicio** (**Start**) ▷. The new programme starts from the beginning.

3

# Individual settings

**Additional functions** → and overview of programmes, see page 7.

Reduce spin speed.

Clothing remains immersed in the last rinse water.

Inicio (Start)

Ø

For starting the programme.



## Important information



## Protecting the washing and the machine

- When measuring the amount of all detergents/additives and cleaning agents, always check the manufacturer's instructions.
- Empty pockets.
- Look out for metal items (paperclips, etc.).
- Wash delicates in a laundry bag (tights, curtains, underwired bras).
- Fasten zips, do up any buttons.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place in the laundry bag.



light

## Washing with varying degrees of soiling

Wash new items of clothing separately.

Do not pre-wash.

If required, pretreat stains. Select programme

Algodón / Algodão (Cottons) (Eco) 60°C.

Load less washing.

Select programme Algodón / Algodão (Cottons) (Eco) 60°C

heavy

Washing must not be treated with fabric softener

Starching is possible in all wash programmes if liquid starch is used. Pour the starch in accordance with the manufacturer's instructions into fabric softener compartment & (rinse first if necessary).



Starching

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions! Do **not** use the washing machine for bleaching clothes!

5

# → Refer to the table of consumption values on page 8 and notes on page Overview of programmes

Additional functions; information

Programmes

Algodón/Algo- dão (Cottons)	frio (cold), 20, 40, 60, 90 °C			
+ Prelav (+ Prewash)	0,09	5.5 kg	Hard-wearing fabrics, heat-resistant fabrics made $_{\rm 600L}$ ${\it \varnothing}$ of cotton or linen	900°) & (1000)
Algodón / Algodão Eco	40, 60 °C			
Sintéticos (Easy-	frio (cold), 40 °C	2.5 kg	2.5 kg Easy-care fabrics made of cotton, linen, synthetic 6000 &	800°), ©
Delicado (Delicate)	frio (cold), 30 °C	, ,	For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	1000 , Ø 6004, Ø No spin between rinse cycles
tés Lana/Lã ( <b>Wool)</b>	frio (cold), 30 °C	Z kg	Hand- or machine-washable fabrics made of wool or containing wool	Hand- or machine-washable fabrics made of wool age of laundry. Longer programme to prevent shrink-or containing wool detergent solution)
Additional programmes	mmes		(Rinse), Centrif. adi	(Rinse), Centrif. adicional ⓒ (Spin), ৺ (Empty)
i Programmes wi	ithout prewash - add dete	ergent to c	Programmes without prewash - add detergent to compartment II, programmes with prewash - distribute the detergent between compartments I and II	ute the detergent between compartments I and II.

Robert Bosch Hausgeräte GmbH Carl-Wery-Str. 34 81739 München / Germany

WAB20066EE

9502 / 9001037676

## Safety instructions

 Read the instruction manual and installation instructions and all other information enclosed with the washing machine and act accordingly.

Retain the documents for subsequent use.

- Risk of electric shock Never pull the cable to disconnect the mains plug.
  - Never insert/disconnect the mains plug with damp hands.

Danger to life

For worn-out appliances:

- Disconnect the mains plug.
- Sever the mains cable and discard along with the plug.
- Destroy the lock on the washing machine door. This will prevent children from locking themselves in and risking their lives.

Danger of suffocation

 Keep packaging, film and packaging parts out of the reach of children.

Risk of poisoning Risk of explosion

- Keep detergents and care products out of the reach of children.
- Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvent may cause an explosion after being loaded into the washing machine. Rinse items of laundry thoroughly by hand beforehand.

Risk of injury

- The washing machine door can become very hot.
- Be careful when draining hot detergent solution.
- Do not climb onto the washing machine.
- Do not lean on the open washing machine door.
- Do not reach into the drum if it is still rotating.
- Be careful when opening the detergent drawer while the machine is in operation.

# Consumption values

Programme	Load	Electricity***	Water***	Programme duration***
Cottons cold	5.5 kg	0.20 kWh	57 I	1 3/4 h
Cottons 20 °C	5.5 kg	0.25 kWh	57 I	1 3/4 h
Cottons 30 °C	5.5 kg	0.40 kWh	571	1 3/4 h
Cottons 40 °C*	5.5 kg	0.75 kWh	571	1 3/4 h
Cottons 60 °C	5.5 kg	1.20 kWh	571	2 h
Cottons 90 °C	5.5 kg	2.00 kWh	64 I	2 h
Easy-Care 40 °C*	2.5 kg	0.60 kWh	50 I	1 1/2 h
Delicate cold	2 kg	0.10 kWh	551	3/4 h
₩ Wool cold	2 kg	0.20 kWh	301	1 h

\*Programme setting for testing in accordance with currently applicable EN60456 standard. Note on comparative tests: When testing the test programmes, wash the specified load using the maximum spin speed.

Programme	Load	Annual energy consumption	Annual water consumption
Cottons Eco 40 / 60 °C **	5.5/2.75 kg	182 kWh	9020 I

Programme settings for testing and energy labelling in accordance with europian standard 2010/30/EU with cold water(15 °C).

\*\*\* The values may deviate from the specified values depending on water pressure, water hardness, and inlet temperature, ambient temperature, type, amount and level of laundry soiling, detergent used, fluctuations in the power supply and selection of options.

## Before washing for the first time

Do not load any laundry into the machine. Turn on the tap. Add the following to compartment

approx. 1 litre water

detergent (dosage according to the manufacturer's instructions for light soiling and the appropriate degree of water hardness)

Set the programme selector to Algodón/Algodão (Cottons) 60 °C and select Inicio (Start) D. At the end of the programme, turn the programme selector to **Stop** (Off).

## Care



- Risk of electric shock. Disconnect the mains plug.

Risk of explosion. No solvents.

## Machine housing, control panel

 
- Remove detergent residue immediately.
- Wipe off with a soft, damp cloth.
- Do not clean with a jet of water.

## Cleaning the detergent drawer ...

... if it contains detergent or fabric softener residues.








**4.** Attach the insert and engage (connect the cylinder to the guide pin).

5. Push in the detergent drawer.

Leave the detergent drawer open so that any residual water can evaporate.



## **Drum**

 

## Descaling

## Ensure there is no laundry in the machine

This should not be necessary if the correct detergent dosage has been used. If it is necessary, however, proceed according to the descaling agent manufacturer's instructions. Suitable descalers can be obtained via our website or from our after-sales service ( $\rightarrow$  page 1).

## Information to indicator lights

	·
wash and rinse	Close the washing machine door properly; laundry may be caught.
wash and spin	<ul> <li>Open the tap completely.</li> <li>Supply hose kinked or trapped.</li> <li>Clean the filter → page 10, Water pressure too low.</li> </ul>
rinse and spin	Detergent solution pump blocked; Clean the detergent solution pump → page 10.  Drainage hose/waste pipe blocked; Clean the drainage hose at the siphon → page 10.

## Maintenance



Risk of scalding. Allow the detergent solution to cool down. Turn off the tap.

## **Detergent solution pump**

Turn the programme selector to **Stop** (**Off**) and disconnect the mains pluq.

- 1. Remove the service flap for detergent solution pump.
- **2.** Carefully unscrew the pump cover (residual water).
- 3. Clean the interior, pump cover thread and pump housing (the impeller in the detergent solution pump must rotate).
- **4.** Replace the pump cover and screw it tightly.
- 5. Place the service flap back.

To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment II and start the \( \mathbb{F} \) (Empty) programme.

## Drainage hose at the siphon

Turn the programme selector to **Stop** (**Off**) and disconnect the mains plug.

- 1. Loosen the hose clamp, carefully remove the drainage hose (residual water).
- 2. Clean the drainage hose and siphon connecting piece.
- 3. Reattach the drainage hose and secure the connection with the hose




## Filter in the water supply

## Risk of electric shock

Do not immerse the HydroSafe safety device in water (contains an electric valve).

Reduce the water pressure in the supply hose:

- **1.** Turn off the tap.
- 2. Select any programme (except Centrif. adicional @ (Spin) / F (Empty) ).
- 3. Select Inicio (Start) D. Let the programme run for approximately 40 seconds.
- 4. Turn the programme selector to **Stop** (**Off**). Disconnect the mains plug.

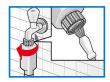

- **5.** Clean the filter:
  - Disconnect the hose from the tap. Clean the filter using a small brush.

and/or for Standard and Agua-Secure models:

Remove the hose on the rear of the appliance, Remove the filter with pliers and clean.

6. Connect the hose and check the leak tightness of the connection points.







# What to do if ...

Wilat to do		
Water is leaking	out Attach/replace the drainage hose correctly Tighten the screw connection of the supply hose.	
No water supply Detergent not di	<ul> <li>Inicio (Start) Donot selected?</li> <li>spensed Tap not turned on?</li> <li>- Filter blocked? Clean the filter → page 10.</li> <li>- Supply hose kinked or trapped?</li> </ul>	
Washing maching cannot be open		
Programme doe start.	s not - Inicio (Start) ▷ selected? - Washing machine door closed?	
Detergent solution drained.	on is not — Clean the detergent solution pump → page 10.  — Clean the waste pipe and/or drainage hose.  — Is Rinse stop	
Water not visible drum.	in the — Not a fault - water below the visible area.	
Unsatisfactory s result. Laundry wet/too	the spin cycle because of uneven distribution of the laundry.	
Spin cycle perfo several times.		
Residual water i compartment & products.		
Odour formation washing machin	3	
Foam escaping detergent drawe		our
Intense noise for vibrations and "wandering" dur spin cycle.	Secure the appliance feet $\rightarrow$ Installation instructions.	
Indicator lamps function during operation.	do not - Power cut? - Fuses triggered? Reset/change the fuses If the fault occurs repeatedly, call the after-sales service.	
Programme seq longer than usua	<ul> <li>imbalance by repeatedly distributing the laundry.</li> <li>Not a fault - foam detection system active - adds an addition rinse cycle.</li> </ul>	
Detergent residuthe laundry.	<ul> <li>on – Occasionally, phosphate-free detergents contain water-insolul residues.</li> <li>– Select (Rinse) or brush the laundry after washing.</li> </ul>	ble

If you cannot correct a fault yourself or a repair is required:

- Turn the programme selector to **Stop** (**Off**) and remove the mains plug from the socket.
  Turn off the water supply and call the after-sales service → *Installation instructions*.



Register your new Bosch now:

www.bosch-home.com/welcome





en operating instructions