

Overview of programmes

Program/type of laundry/information	Settings
Name of the program: Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (✿ = cold) Spin speed*additional settings that can be selected
 Cottons: hard-wearing textiles, heat-resistant textiles made of cotton or linen	8 kg/5** kg; ✿ - 90 °C ----, 0 - 1200* rpm
Notes	=⌚ ☺, ↕, ↑
<ul style="list-style-type: none"> ■ For the ☺ Eco setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the ☺ Eco setting or, if necessary, set a higher temperature. ■ The =⌚ Speed setting is suitable as a short program for lightly soiled laundry. 	
 Synthetics: textiles made of synthetic materials or blended fabrics	4 kg; ✿ - 60 °C ----, 0 - 1200* rpm =⌚ ☺, ↕, ↑
 Daily Wash: mixed load of cottons and synthetic fabrics	4 kg; ✿ - 40 °C ----, 0 - 1200* rpm =⌚ ☺, ↕, ↑
 Delicates/Silk: for delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf)	2 kg; ✿ - 40 °C ----, 0 - 800 rpm =⌚ ☺, ↕, ↑
Note: Use a detergent suitable for machine-washing delicates or silk.	
 Wool: hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).	2 kg; ✿ - 40 °C ----, 0 - 800 rpm -
Notes	
<ul style="list-style-type: none"> ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool. 	
* maximum spin speed depends on the program and model	
** reduced load for the =⌚ Speed setting	

Program/type of laundry/information	Settings
 Drum Clean: Programme for cleaning and caring for the drum and the outer tub, e.g. before the 1st wash cycle, if an odour has formed after a prolonged absence or if washing frequently at a low washing temperature (40 °C and lower)	 ; 40 °C; 90 °C 1200* rpm -
Notes	
<ul style="list-style-type: none"> ■ Run programme without laundry. ■ Use only detergents for front-loading washing machines. Do not use additional cleaning agents. 	
 Spin/Drain: Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.	-;- 0 - 1200* rpm -
Note: The display of the Ready-in time is only updated once the program is restarted.	
Super 15'/30'  : extra short program of approx. 30 minutes, suitable for small items of lightly soiled laundry	2/3.5 kg;  - 40 °C ----, 0 - 1200* rpm
Note: When selecting the  Speed setting, the program Super 15' is run.	
Allergy Plus  : hard-wearing fabrics made of cotton or linen	6.5 kg;  - 60 °C
Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	----, 0 - 1200* rpm   , 
Monsoon  : fabrics made from cotton or synthetics	2 kg; 30 - 60 °C
Short programme suitable for removing dust and sand from washing, e.g. after rainfall; washing warmer after the last rinse cycle, this may reduce the subsequent drying process.	800 - 1200* rpm -
Gentle Wash  : programme suitable for saris made of washable textiles such as cotton and synthetics; Creasing is reduced.	1 kg;  - 40 °C ----, 0 - 600 rpm   , 
Note: Wash a maximum of 2 saris per wash cycle (including blouse and petticoat). Glued adornments or embroidery may detach and are not recommended to be washed.	
Kidswear  : hard-wearing fabrics, heat-resistant fabrics made of cotton or linen	8 kg;  - 90 °C ----, 0 - 1200* rpm  , 
Jeans  : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	3.5 kg;  - 40 °C ----, 0 - 1200* rpm   , 

* maximum spin speed depends on the program and model

** reduced load for the  **Speed** setting

Program/type of laundry/information	Settings
Blanket : machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down	2,5 kg; - 60 °C ----, 0 - 1200* rpm ,
Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	
Rinse : extra rinse with selectable spin speed	-;- ----, 0 - 1200* rpm

* maximum spin speed depends on the program and model

** reduced load for the **Speed** setting



Consumption values table

Programme	Load	Energy consumption*	Water*	Programme duration*
白衣 Cottons 20 °C	8 kg	0,25 kWh	84 l	2 1/2 h
白衣 Cottons 40 °C	8 kg	1,01 kWh	86 l	3 h
白衣 Cottons 60 °C	8 kg	1,16 kWh	84 l	2 1/2 h
白衣 Cottons 90 °C	8 kg	1,90 kWh	94 l	2 1/2 h
衣 Synthetics 40 °C	4 kg	0,79 kWh	65 l	2 h
衣 Daily Wash 40 °C	4 kg	0,58 kWh	44 l	1 1/4 h
白衣 Delicate/Silk 30 °C	2 kg	0,20 kWh	36 l	3/4 h
毛 Wool 30 °C	2 kg	0,17 kWh	41 l	3/4 h

* Values determined according to IEC 60456.

* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

WAT24460IN, WAT24468IN**9001037861 (9507)**