
 
 







 




 
 



 
 


 



 












 







## Overview of programmes

Program/type of laundry/information	Settings
<b>Name of the program:</b> Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (☼ = cold) Spin speed* additional settings that can be selected
 <b>Cottons:</b> hard-wearing textiles, heat-resistant textiles made of cotton or linen  <b>+ Prewash:</b> for heavily soiled washing; distribute detergent between dispensers I and II	8 kg/5** kg; ☼ - 90 °C ----, 0 - 1200* rpm    
<b>Notes</b> <ul style="list-style-type: none"> <li>For the  <b>Eco</b> setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the  <b>Eco</b> setting or, if necessary, set a higher temperature.</li> <li>The  <b>Speed</b> setting is suitable as a short program for lightly soiled laundry.</li> </ul>	
 <b>Synthetics:</b> textiles made of synthetic materials or blended fabrics	4 kg; ☼ - 60 °C ----, 0 - 1200* rpm    
 <b>Mix:</b> mixed load of cottons and synthetic fabrics	4 kg; ☼ - 40 °C ----, 0 - 1200* rpm    
 <b>Delicates/Silk:</b> for delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) <b>Note:</b> Use a detergent suitable for machine-washing delicates or silk.	2 kg; ☼ - 40 °C ----, 0 - 800 rpm    
 <b>Wool:</b> hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).	2 kg; ☼ - 40 °C ----, 0 - 800 rpm
<b>Notes</b> <ul style="list-style-type: none"> <li>Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep.</li> <li>Use a detergent that is suitable for machine-washing wool.</li> </ul>	
* maximum spin speed depends on the program and model ** reduced load for the  <b>Speed</b> setting	

Program/type of laundry/information	Settings
<p> <b>Drum Clean</b>: Programme for cleaning and caring for the drum and the outer tub, e.g. before the 1st wash cycle, if an odour has formed after a prolonged absence or if washing frequently at a low washing temperature (40 °C and lower)</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Run programme without laundry.</li> <li>■ Use only detergents for front-loading washing machines. Do not use additional cleaning agents.</li> </ul>	<p>-; 90 °C</p> <p>1200* rpm</p> <p>-</p>
<p> <b>Spin/Drain</b> : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.</p> <p><b>Note:</b> The display of the Ready-in time is only updated once the program is restarted.</p>	<p>-; -</p> <p>----, 0 - 1200* rpm</p> <p></p>
<p><b>SuperQuick 15'/30'</b> : extra short program of approx. 30 minutes, suitable for small items of lightly soiled laundry</p> <p><b>Note:</b> When selecting the  <b>Speed</b> setting, the program <b>SuperQuick 15'</b> is run.</p>	<p>2/3.5 kg;  - 40 °C</p> <p>0 - 1200* rpm</p> <p></p>
<p><b>Allergy Plus</b> : hard-wearing fabrics made of cotton or linen</p> <p><b>Note:</b> Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.</p>	<p>6.5 kg/4** kg;  - 60 °C</p> <p>----, 0 - 1200* rpm</p> <p>   </p>
<p><b>Duvet</b> : machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down</p> <p><b>Note:</b> Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.</p>	<p>2,5 kg;  - 60 °C</p> <p>----, 0 - 1200* rpm</p> <p>  </p>
<p><b>Iron Wear</b> : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Shirts/blouses are only given a short spin on the  <b>Less iron</b> setting. Hang them up to dry while still dripping wet. → Self-smoothing effect</li> <li>■ Use the <b>Delicates/Silk</b> program to wash shirts/blouses made of silk/delicate fabrics.</li> </ul>	<p>2 kg;  - 60 °C</p> <p>----, 0 - 800 rpm</p> <p>   </p>
<p><b>Jeans</b> : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.</p>	<p>3.5 kg;  - 40 °C</p> <p>----, 0 - 1200* rpm</p> <p>   </p>
<p>* maximum spin speed depends on the program and model</p> <p>** reduced load for the  <b>Speed</b> setting</p>	

Program/type of laundry/information	Settings
<b>Sports Wear</b>  : Sportswear and leisure wear made from microfibre fabrics <b>Notes</b> <ul style="list-style-type: none"> <li>■ Laundry must not be treated with fabric softener.</li> <li>■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.</li> </ul>	2 kg;  - 40 °C ---, 0 - 800 rpm   ,  , 
<b>Rinse</b>  : extra rinse with selectable spin speed	-;- ----, 0 - 1200* rpm -
* maximum spin speed depends on the program and model ** reduced load for the  <b>Speed</b> setting	



## Consumption values table

Programme	Load	Energy consumption*	Water*	Programme duration*
Cottons 20 °C	8 kg	x kWh	x l	x h
Cottons 40 °C	8 kg	x kWh	x l	x h
Cottons 60 °C	8 kg	x kWh	x l	x h
Cottons 90 °C	8 kg	x kWh	x l	x h
Synthetics 40 °C	4 kg	x kWh	x l	x h
Mix 40 °C	4 kg	x kWh	x l	x h
Delicate/Silk 30 °C	2 kg	x kWh	x l	x h
Wool 30 °C	2 kg	x kWh	x l	x h

Programme	Additional function	Load	Energy consumption*	Water*	Programme duration*
Cottons 60 °C**	Eco	8 kg	x kWh	x l	x h

Values determined according to IEC 60456.

\* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

\*\* Programme setting with maximum spin speed for testing according to IEC 60456.

**WAT24480SG**

**9001042388 (9411)**

