

Overview of programmes

Programme/Type of laundry/Instructions	Settings
Name of the programme Brief explanation of the programme and for which fabrics it is suitable.	Max. load; * Reduced load for the  SpeedPerfect setting Temperature can be selected Spin speed can be selected; ** Max. spin speed, depending on the model Possible programme settings
 Cottons Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen  Cottons  + Prewash : Programme with prewash, prewash at 30 °C; divide detergent between compartments I and II Note: The  SpeedPerfect setting is suitable as a short programme for lightly soiled laundry.	Max. 7 kg/4* kg  - 90 °C  ... 1400** rpm  ,  ,  ,  / 
 Easy-Care Textiles made of synthetic materials or blended fabrics  Easy-Care +  Prewash : Programme with prewash, prewash at 30 °C; divide detergent between compartments I and II	Max. 3 kg  - 60 °C  ... 1200** rpm  ,  ,  ,  / 
 Mixed Load Mixed load of cottons and synthetic fabrics Notes ■ Different types of laundry can be washed together. ■  Mixed Load 40 °C with maximum spin speed is ideal as a short programme.	Max. 3 kg  - 40 °C  ... 1200** rpm  ,  ,  ,  / 
 Delicate/Silk For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves) Notes ■ For delicates or silk, use a detergent suitable for machine-washing. ■ No spin cycle between the rinse cycles	Max. 2 kg  - 40 °C  ... 800 rpm  ,  ,  ,  / 

Programme/Type of laundry/Instructions	Settings
 Wool Hand- or machine-washable fabrics that are made of wool or contain wool; particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water)	Max. 2 kg ❄ - 40 °C 🔄 ... 800 rpm -
Notes ■ Wool is of animal origin, e.g. Angora, alpaca, llama, sheep. ■ For wool, use a detergent that is suitable for machine-washing.	
 Rinse/🔄 Spin Laundry washed by hand,  Rinse Plus/  Water Plus button activated	Max. 7 kg - 🔄 ... 1400** rpm 
Note: If you require spin only, deactivate the button	
 Drain Drain the rinsing water after a programme using the 🔄 Rinse stop setting (without final spin) for gentle treatment of delicate laundry	Max. 7 kg - - -
 SuperQuick 15' Extra-short programme of approx. 15 minutes, suitable for small items of lightly soiled laundry	Max. 2 kg ❄ - 40 °C 🔄 ... 1200** rpm -
 Allergy+ Hard-wearing fabrics	Max. 7 kg/4* kg ❄ - 60 °C 🔄 ... 1400** rpm 
Note: For especially sensitive skin, extended wash cycle at selected temperature, higher water level, additional rinse cycle	
 Sportswear Sportswear and leisurewear made from microfibre fabrics	Max. 2 kg ❄ - 40 °C 🔄 ... 800 rpm 
Notes ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	

Programme/Type of laundry/Instructions	Settings
 Shirts/Business Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Notes ■ Use the Delicates/Silk programme to wash shirts/blouses made of silk/delicate fabrics. ■ Easy-Iron: Spin only, hang up to drip dry	Max. 2 kg  - 60 °C  ... 800 rpm  ,  ,  ,  / 
 Down Machine-washable fabrics that are filled with down Notes ■ Only wash down-filled clothing, not feather cushions or bedding. Wash large items separately. Use detergent sparingly. Dry laundry in the tumble dryer afterwards to prevent the down from clumping. ■ The laundry must not be treated with fabric softener.	Max. 3 kg  - 40 °C  ... 1200** rpm  ,  ,  ,  / 
 Dark Wash Dark fabrics made of cotton and dark, easy-care fabrics Turn items inside-out before washing. Note: Reduced rinse and final spin	Max. 3 kg  - 40 °C  ... 1200** rpm  ,  ,  ,  / 



Consumption values table

Programme length and residual moisture of main wash programmes

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Cottons 20 °C	7 kg	0.31 kWh	72 l	2 ¾ h
Cottons 40 °C	7 kg	0.85 kWh	72 l	2 ¾ h
Cottons 60 °C	7 kg	1.21 kWh	72 l	2 ¾ h
Cottons 90 °C	7 kg	2.01 kWh	77 l	3 h
Easy-Care 40 °C	3 kg	0.64 kWh	56 l	1 ¾ h
Quick/Mix 40 °C	3 kg	0.46 kWh	36 l	1 ¼ h
Delicates/Silk 30 °C	2 kg	0.24 kWh	37 l	¾ h
 /Wool 30 °C	2 kg	0.22 kWh	47 l	¾ h

Programme	Approximate information on the residual moisture**			
	WAE28... Max. 1400 rpm	WAE24... Max. 1200 rpm	WAE20... Max. 1000 rpm	WAE16... Max. 800 rpm
Cottons	53%	58%	68%	80%
Easy-Care	40%	40%	40%	40%
Delicates/Silk	30%	30%	30%	30%
Wool	45%	45%	45%	45%
* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.				
** Information on residual moisture based on programme-dependent spin-speed limit and maximum loads.				

Most efficient programmes for cotton fabrics

The following programmes (standard programmes, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programmes for cottons in accordance with regulation (EU) No. 1015/2010	Load	Approximate programme duration
 Cottons programme + 	7 kg	3 ¾ h
 Cottons programme + 	3.5 kg	3 ¾ h
 Cottons programme + 	3.5 kg	3 ¼ h
Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The programme temperature information is based on the temperature stated on the care label for the fabrics. The actual washing temperature may deviate from the stated programme temperature for energy-saving reasons.		

WAE24490GB

9001065229 (9507)

