 



 


 

 
 
 
 
 
 


Overview of programmes

| Program/type of laundry/information | Settings |
|---|---|
| Name of the program : Brief explanation of the program and for which textiles it is suitable. | max. load, temperature (❄ = cold) Spin speed* additional settings that can be selected |
| Cottons : Hard-wearing textiles, heat-resistant textiles made of cotton or linen Notes ■ For the Eco setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the Eco setting or, if necessary, set a higher temperature. ■ The Speed setting is suitable as a short program for lightly soiled laundry. | 9 kg/5** kg; 20 - 90 °C ----, 0 - 1400* rpm Speed Eco ≡   , Aqua Plus |
| Easy-Care : Textiles made of synthetic materials or blended fabrics | 4 kg; 30 °C ----, 0 - 1200 rpm Speed Eco ≡   Aqua Plus |
| Wool : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool. | max. 2 kg; 30 °C ----, 0 - 800 rpm - |
| SuperQuick 15'/30' : Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry Note : When selecting the Speed setting, the program SuperQuick 15' is run. | 2/3.5 kg; 30 °C 0 - 1200 rpm Speed ≡  |
| Mixed Load : Mixed load of cottons and synthetic fabrics | 4 kg; 40 °C ----, 0 - 1400* rpm Speed Eco ≡   , Aqua Plus |
| * max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting | |

| Program/type of laundry/information | Settings |
|--|--|
| Rinse: Extra rinse with selectable spin speed | -; - ----, 0 - 1400** rpm - |
| Spin/Drain: Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0. Note: The display of the Ready-in time is only updated once the program is restarted. | -; - ----, 0 - 1400** rpm - |
| Delicates/Silk: For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note: Use a detergent suitable for machine-washing delicates or silk. | 2 kg; 30 °C ----, 0 - 800 rpm Speed Eco   , Aqua Plus |
| Sportswear: Sportswear and leisure wear made from microfibre fabrics Notes ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue. | 2 kg; 30 °C ---, 0 - 800 rpm Speed Eco   , Aqua Plus |
| Shirts: Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Notes ■ Shirts/blouses are only given a short spin on the Easy-Iron (depending on model) setting. Hang them up to dry while still dripping wet. → Self-smoothing effect ■ Use the Delicate/Silk program to wash shirts/blouses made of silk/delicate fabrics. | 2 kg; 40 °C ----, 0 - 800 rpm Speed Eco   Aqua Plus |
| Allergy+: Hard-wearing fabrics made of cotton or linen Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle. | 7.5 kg/5** kg; 60 °C ----, 0 - 1400* rpm Speed Eco   , Aqua Plus |
| * max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting | |



Consumption values table

Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

 
| Program | Load | Energy consumption* | Water consumption* | Program duration* |
|----------------------|------|---------------------|--------------------|-------------------|
| Cottons 20 °C | 9 kg | 0,25 kWh | 90 l | 2 ¾ h |
| Cottons 40 °C | 9 kg | 1,10 kWh | 90 l | 3 h |
| Cottons 60 °C | 9 kg | 1,06 kWh | 90 l | 2 ¾ h |
| Cottons 90 °C | 9 kg | 2,14 kWh | 100 l | 2 ¾ h |
| Easy-Care 40 °C | 4 kg | 0,70 kWh | 61 l | 2 h |
| Mixed Load 40 °C | 4 kg | 0,60 kWh | 45 l | 1 ¼ h |
| Delicates/Silk 30 °C | 2 kg | 0,19 kWh | 37 l | ¾ h |
| Wool 30 °C | 2 kg | 0,19 kWh | 40 l | ¾ h |




 


 
 

| Program | Approximate information on the residual moisture** | | |
|----------------|--|---------------------------|---------------------------|
| | WAT28... max. 1400 rpm | WAT24... max. 1200 rpm | WAT20... max. 1000 rpm |
| Cottons | 48 % | 53 % | 62 % |
| Easy-Care | 40 % | 40 % | 40 % |
| Delicates/Silk | 30 % | 30 % | 30 % |
| Wool | 45 % | 45 % | 45 % |

* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

** Information on residual moisture based on program-dependent spin-speed limit and maximum loads.

Most efficient programs for cotton fabrics

The following programs (standard programs, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

| Standard programs for cottons in accordance with the (EU) directive no. 1015/2010 | | |
|---|--------|------------------------------|
| Program + temperature + button | Load | Approximate program duration |
| Cottons +  + Eco   | 9 kg | 4 ¾ h |
| Cottons +  + Eco   | 4,5 kg | 4 ½ h |
| Cottons +  + Eco   | 4,5 kg | 4 ½ h |

Program setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C).
The specification of the program temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated program temperature for energy-saving reasons.

Notes

- This supplementary sheet is included with your installation and operating instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

WAT28370GB

9001067494 (9502)

