

 
 
 
 
 
 
 
 
 












## Overview of programmes

| Program/type of laundry/information  | Settings  |
|--|---|
| <b>Name of the program</b> : Brief explanation of the program and for which textiles it is suitable.   | max. load, temperature (❄ = cold)<br>Spin speed*,<br>(--- = Rinse Stop)<br>additional settings that can be selected   |
| <b>Cottons</b> : Hard-wearing textiles, heat-resistant textiles made of cotton or linen<br><b>Notes</b> <ul style="list-style-type: none"> <li>■ For the <b>Eco</b>  setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the <b>Eco</b>  setting or, if necessary, set a higher temperature.</li> <li>■ The <b>Speed</b>  setting is suitable as a short program for lightly soiled laundry.</li> </ul> | 9 kg/5** kg; ❄ - 90 °C<br>---, 0 - 1600* rpm<br>Speed/Eco  /  ,<br>Prewash, Aqua Plus |
| <b>Easy-Care</b> : Textiles made of synthetic materials or blended fabrics   | 4 kg; ❄ - 60 °C<br>---, 0 - 1200 rpm<br>Speed/Eco  /  ,<br>Prewash, Aqua Plus         |
| <b>Wool</b> : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).<br><b>Notes</b> <ul style="list-style-type: none"> <li>■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep.</li> <li>■ Use a detergent that is suitable for machine-washing wool.</li> </ul>  | max. 2 kg; ❄ - 40 °C<br>---, 0 - 800 rpm<br>-   |
| <b>SuperQuick 15' / 30'</b> : Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry<br><b>Note</b> : When selecting the <b>Speed</b>  setting, the program <b>SuperQuick 15'</b> is run.   | 2/3,5 kg; ❄ - 40 °C<br>0 - 1200 rpm<br>Speed   |
| <b>Mixed Load</b> : Mixed load of cottons and synthetic fabrics  | 4 kg; ❄ - 40 °C<br>---, 0 - 1600* rpm<br>Speed/Eco  /  ,<br>Prewash, Aqua Plus    |
| * Max. spin speed, depending on the programme and model<br>** Reduced load for <b>Speed</b>  setting  |   |

| Program/type of laundry/information  | Settings  |
|--|---|
| <p><b>Night Wash</b> : Especially quiet programme for washing during the night; suitable for cotton, linen, synthetic and blended fabrics.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>Final buzzer deactivated,</li> <li>Reduced final spin speed set by default and shorter washing time</li> </ul>   | <p>4 kg; * - 40 °C</p> <p>----, 0 - 1600* rpm</p> <p>Speed/Eco =  / ,<br/>Prewash, Aqua Plus</p>  |
| <p><b>Rinse</b> : Extra rinse with selectable spin speed</p>   | <p>-; -</p> <p>----, 0 - 1600* rpm</p> <p>-</p>   |
| <p><b>Spin / Drain</b> : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.</p> <p><b>Note</b> : The display of the Ready-in time is only updated once the program is restarted.</p>  | <p>-; -</p> <p>----, 0 - 1600* rpm</p> <p>-</p>   |
| <p><b>Drum Clean</b> : Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>Run the drum-care program without any laundry.</li> <li>Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.</li> </ul> | <p>0 kg; 90 °C</p> <p>1600* rpm</p> <p>-</p>  |
| <p><b>Delicates / Silk</b> : For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf)</p> <p><b>Note</b> : Use a detergent suitable for machine-washing delicates or silk.</p>   | <p>2 kg; * - 40 °C</p> <p>---, 0 - 800 rpm</p> <p>Speed/Eco =  / ,<br/>Prewash, Aqua Plus</p>     |
| <p><b>Down</b> : Machine-washable fabrics stuffed with down, such as pillows and duvets; also suitable for items stuffed with synthetic fibres</p> <p><b>Note</b> : Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.</p>   | <p>2 kg; * - 60 °C</p> <p>---, 0 - 1200 rpm</p> <p>Speed/Eco =  / ,<br/>Aqua Plus</p>         |
| <p><b>Sportswear</b> : Sportswear and leisure wear made from microfibre fabrics</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>Laundry must not be treated with fabric softener.</li> <li>Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.</li> </ul>   | <p>2 kg; * - 40 °C</p> <p>---, 0 - 800 rpm</p> <p>Speed/Eco =  / ,<br/>Prewash, Aqua Plus</p> |
| <p>* Max. spin speed, depending on the programme and model</p> <p>** Reduced load for <b>Speed</b> =  setting</p>   |   |

| Program/type of laundry/information   | Settings  |
|---|---|
| <b>Dark Wash</b> : Dark textiles made of cotton and dark easy-care textiles.<br>Wash textiles inside out.   | 3,5 kg; ❄ - 40 °C<br>----, 0 - 1200 rpm<br>Speed/Eco = ⏱ /<br>Ⓢ, Prewash, Aqua Plus       |
| <b>Shirts</b> : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics   | 2 kg; ❄ - 60 °C<br>----, 0 - 800 rpm<br>Speed/Eco = ⏱ / Ⓢ,<br>Prewash, Aqua Plus          |
| <b>Notes</b><br>■ Shirts/blouses are only given a short spin on the <b>Easy iron</b> (depending on model) setting. Hang them up to dry while still dripping wet. → Self-smoothing effect<br>■ Use the <b>Delicates / Silk</b> program to wash shirts/blouses made of silk/delicate fabrics. |   |
| <b>Allergy+</b> : Hard-wearing fabrics made of cotton or linen  | 7 kg/5** kg; ❄ - 60 °C<br>----, 0 - 1600* rpm<br>Speed/Eco = ⏱ / Ⓢ,<br>Prewash, Aqua Plus |
| <b>Note</b> : Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.   |   |
| * Max. spin speed, depending on the programme and model<br>** Reduced load for <b>Speed</b> = ⏱ setting   |   |



## Consumption values table

### Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

| Program                      | Load   | Energy consumption* | Water consumption* | Program duration* |
|------------------------------|--------|---------------------|--------------------|-------------------|
| Cottons 20 °C                | 9 kg   | 0,25 kWh            | 90 l               | 2 ¾ h             |
| Cottons 40 °C                | 9 kg   | 1,10 kWh            | 90 l               | 3 h               |
| Cottons 60 °C                | 9 kg   | 1,16 kWh            | 90 l               | 2 ¾ h             |
| Cottons ◻ + 40°C + Eco Ⓢ ◻** | 4,5 kg | 0,41 kWh            | 46 l               | 4 ¾ h             |
| Cottons ◻ + 60°C + Eco Ⓢ ◻** | 4,5 kg | 0,59 kWh            | 46 l               | 4 ¾ h             |
| Cottons ◻ + 60°C + Eco Ⓢ ◻** | 9 kg   | 0,92 kWh            | 57 l               | 4 ¾ h             |
| Cottons 90 °C                | 9 kg   | 2,14 kWh            | 100 l              | 2 ¾ h             |
| Easy-Care 40 °C              | 4 kg   | 0,71 kWh            | 64 l               | 2 h               |
| Mixed Load 40 °C             | 4 kg   | 0,60 kWh            | 45 l               | 1 ¼ h             |
| Delicates/Silk 30 °C         | 2 kg   | 0,19 kWh            | 37 l               | ¾ h               |
| Wool 30 °C                   | 2 kg   | 0,19 kWh            | 41 l               | ¾ h               |

| Program        | Approximate information on the residual moisture <sup>***</sup> |                           |                           |                           |
|----------------|---|---------------------------|---------------------------|---------------------------|
|                | WAT32...<br>max. 1600 rpm                                       | WAT28...<br>max. 1400 rpm | WAT24...<br>max. 1200 rpm | WAT20...<br>max. 1000 rpm |
| Cottons        | 44 %  | 48 %                      | 53 %                      | 62 %                      |
| Easy-Care      | 40 %  | 40 %                      | 40 %                      | 40 %                      |
| Delicates/Silk | 30 %  | 30 %                      | 30 %                      | 30 %                      |
| Wool           | 45 %  | 45 %                      | 45 %                      | 45 %                      |

Values determined in accordance with EN60456.

\* The observed values may differ from the indicated values due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in the power supply and any additional functions selected.

\*\* Programme setting at maximum speed for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C).  
These programmes are suitable for cleaning normally soiled cotton items and are the most efficient in terms of combined energy and water consumption.  
The stated programme temperature is based on the temperature indicated on the care label for the laundry. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance meets legal requirements.

\*\*\* The stated residual moisture is based on the maximum spin speed and load of each individual programme.

## Notes

- This supplementary sheet is included with your installation and operating instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

**WAT32480GB**

**9001074086 (9710)**

