





Register your new Bosch now:  
[www.bosch-home.com/welcome](http://www.bosch-home.com/welcome)

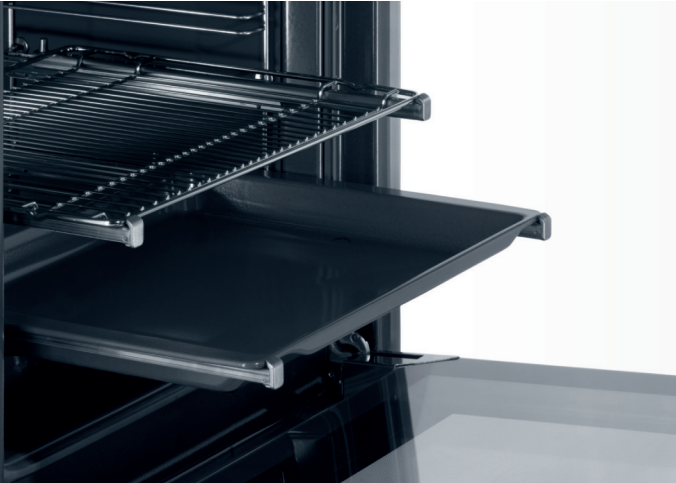

**Built-in oven  
HBA63B2.2B**

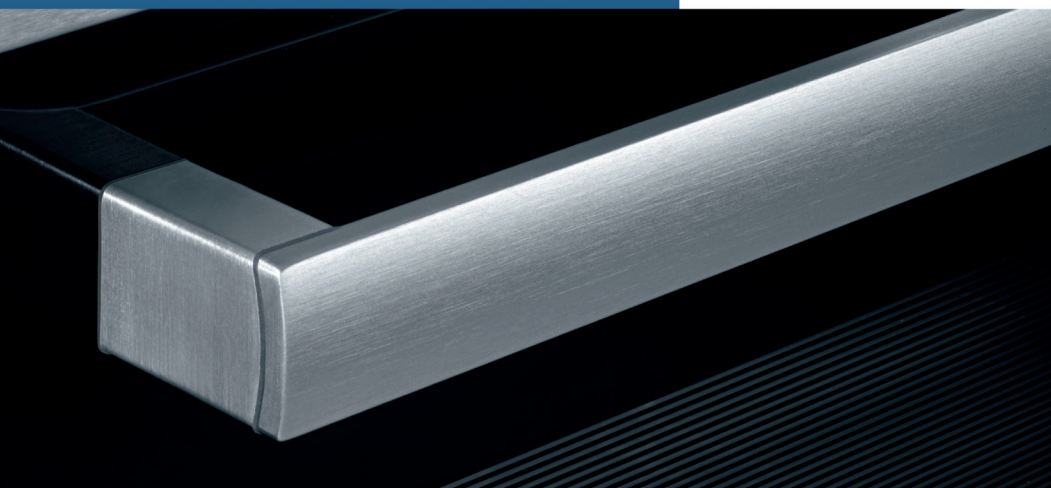

**BOSCH**

[en] Instruction manual



---

# Table of contents

|                                                      |           |                                                   |           |
|------------------------------------------------------|-----------|---------------------------------------------------|-----------|
| <b>Important safety information.....</b>             | <b>4</b>  | <b>Tested for you in our cooking studio .....</b> | <b>19</b> |
| Causes of damage .....                               | 5         | Cakes and pastries .....                          | 19        |
| <b>Your new oven .....</b>                           | <b>6</b>  | Baking tips .....                                 | 21        |
| Control panel .....                                  | 6         | Meat, poultry, fish.....                          | 21        |
| Buttons and display.....                             | 6         | Tips for roasting and grilling.....               | 23        |
| Function selector.....                               | 6         | Preprepared products.....                         | 24        |
| Temperature selector.....                            | 6         | Special dishes .....                              | 25        |
| Cooking compartment .....                            | 7         | Defrost.....                                      | 25        |
| <b>Your accessories .....</b>                        | <b>7</b>  | Drying .....                                      | 25        |
| Inserting accessories .....                          | 7         | Preserving .....                                  | 26        |
| Optional accessories .....                           | 7         | <b>Acrylamide in foodstuffs .....</b>             | <b>26</b> |
| After-sales service products .....                   | 9         | <b>Test dishes .....</b>                          | <b>27</b> |
| <b>Before using the oven for the first time.....</b> | <b>9</b>  | Baking .....                                      | 27        |
| Setting the clock .....                              | 9         | Grilling.....                                     | 27        |
| Heating up the oven .....                            | 9         |                                                   |           |
| Cleaning the accessories.....                        | 9         |                                                   |           |
| <b>Setting the oven.....</b>                         | <b>9</b>  |                                                   |           |
| Type of heating and temperature .....                | 9         |                                                   |           |
| Rapid heating .....                                  | 10        |                                                   |           |
| <b>Setting the time-setting options.....</b>         | <b>10</b> |                                                   |           |
| Timer .....                                          | 10        |                                                   |           |
| Cooking time .....                                   | 10        |                                                   |           |
| End time.....                                        | 11        |                                                   |           |
| Clock .....                                          | 11        |                                                   |           |
| <b>Childproof lock .....</b>                         | <b>11</b> |                                                   |           |
| <b>Changing the basic settings .....</b>             | <b>12</b> |                                                   |           |
| <b>Automatic switch-off .....</b>                    | <b>12</b> |                                                   |           |
| <b>Self-cleaning .....</b>                           | <b>12</b> |                                                   |           |
| Important notes .....                                | 12        |                                                   |           |
| Before self-cleaning.....                            | 13        |                                                   |           |
| Making settings .....                                | 13        |                                                   |           |
| After self-cleaning .....                            | 13        |                                                   |           |
| <b>Care and cleaning .....</b>                       | <b>13</b> |                                                   |           |
| Cleaning agents .....                                | 13        |                                                   |           |
| Detaching and refitting the rails.....               | 14        |                                                   |           |
| Detaching and attaching the oven door.....           | 14        |                                                   |           |
| Removing the door cover.....                         | 15        |                                                   |           |
| Removing and installing the door panels .....        | 15        |                                                   |           |
| <b>Troubleshooting .....</b>                         | <b>16</b> |                                                   |           |
| Malfunction table.....                               | 16        |                                                   |           |
| Replacing the bulb in the oven ceiling light .....   | 17        |                                                   |           |
| Glass cover .....                                    | 17        |                                                   |           |
| <b>After-sales service .....</b>                     | <b>17</b> |                                                   |           |
| E number and FD number .....                         | 17        |                                                   |           |
| <b>Energy and the environment .....</b>              | <b>18</b> |                                                   |           |
| Hot air eco heating type.....                        | 18        |                                                   |           |
| Saving energy.....                                   | 19        |                                                   |           |
| Environmentally-friendly disposal.....               | 19        |                                                   |           |

---

Additional information on products, accessories, replacement parts and services can be found at **[www.bosch-home.com](http://www.bosch-home.com)** and in the online shop **[www.bosch-eshop.com](http://www.bosch-eshop.com)**

## Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

This appliance is only intended to be fully fitted in a kitchen. Observe the special installation instructions.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Always slide accessories into the cooking compartment correctly. See "*Description of accessories*" in the instruction manual.

### **Risk of fire!**

- Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box.

- A draught is created when the appliance door is opened. Greaseproof paper may come into contact with the heating element and catch fire. Do not place greaseproof paper loosely over accessories during preheating. Always weight down the greaseproof paper with a dish or a baking tin. Only cover the surface required with greaseproof paper. Greaseproof paper must not protrude over the accessories.

### **Risk of burns!**

- The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Alcoholic vapours may catch fire in the hot cooking compartment. Never prepare food containing large quantities of drinks with a high alcohol content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care.

### **Risk of scalding!**

- The accessible parts become hot during operation. Never touch the hot parts. Keep children at a safe distance.
- When you open the appliance door, hot steam may escape. Open the appliance door with care. Keep children at a safe distance.
- Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment.

### **Risk of injury!**

Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

### **Risk of electric shock!**

- Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers. If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Contact the after-sales service.



- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- When replacing the cooking compartment bulb, the bulb socket contacts are live. Before replacing the bulb, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.

### **Risk of fire!**

- Loose food residues, grease and meat juices may catch fire during the Self-cleaning cycle. Remove coarse dirt from the cooking compartment and from the accessories before every Self-cleaning cycle.
- The appliance will become very hot on the outside during the Self-cleaning cycle. Never hang combustible objects, e.g. tea towels, on the door handle. Do not place anything against the front of the oven. Keep children at a safe distance.

### **Risk of burns!**

- The cooking compartment will become very hot during the Self-cleaning cycle. Never open the appliance door or move the locking latch by hand. Allow the appliance to cool down. Keep children at a safe distance.
-  The appliance will become very hot on the outside during the Self-cleaning cycle. Never touch the appliance door. Allow the appliance to cool down. Keep children at a safe distance.

### **Risk of serious damage to health!**

The appliance will become very hot during the Self-cleaning cycle. The non-stick coating on baking trays and tins is destroyed and noxious gases are released. Never let non-stick baking trays and tins go through the Self-cleaning cycle. Only enamelled accessories may be cleaned at the same time.

## **Causes of damage**

### **Caution!**


- Accessories, foil, greaseproof paper or ovenware on the cooking compartment floor: do not place accessories on the cooking compartment floor. Do not cover the cooking compartment floor with any sort of foil or greaseproof paper. Do not place ovenware on the cooking compartment floor if a temperature of over 50 °C has been set. This will cause heat to accumulate. The baking and roasting times will no longer be correct and the enamel will be damaged.
- Water in a hot cooking compartment: do not pour water into the cooking compartment when it is hot. This will cause steam. The temperature change can cause damage to the enamel.
- Moist food: do not store moist food in the cooking compartment when it is closed for prolonged periods. This will damage the enamel.
- Fruit juice: when baking particularly juicy fruit pies, do not pack the baking tray too generously. Fruit juice dripping from the baking tray leaves stains that cannot be removed. If possible, use the deeper universal pan.
- Cooling with the appliance door open: only allow the cooking compartment to cool when it is closed. Even if the appliance door is only open a little, front panels of adjacent units could be damaged over time.
- Very dirty door seal: If the door seal is very dirty, the appliance door will no longer close properly when the appliance is in use. The fronts of adjacent units could be damaged. Always keep the door seal clean.
- Appliance door as a seat, shelf or worktop: Do not sit on the appliance door, or place or hang anything on it. Do not place any cookware or accessories on the appliance door.
- Inserting accessories: depending on the appliance model, accessories can scratch the door panel when closing the appliance door. Always insert the accessories into the cooking compartment as far as they will go.
- Carrying the appliance: do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.

# Your new oven

Here you will learn about your new oven. The control panel and the individual operating controls are explained. You will find information on the cooking compartment and the accessories.

## Control panel

Here you will see an overview of the control panel. All of the symbols never appear in the display at the same time. Depending on the appliance model, individual details may differ.

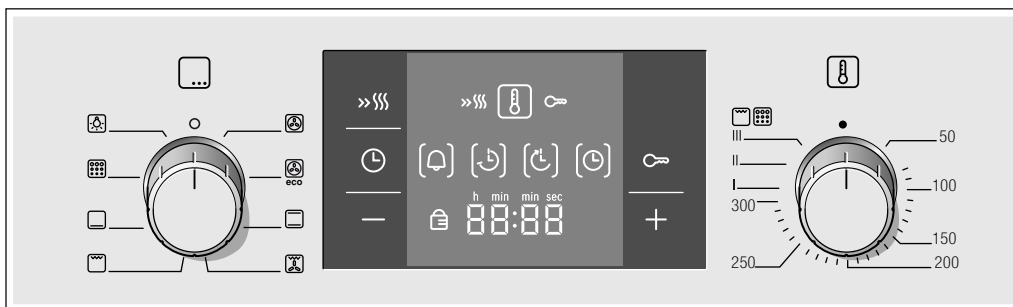

### Control knobs

The control knobs are retractable. To lock it in or out, press the control knob in the off position.

### Buttons

The sensors are located under the individual buttons. They must not be pressed too firmly. Only touch the corresponding symbol.

### Buttons and display

You can use the buttons to set various additional functions. On the display, you can read the values that you have set.

| Button                 | Use                                                          |
|------------------------|--------------------------------------------------------------|
| »»»» Rapid heating     | Heats up the oven particularly quickly.                      |
| ⌚ Time-setting options | Selects the timer ⌚, cooking time ⌚, end time ⌚ and clock ⌚. |
| 🔒 Childproof lock      | Locks and unlocks oven functions.                            |
| - Minus                | Decreases the set values.                                    |
| + Plus                 | Increases the set values.                                    |

The time-setting option that is currently selected in the display is indicated by brackets [ ] around the corresponding symbol. Exception: For the clock, the ⌚ symbol only lights up if the time is being changed.

### Function selector

Use the function selector to set the type of heating.

| Setting            | Use                                                                                                                                                                                                                              |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ○ Off position     | The oven switches off.                                                                                                                                                                                                           |
| 🔥 3D hot air       | For cakes and pastries on one to three levels. The fan distributes the heat from the heating ring in the back panel evenly around the cooking compartment.                                                                       |
| 🔥 eco Hot air eco* | For cakes and pastries, bakes, frozen and convenience products, meat and fish on one level without pre-heating. The fan evenly distributes the energy-efficient heat of the ring heating element around the cooking compartment. |

\* Type of heating used to determine the energy efficiency class in accordance with EN50304.

| Setting              | Use                                                                                                                                                              |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 🔥 Top/bottom heating | For cakes, bakes and lean joints of meat (e.g. beef or game) on one level. Heat is emitted evenly from the top and bottom.                                       |
| 🔥 Hot air grilling   | For roasting meat, poultry and whole fish. The grill element and the fan switch on and off alternately. The fan causes the hot air to circulate around the dish. |
| 🔥 Grill, large area  | For grilling steaks, sausages, bread and pieces of fish. The whole area below the grill heating element becomes hot.                                             |
| 🔥 Bottom heating     | For preserving, browning and final baking stage. The heat is emitted from below.                                                                                 |
| 🔥 Self-cleaning      | For automatic cleaning of the cooking compartment. The oven heats up until the dirt disintegrates.                                                               |
| 🔥 Oven light         | Switches on the oven light.                                                                                                                                      |

\* Type of heating used to determine the energy efficiency class in accordance with EN50304.

If you make settings, the 🔥 symbol lights up in the display. The oven light in the cooking compartment switches on.

**Note:** So that the heat is well distributed, the fan switches on briefly during the heating up phase when top or bottom heating is used.

### Temperature selector

Use the temperature selector to set the temperature, grill setting or cleaning setting.

| Setting                  | Meaning                                                                                                                                   |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| ● Off position           | The oven does not heat up.                                                                                                                |
| 50-300 Temperature range | The temperature in the cooking compartment in °C.<br>Exception: the maximum temperature for 🔥 3D hot air and 🔥 eco Hot air eco is 275 °C. |

| Setting    |                 | Meaning                                                                                                                                                                                                 |
|------------|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| I, II, III | Grill settings  | The grill settings for "Grill, large area"  .<br>I = setting 1, low<br>II = setting 2, medium<br>III = setting 3, high |
|            | Cleaning levels | The cleaning levels for self-cleaning  .<br>I = level 1, gentle<br>II = setting 2, medium<br>III = level 3, intensive  |

### Heating symbol

While the oven is heating up, the  symbol is lit in the display. When the optimum time for placing the dish in the oven has been reached and the oven is maintaining the temperature, the  symbol is no longer lit.

The  symbol never lights up during grilling or cleaning.


## Your accessories

The accessories supplied with your appliance are suitable for making many meals. Ensure that you always insert the accessories into the cooking compartment the right way round.

There is also a selection of optional accessories, with which you can improve on some of your favourite dishes, or simply to make working with your oven more convenient.


### Inserting accessories

You can insert the accessories into the cooking compartment at 5 different levels. Always insert them as far as they will go so that the accessories do not touch the door panel.

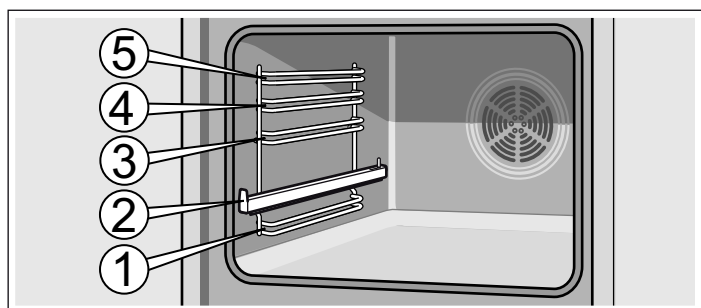

The accessories can be pulled out approximately halfway until they lock in place. This allows dishes to be removed easily.

When sliding the accessories into the cooking compartment, ensure that the indentation is at the back. They can only lock in place from this position.

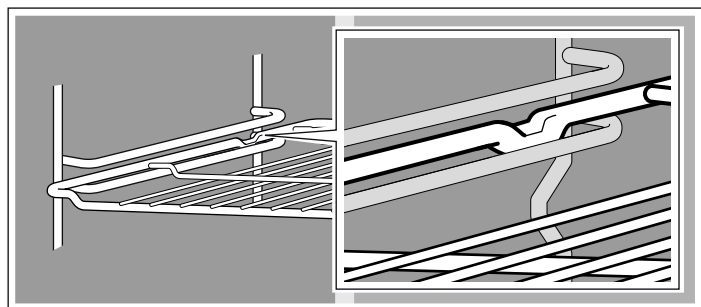

With the pull-out rails at level 2, you can pull the accessories out further.

Depending on the appliance equipment, the pull-out rails lock into place when they are pulled out fully. This makes it easier for you to place the accessories on top. To unlock, push the

## Cooking compartment

The oven light is located in the cooking compartment. A cooling fan protects the oven from overheating.

### Oven light

During operation, the oven light in the cooking compartment is on. When temperatures up to 60 °C are selected, and when self-cleaning is activated, the light switches off. This enables precise temperature regulation.

The  setting on the function selector can be used to switch on the light without heating the oven.

### Cooling fan

The cooling fan switches on and off as required. The hot air escapes above the door. Caution: do not cover the ventilation slots. Otherwise the oven will overheat.

So that the cooking compartment cools down more quickly after operation, the cooling fan continues to run for a certain period afterwards.

pull-out rails back into the cooking compartment with a certain amount of force.

**Note:** The accessories may deform when they become hot. Once they cool down again, they regain their original shape. This does not affect their operation.

 
You can buy accessories from the after-sales service, from specialist retailers or online. Please specify the HEZ number.



### Wire rack

For ovenware, cake tins, joints, grilled items and frozen meals.


Insert the wire rack with the open side facing the oven door and the curvature pointing downwards .



### Insert grid

For roasting.

 
Place the wire insert in the universal pan with the legs facing downwards. This ensures that dripping fat and meat juices are collected.



### Universal pan

For moist cakes, pastries, frozen meals and large roasts. It can also be used to catch dripping fat when you are grilling directly on the wire rack.

 Slide in the universal pan with the sloping edge facing the oven door.



### Accessory holder

Insert on the left and right. During self-cleaning, the universal pan, for example, can be left in for cleaning.

## Optional accessories

You can purchase optional accessories from the after-sales service or specialist retailers. You will find a comprehensive range of products for your oven in our brochures and on the Internet. The availability of optional accessories and the option for ordering these online varies from country to country. Please see the sales brochures for more details.

Not all optional accessories are suitable for every appliance. When purchasing, please always quote the exact designation (E-no.) of your appliance.

| Optional accessories                         | HEZ number | Use                                                                                                                                                                                                                                                                                                                                                                    | Suitable for self-cleaning |
|----------------------------------------------|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| Wire rack                                    | HEZ334000  | For ovenware, cake dishes, joints, grilled items and frozen meals.                                                                                                                                                                                                                                                                                                     | no                         |
| Enamel baking tray                           | HEZ331072  | For cakes and biscuits.<br>Push the baking tray into the oven with the sloping edge facing towards the oven door.                                                                                                                                                                                                                                                      | yes                        |
| universal pan                                | HEZ332073  | For moist cakes, baked items, frozen meals and large joints. It can also be used to catch dripping fat when grilling directly on the wire rack.<br>Slide the universal pan into the oven with the sloping edge facing the oven door.                                                                                                                                   | yes                        |
| Wire insert                                  | HEZ324000  | For roasting. Always place the wire rack in the universal pan. This ensures that dripping fat and meat juices are collected.                                                                                                                                                                                                                                           | no                         |
| Grill tray                                   | HEZ325070  | Use for grilling in place of the wire rack or as a splatter guard, so that the oven does not become as dirty as it otherwise might. Only use the grill tray in the universal pan.<br>Grilling on the grill tray: only use at shelf position 1, 2 and 3.<br>Using the grill tray as a splatter guard: insert the universal pan with the grill tray under the wire rack. | yes                        |
| Pizza tray                                   | HEZ317000  | Ideal for pizza, frozen products or large round cakes. You can use the pizza tray instead of the universal pan. Place the baking tray on the wire rack and proceed according to the details in the tables.                                                                                                                                                             | no                         |
| Bakestone                                    | HEZ327000  | The bakestone is perfect for preparing home-made bread, bread rolls and pizzas which require a crispy base. The bakestone must always be preheated to the recommended temperature.                                                                                                                                                                                     | yes                        |
| Profi extra-deep pan with wire insert        | HEZ333072  | Ideally suited for preparing large amounts.                                                                                                                                                                                                                                                                                                                            | yes                        |
| Lid for the Profi extra-deep pan             | HEZ333001  | The lid converts the Profi extra-deep pan into the Profi roasting dish.                                                                                                                                                                                                                                                                                                | no                         |
| Glass roasting dish                          | HEZ915001  | The glass roasting dish is suitable for stews and bakes that are cooked in the oven. It is ideally suited to automatic programmes or automatic roasting.                                                                                                                                                                                                               | no                         |
| Telescopic shelves                           |            |                                                                                                                                                                                                                                                                                                                                                                        |                            |
| 2-level                                      | HEZ338250  | The pull-out rails fitted positions 2 and 3 allow you to pull accessories out further without them tipping.                                                                                                                                                                                                                                                            | no                         |
| 3-level                                      | HEZ338352  | The pull-out rails fitted at positions 1, 2 and 3 allow you to pull accessories out further without them tipping.<br>The 3-level pull-out is not suitable for appliances that have a rotary spit.                                                                                                                                                                      | no                         |
| 3-level complete pull-out                    | HEZ338356  | The pull-out rails fitted at positions 1, 2 and 3 allow you to pull accessories out fully without them tipping.<br>The 3-level complete pull-out is not suitable for appliances that have a rotary spit.                                                                                                                                                               | no                         |
| 3-level complete pull-out with stop function | HEZ338357  | The pull-out rails fitted at positions 1, 2 and 3 allow you to pull accessories out fully without them tipping. The pull-out rails lock in position allowing accessories to be easily placed on top.<br>The 3-level complete pull-out with stop function is not suitable for appliances that have a rotary spit.                                                       | no                         |
| Steam filter                                 | HEZ329000  | You can retrofit this to your oven. The steam filter filters out grease particles from the exhaust air, thereby reducing odours.<br>Only for appliances with a 6, 7 or 8 as the second digit in the E-no. (e.g. HBA78B750)                                                                                                                                             | yes                        |
| System steamer                               | HEZ24D300  | For a gentler preparation of vegetables and fish.                                                                                                                                                                                                                                                                                                                      | no                         |



After-sales service products

You can obtain suitable care and cleaning agents and other accessories for your domestic appliances from the after-sales

service, specialist retailers or (in some countries) online via the e-Shop. Please specify the relevant product number.

|                                              |                    |                                                                                                                                                                                    |
|----------------------------------------------|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cleaning cloths for stainless-steel surfaces | Product no. 311134 | Reduces the build-up of dirt. Impregnated with a special oil for perfect maintenance of your appliance's stainless-steel surfaces.                                                 |
| Oven and grill cleaning gel                  | Product no. 463582 | For cleaning the cooking compartment. The gel is odourless.                                                                                                                        |
| Microfibre cloth with honeycomb structure    | Product no. 460770 | Especially suitable for cleaning delicate surfaces, such as glass, glass ceramic, stainless steel or aluminium. The microfibre cloth removes liquid and grease deposits in one go. |
| Door lock                                    | Product no. 612594 | To prevent children from opening the oven door. The locks on different types of appliance door are screwed in differently. See the information sheet supplied with the door lock.  |

Before using the oven for the first time

In this section, you can find out what you must do before using your oven to prepare food for the first time. First read the section on *Safety information*.

Setting the clock

After the appliance has been connected, the  symbol and four zeros light up in the display. Set the clock.

- 1. Press the  button.  
The time 12:00 is shown in the display.
  - 2. Use the + or - button to set the clock.
- After a few seconds, the time that has been set is adopted.

Heating up the oven

To remove the new cooker smell, heat up the oven when it is empty and closed. An hour of Top/bottom heating  at 240 °C is ideal for this purpose. Ensure that no packaging remnants have been left in the cooking compartment.

Keep the kitchen ventilated the whole time the oven is on.

- 1. Use the function selector to set Top/bottom heating .
- 2. Set the temperature selector to 240 °C.

After an hour, switch off the oven. To do so, turn the function selector to the off position.

Cleaning the accessories

Before you use the accessories for the first time, clean them thoroughly with hot soapy water and a soft dish cloth.


Setting the oven

There are various ways in which you can set your oven. Here we will explain how you can select the desired type of heating and temperature or grill setting. You can select the oven cooking time and end time for your dish. Please refer to the section on *Setting the time-setting options*.


Type of heating and temperature

Example in the picture:  Top/bottom heating at 190 °C.

- 1. The function selector is used to set the type of heating.

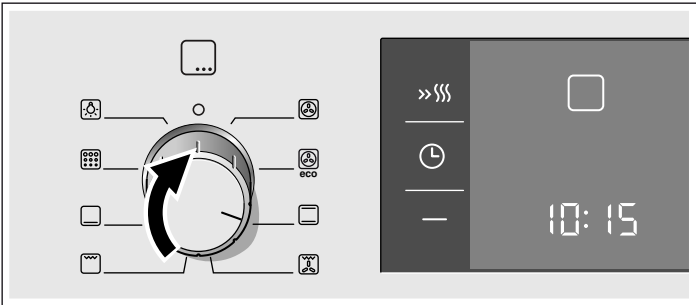

- 2. Set the temperature or grill setting using the temperature selector.

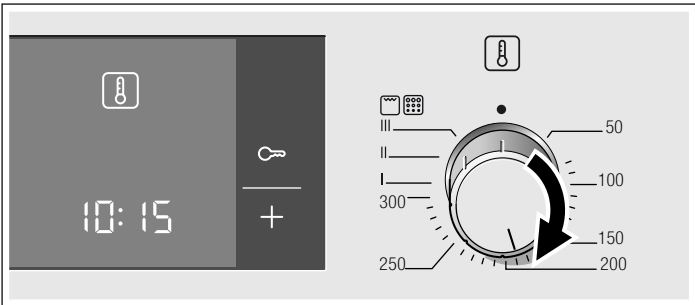

The oven begins to heat up.

Switching off the oven

Turn the function selector to the off position.

Changing the settings

The type of heating and temperature or grill setting can be changed at any time using their respective selectors.

## Rapid heating

With rapid heating, your oven reaches the temperature selected particularly quickly.

Use rapid heating when temperatures above 100 °C are selected. The following types of heating are suitable:

-  3D hot air
-  Top/bottom heating

To ensure an even cooking result, do not place your dish in the cooking compartment until rapid heating is complete.

1. Set the type of heating and temperature.

2. Press the »||| button.

The »||| symbol lights up in the display. The oven begins to heat up.

### The rapid heating process is complete

A signal sounds. The »||| symbol in the display goes out. Put your dish in the oven.

### Cancelling rapid heating

Press the »||| button. The »||| symbol in the display goes out.

## Setting the time-setting options

Your oven has various time-setting options. You can use the  button to call up the menu and switch between the individual functions. All the time symbols are lit when you can make settings. The brackets [ ] show you which time-setting option you have currently selected. A time-setting option which has already been set can be changed directly with the + or - button when the relevant time symbol is in brackets.

### Timer

You can use the timer as a kitchen timer. It runs independently of the oven. The timer has its own signal. In this way, you can tell whether it is the timer or a cooking time which has elapsed.

1. Press the  button once.

The time symbols light up in the display and the brackets are around .

2. Use the + or - button to set the timer duration.

Default value for +button = 10 minutes

Default value for -button = 5 minutes

After a few seconds, the time setting is adopted. The timer starts. The  symbol lights up in the display and the timer duration counts down. The other time symbols go out.

### The timer duration has elapsed

A signal sounds. 00:00 is shown in the display. Use the  button to switch off the timer.

### Changing the timer duration

Use the + or - button to change the timer duration. After a few seconds, the change is adopted.

### Cancelling the timer duration

Use the - button to reset the timer duration to 00:00. The change will be adopted after a few seconds. The timer is switched off.

### Checking the time settings

If several time-setting options are set, the relevant symbols are illuminated on the display. The symbol for the time-setting option that is visible in the display is shown in brackets.

To call up the  timer,  cooking time,  end time or  clock, press the  button repeatedly until the brackets are around the relevant symbol. The display shows the value for a few seconds.

### Cooking time

The cooking time for your dish can be set on the oven. When the cooking time has elapsed, the oven switches itself off automatically. This means that you do not have to interrupt other work to switch off the oven. The cooking time cannot be accidentally exceeded.


Example in the picture: cooking time 45 minutes.

1. Use the function selector to set the type of heating.

2. Set the temperature or grill setting using the temperature selector.

3. Press the  button twice.

00:00 is shown in the display. The time symbols light up and the brackets are around .

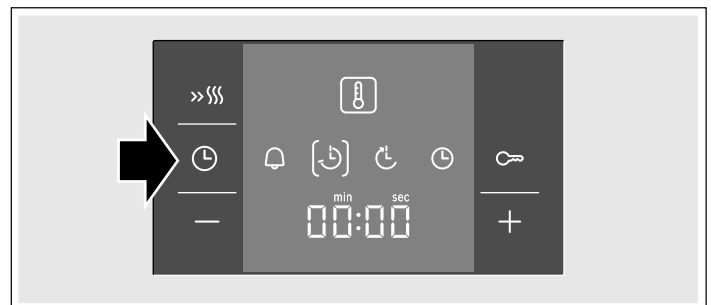

4. Use the + or - button to set the cooking time.

Default value for + button = 30 minutes

Default value for - button = 10 minutes



The oven will start up after a few seconds. The cooking time counts down in the display and the  symbol lights up. The other time symbols go out.

### The cooking time has elapsed

A signal sounds. The oven stops heating. 00:00 is shown in the display. Press the  button. You can set a new cooking time using the + or - button. Or press the  button twice and turn the function selector to the off position. The oven switches off.

### Changing the cooking time

Use the + or - button to change the cooking time. After a few seconds, the change is adopted. If the timer has been set, press the  button beforehand.

### Cancelling the cooking time

Use the - button to reset the cooking time to 00:00. After a few seconds, the change is adopted. The cooking time is cancelled. If the timer has been set, press the  button beforehand.



# Changing the basic settings

Your oven has various basic settings. These settings can be customised to suit your requirements.

| Basic setting                                                               | Selection 0            | Selection 1        | Selection 2        | Selection 3        |
|-----------------------------------------------------------------------------|------------------------|--------------------|--------------------|--------------------|
| <b>c0</b> Brightness of the display lighting                                | -                      | night              | medium             | day*               |
| <b>c1</b> Signal duration upon completion of a cooking time or timer period | -                      | approx. 10 seconds | approx. 2 minutes* | approx. 5 minutes  |
| <b>c2</b> Clock display                                                     | only when in operation | always*            | -                  | -                  |
| <b>c3</b> Waiting time until a setting is applied                           | -                      | approx. 2 seconds  | approx. 5 seconds* | approx. 10 seconds |
| <b>c5</b> Telescopic shelves retrofitted                                    | no                     | yes*               | -                  | -                  |
| <b>c6</b> Reset all values to the factory settings                          | no*                    | yes                | -                  | -                  |

\* Factory setting

The oven must be switched off.

1. Press and hold the  button for approx. 4 seconds.  
The current basic setting for signal duration is shown in the display, e.g. c1 2 for selection 2.
2. Use the **+** or **-** button to change the basic setting.

3. Confirm by pressing the  button.

The next basic setting appears in the display. You can scroll through all levels with the  button and change the setting with the **+** or **-** button.

4. To finish, press and hold the  button for approx. 4 seconds. All basic settings are applied.

You may change the basic settings at any time.

## Automatic switch-off

If you do not change the settings on your appliance for several hours, automatic switch-off is activated. The oven stops heating. The point at which this occurs depends on the temperature or grill setting that has been set.

### Automatic switch-off is activated

A signal sounds. F8 appears in the display. The oven stops heating.

Turn the function selector to the off position. The oven switches off.

### Overriding automatic switch-off

So that automatic switch-off is not activated when it is not wanted, you can set a time period. The oven will heat until this period has expired.

## Self-cleaning

During self-cleaning, the oven heats up to approx. 500 °C. This burns off residues from roasting, grilling or baking and you only need to wipe the ashes from the cooking compartment.

You can choose from three cleaning levels.

| Level | Degree of cleaning | Cooking time               |
|-------|--------------------|----------------------------|
| 1     | gentle             | approx. 1 hour, 15 minutes |
| 2     | medium             | approx. 1 hour, 30 minutes |
| 3     | intensive          | approx. 2 hours            |

The heavier and older the dirt, the higher the cleaning level should be. It is sufficient to clean the cooking compartment every two to three months. If required, you can clean the oven more frequently than this. A cleaning cycle requires only approx. 2.5 - 4.7 kilowatt hours.

### Important notes

For your safety, the oven door locks automatically. The oven door cannot be opened again until the cooking compartment has cooled slightly and the padlock symbol for the locking mechanism disappears.

The oven light in the cooking compartment does not come on during Self-cleaning.

#### Risk of burns!

- The cooking compartment will become very hot during the Self-cleaning cycle. Never open the appliance door or move the locking latch by hand. Allow the appliance to cool down. Keep children at a safe distance.
- The appliance will become very hot on the outside during the Self-cleaning cycle. Never touch the appliance door. Allow the appliance to cool down. Keep children at a safe distance.

#### Risk of fire!

The appliance will become very hot on the outside during the Self-cleaning cycle. Never hang flammable objects, e.g. tea towels, on the door handle. Do not place anything against the front of the appliance.

## Before self-cleaning

The cooking compartment must be empty. Remove accessories, ovenware and shelf rails from the cooking compartment. Please see the *Care and cleaning* section for how to unhook the rails.

Clean the oven door and the along the edges of the cooking compartment in the area around the seal. Do not clean the seal.


### Risk of fire!

Loose food residues, grease and meat juices may catch fire. Wipe the cooking compartment and the accessories that are to be cleaned at the same time with a damp cloth.

### Cleaning accessories at the same time

The shelves are not suitable for the self-cleaning programme. Take them out of the cooking compartment. If you wish to clean accessories at the same time, use the accessory holders.

Insert the left and right-hand accessory holders.

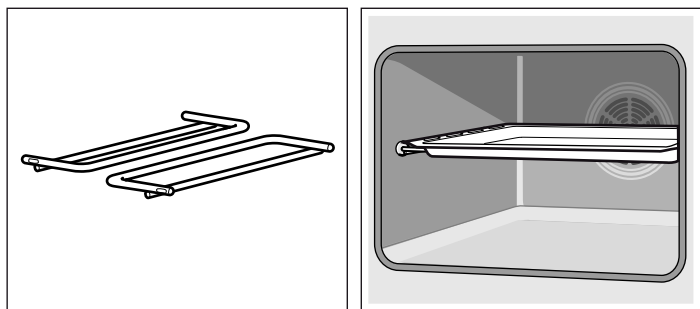

You can use the holder to clean enamelled accessories without a non-stick coating at the same time, e.g. the universal pan. Always only clean one accessory at a time.

Non-enamelled accessories, e.g. the wire rack, are not suitable for the self-cleaning programme. Remove them from the cooking compartment.

### Risk of serious damage to health.!

Never clean non-stick baking trays and baking tins at the same time using the self-cleaning programme. High temperatures damage the non-stick coating and poisonous gases are released.

**Note:** For details on which accessories are suitable for the self-cleaning programme, please see the optional accessory table at the start of these instructions.

## Care and cleaning

With good care and cleaning, your oven will remain clean and fully-functioning for a long time to come. Here we will explain how to maintain and clean your oven correctly.

### Notes

- Slight differences in the colours on the front of the oven are caused by the use of different materials, such as glass, plastic and metal.
- Shadows on the door panel which look like streaks, are caused by reflections made by the oven light.
- Enamel is baked on at very high temperatures. This can cause some slight colour variations. This is normal and does not affect their function. The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough. This will not impair the anti-corrosion protection.

## Making settings

When you have selected a cleaning level, set the oven.

1. Set the function selector to  Self-cleaning.
2. Use the temperature selector to set the cleaning level.

The display shows the time at which the self-cleaning programme will end and the  symbol is in brackets. Self-cleaning starts after a few seconds. You will see the time counting down and the  symbol is in brackets. The  symbol goes out.

The oven door locks shortly after the program starts. The  symbol lights up in the display. The oven door cannot be opened again until the  symbol goes out.

### Self-cleaning has finished

00:00 is shown in the display. The oven stops heating. Turn the function selector to the off position. The oven switches off. The oven door cannot be opened again until the  symbol goes out in the display.

### Changing the cleaning level

Once the programme has started, you can no longer change the cleaning level.

### Cancelling the self-cleaning programme

Turn the function selector to the off position. The oven switches off. The oven door cannot be opened again until the  symbol goes out in the display.

### Setting a later end time

The end time of the self-cleaning programme can be delayed. In this way, self-cleaning can run overnight, for example, so that you can use your oven during the day.

Make settings as described in steps 1 and 2. Before self-cleaning starts, use the **+** or **-** button to set a later end time.

The oven switches to standby. The display shows the time at which self-cleaning will end and the  symbol is in brackets. When self-cleaning starts, you can see the time counting down in the display and the  symbol is in brackets. The  symbol goes out.

## After self-cleaning

Once the cooking compartment has cooled down, wipe out the ash that has been left behind in the cooking compartment with a damp cloth.

## Cleaning agents

To ensure that the different surfaces are not damaged by using the wrong type of cleaning agent, observe the information in the table. Do not use

- harsh or abrasive cleaning agents,
- cleaning agents with a high concentration of alcohol,
- hard scouring pads or sponges,
- high-pressure cleaners or steam cleaners.

Wash new sponge cloths thoroughly before use.




| Area                           | Cleaning agents                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control panel                  | Hot soapy water:<br>Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or glass scrapers.                                                                                                                                                                                                                                                                                                        |
| Stainless steel                | Hot soapy water:<br>Clean with a dish cloth and dry with a soft cloth. Remove traces of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues.<br><br>Special stainless steel cleaning products suitable for hot surfaces are available from our after-sales service or from specialist retailers. Apply a very thin layer of the cleaning product with a soft cloth. |
| Door panels                    | Glass cleaner:<br>Clean with a soft cloth. Do not use a glass scraper.                                                                                                                                                                                                                                                                                                                                                     |
| Door cover                     | Stainless steel cleaning agents (available from our after-sales service or from specialist retailers):<br>Please observe the manufacturer's instructions.                                                                                                                                                                                                                                                                  |
| Cooking compartment            | Hot soapy water or a vinegar solution:<br>Clean with a dish cloth.<br><br>If there are heavy deposits of dirt, use a stainless steel scouring pad or oven cleaner. Only use when the cooking compartment is cold.<br><br>It is best to use the self-cleaning function. Observe the instructions in the <i>Self-cleaning</i> section when doing so.                                                                         |
| Glass cover for the oven light | Hot soapy water:<br>Clean with a dish cloth.                                                                                                                                                                                                                                                                                                                                                                               |
| Rails                          | Hot soapy water:<br>Soak and clean with a dish cloth or brush.                                                                                                                                                                                                                                                                                                                                                             |
| Telescopic shelves             | Hot soapy water:<br>Clean with a dish cloth or a brush.<br><br>Do not remove the lubricant while the pull-out rails are pulled out – it is best to clean them when they are inserted. Do not soak, clean in the dishwasher, or leave in the oven during self-cleaning. The rails may be damaged causing them to jam.                                                                                                       |
| Accessories                    | Hot soapy water:<br>Soak and clean with a dish cloth or brush.                                                                                                                                                                                                                                                                                                                                                             |

## Detaching and refitting the rails

The rails can be removed for cleaning. The oven must have cooled down.

### Detaching the rails


1. Lift up the front of the rail
2. and unhook it (figure A).
3. Then pull the whole rail forward
4. and remove it (Fig. B).

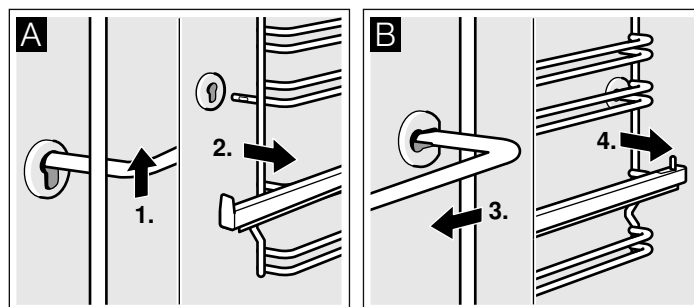

Clean the rails with cleaning agent and a sponge. For stubborn deposits of dirt, use a brush.

### Refitting the rails

1. First insert the rail into the rear socket, press it to the back slightly (figure A),
2. and then hook it into the front socket (figure B).

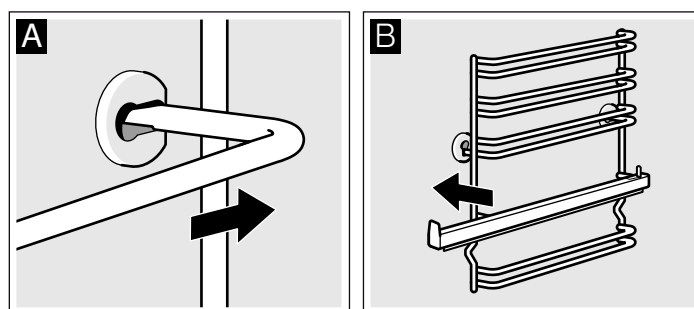


The rails only fit on the right or the left side. Ensure that, as shown in figure B, levels 1 and 2 are below and levels 3, 4 and 5 are above. The pull-out rail must be pulled out forwards.

## Detaching and attaching the oven door

For cleaning purposes and to remove the door panels, you can detach the oven door.

The oven door hinges each have a locking lever. When the locking levers are closed (figure A), the oven door is secured in place. It cannot be detached. When the locking levers are open in order to detach the oven door (Fig. B), the hinges are locked. They cannot snap shut.

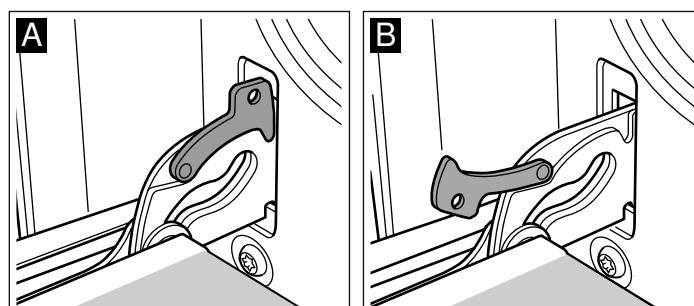


### ⚠ Risk of injury!

Whenever the hinges are not locked, they snap shut with great force. Ensure that the locking levers are always fully closed or, when detaching the oven door, fully open.

### Detaching the door


1. Open the oven door fully.
2. Fold up the two locking levers on the left and right (figure A).
3. Close the oven door as far as the limit stop. With both hands, grip the door on the left and right-hand sides. Close the door a little further and pull it out (figure B).

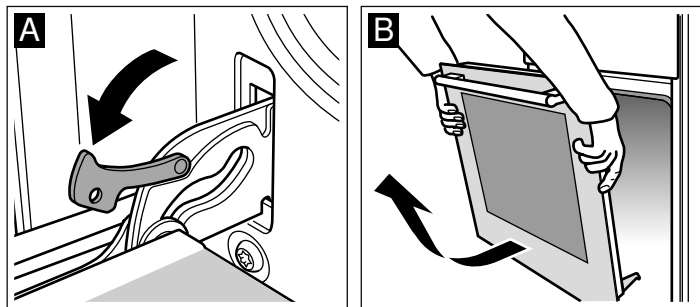


### Attaching the door

Reattach the oven door in the reverse sequence to removal.

1. When attaching the oven door, ensure that both hinges are inserted straight into the opening (figure A).
2. The notch on the hinge must engage on both sides (figure B).

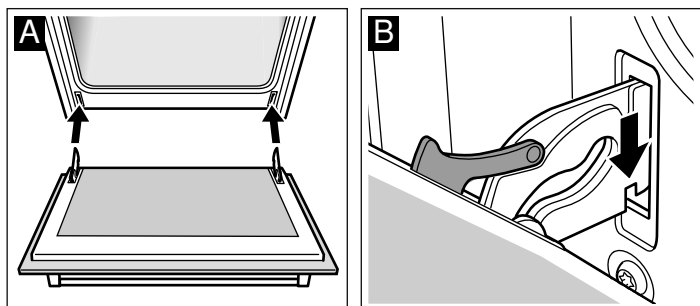

3. Fold back both locking levers (figure C). Close the oven door.

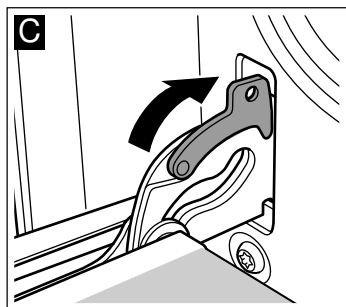

### ⚠ Risk of injury!


If the oven door falls out accidentally or a hinge snaps shut, do not reach into the hinge. Call the after-sales service.

### Removing the door cover

The oven door cover can become discoloured. To carry out thorough cleaning, you can remove the cover.

1. Open the oven door fully.
2. Unscrew the oven door cover. To do this, undo the left and right screws (figure A).

3. Remove the cover (figure B).

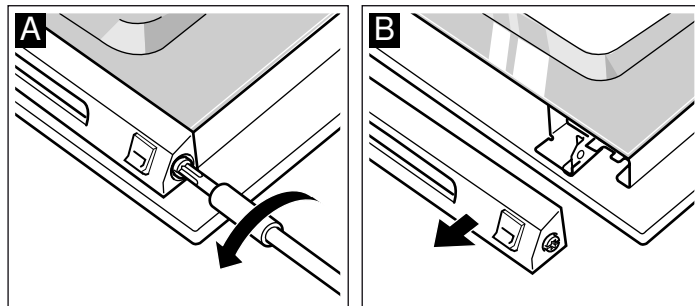

Make sure that the oven door is not closed while the cover is removed. The inner panel may be damaged.

Clean the cover with a stainless-steel cleaning agent.

4. Replace the cover and secure it in position.
5. Close the oven door.


### Removing and installing the door panels

To facilitate cleaning, you can remove the glass panels from the oven door.


When removing the inner panels, pay attention to the sequence in which the panels are removed. In order to reassemble the panels in the correct sequence, use the numbers that appear on each panel.

#### Removal

1. Detach the oven door and lay it on a cloth with the handle facing down.
2. Unscrew the cover at the top of the oven door. To do this, unscrew the left and right screws (fig. A).
3. Lift the top panel up and pull it out and remove the two small seals (fig. B).

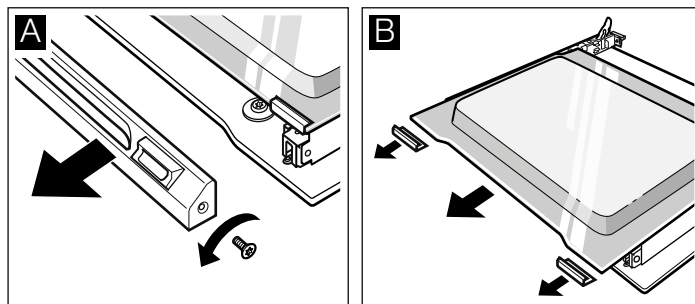


4. Unscrew the retaining clips on the right and left. Lift the panel and remove the clips from the panel (fig. C).
5. Remove the seal from the bottom of the panel (fig. D). Pull the seal and remove it up and out. Pull out the panel.

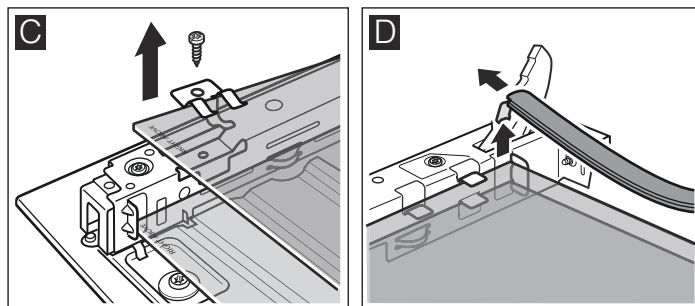

6. Pull the lower panel at an angle, upwards and out.

7. Do NOT unscrew the left and right-hand screws from the sheet metal part (fig. E).

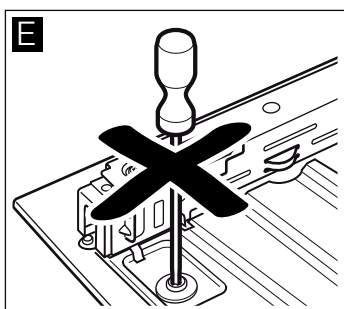

Clean the panels with glass cleaner and a soft cloth.



### **⚠ Risk of injury!**

Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

### **Installation**



During installation, make sure that the lettering "top right" is upside down at the bottom left of both panels.

1. Insert the lower panel at an angle towards the back (fig. A).
2. Slide in the middle panel (fig. B).

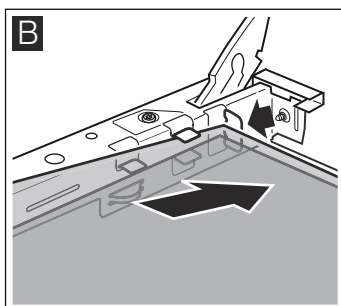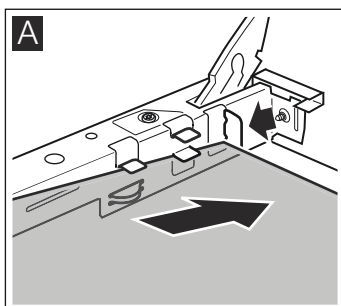



3. Stick the retaining clips onto the right and left-hand side of the panel, aligning them so that the retaining carriers are over the screw holes, and then screw into place (fig. C).

4. Hook the seal in to the bottom of the panel again (fig. D).

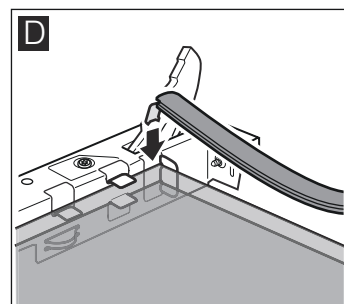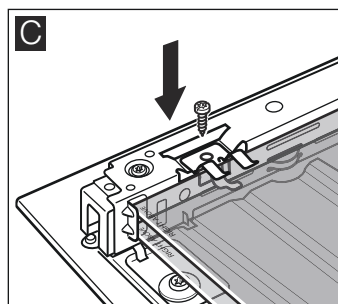

5. Insert the uppermost panel at an angle to the back into the brackets. Take care not to push the seal to the back (fig. E).

6. Insert the two small seals on the left and right of the panel again (fig. F).

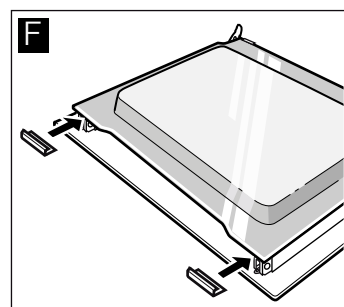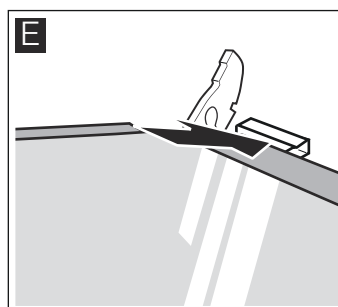

7. Put the cover back in place and screw it on.

8. Attach the oven door.

**Do not use the oven again until the panels have been correctly installed.**

## **Troubleshooting**

Malfunctions often have simple explanations. Refer to the table before calling the after-sales service as you may be able to remedy the fault yourself.

### **Malfunction table**

If a dish doesn't turn out as well as you had hoped, refer to the section *Tested for you in our cooking studio*, where you will find plenty of cooking tips and tricks.

| Problem                              | Possible cause                    | Remedy/information                                                           |
|--------------------------------------|-----------------------------------|------------------------------------------------------------------------------|
| The oven does not work.              | The circuit breaker is defective. | Look in the fuse box and check that the circuit breaker is in working order. |
|                                      | Power cut                         | Check whether the kitchen light or other kitchen appliances are working.     |
| ⌚ and zeros light up in the display. | Power cut                         | Reset the clock.                                                             |
| The oven does not heat up.           | There is dust on the contacts.    | Turn the control knobs back and forth several times.                         |

| Problem                                                                                                                                                   | Possible cause                                                                                                                  | Remedy/information                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The oven door cannot be opened. The  symbol lights up in the display. | The oven door is locked by  self-cleaning. | Wait until the oven has cooled down and the  symbol goes out.                                                                                                                                                                 |
| The oven does not heat up. The colon in the display flashes.                                                                                              | The oven is in demonstration mode.                                                                                              | Switch off the circuit breaker in the fuse box and switch it on again after approximately 20 seconds. Now, within approx. 2 minutes, press and hold the  button for approx. 4 seconds until the colon lights up continuously. |
| F8 appears in the display.                                                                                                                                | Automatic switch-off has been activated.                                                                                        | Turn the function selector to the off position.                                                                                                                                                                                                                                                                    |

## Error messages

If an error message with **E** appears, press the **⏸** button. Then reset the clock. If the error message appears again, call the after-sales service.

You can take remedial action yourself if the following error messages are displayed.

| Error message | Possible cause                                          | Remedy/information                                                                                                                |
|---------------|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <b>E011</b>   | A button was depressed for too long or is covered up.   | Press all buttons individually. Check whether any buttons are jammed, covered up or soiled.                                       |
| <b>E115</b>   | The temperature in the cooking compartment is too high. | The oven door locks and heating is suspended. Wait until the oven has cooled down. Press the <b>⏸</b> button and reset the clock. |

### Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers.


## Replacing the bulb in the oven ceiling light

If the bulb in the oven light fails, it must be replaced. Heat-resistant, 40 watt spare bulbs can be obtained from our after-sales service or a specialist retailer. Only use these bulbs.

### Risk of electric shock!

Switch off the circuit breaker in the fuse box.

1. Place a tea towel in the oven when it is cold to prevent damage.
2. Remove the glass cover. To do this, press back the metal tabs with your thumb (Fig. A).
3. Unscrew the bulb and replace it with one of the same type (Fig. B).

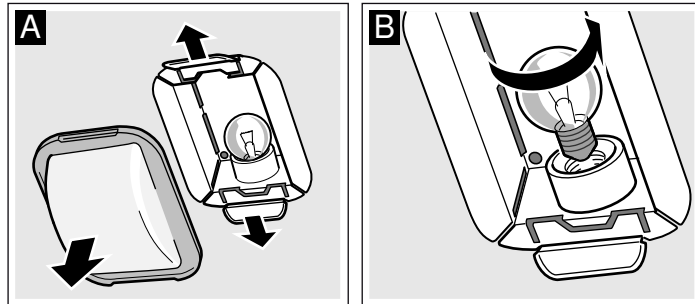

4. Refit the glass cover. When doing this, insert it on one side and press firmly on the other side. The glass cover will click into place.
5. Remove the tea towel and switch on the circuit breaker.

## Glass cover

You must replace a damaged glass cover. Suitable glass covers may be obtained from the after-sales service. Please specify the E number and FD number of your appliance.

## After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find the right solution in order to avoid unnecessary visits from a service technician.

### E number and FD number

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate containing these numbers can be found on the right-hand side of the oven door. You can make a note of the numbers of your appliance and the telephone number of the after-sales service in the space below to save time should it be required.

|       |        |
|-------|--------|
| E no. | FD no. |
| <hr/> | <hr/>  |

### After-sales service

Please note that there will be a fee for a visit by a service technician in the event of a malfunction, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

### To book an engineer visit and product advice

- GB** 0344 892 8979  
Calls charged at local or mobile rate.
- IE** 01450 2655  
0.03 € per minute at peak. Off peak 0.0088 € per minute.

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.

# Energy and the environment

Your new appliance is particularly energy-efficient. You will find information here about the energy-optimised "Hot air eco" heating type. You will also find tips on how to save even more energy with your appliance and how to dispose of it in an environmentally friendly way.

## Hot air eco heating type

With the energy-efficient "Hot air eco" heating type, you can prepare many dishes on one level. The fan distributes the energy-optimised heat from the ring heating element in the back wall evenly around the cooking compartment. You can achieve successful baking, roasting and cooking without having to preheat the oven.

### Notes

- Place the items in the empty cooking compartment before it has heated up. Otherwise, energy optimisation will not have any effect.
- Only open the oven door during cooking when required.

### Table

The table contains a selection of dishes best suited to Hot air eco. It provides details on suitable temperatures and cooking times. You can see which accessories and shelf positions are suitable.

The temperature and cooking time depend on the amount, composition and quality of the food. This is why temperature ranges are given in the table. You should try the lower temperature first, since a lower temperature results in more even browning. You can increase the temperature next time if necessary.

Place the baking tins and cookware in the centre of the wire rack. If you are grilling food directly on the wire rack, the universal pan should also be inserted at level 1. Fat and juices are caught in the universal pan, which keeps the oven cleaner.

| Dishes using Hot air eco  | Accessories         | Level | Temperature in °C | Cooking time in minutes |
|------------------------------------------------------------------------------------------------------------|---------------------|-------|-------------------|-------------------------|
| <b>Cakes and pastries</b>                                                                                  |                     |       |                   |                         |
| Sponge on the baking tray with dry topping                                                                 | Baking tray         | 3     | 170-190           | 25-35                   |
| Dough in tins                                                                                              | Loaf tin            | 2     | 160-180           | 50-60                   |
| Flan cake, sponge mixture                                                                                  | Flan-based cake tin | 2     | 160-180           | 20-30                   |
| Delicate fruit flan, sponge                                                                                | Springform/ring tin | 2     | 160-180           | 50-60                   |
| Yeast dough on the baking tray with dry topping                                                            | Baking tray         | 3     | 170-190           | 25-35                   |
| Shortcrust pastry on the baking tray with dry topping                                                      | Baking tray         | 3     | 180-200           | 20-30                   |
| Swiss roll                                                                                                 | Baking tray         | 3     | 170-190           | 15-25                   |
| Sponge base, 2 eggs                                                                                        | Flan-based cake tin | 2     | 150-170           | 20-30                   |
| Sponge flan, 6 eggs                                                                                        | Springform cake tin | 2     | 150-170           | 40-50                   |
| Puff pastry                                                                                                | Baking tray         | 3     | 180-200           | 20-30                   |
| Biscuits                                                                                                   | Baking tray         | 3     | 130-150           | 15-25                   |
| Whirls                                                                                                     | Baking tray         | 3     | 140-150           | 30-45                   |
| Choux pastry                                                                                               | Baking tray         | 3     | 210-230           | 35-45                   |
| Bread rolls, rye flour                                                                                     | Baking tray         | 3     | 200-220           | 20-30                   |
| <b>Bakes</b>                                                                                               |                     |       |                   |                         |
| Potato gratin                                                                                              | Ovenproof dish      | 2     | 160-180           | 60-80                   |
| Lasagne                                                                                                    | Ovenproof dish      | 2     | 180-200           | 40-50                   |
| <b>Frozen products</b>                                                                                     |                     |       |                   |                         |
| Pizza, thin base                                                                                           | Universal pan       | 3     | 190-210           | 15-25                   |
| Pizza, deep-pan                                                                                            | Universal pan       | 2     | 180-200           | 20-30                   |
| Chips                                                                                                      | Universal pan       | 3     | 200-220           | 20-30                   |
| Chicken wings                                                                                              | Universal pan       | 3     | 220-240           | 20-30                   |
| Fish fingers                                                                                               | Universal pan       | 3     | 220-240           | 10-20                   |
| Crispy bread rolls                                                                                         | Universal pan       | 3     | 180-200           | 10-15                   |
| <b>Meat</b>                                                                                                |                     |       |                   |                         |
| Pot-roasted beef, 1.5 kg                                                                                   | Ovenware, covered   | 2     | 190-210           | 130-150                 |
| Joint of pork, neck, 1 kg                                                                                  | Ovenware, uncovered | 2     | 190-210           | 110-130                 |
| Joint of veal, topside, 1.5 kg                                                                             | Ovenware, uncovered | 2     | 190-210           | 110-130                 |
| <b>Fish</b>                                                                                                |                     |       |                   |                         |
| Sea bream, x 2, 750 g each                                                                                 | Universal pan       | 2     | 170-190           | 50-60                   |
| Sea bream with salted, crisped skin, 900 g                                                                 | Universal pan       | 2     | 170-190           | 60-70                   |
| Pike, 1000 g                                                                                               | Universal pan       | 2     | 170-190           | 60-70                   |
| Trout, x2, 500 g each                                                                                      | Universal pan       | 2     | 170-190           | 45-55                   |
| Fish fillets, 100 g each                                                                                   | Ovenware, covered   | 2+1   | 190-210           | 30-40                   |



## Saving energy

- Only preheat the oven if this is specified in the recipe or in the operating instruction tables.
- Use dark, black lacquered or enamelled baking tins. They absorb the heat particularly well.
- Open the oven door as infrequently as possible while you are cooking, baking or roasting.
- It is best to bake several cakes one after the other. The oven is still warm. This reduces the baking time for the second cake. You can also place two loaf tins next to each other.
- For longer cooking times, you can switch the oven off 10 minutes before the end of the cooking time and use the residual heat to finish cooking.

## Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## Tested for you in our cooking studio

Here you will find a selection of dishes and the ideal settings for them. We will show you which type of heating and which temperature are best suited for your dish. You can find information about suitable accessories and the height at which they should be inserted. There are also tips about cookware and preparation methods.

### Notes

- Whether you should preheat or place food into a cold oven, is indicated in the respective tables.  
Do not line the accessories with greaseproof paper until after they have been preheated.
- The times specified in the tables are guidelines only. They will depend on the quality and composition of the food.
- Use the accessories supplied. Additional accessories may be obtained as special accessories from specialist retailers or from the after-sales service.  
Before using the oven, remove any unnecessary accessories and ovenware from the cooking compartment.
- Always use oven gloves when taking hot accessories or ovenware out of the cooking compartment.

## Cakes and pastries

### Baking on one level

When baking cakes, the best results can be achieved using  Top/bottom heating.

When baking with  3D hot air, use the following shelf heights for the accessory:

- Cakes in tins: level 2
- Cakes on trays: level 3

### Baking on two or more levels

Use  3D hot air.

Baking on 2 levels

- Wire rack or universal pan at shelf position 3
- Wire rack at shelf position 1.

Baking on 3 levels:

- Wire rack at shelf position 5
- Universal pan at shelf position 3
- Wire rack at shelf position 1.


Baking trays that are placed in the oven at the same time will not necessarily be ready at the same time.

The tables show numerous suggestions for your dishes.

If you have 2 small, round cake tins, place them on one level next to each other on the wire rack.

If you have 4 small, round cake tins, place 2 next to each other on each wire rack. Slide in the wire racks one above the other.

If you are baking with 3 loaf tins at the same time, place these on the wire racks as indicated in the picture.

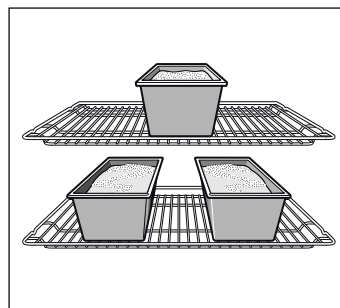

### Baking tins

It is best to use dark-coloured metal baking tins.

Baking times are increased when light-coloured baking tins made of thin metal or glass dishes are used, and cakes do not brown so evenly.

If you wish to use silicone baking tins, use the information and recipes provided by the manufacturer as a guide. Silicone baking tins are often smaller than normal tins. The amount of mixture and recipe instructions may differ.

### Tables

The tables show the ideal type of heating for the various cakes and pastries. The temperature and baking time depend on the amount and composition of the mixture. This is why temperature ranges are given in the tables. You should try the lower temperature first, since a lower temperature results in more even browning. You can increase the temperature next time if necessary.

Additional information can be found in the *Baking tips* section following the tables.

| Food                  | Dish                                                   | Shelf position | Type of heating                                                                          | Temperature in °C | Time in minutes |
|-----------------------|--------------------------------------------------------|----------------|------------------------------------------------------------------------------------------|-------------------|-----------------|
| Victoria sandwich     | Wire rack + 2 x Ø 20 cm tins                           | 2              |       | 170-180           | 20-25           |
|                       | Wire rack + 2 x Ø 20 cm tins                           | 3              |  *    | 160-180           | 20-25           |
| Light fruit cake      | Wire rack + high Ø 20 cm tin                           | 2              |       | 160-170           | 80-90           |
|                       | Wire rack + high Ø 20 cm tin                           | 2              |  *    | 150-160           | 80-90           |
| Rich fruit cake       | Wire rack + Ø 23 cm high round tin or 20 cm square tin | 2              |  *    | 130-140           | 180-190         |
| Fruit crumble         | Wire rack + flat glass dish                            | 2              |       | 180-190           | 35-45           |
|                       | Wire rack + flat glass dish                            | 3              |  *    | 160-170           | 35-45           |
| Sponge cake (fatless) | Wire rack + baking tin (dark coated)                   | 2              |  *    | 170-180           | 30-35           |
|                       | Wire rack + baking tin (dark coated)                   | 2              |  *    | 160-170           | 35-40           |
| Swiss roll            | Universal pan + swiss roll tin                         | 2              |  *    | 200-210           | 10-12           |
|                       | Wire rack + swiss roll tin                             | 3              |  *    | 180-190           | 10-12           |
| Tart                  | Wire rack + Ø 20 cm plate or pie tin                   | 1              |       | 200-210           | 50-60           |
|                       | Wire rack + Ø 20 cm plate or pie tin                   | 3              |  *    | 190-200           | 55-60           |
| Quiche                | Wire rack + quiche tin (dark coated)                   | 1              |       | 190-200           | 45-50           |
|                       | Wire rack + quiche tin (dark coated)                   | 3              |  *    | 180-190           | 40-45           |
| (White) Bread         | Wire rack + loaf tin (1 x 900 g or 2 x 450 g)          | 1              |       | 230-240           | 25-35           |
|                       | Wire rack + loaf tin (1 x 900 g or 2 x 450 g)          | 3              |  *    | 190-200           | 25-30           |
| Scones                | Universal pan                                          | 3              |       | 200-210           | 15-20           |
|                       | Universal pan                                          | 3              |  *    | 180-190           | 15-20           |
| Biscuits              | Universal pan                                          | 3              |       | 170-180           | 10-15           |
|                       | Universal pan                                          | 3              |  *  | 160-170           | 10-15           |
| Small cakes           | Wire rack + 12-cup tin                                 | 3              |  *  | 160-170           | 15-20           |
|                       | Wire rack + 12-cup tin                                 | 3              |  *  | 150-160           | 15-20           |
| Jam tarts             | Wire rack + 12-cup tin                                 | 2              |     | 200-210           | 15-20           |
|                       | Wire rack + 12-cup tin                                 | 2              |  *  | 180-190           | 15-20           |
| Meringues             | Universal pan                                          | 3              |  *  | 80-90             | 100-150         |
| Pavlova               | Universal pan                                          | 3              |  ** | 150** + 100       | 100-150         |
| Soufflé               | Wire rack + 1,2 l soufflé dish                         | 2              |     | 170-180           | 40-50           |
|                       | Wire rack + 1,2 l soufflé dish                         | 2              |  *  | 160-170           | 40-50           |
| Pie                   | Wire rack + pie dish                                   | 1              |     | 190-210           | 45-55           |
|                       | Wire rack + pie dish                                   | 3              |  *  | 180-190           | 45-50           |
| Yorkshire pudding     | Universal pan + 12-cup tin                             | 2              |  *  | 210-220           | 20-25           |
|                       | Universal pan + 12-cup tin                             | 3              |  *  | 200-210           | 20-25           |
| Jacket potatoes       | Universal pan                                          | 3              |  *  | 160-170           | 60-70           |
| Pizza (homemade)      | Universal pan                                          | 2              |     | 200-220           | 25-35           |
|                       | Universal pan                                          | 3              |  *  | 210-220           | 15-20           |

\* Preheat.

\*\* Preheat at higher temperature, then reduce and insert food.

| Food                        | Dish                                           | Shelf position | Type of heating                                                                         | Temperature in °C | Time in minutes |
|-----------------------------|------------------------------------------------|----------------|-----------------------------------------------------------------------------------------|-------------------|-----------------|
| Victoria sandwich, 2 levels | 2 wire racks + 4 x Ø 20 cm tins                | 3+1            |  * | 170-180           | 25-30           |
| Scones, 2 levels            | Universal pan + wire rack with baking tray     | 3+1            |  * | 170-180           | 20-25           |
| Biscuits, 2 levels          | Universal pan + wire rack with baking tray     | 3+1            |  * | 150-160           | 20-25           |
| Biscuits, 3 levels          | Universal pan + 2 wire racks with baking trays | 5+3+1          |  * | 140-150           | 25-35           |
| Small cakes, 2 levels       | 2 wire racks + 2 x 12-cup tins                 | 3+1            |  * | 150-160           | 25-30           |
| Meringues, 2 levels         | Universal pan + wire rack with baking tray     | 3+1            |  * | 80-90             | 100-150         |

\* Preheat.

| Food                       | Dish                                              | Shelf position | Type of heating | Temperature in °C | Time in minutes |
|----------------------------|---------------------------------------------------|----------------|-----------------|-------------------|-----------------|
| Jacket potatoes, 2 levels  | 2 wire racks                                      | 3+1            | *               | 170-180           | 60-75           |
| (White) Bread, 2 levels    | 2 wire racks + loaf tins (2 x 900 g or 4 x 450 g) | 3+1            | *               | 180-190           | 35-40           |
| Pizza (homemade), 2 levels | Universal pan + wire rack with baking tray        | 3+1            | *               | 170-180           | 40-50           |

\* Preheat.

## Baking tips

|                                                                                                                     |                                                                                                                                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| You wish to bake according to your own recipe.                                                                      | Use similar items in the baking tables as a guide.                                                                                                                                                                                                                                  |
| How to establish whether sponge cake is baked through.                                                              | Approximately 10 minutes before the end of the baking time specified in the recipe, stick a cocktail stick into the cake at the highest point. If the cocktail stick comes out clean, the cake is ready.                                                                            |
| The cake collapses.                                                                                                 | Use less fluid next time or set the oven temperature 10 degrees lower. Observe the specified mixing times in the recipe.                                                                                                                                                            |
| The cake has risen in the middle but is lower around the edge.                                                      | Do not grease the sides of the springform cake tin. After baking, loosen the cake carefully with a knife.                                                                                                                                                                           |
| The cake goes too dark on top.                                                                                      | Place it lower in the oven, select a lower temperature and bake the cake for a little longer.                                                                                                                                                                                       |
| The cake is too dry.                                                                                                | When it is done, make small holes in the cake using a cocktail stick. Then drizzle fruit juice or an alcoholic beverage over it. Next time, select a temperature 10 degrees higher and reduce the baking time.                                                                      |
| The bread or cake (e.g. cheesecake) looks good, but is soggy on the inside (sticky, streaked with water).           | Use slightly less fluid next time and bake for slightly longer at a lower temperature. For cakes with a moist topping, bake the base first. Sprinkle it with almonds or bread crumbs and then place the topping on top. Please follow the recipe and baking times.                  |
| The cake is unevenly browned.                                                                                       | Select a slightly lower temperature to ensure that the cake is baked more evenly. Bake delicate pastries on one level using  Top/bottom heating. Protruding greaseproof paper can affect the air circulation. For this reason, always cut greaseproof paper to fit the baking tray. |
| The bottom of a fruit cake is too light.                                                                            | Place the cake one level lower the next time.                                                                                                                                                                                                                                       |
| The fruit juice overflows.                                                                                          | Next time, use the deeper universal pan, if you have one.                                                                                                                                                                                                                           |
| Small baked items made out of yeast dough stick to one another when baking.                                         | There should be a gap of approx. 2 cm around each item. This gives enough space for the baked items to expand well and turn brown on all sides.                                                                                                                                     |
| You were baking on several levels. The items on the top baking tray are darker than that on the bottom baking tray. | Always use  3D hot air to bake on more than one level. Baking trays that are placed in the oven at the same time will not necessarily be ready at the same time.                                                                                                                    |
| Condensation forms when you bake moist cakes.                                                                       | Baking may result in the formation of water vapour, which escapes above the door. The steam may settle and form water droplets on the control panel or on the fronts of adjacent units. This is a natural process.                                                                  |

## Meat, poultry, fish

### Ovenware

The universal pan with insert wire rack is suitable for large roasts. You may also use any heat-resistant ovenware.

Glass ovenware is the most suitable. Ensure that the lid of the roasting dish fits well and closes properly.

Add a little more liquid when using enamelled roasting dishes.

With roasting dishes made of stainless steel, browning is not so intense and the meat may be somewhat less well cooked. Increase the cooking times.

Always place the ovenware in the centre of the wire rack.

Place hot glass ovenware on a dry mat after cooking. The glass could crack if placed on a cold or wet surface.

### Roasting

The information in the table applies to food placed in a cold oven and for meat taken directly from the refrigerator.

The joints of meat should weigh between 500 g and 2 kg.

Ensure that you always use the lower temperature, if the weight of the joint you wish to roast is high.

If there are several pieces of meat, calculate the roasting time using the weight of the heaviest piece of meat. The individual pieces of meat should be approximately the same size.

### Meat

When using the Top/bottom heating and Circulated air grilling types of heating, turn the pieces of meat halfway through the cooking time.

When the roast is ready, turn off the oven and allow it to rest for 10 minutes. This allows better distribution of the meat juices.

When roasting joints of pork with a rind, make cuts in the rind crossways and if it is to be turned, first place the joint with the rind side down in the dish.

| Food                              | Dish                                       | Shelf position | Type of heating                                                                      | Temperature in °C                 | Time, min. per 500 g + add. time                               |
|-----------------------------------|--------------------------------------------|----------------|--------------------------------------------------------------------------------------|-----------------------------------|----------------------------------------------------------------|
| <b>Beef</b>                       |                                            |                |                                                                                      |                                   |                                                                |
| Slow roast joint                  | Universal pan with wire insert             | 1              |    | 130-140                           | 40 + 40                                                        |
| Top side, top rump                | Universal pan with wire insert             | 1              |    | 160-170                           | 30 + 25                                                        |
| <b>Lamb</b>                       |                                            |                |                                                                                      |                                   |                                                                |
| Leg                               | Universal pan with wire insert             | 1              |    | 160-170                           | 30 + 25                                                        |
| Shoulder (bone in)                | Universal pan with wire insert             | 1              |    | 160-170                           | 25 + 20                                                        |
| Shoulder (boned and rolled)       | Universal pan with wire insert             | 1              |    | 170-180                           | 25 + 25                                                        |
| Rack of lamb                      | Universal pan with wire insert             | 1              |    | 180-190                           | 25 + 25                                                        |
| <b>Pork</b>                       |                                            |                |                                                                                      |                                   |                                                                |
| Roast joint                       | Universal pan with wire insert             | 1              |    | 180-190                           | 35 + 35                                                        |
| Loin joint                        | Universal pan with wire insert             | 1              |    | 170-180                           | 30 + 30                                                        |
| Belly                             | Universal pan with wire insert             | 1              |    | 160-170                           | 30 + 25                                                        |
| Gammon joint                      | Universal pan with wire insert             | 1              |    | 160-170                           | 30 + 30                                                        |
| <b>Poultry</b>                    |                                            |                |                                                                                      |                                   |                                                                |
| Chicken                           | Universal pan with wire insert             | 1              |    | 170-180                           | 25 + 25                                                        |
| Chicken, portion (200-250 g each) | Universal pan with wire insert             | 1              |    | 190-200                           | 20 + 25                                                        |
| Chicken, quarter (450 g each)     | Universal pan with wire insert             | 1              |    | 180-190                           | 20 + 25                                                        |
| Duck                              | Universal pan with wire insert             | 1              |    | 180-190                           | 20 + 20                                                        |
| Turkey, crown                     | Universal pan with wire insert             | 1              |    | 160-170                           | 15 + 15                                                        |
| Turkey, whole (up to 12 kg)       | Universal pan with wire insert             | 1              |    | 160-170                           | 12 + 12                                                        |
| <b>Casserole</b>                  |                                            |                |                                                                                      |                                   |                                                                |
| Diced meat (beef, pork, lamb)     | Wire rack + glass roasting dish with lid   | 2              |  | 140                               | 120-150 (total time)                                           |
| Braising steaks                   | Wire rack + glass roasting dish with lid   | 2              |  | 140                               | 120-150 (total time)                                           |
| Chicken                           | Wire rack + glass roasting dish with lid   | 2              |  | 140                               | 60-90                                                          |
| <b>Complete meal</b>              |                                            |                |                                                                                      |                                   |                                                                |
| With beef                         | Wire rack + universal pan with wire insert | 4+1            |  | 160, then 200 (yorkshire pudding) | weight of meat (see table above) + 15-25 for yorkshire pudding |
| With chicken                      | Wire rack + universal pan with wire insert | 4+1            |  | 180                               | weight of chicken (see table above)                            |
| Food                              | Dish                                       | Shelf position | Type of heating                                                                      | Temperature in °C                 | Time, min. per 500 g + add. time                               |
| <b>Beef</b>                       |                                            |                |                                                                                      |                                   |                                                                |
| Top side, top rump                | Universal pan with wire insert             | 2              |  | 200-220                           | 25 + 20                                                        |
| <b>Lamb</b>                       |                                            |                |                                                                                      |                                   |                                                                |
| Leg                               | Universal pan with wire insert             | 1              |  | 160-180                           | 30 + 30                                                        |
| Rack of lamb                      | Universal pan with wire insert             | 1              |  | 190-200                           | 25 + 20                                                        |
| <b>Pork</b>                       |                                            |                |                                                                                      |                                   |                                                                |
| Roast joint                       | Universal pan with wire insert             | 1              |  | 180-200                           | 35 + 40                                                        |
| Loin joint                        | Universal pan with wire insert             | 2              |  | 190-210                           | 30-45                                                          |
| Belly                             | Universal pan with wire insert             | 1              |  | 220-240                           | 25 + 40                                                        |
| <b>Poultry</b>                    |                                            |                |                                                                                      |                                   |                                                                |
| Chicken                           | Universal pan with wire insert             | 1              |  | 200-220                           | 25 + 15                                                        |
| Chicken, portion (200-250 g each) | Universal pan with wire insert             | 3              |  | 210-230                           | 25 + 25                                                        |
| Chicken, quarter (450 g each)     | Universal pan with wire insert             | 2              |  | 220-240                           | 20 + 25                                                        |
| Duck                              | Universal pan with wire insert             | 1              |  | 190-210                           | 20 + 20                                                        |

Grilling

When grilling, preheat the oven for approx. 3 minutes, before putting the food in.

Always grill with the oven door closed.

As far as possible, the pieces of food you are grilling should be of equal thickness. This will allow them to brown evenly and remain succulent and juicy.

Turn grilled items after the specified time.

Whole fish does not need to be turned. Place the whole fish in the oven in the swimming position with the dorsal fin pointing upwards. Placing a scored potato or a small oven-proof container in the stomach cavity of the fish will provide stability.

Do not add salt to steaks until they have been grilled.

Place the food to be grilled directly on the wire rack. If you are grilling a single piece, the best results are achieved by placing it in the centre of the wire rack.

The universal pan should also be inserted underneath. To prevent a high degree of smoke from forming, do not insert the pan higher than level 3. The meat juices are collected in the pan and the oven is kept cleaner.

Do not insert the baking tray or universal pan at level 4 or 5. The high heat distorts it and the cooking compartment can be damaged when removing it.

The grill element switches on and off continually. This is normal. The grill setting determines how frequently this will happen.

| Food                          | Dish                      | Shelf position | Type of heating                                                                       | Grill setting | Time in minutes                |
|-------------------------------|---------------------------|----------------|---------------------------------------------------------------------------------------|---------------|--------------------------------|
| <b>Beef</b>                   |                           |                |                                                                                       |               |                                |
| Steaks, height 2-3 cm         | Wire rack + universal pan | 5+3            |    | 3             | 1. side 4-5,<br>2. side 4-5    |
| Burgers, height 1-2 cm        | Wire rack + universal pan | 5+3            |    | 3             | 1. side 6-8,<br>2. side 4-6    |
| <b>Lamb</b>                   |                           |                |                                                                                       |               |                                |
| Steaks, height 2-3 cm         | Wire rack + universal pan | 5+3            |    | 3             | 1. side 6-7,<br>2. side 6-7    |
| Chops, height 2-3 cm          | Wire rack + universal pan | 5+3            |    | 3             | 1. side 5-6,<br>2. side 5-6    |
| <b>Pork</b>                   |                           |                |                                                                                       |               |                                |
| Steaks, height 1-2 cm         | Wire rack + universal pan | 5+3            |    | 3             | 1. side 6-7,<br>2. side 6-7    |
| Chops, height 2-3 cm          | Wire rack + universal pan | 4+3            |  | 3             | 1. side 10-12,<br>2. side 9-10 |
| Burgers, height 1-2 cm        | Wire rack + universal pan | 5+3            |  | 3             | 1. side 6-8,<br>2. side 4-6    |
| Sausages, thickness 2-4 cm    | Wire rack + universal pan | 4+3            |  | 3             | 10-15, turn occasionally       |
| <b>Gammon</b>                 |                           |                |                                                                                       |               |                                |
| Steaks, height 1-3 cm         | Wire rack + universal pan | 5+3            |  | 3             | 1. side 4,<br>2. side 3        |
| <b>Chicken</b>                |                           |                |                                                                                       |               |                                |
| Drumsticks, 150 g each        | Wire rack + universal pan | 3+2            |  | 3             | 1. side 17,<br>2. side 8       |
| Breast (boneless), 150 g each | Wire rack + universal pan | 3+2            |  | 3             | 1. side 20,<br>2. side 10      |
| <b>Fish</b>                   |                           |                |                                                                                       |               |                                |
| Whole trout, 300 g each       | Wire rack + universal pan | 2+1            |  | 2             | 20-25                          |
| Fillets, 150 g each           | Wire rack + universal pan | 4+3            |  | 3             | 1. side 5-7,<br>2. side 5-7    |

Tips for roasting and grilling

|                                                                     |                                                                                                                                                                                                                                       |
|---------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The table does not contain information for the weight of the joint. | Select the next lowest weight from the instructions and extend the time.                                                                                                                                                              |
| How to tell when the roast is ready.                                | Use a meat thermometer (available from specialist shops) or carry out a "spoon test". Press down on the roast with a spoon. If it feels firm, it is ready. If the spoon can be pressed in, it needs to be cooked for a little longer. |
| The roast is too dark and the crackling is partly burnt.            | Check the shelf height and temperature.                                                                                                                                                                                               |
| The roast looks good but the juices are burnt.                      | Next time, use a smaller roasting dish or add more liquid.                                                                                                                                                                            |
| The roast looks good but the juices are too clear and watery.       | Next time, use a larger roasting dish and use less liquid.                                                                                                                                                                            |
| Steam rises from the roast when basted.                             | This is normal and due to the laws of physics. The majority of the steam escapes through the steam outlet. It may settle and form condensation on the cooler switch panel or on the fronts of adjacent units.                         |



## Preprepared products

Observe the instructions on the packaging.

If you line the accessories with greaseproof paper, make sure that the paper is suitable for these temperatures. Make sure the paper is a suitable size for the dish to be cooked.

The cooking result greatly depends on the quality of the food. Pre-browning and unevenness can sometimes even be found on the raw product.

Leave a little space between bread rolls when crisping them up. Do not place too many bread rolls on the accessories.

Sprinkle grated cheese over the top of your lasagne to give it a beautiful and evenly browned finish.

| Food                           | Dish                        | Shelf position | Type of heating | Temperature in °C | Time in minutes |
|--------------------------------|-----------------------------|----------------|-----------------|-------------------|-----------------|
| <b>Pizza, frozen</b>           |                             |                |                 |                   |                 |
| Pizza with a thin base         | Universal pan               | 2              |                 | 190-210           | 15-25           |
|                                | Universal pan               | 3              |                 | 210-220           | 10-15           |
|                                | Universal pan + wire rack   | 3+1            |                 | 170-180           | 20-25           |
| Pizza with a thick base        | Universal pan               | 2              |                 | 180-200           | 20-30           |
|                                | Universal pan               | 3              |                 | 200-210           | 15-20           |
|                                | Universal pan + wire rack   | 3+1            |                 | 170-180           | 20-25           |
| Pizza-Baguette                 | Universal pan               | 3              |                 | 180-200           | 20-30           |
|                                | Universal pan               | 3              |                 | 170-180           | 25-30           |
| <b>Pizza, chilled</b>          |                             |                |                 |                   |                 |
| Pizza                          | Universal pan               | 3              |                 | 190-210           | 10-15           |
|                                | Universal pan               | 3              |                 | 200-210           | 10-15           |
| <b>Potato products, frozen</b> |                             |                |                 |                   |                 |
| Chips                          | Universal pan               | 3              |                 | 190-210           | 20-30           |
|                                | Universal pan               | 3              |                 | 210-220           | 20-25           |
|                                | Universal pan + baking tray | 3+1            |                 | 180-190           | 35-40           |
| Duchess potatoes               | Universal pan               | 3              |                 | 200-220           | 20-25           |
|                                | Universal pan               | 3              |                 | 200-210           | 15-20           |
| Hash browns (fried potatoes)   | Universal pan               | 3              |                 | 210-230           | 15-25           |
|                                | Universal pan               | 3              |                 | 200-210           | 15-20           |
| Potato wedges                  | Universal pan               | 2              |                 | 200-210           | 20-25           |
|                                | Universal pan               | 3              |                 | 190-200           | 20-25           |
| <b>Baked goods, frozen</b>     |                             |                |                 |                   |                 |
| Rolls, baguettes               | Universal pan               | 3              |                 | 170-190           | 10-20           |
|                                | Universal pan               | 3              |                 | 180-190           | 10-15           |
| <b>Baked goods, prebaked</b>   |                             |                |                 |                   |                 |
| Part baked white bread         | Universal pan               | 3              |                 | 190-210           | 10-20           |
|                                | Universal pan               | 3              |                 | 180-190           | 15-20           |
|                                | Universal pan + wire rack   | 3+1            |                 | 160-180           | 20-25           |
| <b>Fried foods, frozen</b>     |                             |                |                 |                   |                 |
| Fish fingers                   | Universal pan               | 2              |                 | 220-240           | 10-20           |
|                                | Universal pan               | 3              |                 | 210-220           | 15-20           |
| Chicken nuggets                | Universal pan               | 3              |                 | 200-220           | 15-25           |
|                                | Universal pan               | 3              |                 | 180-190           | 20-25           |
| <b>Lasagne, frozen</b>         |                             |                |                 |                   |                 |
| Lasagne, 400 g                 | Wire rack                   | 2              |                 | 190-200           | 35-40           |
|                                | Wire rack                   | 2              |                 | 180-190           | 35-40           |
| Lasagne, 1200 g                | Wire rack                   | 2              |                 | 190-200           | 50-60           |
|                                | Wire rack                   | 2              |                 | 180-190           | 40-50           |

\* Preheat.

| Food                    | Dish      | Shelf position | Type of heating | Temperature in °C | Time in minutes |
|-------------------------|-----------|----------------|-----------------|-------------------|-----------------|
| <b>Lasagne, chilled</b> |           |                |                 |                   |                 |
| Lasagne, 400 g          | Wire rack | 2              | *               | 180-190           | 20-25           |
| Lasagne, 1200 g         | Wire rack | 2              | *               | 170-180           | 30-35           |

\* Preheat.

## Special dishes

At low temperatures, 3D hot air is equally useful for producing creamy yoghurt as it is for proving light yeast dough.

First, remove accessories, hook-in racks or telescopic shelves from the cooking compartment.

### Preparing yoghurt

1. Bring 1 litre of milk (3.5 % fat) to the boil and cool down to 40 °C.
2. Stir in 150 g of yoghurt (at refrigerator temperature).
3. Pour into cups or small screw-top jars and cover with cling film.

4. Preheat the cooking compartment as indicated.

5. Place the cups or jars on the cooking compartment floor and incubate as indicated.

### Proving dough

1. Prepare the dough as usual, place it in a heat-resistant ceramic dish and cover.
2. Preheat the cooking compartment as indicated.
3. Switch off the oven and place the dough in the cooking compartment and leave it to prove.

| Dish          | Ovenware               |                                  | Type of heating | Temperature                                                                                    | Cooking time            |
|---------------|------------------------|----------------------------------|-----------------|------------------------------------------------------------------------------------------------|-------------------------|
| Yoghurt       | Cups or screw-top jars | on the cooking compartment floor |                 | 50 °C Preheat<br>50 °C                                                                         | 5 mins<br>8 hrs         |
| Proving dough | Heat-resistant dish    | on the cooking compartment floor |                 | 50 °C Preheat<br>Switch off the appliance and place the yeast dough in the cooking compartment | 5-10 mins<br>20-30 mins |

## Defrost

The defrosting time will depend on the type and quantity of the food.

Observe the instructions on the packaging.

Take frozen food out of its packaging and place in suitable ovenware on the wire rack.

Place poultry on a plate with the breast side facing down.

**Note:** The oven light does not come on at temperatures of less than 60 °C. This enables precise temperature regulation.

| Dish                                                                                                                            | Accessories | Level | Type of heating | Temperature                                   |
|---------------------------------------------------------------------------------------------------------------------------------|-------------|-------|-----------------|-----------------------------------------------|
| <b>Delicate frozen foods</b><br>e.g. cream gateaux, buttercream cakes, gateaux with chocolate or sugar-based icing, fruit, etc. | wire rack   | 1     |                 | The temperature selector remains switched off |
| <b>Other frozen products</b><br>Chicken, sausage and meat, bread and bread rolls, cake and other baked goods                    | wire rack   | 1     |                 | 50 °C                                         |

## Drying

With 3D hot air, you can dry foods brilliantly.

Use unblemished fruit and vegetables only and wash them thoroughly.

Drain off the excess water, then dry them.

Line the universal pan and the wire rack with greaseproof or parchment paper.

Turn very juicy fruit or vegetables several times.

Remove fruit and vegetables from the paper as soon as they have dried.

| Fruit and herbs         | Accessories          | Level | Type of heating | Temperature | Cooking time       |
|-------------------------|----------------------|-------|-----------------|-------------|--------------------|
| 600 g apple rings       | Universal pan + rack | 3+1   |                 | 80 °C       | 5 hrs (approx.)    |
| 800 g pear slices       | Universal pan + rack | 3+1   |                 | 80 °C       | 8 hrs (approx.)    |
| 1.5 kg damsons or plums | Universal pan + rack | 3+1   |                 | 80 °C       | 8-10 hrs (approx.) |
| 200 g herbs, washed     | Universal pan + rack | 3+1   |                 | 80 °C       | 1½ hrs (approx.)   |

## Preserving

For preserving, the jars and rubber seals must be clean and intact. If possible, use jars of the same size. The information in the table is for round, one-litre jars.

### Caution!

Do not use jars that are larger or taller than this. The lids could crack.

Only use fruit and vegetables in good condition. Wash them thoroughly.

The times given in the tables are a guide only. The time will depend on the room temperature, number of jars, and the quantity and temperature of the contents. Before you switch off the appliance or change the cooking mode, check whether the contents of the jars are bubbling as they should.

### Preparation

1. Fill the jars, but not to the top.
2. Wipe the rims of the jars, as they must be clean.
3. Place a damp rubber seal and a lid on each jar.

| Fruit in one-litre jars                   | When it starts to bubble | Residual heat      |
|-------------------------------------------|--------------------------|--------------------|
| Apples, redcurrants, strawberries         | Switch off               | approx. 25 minutes |
| Cherries, apricots, peaches, gooseberries | Switch off               | approx. 30 minutes |
| Apple purée, pears, plums                 | Switch off               | approx. 35 minutes |

### Vegetables

As soon as bubbles begin to form in the jars, set the temperature back to between 120 and 140 °C. Depending on

4. Seal the jars with the clips.

Place no more than six jars in the cooking compartment.

### Making settings

1. Insert the universal pan at level 2. Arrange the jars on it so that they do not touch each other.
2. Pour ½ litre of hot water (approx. 80 °C) into the universal pan.
3. Close the oven door.
4. Set ☐ Bottom heating.
5. Set the temperature to between 170 and 180 °C.

### Preserving

#### Fruit

After approx. 40 to 50 minutes, small bubbles begin to form at short intervals. Switch off the oven.

After 25 to 35 minutes of residual heat, remove the preserving jars from the cooking compartment. If they are allowed to cool for longer in the cooking compartment, germs could multiply, promoting acidification of the preserved fruit.

the type of vegetable, heat for approx. 35 to 70 minutes. Switch off the oven after this time and use the residual heat.

| Vegetables with cold cooking water in one-litre jars | When it starts to bubble | Residual heat      |
|------------------------------------------------------|--------------------------|--------------------|
| Gherkins                                             | -                        | approx. 35 minutes |
| Beetroot                                             | approx. 35 minutes       | approx. 30 minutes |
| Brussels sprouts                                     | approx. 45 minutes       | approx. 30 minutes |
| Beans, kohlrabi, red cabbage                         | approx. 60 minutes       | approx. 30 minutes |
| Peas                                                 | approx. 70 minutes       | approx. 30 minutes |

### Taking out the jars

After preserving, remove the jars from the cooking compartment.

### Caution!

Do not place the hot jars on a cold or wet surface. They could suddenly burst.

## Acrylamide in foodstuffs

Acrylamide is mainly produced in grain and potato products prepared at high temperatures, such as potato crisps, chips,

toast, bread rolls, bread or fine baked goods (biscuits, gingerbread, cookies).

### Tips for keeping acrylamide to a minimum when preparing food

|                |                                                                                                                                                                                                                       |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>General</b> | <ul style="list-style-type: none"><li>■ Keep cooking times to a minimum.</li><li>■ Cook meals until they are golden brown, but not too dark.</li><li>■ Large, thick pieces of food contain less acrylamide.</li></ul> |
| <b>Baking</b>  | With top/bottom heating max. 200 °C.<br>With 3D hot air or hot air max. 180 °C.                                                                                                                                       |
| Biscuits       | With top/bottom heating max. 190 °C.<br>With 3D hot air or hot air max. 170 °C.<br>Egg or egg yolk reduces the production of acrylamide.                                                                              |
| Oven chips     | Spread evenly over the baking tray, in a single layer. Bake at least 400 g per baking tray so that the chips do not dry out                                                                                           |

# Test dishes

These tables have been produced for test institutes to facilitate the inspection and testing of the various appliances.

In accordance with EN 50304/EN 60350 (2009) and IEC 60350.

## Baking

Baking on 2 levels:

Always insert the universal pan above the baking tray.

Baking on 3 levels:

Insert the universal pan in the middle.

Piped biscuits:


Baking trays that are placed in the oven at the same time will not necessarily be ready at the same time.

Double crust apple pie on 1 level:

place dark springform cake tins next to each other diagonally on the same level.

Double crust apple pie on 2 levels:

Place dark springform cake tins next to each other (see illustration).

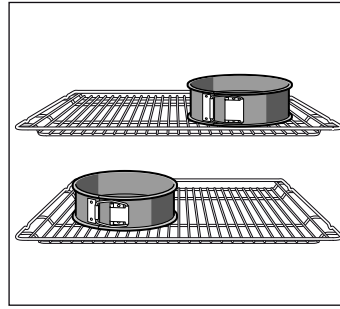

Cakes in tinplate springform cake tins:

Bake on 1 level with  Top/bottom heating. Place the springform cake tin on the universal pan instead of on the wire rack.

**Note:** For baking, use the lower of the temperatures indicated first.

| Dish                             | Accessories and tins                              | Level | Type of heating                                                                                                                                                              | Temperature in °C | Cooking time in minutes |
|----------------------------------|---------------------------------------------------|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------|
| Whirls (preheat*)                | Baking tray                                       | 3     |                                                                                            | 140-150           | 30-40                   |
|                                  | Universal pan + baking tray                       | 3+1   |                                                                                            | 140-150           | 30-45                   |
|                                  | 2 baking trays + universal pan                    | 5+3+1 |                                                                                            | 130-140           | 35-50                   |
| Whirls                           | Baking tray                                       | 3     |  /  | 140-150           | 30-45                   |
| Small cakes (preheat*)           | Baking tray                                       | 3     |                                                                                          | 150-170           | 20-30                   |
|                                  | Baking tray                                       | 3     |                                                                                          | 150-160           | 20-30                   |
|                                  | Universal pan + baking tray                       | 3+1   |                                                                                          | 140-160           | 25-40                   |
|                                  | 2 baking trays + universal pan                    | 5+3+1 |                                                                                          | 130-150           | 35-55                   |
| Hot water sponge cake (preheat*) | Springform cake tin on the wire rack              | 2     |                                                                                          | 150-160           | 30-40                   |
| Hot water sponge cake            | Springform cake tin on the wire rack              | 2     |  /  | 160-180           | 30-40                   |
| German apple pie                 | Wire rack+ 2 springform cake tins, dia. 20 cm     | 1     |                                                                                          | 180-200           | 70-90                   |
|                                  | 2 wire racks + 2 springform cake tins, dia. 20 cm | 3+1   |                                                                                          | 170-190           | 70-90                   |


\* Do not use rapid heating to preheat the appliance.

## Grilling

 If you are grilling food directly on the wire rack, the universal pan should also be inserted at level 1. The liquid is then collected, keeping the oven cleaner.

| Dish                                      | Accessories               | Level | Type of heating                                                                      | Grill setting | Cooking time in minutes |
|-------------------------------------------|---------------------------|-------|--------------------------------------------------------------------------------------|---------------|-------------------------|
| Toast<br>Preheat for 10 minutes           | Wire rack                 | 5     |  | 3             | 1/2-2                   |
| Beefburgers, 12 pieces*<br>do not preheat | Wire rack + universal pan | 4+1   |  | 3             | 25-30                   |

\* turn over after 2/3 of the cooking time.



**Robert Bosch Hausgeräte GmbH**

Carl-Wery-Straße 34

81739 München

Germany

**[www.bosch-home.com](http://www.bosch-home.com)**



9001098463

950312