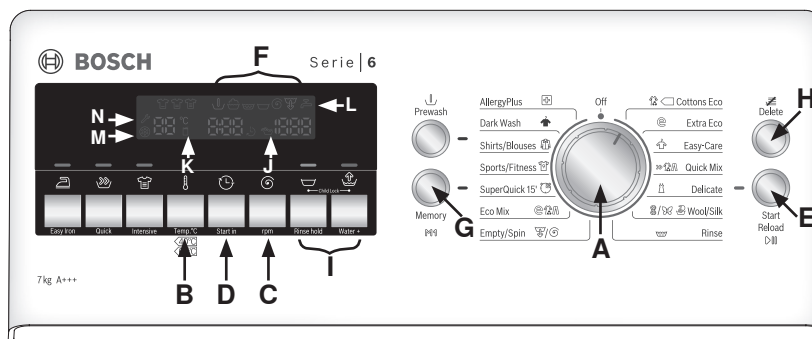


EN





 
 
 
 
 
 
 
 
 
 
 


 
 
 
 
 



 





 
 
 
 
 


 
 


 
 
 
 

TABLE OF PROGRAMMES

- A** Programme selector
B "Temperature" button
C "Spin" button
D "Start in" button
E "Start/Reload" button
F Programme sequence display
G "Memory" button
H "Delete" button
I Childproof-lock button combination
J Detergent overload indicator
K "Lid open" indicator



The washing machine is equipped with safety functions which detect and diagnose faults in good time, and react appropriately:

- L** "Water tap closed" indicator
M "Clean pump" indicator
N "Service" indicator

Programme		Care labels	Max. load kg	Type of laundry Observe the manufacturer's instructions on the care label	Cleaning agent			Options							Max. spin speed rpm	
					Prewash	Main wash	Softener	Easy-iron	Quick	Intensive	Start in	Rinse hold	Water +	Pre-wash		rpm
Cottons Eco  cold - 95 °C		  	7,0	For normally to heavily soiled cotton laundry. The most economical programme at 40 °C and 60 °C in terms of combined water and energy consumption.												max.
Extra Eco cold - 60 °C		 	7,0	For heavily soiled and robust laundry made of cotton, synthetic fibres and blends. Economical energy consumption thanks to a prolonged washing time; ideal for running overnight to benefit from lower energy tariffs. To avoid the noise of a spin cycle at night, select "Rinse hold" and start the spin cycle in the morning, or set an appropriate programme start time using the "Start in" function. Use a laundry bag for items made primarily with synthetic fibres.	–	Yes	*	–	–	*	*	*	–	–	*	max.
Easy-care cold - 60 °C		 	3,0	For easy-care fabrics, e.g. made of cotton, linen, synthetic fibres or blends.	*	Yes	*	*	*	*	*	*	*	*	*	max.
Quick Mix cold - 40 °C		  	3,0	For mixed loads of cotton and synthetic fabrics. For lightly soiled items without stains.	–	Yes	*	–	–	–	*	*	–	–	*	max.
Delicate cold - 40 °C		 	1,5	For delicate items which are suitable for machine washing (cotton, synthetic fibres and blends, etc.), e.g. curtains. No spin between the rinse cycles.	*	Yes	*	–	–	*	*	*	–	*	*	1 000 ¹⁾
 Wool/Silk cold - 40 °C		 	1,0	For delicate, washable items, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves). Use a detergent which is suitable for delicates and/or silk.	–	Yes	*	–	–	*	*	*	–	–	*	1 000 ¹⁾
Allergy Plus cold - 95 °C		 	3,0	For hard-wearing fabrics. For particularly sensitive skin: prolonged washing cycle with a higher water level and an additional spin cycle.	–	Yes	*	*	–	*	*	*	–	–	*	max.
Dark Wash cold - 60 °C		  	4,0	For dark-coloured fabrics made of cotton and dark easy-care fabrics. Turn laundry inside-out before washing.	*	Yes	*	–	–	*	*	*	–	*	*	max.
Shirts/Blouses cold - 60 °C		  	4,0	For non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics. Use the Wool/Silk programme for shirts/blouses made of silk or delicate fabrics.	*	Yes	*	–	–	*	*	*	–	*	*	1 000 ¹⁾
Sports/Fitness cold - 30 °C		 	3,0	For fabrics made of microfibres for sports and leisure. Do not use fabric softener. Includes a prewash cycle; if required, also put detergent into the Prewash compartment.	*	Yes	–	*	*	*	*	*	–	*	*	max.
SuperQuick 15 cold - 30 °C			3,0	Extra-short programme of around 15 minutes, suitable for freshening up small items of laundry without stains.	–	Yes	*	–	–	–	*	*	–	–	*	max.
Eco Mix cold - 40 °C		 	2,5	For lightly soiled items made of synthetic fibres or synthetic/cotton blended fabrics. Economy programme with very low water consumption. Use the lowest recommended dosage of liquid detergent for a 2,5 kg load.	–	Yes	–	–	–	–	*	*	–	–	*	max.
Rinse		–	7,0	Separate rinse cycle followed by a spin cycle; for easy-care fabrics.	–	–	*	–	–	–	*	*	–	–	*	max.
Empty/Spin		–	7,0	Separate spin cycle. Detergent solution or water used for rinsing are drained before the spin cycle starts.	–	–	–	–	–	–	*	–	–	–	*	max.



 

Yes = dosing required / * = optional

¹⁾ The spin speed is limited in these programmes to improve laundry care.

W10792334
900I103462

CONSUMPTION DATA

Power consumption in off-mode 0.09 W / in left-on mode 0.09 W

Programme	Temperature (°C)	Load (kg)	Water in litres (l)	Energy (kWh)	Approximate **** programme duration		 %
					without "Quick"	with "Quick"	
Cottons	95	7,0	58**	2,10	2:35	2:00	55
Cottons Eco 	60	7,0	51	0,91	4:00	1:55	55
Cottons Eco 	60	3,5	35	0,74	2:50	***	
Cottons Eco 	40	3,5	35	0,64	2:30	***	
Extra Eco	60	7,0	52	0,91	4:00	—	40
Easy-care	60	3,0	50**	0,90	2:05	1:14	
Easy-care	40	3,0	40	0,50	1:50	0:59	
Quick Mix	40	3,0	35	0,40	0:30	—	
Delicate	40	1,5	50	0,55	0:45	—	
Delicate	30	1,5	50	0,50	0:45	—	
Wool/Silk	40	1,0	40	0,55	0:35	—	
Wool/Silk	30	1,0	40	0,30	0:35	—	
Allergy Plus	60	3,0	54	0,83	1:20	—	
Allergy Plus	40	3,0	54	0,52	1:05	—	
Dark Wash	40	4,0	41	0,58	1:44	—	
Shirts/Blouses	40	4,0	70	0,55	1:20	—	
Sports/Fitness	30	3,0	50	0,45	2:05	1:14	
SuperQuick 15	30	3,0	30	0,15	0:15	—	
Eco Mix	40	2,5	19	0,45	1:00	—	

Cotton 60 °C and Cotton 40 °C standard programmes, suitable for washing normally soiled cotton laundry.


* Most efficient programmes in terms of combined water and energy consumption. Reference programmes for the energy label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature. Annual water consumption: 9240 litres / Annual energy consumption: 174 kWh

The consumption values have been measured in standardised conditions in accordance with the standard IEC/EN 60 456. Consumption values in the home may vary from those given in the table, depending on water pressure and temperature, load and laundry type. Water and energy consumption apply to the programmes' basic setting; selecting special options or changing the spin speed or temperature will change the consumptions values.

** To reduce the water temperature, some cold water is added at the end of the main washing cycle, before the water is drained.

*** Automatic adjustment of the programme duration after determining the load.

**** The programme durations may vary from those given in the table, as they depend on the particular operating conditions (see also "Faults and what to do about them" in the instruction manual).

 Approximate remaining moisture content (%). After programme end and spinning with maximum selectable spin speed, in default programme setting.

WHAT TO DO BEFORE THE WASHING CYCLE

1. Load the washing machine, close the drum door and check that it is closed properly.
2. Pour in the detergent and any additives, as described overleaf and in the instruction manual.
3. Close the lid.
4. Turn the programme selector to the desired programme. The display shows the duration of the selected programme (in hours and minutes), and the indicator for the **"Start/Reload"** button flashes. The temperature and spin speed can be changed by pressing the "Temperature" and "Spin" buttons.

SELECTING THE DESIRED OPTION(S)

You can select or deselect an option at any time while the programme is running. The option will be applied provided that the corresponding programme phase has not yet finished.

Easy-iron



 
- This function washes your laundry more gently, while still offering the same washing performance. The spin speed is slower in order to reduce creasing.

Quick

- For washing in a shorter time, with a washing performance comparable to that of the standard programme.

Intensive

- The programme duration is adjusted according to how dirty the laundry is.

 = lightly soiled -  = normally soiled -  = heavily soiled. Not all of the degrees of soiling can be selected for every programme.

Rinse hold

For delicate fabrics and curtains. The laundry remains in the last rinsing water. The programme stops for the "Rinse hold" when the "Rinse hold" indicator flashes; the **"Start/Reload"** indicator flashes as well.

- To drain and spin: Press **"Start/Reload"** – the washing machine will spin at the standard speed for the selected programme. You can also select another spin speed by selecting the "Spin" button before you press **"Start/Reload"**.
- To drain without spinning the laundry: Select the "Drain" programme and start it by pressing **"Start/Reload"**.

Water +

- Higher water level; gentler treatment of the laundry.
- Not selectable for the Cottons 95 °C programme.

Prewash

- For heavily soiled items.
- Pour detergent into Wash compartments I and II.
- Do not use liquid detergent for the main washing cycle if "Prewash" has been selected.

Spin (rpm)

- Each programme has a predefined spin speed.
- Press the button to set another spin speed.

SAVE YOUR FAVOURITE PROGRAMMES - MEMORY

If there is a programme setting which you use regularly, the appliance offers you the option of saving one setting per programme so that you can use it again by pressing just one button.

- Select the desired programme, temperature, spin speed and option(s). Press and hold the **"Memory"** button for at least 3 seconds.

The **"Memory"** indicator flashes quickly and then lights up – the programme setting is saved. The next time you would like to use your individual programme setting, select the programme, press the **"Memory"** button briefly and start the programme by pressing **"Start/Reload"**. If you want to replace the saved programme setting with another, proceed as already described; the saved setting will be replaced by the new one.

DELAYED START ("Start in")

The "Start in" button allows the user to run the washing machine at their own discretion, for example at night when electricity is cheaper. When activating the Start in, do not use liquid detergent.

- Select the programme, spin speed and options.
- Press the "Start in" button several times to delay the start by up to 24 hours.
- Press **"Start/Reload"**. A countdown of the selected delayed start will start; the clock symbol beside the delayed start and the colon between hours and minutes will flash.
- The displayed delayed start goes out as soon as the programme starts and is replaced by the remaining programme duration.
- If you have pressed **"Start/Reload"**, the delayed start can still be changed by pressing the "Start in" button.

To delete the delayed start

...before you press "Start/Reload":

- Select another programme or press the **"Delete"** button.

...after you have pressed "Start/Reload":

- Press **"Start/Reload"** - the delayed start goes out; press **"Start/Reload"** again if you would like to start the selected programme immediately.

START OF THE PROGRAMME

Open the water tap and press the **"Start/Reload"** button. The indicator for the **"Start/Reload"** button lights up. The programme sequence display shows the current programme phase, running from left to right through Wash, Rinse and Spin. The display becomes active when the load is being determined or when the programme duration is being adjusted.

"LID OPEN" INDICATOR

Before the start and after the end of a programme, the indicator lights up to show that the lid can be opened. While a programme is running, the lid remains closed and must under no circumstances be opened by force. If you urgently need to open it while a programme is running, refer to "CANCELLING AN ACTIVE PROGRAMME".

CHILDPROOF LOCK


This function prevents children from starting a washing cycle or being able to change the settings for an active programme. It cannot be activated or deactivated if the programme selector is in the "Off/O" position. To activate the childproof lock:

- Turn the program selector switch to a programme, or allow a programme to run as usual.
- Press the two buttons marked with keys simultaneously, and hold for at least 3 seconds. The key symbol on the display indicates that the childproof lock is activated.


The programme settings can no longer be changed. The only change still possible is to switch off the appliance by turning the programme selector to the "Off" position. To deactivate the childproof lock, proceed in the same way as for activating it.

FAULT INDICATORS


If one of the fault indicators starts to flash, consult the instruction manual ("Faults and what to do about them").

"Water tap closed": 

Insufficient or no supply water.

"Service": 

Fault or malfunction in one of the electrical components.

"Clean pump": 

The water is not drained.

The "Spin" indicator flashes in the programme sequence display  : Imbalance during spinning.

END OF THE PROGRAMME

- All indicators in the programme sequence display are off and the "Lid open" indicator lights up.
- After around 15 minutes, the washing machine switches off completely in order to save energy.

1. Turn the programme switch to the "Off" position.
2. Turn off the water tap.
3. Open the lid and drum, and unload the washing machine.
4. Leave the lid open for a short while so that the inside of the washing machine can dry.

DETERGENT OVERLOAD INDICATOR

- The symbol lights up at the end of the programme if too much detergent was used. Use less detergent for the next load.

CHANGING THE PROGRAMME AND/OR OPTIONS AFTER THE START OF THE PROGRAMME

1. Press the **"Start/Reload"** button to stop the programme. The indicator flashes.
2. Select a new programme, options and another spin speed, if desired.
3. Press the **"Start/Reload"** button again. The new programme starts at the same point at which the previous programme was interrupted. Do not add detergent for this programme.

CANCELLING AN ACTIVE PROGRAMME

The **"Delete"** button cancels a programme before it reaches the end. Press the **"Delete"** button for at least 3 seconds. Any water present is drained away; it can take a while until the lid can be opened.