


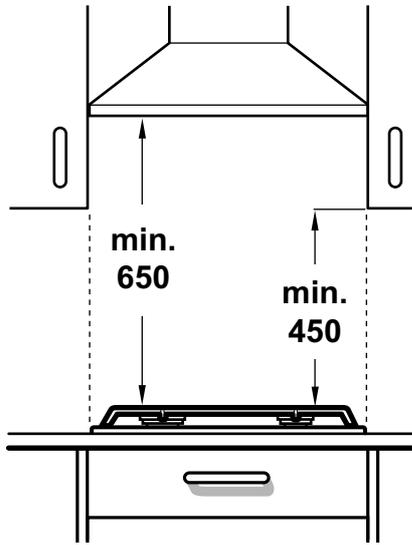


A




*all dimension in "mm"

1a

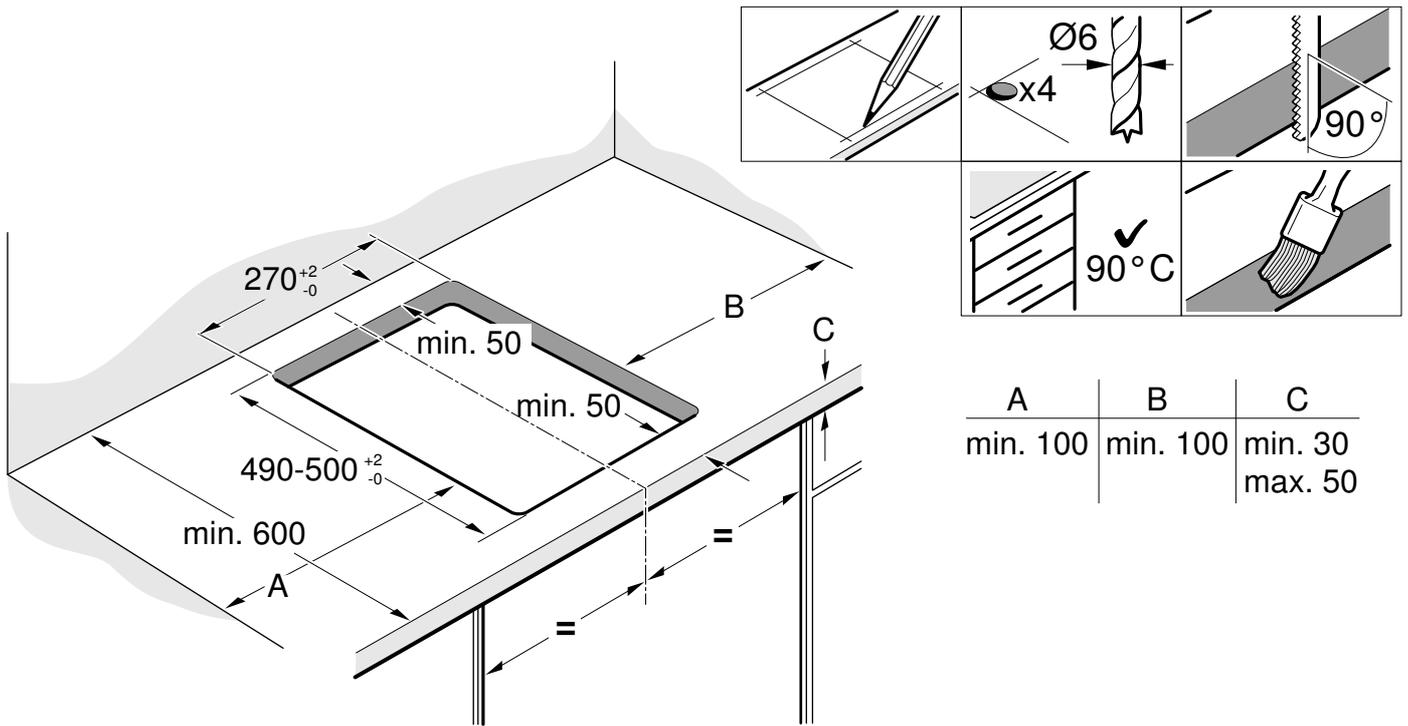


1b

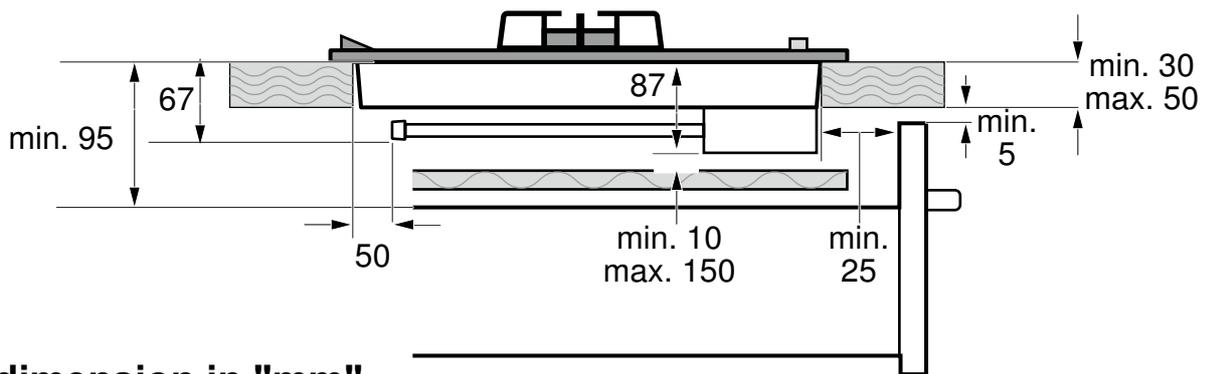


***all dimension in "mm"**


2

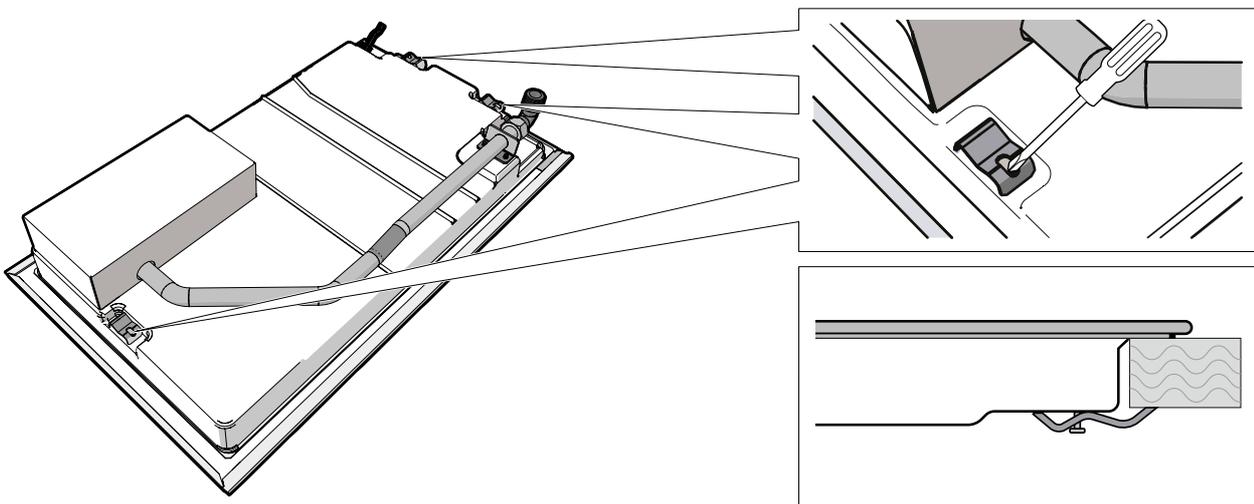


3a

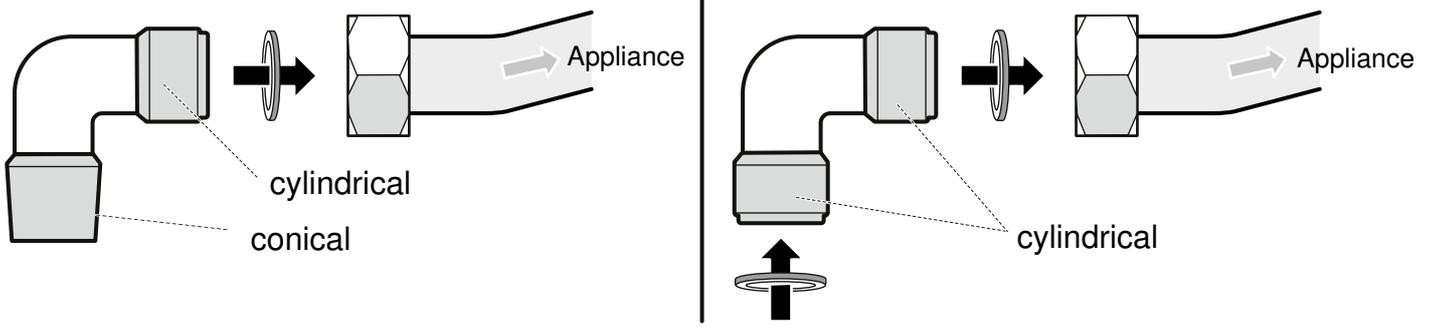

3b

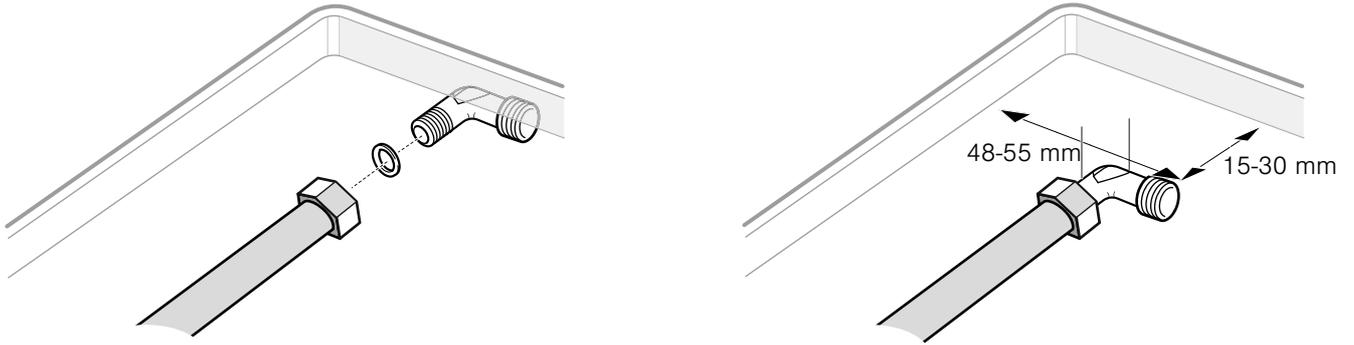

4

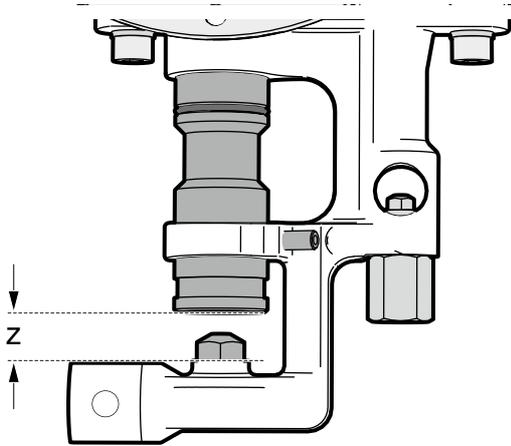

Safety precautions

Read the appliance's instructions before installing and using. The images shown in these instructions are for guidance only.

The manufacturer is exempt from all responsibility if the requirements of this manual are not complied with.

This appliance must only be used in well ventilated places. It must not be connected to a combustion product removal device.

All operations relating to installation, connection and regulation must be carried out by an authorised installation engineer, respecting all applicable regulations, standards and the specifications of the local gas and electricity suppliers. Special attention shall be paid to ventilation regulations.

This appliance has been designed for home use only, not for commercial or professional use. This appliance cannot be installed on yachts or in caravans. The warranty will only be valid if the appliance is used for the purpose for which it was designed.

Before installing, you need to check that local distribution conditions are compatible with the appliance's adjustment indicated on the specifications plate (gas type and pressure, power, voltage). See table I.

Before you begin, turn off the appliance's electricity and gas supply.

The supply cable must be attached to the unit to prevent it from touching hot parts of the oven or hob.

Appliances with electrical supply must be earthed.

Do not tamper with the appliance's interior. If necessary, call our Technical Assistance Service.

Do not exceed the maximum load of 10 kg or 8 litres, respectively.

Before installing

This appliance is class 3 type, according to the EN 30-1-1 regulation for gas appliances: built-in appliance.

The kitchen unit in which the appliance is installed must be properly secured and stable.

The kitchen units next to the appliance, the laminated covering and glue for adhering it must be made of non-flammable and heat-resistant materials.

This appliance cannot be installed above fridges, washing machines, dishwashers or similar.

The hob may only be fitted above a ventilated oven.

If an oven is installed underneath the hob, the thickness specified for the work surface may exceed the minimum thickness stated in these instructions. Observe the information in the oven installation instructions.

If an extractor fan is installed, you must follow the instructions in the installation manual, always respecting the minimum vertical distance from the hob (**Fig. A**).

Preparation of the kitchen unit (Fig. 1)

Make an appropriate size cut in the work surface (**Fig. 1a**).

If there is no oven below the hob, place a non-flammable separator (e.g. metal or plywood) 10 mm from the bottom of the hob. This will prevent access to the base of the hob (**Fig. 1b**).

Seal all work surfaces made of wood with special sealer/glue to protect it against moisture damage.

Installation of appliance (Fig. 2)

Note: Wear protective gloves to fit the hob.

The clips and adhesive seal (underside of the hob) are factory-fitted: Do not remove these under any circumstances: The adhesive seal prevents water seepage.

Securing the appliance to the fitted unit:

1. Turn the hob into the correct position.
 2. Loosen the screws on the clips so they can turn freely. You do not need to fully undo the screws on the clips.
 3. Place the hob in the worktop cut-out, making sure it is central. Press down on the sides of the gas hob until it is resting fully on the cut-out edges.
 4. Turn the clips and tightly screw them in. The screws for the clips must be vertical to the base of the housing.
The position of the clips depends on the worktop thickness.
 5. Fit the burner rings, burner lids and pan supports.
- Do not stick the hob onto the worktop with silicone.

Gas connection (Fig. 3)

The gas connection must be located in a position where the stop tap is accessible.

The appliance is delivered with a 1/2" nut on which an elbow with cylindrical or conical exit can be installed, depending on the installation (**Fig. 3a**).

The 1/2" thread of the elbow allows for:

- A fixed connection
- Connection using a flexible pipe (L min. 1 m max. 3 m)

You must prevent the pipe from coming into contact with moving parts of the kitchen unit (for example, a drawer) and prevent access to any spaces which might become obstructed.

Please remember to insert the seal.

⚠ Danger of leaks!

If any connection is handled, check the seal.

The manufacturer is not liable for any connection leaking, after being handled.

Electric connection

Check that the appliance has the same voltage and frequency as the electrical installation system.

The hobs are supplied with a power cable with a wall socket plug. Appliances with plugs must only be connected to sockets that have earth wires correctly installed.

Provide an omnipolar cut-off switch with a minimum contact opening of 3 mm (except for plug connections, if the user has access to it).

This appliance is type "Y": the supply cable can only be changed by the Technical Assistance Service and not the user. The cable type and minimum cross-section must be respected.

Removal of hob

Turn off the appliance's electricity and gas supply.

Unscrew the clips and proceed in the reverse order to installation.

Technical data / nozzle table

Burner to be used with	Singapore Town Gas
Gas pressure	10 mbar
Inner burner nozzle	118
Outer burner nozzle	300
Air gap adjustment (Z, fig.5)	12 mm
Nominal consumption (H _S)	4,9 kW
Reduced consumption	0,35 kW
Flow 15°C, 1013 mbar	950 l/h
Gas tap by-pass screw marking (inner burner)	72
Gas tap by-pass screw marking (outer burner)	xx
Glass thickness	4 mm