
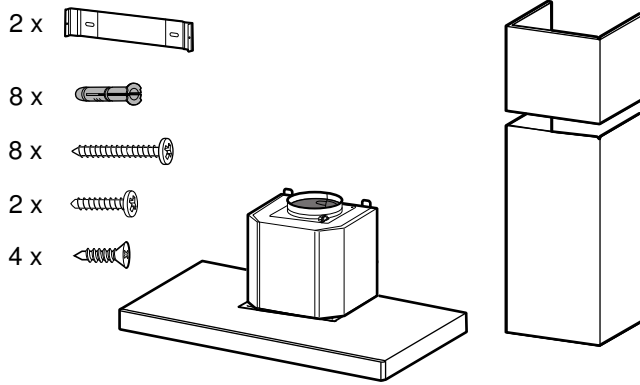
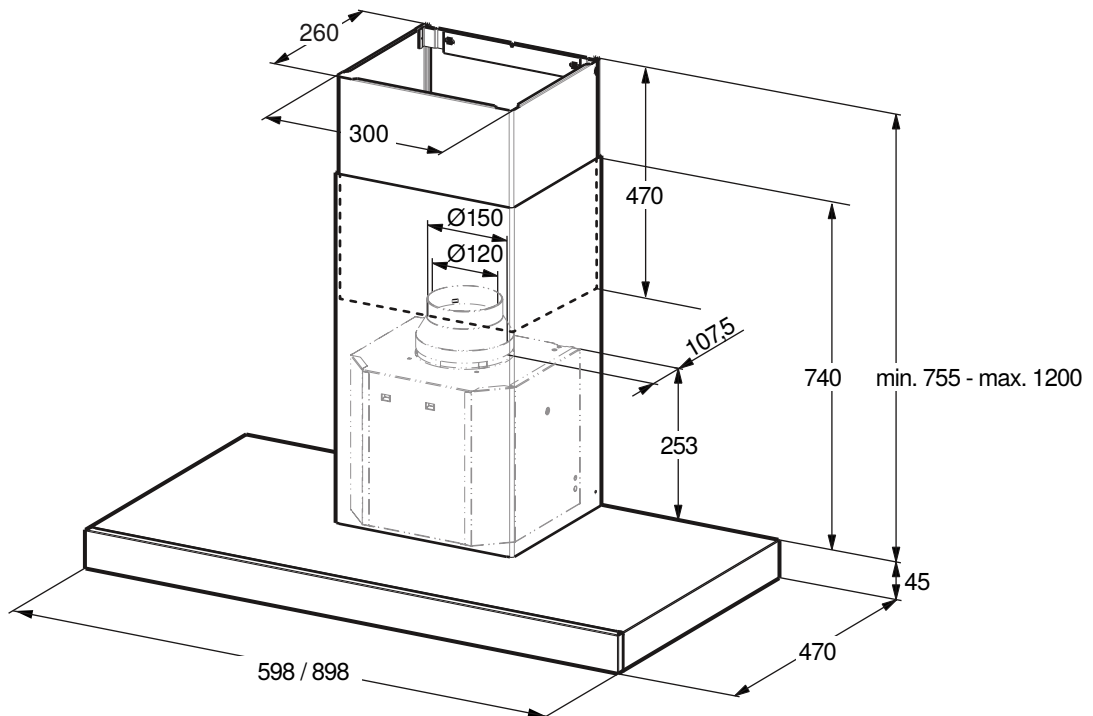
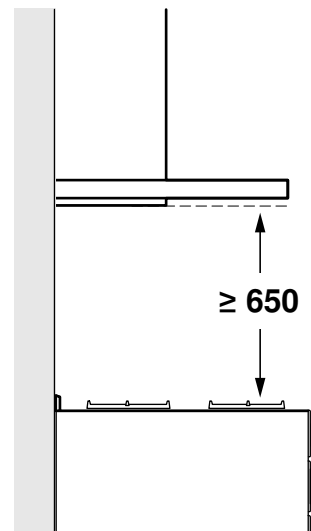
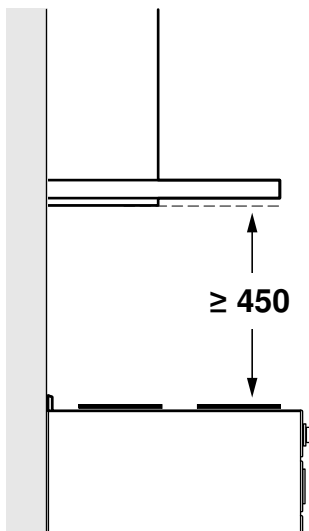


**A****B**

1

4x
Ø 4,2 x 44,4


a

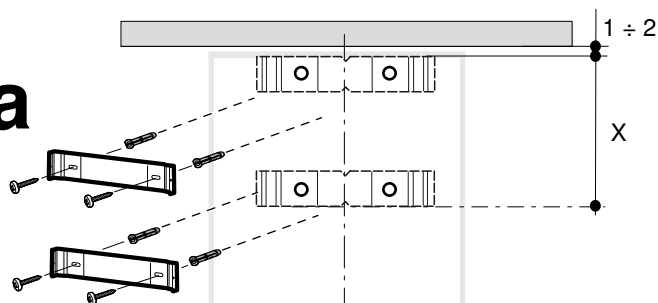

Ø 8

2x
Ø 4,2 x 44,4

b

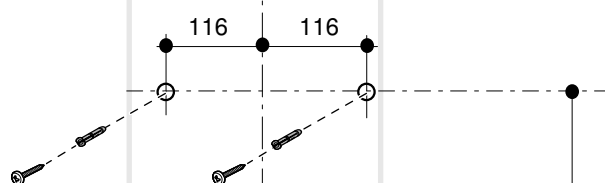


Ø 8


305

2


a

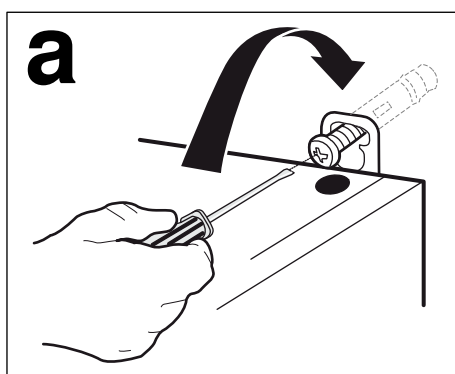


b

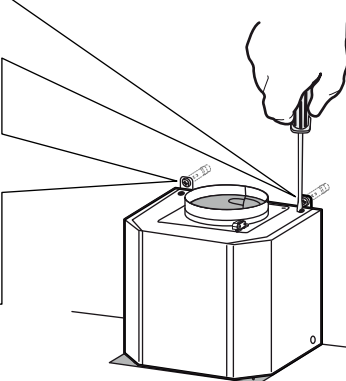

3

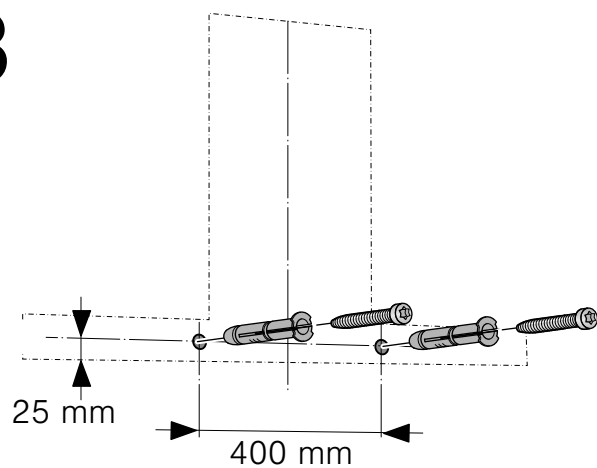


4

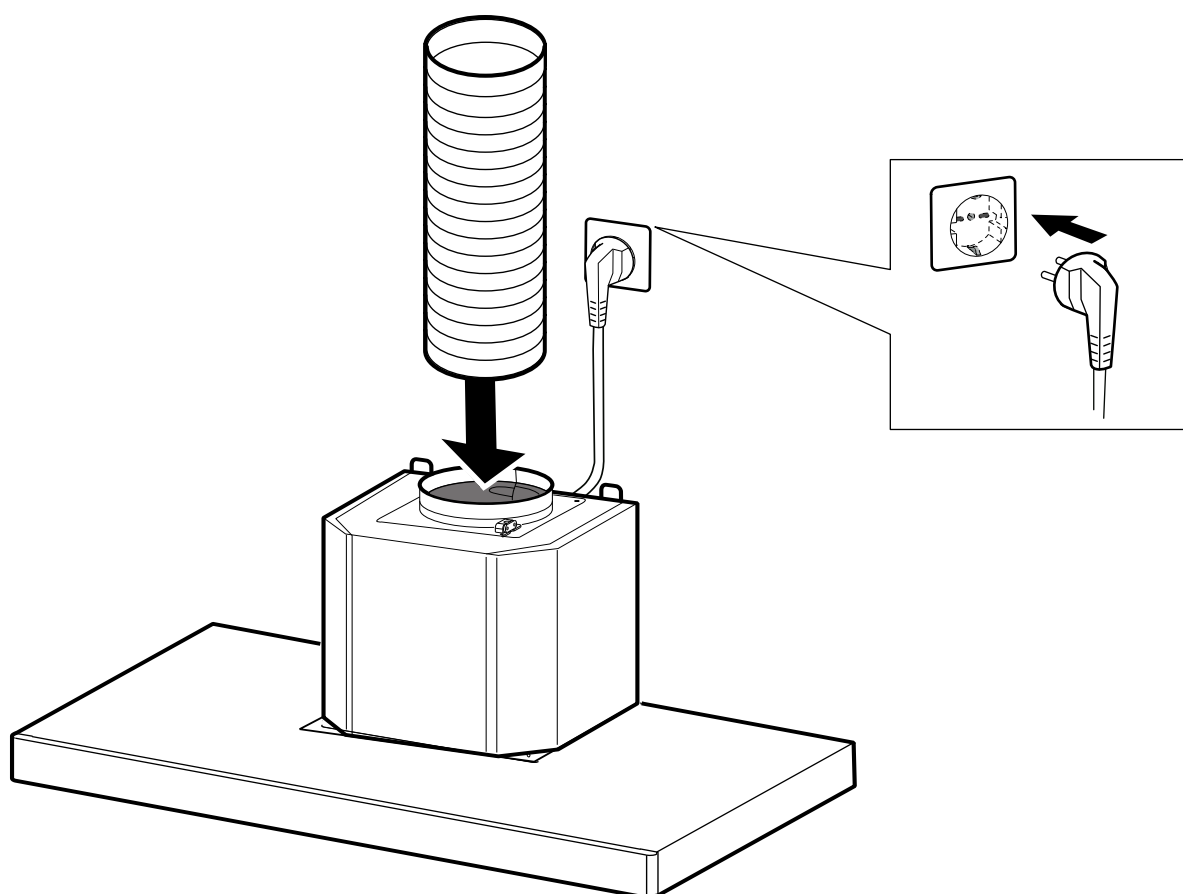

5

4x
Ø 2,9 x 9,5

2x
Ø 2,9 x 9,5

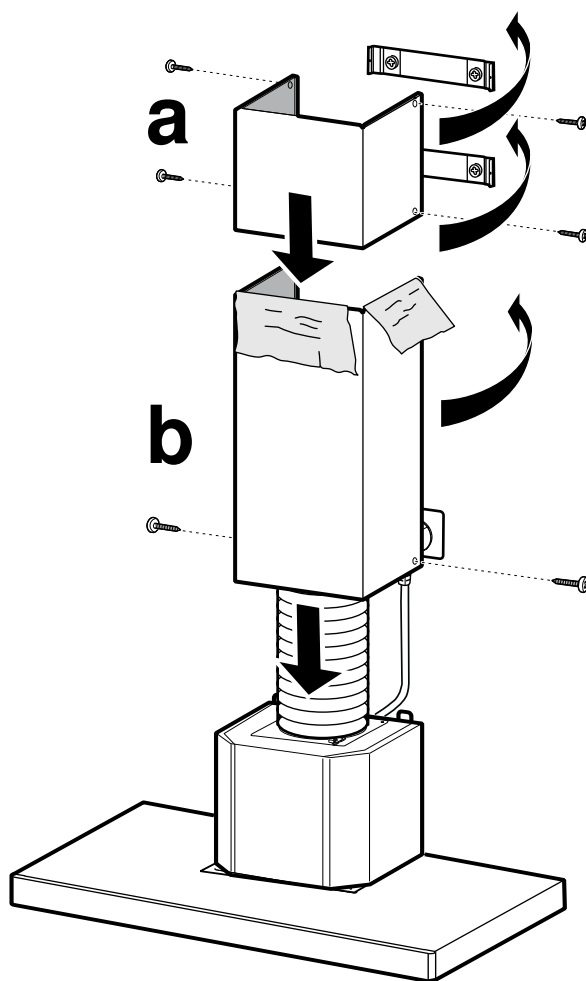

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

The appliance can only be used safely if it is correctly installed according to the safety instructions. The installer is responsible for ensuring that the appliance works perfectly at its installation location.

The width of the extractor hood must correspond at least with the width of the hob.


For the installation, observe the currently valid building regulations and the regulations of the local electricity and gas suppliers.

When conveying the exhaust air, official and legal regulations (e.g. state building regulations) must be followed.

⚠ Risk of death!

Risk of poisoning from flue gases that are drawn back in.

Always ensure adequate fresh air in the room if the appliance is being operated in exhaust air mode at the same time as room air-dependent heat-producing appliance is being operated.

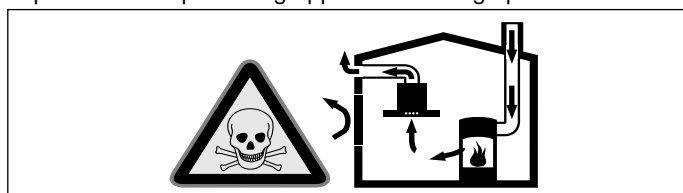


Room air-dependent heat-producing appliances (e.g. gas, oil, wood or coal-operated heaters, continuous flow heaters or water heaters) obtain combustion air from the room in which they are installed and discharge the exhaust gases into the open air through an exhaust gas system (e.g. a chimney).

In combination with an activated vapour extractor hood, room air is extracted from the kitchen and neighbouring rooms - a partial vacuum is produced if not enough fresh air is supplied. Toxic gases from the chimney or the extraction shaft are sucked back into the living space.

- Adequate incoming air must therefore always be ensured.
- An incoming/exhaust air wall box alone will not ensure compliance with the limit.

Safe operation is possible only when the partial vacuum in the place where the heat-producing appliance is installed does not exceed 4 Pa (0.04 mbar). This can be achieved when the air needed for combustion is able to enter through openings that cannot be sealed, for example in doors, windows, incoming/exhaust air wall boxes or by other technical means.

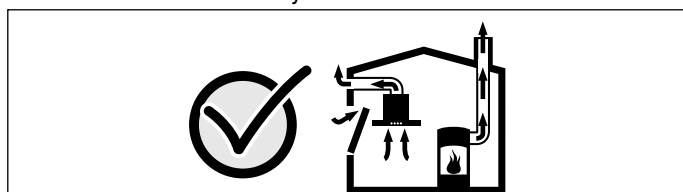

In any case, consult your responsible Master Chimney Sweep. He is able to assess the house's entire ventilation setup and will suggest the suitable ventilation measures to you.

Unrestricted operation is possible if the vapour extractor hood is operated exclusively in the circulating-air mode.

⚠ Risk of death!

Risk of poisoning from flue gases that are drawn back in. The exhaust air must not be conveyed into a functioning smoke or exhaust gas flue or into a shaft which is used to ventilate installation rooms that contain heating appliances. If the exhaust air is to be conveyed into a non-functioning smoke or exhaust gas flue, you must obtain the consent of the heating engineer responsible.

⚠ Danger of suffocation!

Packaging material is dangerous to children. Never allow children to play with packaging material.

⚠ Risk of electric shock!

- Components inside the appliance may have sharp edges. These may damage the connecting cable. Do not kink or pinch the connecting cable during installation.

- It must always be possible to disconnect the appliance from the electricity supply. The appliance must only be connected to a protective contact socket that has been correctly installed. If the plug is no longer accessible once the appliance has been installed, or a fixed connection is required, the installation must have an all-pole isolating switch with a contact gap of at least 3 mm. Only an electrician may install the fixed connection. We recommend installing a residual-current circuit breaker (RCCB) in the appliance's power supply circuit.

⚠ Risk of fire!

- Grease deposits in the grease filter may catch fire. The specified safety distances must be observed in order to prevent an accumulation of heat. Observe the specifications for your cooking appliance. If gas burners and electric hotplates are operated together, the largest specified distance applies.
- Grease deposits in the grease filter may catch fire. Never work with naked flames close to the appliance (e.g. flambeéing). Do not install the appliance near a heat-producing appliance for solid fuel (e.g. wood or coal) unless a closed, non-removable cover is available. There must be no flying sparks.

⚠ Risk of injury!

- Components inside the appliance may have sharp edges. Wear protective gloves.
- The appliance may fall down if it has not been properly fastened in place. All fastening components must be fixed firmly and securely.
- The appliance is heavy. To move the appliance, 2 people are required. Use only suitable tools and equipment.
- Changes to the electrical or mechanical assembly are dangerous and may lead to malfunctions. Do not make any changes to the electrical or mechanical assembly.

General information

Caution!

Damage to the appliance

The surfaces of the appliance are sensitive. Avoid damaging them during installation.

Exhaust duct

Note: The appliance manufacturer does not provide any warranty for faults attributable to the pipe section.

- The appliance achieves its optimum performance by means of a short, straight exhaust air pipe and as large a pipe diameter as possible.
- As a result of long, rough exhaust air pipes, many pipe bends or pipe diameters that are smaller than 150 mm, the optimum extraction performance is not achieved and fan noise is increased.
- The pipes or hoses for laying the exhaust air line must consist of non-combustible material.
- If the exhaust air is conveyed through the outer wall, a telescopic wall box should be used.

Risk of damage from returning condensate. Install the exhaust duct in such a way that it falls away from the appliance slightly (1° slope).

Round pipes

An inner diameter of 150 mm, but at least 120 mm, is recommended.

Flat ducts

The inner cross-section must correspond to the diameter of the round pipes.

dia. 150 mm ca. 177 cm²

dia. 120 mm ca. 113 cm²

- Flat ducts should have no sharp deflections.
- Use sealing strip for deviating pipe diameters.

Electrical connection

⚠ Risk of electric shock!

Components inside the appliance may have sharp edges. These may damage the connecting cable. Do not kink or pinch the connecting cable during installation.

The required connection information is on the appliance's identification plate.

This appliance complies with the EC interference suppression regulations.

This appliance must only be connected to a correctly installed earthed socket.

Attach the earthed socket preferably inside the flue duct.

- The earthed socket should be connected via its own circuit.
- If the earthed socket is no longer accessible after installing the appliance, an all-pole isolating switch (e.g. circuit breaker, fuses and contactors) with at least a 3-mm contact gap must be included in the installation.

Preparing for installation

Checking the wall

- The wall must be level, vertical and adequately load-bearing.
- The depth of the bore holes must be the same length as the screws. The wall plugs must have a secure grip.
- The enclosed screws and wall plugs are suitable for solid brickwork. Suitable fasteners must be used for other structures (e.g. plasterboard, porous concrete, poroton bricks).
- The maximum weight of the extractor hood is **9 kg** for an appliance width of 60 cm or **11 kg** for an appliance width of 90 cm.

Appliance dimensions and safety clearances

- Observe the appliance's dimensions. **(Fig. A)**
- Comply with the safety clearances. **(Fig. B)**

If the installation instructions for the gas cooking appliance specify a different distance, the larger of the two must always be provided for.

Preparing the wall

Caution!

Ensure that there are no electric wires, gas or water pipes in the area where holes are to be made.

1. Mark a vertical centre line on the wall from the ceiling to the lower edge of the extractor hood. **(Fig. 1)**
2. Mark holes for the angle brackets in the chimney. The centre of the angle bracket is marked with a notch. Place the angle brackets in the middle of the centre line, align them horizontally and mark the positions of the holes. The distance X between the two angle brackets is the same as the length of the upper part of the chimney. **(Fig. 1a)**
3. Mark holes for the appliance's mounting brackets. **(fig. 1b)**
4. Drill the holes.
5. Press in the wall plugs flush with the wall.

Fitting the wall bracket

1. Screw on the angle bracket for the flue duct. **(Fig.1a)**
2. Screw in the screws for the appliance bracket loosely; do not tighten them fully. **(Fig.1b)**

Installing the appliance

⚠ Risk of injury!

Components inside the appliance may have sharp edges. Wear protective gloves.

Mounting and aligning the appliance (Fig.2)

1. First remove the protective foil from the back of the appliance only. Then remove the foil completely following installation.
2. Fit the appliance.
3. Screw in the screws for the appliance bracket fully. **(Fig.2a)**
4. Align the appliance horizontally using the screws. **(Fig.2b)**

Securing the safety screws

1. Removing the metal grease filter
2. Mark the holes for the safety screws. **(Fig.3)**
3. Undo the screws for the appliance bracket.
4. Remove the appliance.
5. Bore the holes for the safety screws and press in the wall plugs so that they are flush with the wall.
6. Fit the appliance.
7. Screw in the screws for the appliance bracket fully. 2a
8. Align the appliance horizontally using the screws. **(Fig.2b)**
9. Secure the safety screws.

Connecting the appliance (Fig.4)

Connecting the air extractor

Notes

- If an aluminium pipe is used, smooth the connection area beforehand.
- If using an exhaust air pipe that is less than 150 mm in diameter, fit a reducer between the exhaust air pipe and the air pipe connector.

1. Attach the exhaust air pipe to the air pipe connector.
2. Connect the exhaust air pipe to the exhaust air outlet.
3. Seal the joints appropriately.

Establishing a connection to the mains

Plug the mains plug into the earthed socket.

Note: If a fixed connection is required, refer to the Electrical connection section in the General information chapter.

Attaching the flue duct

1. Remove the protective film from both flue ducts.
2. Gently push the two side panels of the upper flue duct apart and hook them in behind the angle brackets. **(Fig.5a)**

Note: Fit the flue duct with its slots facing downwards.

3. Screw the upper flue duct at the sides to the two angle brackets.
4. Gently push the two side panels of the lower flue duct apart and hook them in behind the upper flue duct. **(Fig.5b)**

Note: To prevent scratches, lay paper over the edges of the lower flue duct to protect the surface.

5. Press together the lower flue duct fully and screw it onto the side of the appliance.

Removing the appliance

1. Remove the flue duct.
2. Disconnect the appliance from the power supply.
3. Loosen the exhaust air lines.
4. Unscrew in the screws for the appliance bracket slightly; do not loosen them fully.
5. Remove the appliance.
6. Remove the angle bracket for the flue duct.

