

Overview of programmes

Programme/type of laundry/information	Settings
Name of the programme	Max. load
Brief explanation of the programme and the fabrics for which it is suitable.	Temperature; spin speed**
	Additional programme settings
 Cottons	Max. 9.0 kg / 5.0* kg
Hard-wearing fabrics and heat-resistant items made of cotton or linen	❄ - 90 °C; ⌚ - 1400** rpm
Note: The Speed setting is suitable as a short programme for lightly soiled laundry.	Eco, Speed,  ,  ,  ,  ,  ,  , 
 Cottons Eco 	Max. 9.0 kg
Hard-wearing fabrics and heat-resistant items made of cotton or linen;	❄ - 90 °C; ⌚ - 1400** rpm
Energy-optimised washing by reducing the temperature while achieving a comparable washing result to the Cottons programme.	 ,  ,  ,  ,  ,  , 
Note: The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the Cottons programme with a higher temperature as required.	
 Easy-Care	Max. 4.0 kg
Items made of synthetic or blended fabrics	❄ - 60 °C; ⌚ - 1200** rpm
	Eco, Speed,  ,  ,  ,  ,  ,  , 
 Delicate/Silk	Max. 2.0 kg
For delicate washable items, e.g. made of silk, satin, synthetic or blended fabrics (e.g. silk blouses, silk scarves)	❄ - 40 °C; ⌚ - 800 rpm
Note: Use a detergent that is suitable for machine-washing delicate fabrics or silk.	Eco, Speed,  ,  ,  ,  ,  ,  , 
 Wool	Max. 2.0 kg
Hand- or machine-washable items that are made of wool or contain wool.	❄ - 40 °C; ⌚ - 800 rpm
Particularly gentle washing programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water)	
Notes	
■ Wool is of animal origin, e.g. angora, alpaca, llama, sheep.	
■ Use a detergent that is suitable for machine washing wool.	
 Mix	Max. 4.0 kg
Mixed load of cottons and synthetic fabrics	❄ - 40 °C; ⌚ - 1400** rpm
	Eco, Speed,  ,  ,  ,  ,  ,  , 
* Reduced load for the Speed setting	
** Max. spin speed, depending on the model	

Programme/type of laundry/information	Settings
 Dark wash Dark-coloured items made from cotton or easy-care fabric; turn items inside-out before washing.	Max. 3.5 kg * - 40 °C; ⌀ - 1200** rpm Eco, Speed,  ,  ,  ,  ,  , 
 Rinse/Spin/Empty Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water Note: The  setting is activated at the factory for this programme. If you only want to spin the laundry: Deactivate the  setting and, if required, adjust the spin speed. If you only want to drain water: Deactivate the  setting and select the  setting.	- -; ⌀ - 1400** rpm  ,  , 
 Drum Clean Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The  indicator (memory function, drum care) will flash if you have not used any programme at a temperature of 60 °C or higher for an extended period. Notes ■ Run the programme without laundry. ■ Use standard washing powder or a detergent that contains bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents intended for woollens or delicates.	0.0 kg 90 °C; 1200** rpm -
 SuperQuick 15' / 30' Extra-short programme of approx. 15/30 minutes, suitable for small items of lightly soiled laundry Note: The SuperQuick 15' programme is run for the Speed setting.	Max. 2.0/3.5 kg * - 40 °C; ⌀ - 1200** rpm 
 Outdoor Membrane-coated weatherproof or outdoor clothing and water-resistant fabrics Notes ■ Use special detergent that is suitable for machine washing; add the correct dosage to the left-hand compartment in accordance with the manufacturer's instructions. ■ Laundry must not be treated with fabric softener. ■ Before washing, thoroughly clean the left-hand compartment in the detergent drawer.	Max. 2.0 kg * - 40 °C; ⌀ - 800 rpm Eco, Speed,  ,  ,  ,  ,  , 
* Reduced load for the Speed setting ** Max. spin speed, depending on the model	

Programme/type of laundry/information	Settings
 Anti-allergy Hard-wearing items made of cotton or linen Note: Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.	Max. 6.5 kg ❄ - 60 °C; ⚙ - 1400** rpm Eco, Speed,  ,  ,  ,  , 
 Duvet Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	max. 2.5 kg (down max. 2.0 kg) ❄ - 60 °C; ⚙ - 1200** rpm Eco, Speed,  , 
 Curtains 3.5 kg heavy curtains or 25-30 m² lightweight drapes Notes ■ Shorter rinse and final spin cycles. ■ Use a detergent that is suitable for machine washing curtains. ■ The  setting is activated at the factory. If you do not require a pre-wash cycle, deactivate the setting.	Max. 3.5 kg ❄ - 40 °C; ⚙ - 800 rpm Eco, Speed,  ,  ,  ,  , 
* Reduced load for the Speed setting ** Max. spin speed, depending on the model	



Consumption values table

Energy and water consumption, programme length and residual moisture for the main washing programme (approximate information)

Programme	Load	Energy consumption*	Water consumption*	Programme length*
Cottons 20 °C	9 kg	0.25 kWh	90 l	2 ¾ h
Cottons 40 °C	9 kg	1.10 kWh	90 l	3 h
Cottons 60 °C	9 kg	1.06 kWh	90 l	2 ¾ h
Cottons 90 °C	9 kg	2.14 kWh	100 l	2 ¾ h
Easy-Care 40 °C	4 kg	0.70 kWh	61 l	2H
Mix 40 °C	4 kg	0.60 kWh	45 l	1 ¼ h
Delicate/Silk 30 °C	2 kg	0.19 kWh	37 l	¾ h
Wool 30 °C	2 kg	0.19 kWh	40 l	¾ h

Programme	Approximate residual moisture**		
	WAT28...	WAT24...	WAT20...
	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cottons	48%	53%	62%
Easy-Care	40%	40%	40%
Delicate/Silk	30%	30%	30%
Wool	45%	45%	45%
* Values may differ from those indicated here depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, degree of soiling to the laundry, detergent used, fluctuations in the power supply and any additional functions selected.			
** Residual moisture based on the maximum spin speeds and loads of the individual programmes.			

Most efficient programmes for cotton fabrics

The following programmes (standard programmes, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient in terms of energy and water consumption combined.

Standard programmes for cottons in accordance with Regulation (EU) no. 1015/2010		
Programme + temperature	Load	Approximate programme length
Cottons Eco  + 	9 kg	4 ¾ h
Cottons Eco  + 	4.5 kg	4 ½ h
Cottons Eco  + 	4.5 kg	4 ½ h
Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The stated programme temperature is based on the temperature indicated on the fabrics' care label. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.		

Power consumption when switched

off: 0.12 W

Power consumption when left on:

0.43 W

Notes

- This supplementary sheet is included with your operating and installation instructions. Keep all documentation for future reference.
- You can also find more important information in your operating and installation instructions.

WAT28560ME

9001158218 (9601)

