



Overview of programmes

Program/type of laundry/information	Settings
Name of the program : Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (☼ = cold) Spin speed* additional settings that can be selected
Algodón/Algodão (Cottons) : Hard-wearing textiles, heat-resistant textiles made of cotton or linen Note : The Turbo Perfect setting is suitable as a short program for lightly soiled laundry.	8 kg/5** kg; ☼ - 90 °C ----, 0 - 1400* rpm Turbo/Eco Perfect, Fácil  , Extra 
Algodón/Algodão (Cottons) Eco  : Hard-wearing textiles, heat-resistant textiles made of cotton or linen; Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the Algodón/Algodão (Cottons) programme. Note : The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the Algodón/Algodão (Cottons) programme with a higher temperature as required.	8 kg; ☼ - 90 °C ----, 0 - 1400* rpm Fácil  , Extra 
Sintéticos (Easy Care) : Textiles made of synthetic materials or blended fabrics	4 kg; ☼ - 60 °C ----, 0 - 1200* rpm Turbo/Eco Perfect, Fácil  , Extra 
Lana/Lã (Wool) : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor). Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool.	2 kg; ☼ - 40 °C ----, 0 - 800 rpm -
Rápido 15/30 min (Super 15'/30') : Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry Note : When selecting the Turbo Perfect setting, the program Rápido 15 min (Super 15') is run.	2/3.5 kg; ☼ - 40 °C ----, 0 - 1200* rpm Turbo Perfect
Mix : Mixed load of cottons and synthetic fabrics	4 kg; ☼ - 40 °C ----, 0 - 1400* rpm Turbo/Eco Perfect, Fácil  , Extra 
* max. The maximum spin speed depends on the program and model	
** reduced load for the Turbo Perfect setting	

Program/type of laundry/information	Settings
Nocturno (Night wash): Especially quiet program for washing during the night; suitable for cotton, linen, synthetic and blended fabrics Note: Final buzzer deactivated.	4 kg; - 40 °C ---, 0 - 1400* rpm Turbo/Eco Perfect, Fácil , Extra
/ / (Rinse / Spin / Empty): Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water. Note: The setting Extra is activated at the factory for this programme.	-; - ---, 0 - 1400** rpm Fácil , Extra
If you only want to spin the laundry: Deactivate the Extra setting and, if required, adjust the spin speed. If you only want to drain water: Deactivate the Extra setting and select the spin speed 0 .	
Limp. tambor (Drum Care) : Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use.	0 kg; 90 °C 1200* rpm -
Notes ■ Run the drum-care program without any laundry. ■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.	
Delicado/Seda (Delicate/Silk) : For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note: Use a detergent suitable for machine-washing delicates or silk.	2 kg; - 40 °C ---, 0 - 800 rpm Turbo/Eco Perfect, Fácil , Extra
Edredones sintét. / Edredon sintét. (Quilts) : Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	2.5 kg (Down 2 kg); - 60 °C ---, 0 - 1200* rpm Turbo/Eco Perfect, Extra
Sport: Sportswear and leisure wear made from microfibre fabrics Notes ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	2 kg; - 40 °C ---, 0 - 800 rpm Turbo/Eco Perfect, Fácil , Extra
* max. The maximum spin speed depends on the program and model ** reduced load for the Turbo Perfect setting	

Program/type of laundry/information	Settings
Ropa oscura / Roupa escura (Dark Wash) : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	3.5 kg; - 40 °C ----, 0 - 1200* rpm Turbo/Eco Perfect, Fácil , Extra
Camisas/Blusas (Shirts/Business) : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	2 kg; - 60 °C ----, 0 - 800 rpm Turbo/Eco Perfect, Fácil , Extra
Notes - Shirts/blouses are only given a short spin on the Fácil setting. Hang them up to dry while still dripping wet. -> Self-smoothing effect - Use the Delicado/Seda (Delicate/Silk) program to wash shirts/blouses made of silk/delicate fabrics.	
Antialergias (Hygiene) : Hard-wearing fabrics made of cotton or linen	6.5 kg; - 60 °C ----, 0 - 1400* rpm Turbo/Eco Perfect, Fácil , Extra
Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	
* max. The maximum spin speed depends on the program and model ** reduced load for the Turbo Perfect setting	



Consumption values table

Energy and water consumption, programme duration and residual moisture for the main wash programme

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Cottons 20 °C	8 kg	0.30 kWh	88 l	2 ¾ h
Cottons 40 °C	8 kg	1.09 kWh	88 l	3 h
Cottons 60 °C	8 kg	1.28 kWh	88 l	2 ¾ h
Cottons 90 °C	8 kg	2.22 kWh	98 l	2 ¾ h
Easy-Care 40 °C	4 kg	0.75 kWh	64 l	2 h
Quick/Mix 40 °C	4 kg	0.60 kWh	45 l	1 ¼ h
Delicates/Silk 30 °C	2 kg	0.21 kWh	36 l	¾ h
Wool 30 °C	2 kg	0.19 kWh	40 l	¾ h

Programme	Approximate residual moisture**		
	WA.28... // WU.28...	WA.24... // WU.24...	WA.20... // WU.20...
	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cottons	48 %	53 %	62 %
Easy-Care	40 %	40 %	40 %
Delicates/Silk	30 %	30 %	30 %
Wool	45 %	45 %	45 %
* Values may differ from those indicated here depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, degree of soiling to the laundry, detergent used, fluctuations in the power supply and any additional functions selected.			
** Residual moisture based on the maximum spin speeds and loads of the individual programmes.			

Most efficient programmes for cotton fabrics

The following programmes (standard programs, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient in terms of energy and water consumption combined.

Standard programmes for cottons in accordance with the (EU) Directive no. 1015/2010		
Programme + Temperature	Load	Approximate programme duration
Cottons Eco  + 	8 kg	3 ¾ h
Cottons Eco  + 	4 kg	3 ¾ h
Cottons Eco  + 	4 kg	3 ¾ h
Programme setting with maximum speed for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The stated programme temperature is based on the temperature indicated on the fabrics' care label. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.		

Notes

- This supplementary sheet is included with your operating and installation instructions. Keep all documentation for future reference.
- You can also find more important information in your operating and installation instructions.

WAT24468ES / ...

9001162377 (9706)

