

Overview of programmes

Programme/type of laundry/information Name of the programme: Brief explanation of the programme and for which textiles it is suitable.	Settings
	max. load; temperature
	spin speed*
	additional settings that can be selected
 Cottons : Hard-wearing textiles, heat-resistant textiles made of cotton or linen Note : The SpeedPerfect setting is suitable as a short programme for lightly soiled laundry.	7 kg/4** kg; - - (cold) - 90 °C - - - (Rinse Stop), 0 - 1400* rpm ≡   , Water Plus/Rinse Plus, Prewash
 Cottons  Eco : Hard-wearing fabrics, heat-resistant textiles made of cotton or linen Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the  Cottons programme. Note : The washing temperature is lower than the selected temperature. If you want to achieve a higher water temperature, use the  Cottons programme with a higher temperature as required.	7 kg; - - (cold) - 90 °C - - - (Rinse Stop), 0 - 1400* rpm Water Plus/Rinse Plus, Prewash
 Easy-Care : Textiles made of synthetic materials or blended fabrics	4 kg; - - (cold) - 60 °C - - - (Rinse Stop), 0 - 1200* rpm ≡   , Water Plus/Rinse Plus, Prewash
 Wool : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor). Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool.	2 kg; - - (cold) - 40 °C - - - (Rinse Stop), 0 - 800 rpm -
 /  SuperQuick 15'/30' : Extra short programme of approx. 15/30 minutes, suitable for small items of lightly soiled laundry Note : When selecting the SpeedPerfect setting, the programme Super-Quick 15' is run.	2/3.5 kg; - - (cold) - 40 °C - - - (Rinse Stop), 0 - 1200* rpm ≡ 
 Mix : Mixed load of cottons and synthetic fabrics	4 kg; - - (cold) - 40 °C - - - (Rinse Stop), 0 - 1400* rpm ≡   , Water Plus/Rinse Plus, Prewash
* the maximum spin speed depends on the programme and model ** reduced load for the Speed setting *** depending on the model	

Programme/type of laundry/information Name of the programme: Brief explanation of the programme and for which textiles it is suitable.	Settings
	max. load; temperature
	spin speed*
	additional settings that can be selected
 Curtains: 3.5 kg heavy curtains or 25 - 30 m ² lightweight drapes Notes ■ Shorter rinse and final spin cycles. ■ Use a detergent that is suitable for machine-washing curtains. ■ The Prewash setting is set by default. If you do not require a prewash cycle, press the button to deactivate the function.	3.5 kg; - - (cold) - 40 °C - - (Rinse Stop), 0 - 800 rpm   , Water Plus/Rinse Plus, Prewash
 Rinse/Spin/Empty: Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water Notes ■ The Water Plus/Rinse Plus setting is preset by default. ■ Only to be rinsed, set the Spin speed to 0. ■ Only to be spun, deactivate Water Plus/Rinse Plus and, if required, adjust the spin speed. ■ Only to be emptied, set the Spin speed to 0 and deactivate Water Plus/Rinse Plus.	-; - - - (Rinse Stop), 0 - 1400* rpm Water Plus/Rinse Plus
 Drum Clean: Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The Drum Clean indicator lamp  flashes when you have not used a programme of 60 °C or higher for a long time. Notes ■ Run the drum-care programme without any laundry. ■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.	0 kg; 90 °C 1200* rpm -
 Delicate/Silk: For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note: Use a detergent suitable for machine-washing delicates or silk.	2 kg; - - (cold) - 40 °C - - (Rinse Stop), 0 - 800 rpm   , Water Plus/Rinse Plus, Prewash
 Down: Machine-washable fabrics stuffed with down, such as pillows and duvets; also suitable for items stuffed with synthetic fibres Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	1.5 kg; - - (cold) - 60 °C - - (Rinse Stop), 0 - 1200* rpm   , Water Plus/Rinse Plus
 Sport: Sportswear and leisure wear made from microfibre fabrics Notes ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	2 kg; - - (cold) - 40 °C - - (Rinse Stop), 0 - 800 rpm   , Water Plus/Rinse Plus, Prewash
* the maximum spin speed depends on the programme and model ** reduced load for the Speed setting *** depending on the model	

Programme/type of laundry/information Name of the programme: Brief explanation of the programme and for which textiles it is suitable.	Settings
	max. load; temperature
	spin speed*
	additional settings that can be selected
 Easy-Care Special: Dark textiles made of cotton and dark easy-care textiles. Note: Wash textiles inside out.	3.5 kg; - - (cold) - 40 °C - - - (Rinse Stop), 0 - 1200* rpm   , Water Plus/Rinse Plus, Prewash
 Shirts/Blouses: Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Notes - Shirts/blouses are only given a short spin on the Less Ironing*** setting. Hang them up to dry while still dripping wet. → Self-smoothing effect - Use the  Delicates/Silk programme to wash shirts/blouses made of silk/delicate fabrics.	2 kg; - - (cold) - 60 °C - - - (Rinse Stop), 0 - 800 rpm   , Water Plus/Rinse Plus, Prewash
 AllergyPlus: Hard-wearing fabrics made of cotton or linen Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	6.5 kg; - - (cold) - 60 °C - - - (Rinse Stop), 0 - 1400* rpm   , Water Plus/Rinse Plus, Prewash
* the maximum spin speed depends on the programme and model ** reduced load for the Speed setting *** depending on the model	



Consumption values table

Energy and water consumption, programme duration and residual moisture for the main washing programme

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*
Cottons 20 °C	7 kg	0.29 kWh	76 l	2 1/2 h
Cottons 40 °C	7 kg	1.01 kWh	76 l	3 h
Cottons 60 °C	7 kg	1.20 kWh	76 l	2 1/2 h
Cottons 90 °C	7 kg	2.25 kWh	87 l	2 1/2 h
Easy-Care 40 °C	4 kg	0.79 kWh	69 l	2 h
Mix 40 °C	4 kg	0.63 kWh	46 l	1 1/4 h
Delicates/Silk 30 °C	2 kg	0.22 kWh	38 l	3/4 h
 Wool 30 °C	2 kg	0.19 kWh	44 l	3/4 h

Programme	Approximate information on the residual moisture**		
	WAN28...	WAN24...	WAN20...
	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cottons	53 %	58 %	68 %
Easy-Care	40 %	40 %	40 %
Delicates/Silk	30 %	30 %	30 %
 Wool	45 %	45 %	45 %
Values determined acc. EN60456:2010.			
* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.			
** Information on residual moisture based on programme-dependent spin-speed limit and maximum loads.			

Efficiency test programmes for cotton fabrics

The following programmes (standard programmes, indicated by ) are suitable for cleaning normally soiled cotton fabrics and are the most efficient with respect to combined energy and water consumption.

Standard programmes for cottons according to (EU) Regulation No. 1015/2010	Load	Approximate programme duration
Cottons  Eco +  **	7 kg	3 1/2 h
Cottons  Eco +  **	3.5 kg	3 1/2 h
Cottons  Eco +  **	3.5 kg	3 1/2 h
** Programme setting for testing and energy labeling in accordance with EU directive 2010/30/EU with cold water (15°C). The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the temperature selection.		

Notes

- This supplementary sheet is included with your operating and installation instructions. Retain all documentation for subsequent use.
- Much more important information can be found in your operating and installation instructions.

WAN282B7SN

9001163356 (9512)

