

9001183599 (9610) 642A MA

en


Quick reference guide Dishwasher

Brief and handy:
everything your
dishwasher needs ...

Before using for the first time,
read the operating instructions!




1

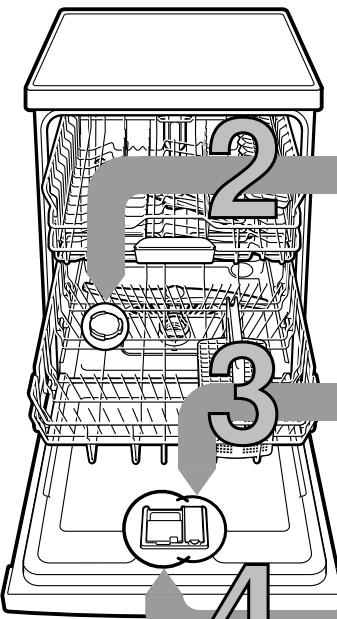


Add special salt

Dissolves limescale (not necessary when set to 0!) ...

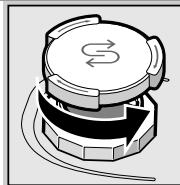


Open
the lid.

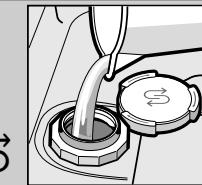


Only fill the salt
dispenser with
water before
the first wash.

For optimal washing results

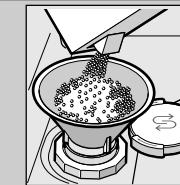


Add
special salt
(never use
detergent!).

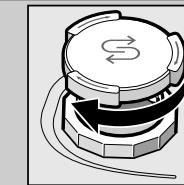

Close the lid.
Rinse immediately.

Add rinse aid


Gets it sparkling clean ...

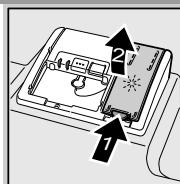


Press marking 1,
lift lid 2.



For optimum drying results

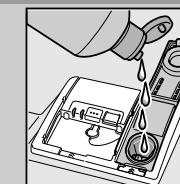


Add
rinse aid.

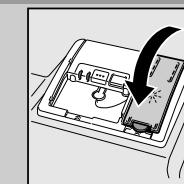

Close lid.
CLICK!

Add detergent


A lot of dirt, a lot of detergent ...

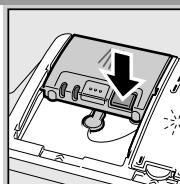


If required,
open the cover
(press button).



Attention:
Combination
products
are not suitable
for all programmes,
follow
manufacturer's
instructions.

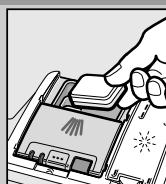

Pour detergent
into the dry
detergent
dispenser only.

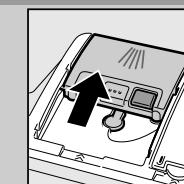

Slide cover
shut, press.
PLOP!

5 Switch on the appliance

6

Select a programme

Quick, economical or intensive ...

Overview of programmes

This overview describes all the possible programmes. You can see which programmes your appliance offers from its control panel. The values given in the programme details are laboratory measurements compliant with European standard EN 50242.

The consumption figures depend on the selected programme and additional functions.

The programme duration will be different if the machine is short of rinse additive or the function is turned off.

* half normal load

** Suitable programme for running at night:
it takes longer, but is extremely quiet.

Intensive 70°	Auto 45/65°	Eco 50°	Silence ** 50°	Glass 40°	65°	Quick 65°	Quick 45°	Pre Rinse	Machine Care
Duration in hrs : mins.	2:05 - 2:15	1:30 - 2:40	3:55	4:00	1:25 - 1:30	1:00	1:00	0:29 *	0:15
Energy consumption in kWh	1,45 - 1,50	0,95 - 1,60	0,80 - 0,83	1,05 - 1,09	0,85 - 0,90	1,30	1,30	0,80	0,05

Water consumption in litres	12 - 15	7 - 18	9,5	10	11 - 14	10	10	10	4	9,5 - 12,5
-----------------------------	---------	--------	-----	----	---------	----	----	----	---	------------


You will find descriptions of possible additional functions in your instruction manual.

Quickly sorted ...

How to adjust

- Switch on ON/OFF switch.
- Hold down programme button A and press START button until H:0... is indicated on the digital display.
- Release both buttons. The LED for button A flashes and the factory set value of H:04 is indicated on the digital display.
- Press programme button C. Each time the button is pressed the set value increases by one setting; when the value reaches H:07, the display jumps back to H:00 (off).
- Press START button. The chosen setting has now been stored.

Water hardness Clarke	Hardness range	mmol/l	Factory setting
0-8	soft	0 - 1,1	H:00
9-10	soft	1,2 - 1,4	H:01
11-12	medium	1,5 - 1,8	H:02
13-15	medium	1,9 - 2,1	H:03
16-20	medium	2,2 - 2,9	H:04
21-26	hard	3,0 - 3,7	H:05
27-38	hard	3,8 - 5,4	H:06
39-62	hard	5,5 - 8,9	H:07

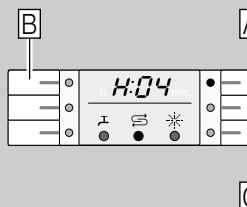

Ask your water supply company what the water hardness is and enter ...



* only before the first wash or if the water hardness has been changed

8

Switch on the appliance. Here we go ...


7

8


Switch off the appliance. Everything o.k. ...

Maintenance and care


Filters
... check,
if required,
clean.

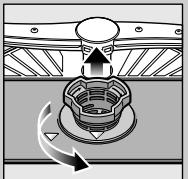


Rotate
filter cylinder,
remove filter
system ...

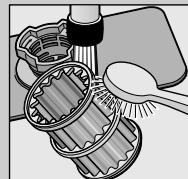

rinse
under
running
water ...

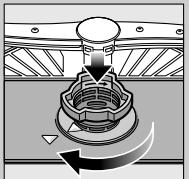


insert ...

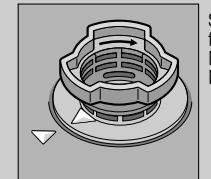


Screw on
filter system
NOTE
MARK!

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms
... Remove
blockages/
deposits.

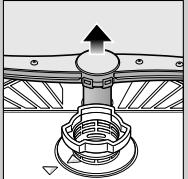


pull lower arm
upwards ...

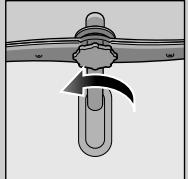


unscrew
upper arm ...

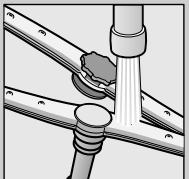


clean spray nozzles
under running water
(if required
use toothpicks) ...

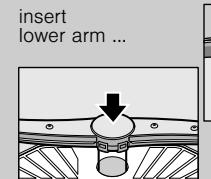

insert
lower arm ...

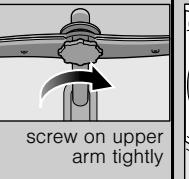

screw on upper
arm tightly

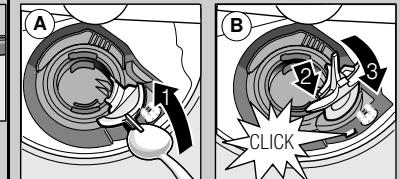

More information can be found in the operating instructions

Rectifying minor faults yourself ...

... as it is worth doing it yourself!

 
Fault

Possible causes

Remedial action

Display "■" is lit

Supply fitting jammed
or calcified



- Open supply fitting.
- 1. Unscrew water connection.
2. Clean filter in the water connection.
3. Flow rate must be min. 10 l/min.,
when water supply is open.
If the flow rate is less,
replace the supply fitting.
- Install supply hose without kinks.

Display "E:22"

Filters are soiled or blocked

- Clean the filters (see above).

Display "E:24"
and "■" are lit

Waste water hose is blocked
or kinked
Cover not attached to waste
water pump

- Install waste water hose without kinks.
- Attach cover (see above).

Display "E:25"
and "■" are lit

Waste water pump blocked

- Clean waste-water pump (see above).

Other fault display
"E:XX" is lit

Appliance has technical defect

- Call factory customer service (state fault display).
- Unplug appliance.

Residual water
in the appliance

The programme has not yet ended

- Close the appliance and switch it on
or terminate the programme
(see Terminating the programme).

Rust on the cutlery

Cutlery not rust-resistant
Hard knife blades are more susceptible
Extraneous rust

- Use dishwasher-proof cutlery.
- Never wash rusting parts in the appliance.

Fault

Possible causes

Remedial action

Utensils are not clean

Sand or gritty residue
on the utensils



Utensils are situated close together
or one above the other

Too little detergent
Unsuitable programme selected

Spray arm nozzles blocked
Filters dirty, not seated firmly
Spray arms blocked

- Separate the utensils, prevent contact points.

- Follow manufacturer's instructions (detergent).
- Select a more intensive programme.

- Clean the spray arms (see above).
- Clean the filters (see above).
- Arrange the utensils so that the spray arms can rotate freely.

Stains and streaks

Rinse aid dosage too high/too low

- Streaks: reduce dosage.
- Water or limescale stains: increase dosage.

Utensils not dry

Rinse aid

The combined detergent used
has a poor drying performance
Appliance setting

Water softening system incorrectly set
No salt

- Increase dosage.
- Change the product.
- Use rinse aid.

- Activate intensive drying (depending on model).
- Correctly set water softening system.
- Refill with special salt.

Milky deposits
on the utensils
(can be removed)

Glasses not dishwasher-proof

- Use dishwasher-proof glasses.
- Use a detergent suitable for glasses.

Milky deposits, glasses
cloudy/tarnished
(cannot be removed)

Plastic/utensils
discoloured

Too little detergent
Discoloration caused by food colourings
(tomato sauce)

- Follow manufacturer's instructions (detergent).
- Discoloration is harmless; subsequent rinse cycles
will cause it to fade.

Terminating the programme ...

While the programme is running,
press the START button
for approx. 3 sec. (Reset).



The numerical display
indicates "0:01";
approx. 1 minute after
the programme ends,
"0:00" is indicated.



Switch off the appliance.

Loading the dishwasher correctly ...

Dishwasher-proof utensils (not soiled with ash, wax, lubricating grease, ink
or adhesive labels; remove large remnants of jam, milk products and food
according to the operating instructions and check that the spray arms can rotate freely).